



# **BILLY GOAT KV VACUUM** **Owner's Manual**

**KV600SP, KV650SPH, TKV650SPH, KV600SPFB, KV650SPHFB,  
 TKV650SPHFB**

## **Accessories**

| ON BOARD<br>VACUUM<br>HOSE KIT                                                      | OPTIONAL<br>FELT/MESH<br>DEBRIS BAG                       | NOZZLE WEAR<br>GUARD KIT                                                                  | CASTER KIT                                                                    | SHREDDER<br>KIT                                | KV LINER KIT                                                                | PROTECTIVE<br>COVER                                                 |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------|-------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|------------------------------------------------|-----------------------------------------------------------------------------|---------------------------------------------------------------------|
| 4"(102mm) x<br>7.5' (2.13m)<br><i>For vacuuming<br/>in hard to reach<br/>areas.</i> | For use in<br>leaves and<br>grass in dusty<br>conditions. | For use in<br>increasing the<br>life of your<br>nozzle by<br>protecting it from<br>damage | To allow for<br>easy rolling and<br>maneuverability<br>on smooth<br>surfaces. | Shreds<br>leaves,<br>reducing total<br>volume. | Increases the<br>life of the<br>housing by<br>protecting it from<br>damage. | Protects the<br>machine from<br>the environment<br>when not in use. |
| <b>P/N 891125</b>                                                                   | <b>P/N 891126<br/>FELT BAG/<br/>891132<br/>MESH BAG</b>   | <b>P/N 891127</b>                                                                         | <b>P/N 891128</b>                                                             | <b>P/N 890209</b>                              | <b>P/N 891134</b>                                                           | <b>P/N 891137</b>                                                   |



**CONTENTS**

|                                    |              |
|------------------------------------|--------------|
| SPECIFICATIONS AND SOUND/VIBRATION | <u>3</u>     |
| INSTRUCTION LABELS                 | <u>4</u>     |
| PACKING CHECKLIST & ASSEMBLY       | <u>5</u>     |
| OPERATION                          | <u>6-7</u>   |
| MAINTENANCE                        | <u>8-10</u>  |
| TROUBLESHOOTING                    | <u>11</u>    |
| ILLUSTRATED PARTS & PARTS LISTS    | <u>12-14</u> |

Go to <http://www.billygoat.com> for French-Canadian translations of the product manuals.

Visitez <http://www.billygoat.com> pour la version canadienne-française des manuels de produits



## KVSP/TKVSP Owner's Manual

### Specifications

|  | KV600SP | KV650SPH | TKV650SPH | KV600SPFB | KV650SPHFB | TKV650SPHFB |
|--|---------|----------|-----------|-----------|------------|-------------|
|--|---------|----------|-----------|-----------|------------|-------------|

|                                                |                                |                                |                                |                                |                                |                                |
|------------------------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|
| Engine: HP                                     | 6.0 (4.47kW)                   | 6.5 (4.85kW)                   | 6.5 (4.85 kW)                  | 6.0 (4.47kW)                   | 6.5 (4.85kW)                   | 6.5 (4.85 kW)                  |
| Engine: Type                                   | B&S Quantum                    | HONDA                          | HONDA                          | B&S Quantum                    | HONDA                          | HONDA                          |
| Engine: Model                                  | 112K020124E1                   | GSV190AN1L                     | GSV190AN1L                     | 112K020124E1                   | GSV190AN1L                     | GSV190AN1L                     |
| Engine: Fuel Capacity                          | 1.5 qt. (1.4 L)                | 1.6 qt. (1.5 L)                | 1.6 qt. (1.5 L)                | 1.5 qt. (1.4 L)                | 1.6 qt. (1.5 L)                | 1.6 qt. (1.5 L)                |
| Engine: Oil Capacity                           | 0.63 qt. (0.6 L)               | 0.58 qt (0.54L)                | 0.58 qt (0.54L)                | 0.63 qt. (0.6 L)               | 0.58 qt (0.54L)                | 0.58 qt (0.54L)                |
| Total Unit Weight:                             | #129 (58.5 kg)                 | #132 (58.9 kg)                 | 141# (64 kg)                   | #129 (58.5 kg)                 | #132 (58.9 kg)                 | 141# (64 kg)                   |
| Overall Length                                 | 59" (1.5m)                     | 59" (1.5m)                     | 59" (1.5 m)                    | 59" (1.5m)                     | 59" (1.5m)                     | 59" (1.5 m)                    |
| Overall Width                                  | 25.5" (.6 m)                   | 25.5" (.6 m)                   | 25.5" (.6 m)                   | 25.5" (.6 m)                   | 25.5" (.6 m)                   | 25.5" (.6 m)                   |
| Overall Height                                 | 42.75" (1.1m)                  | 42.75" (1.1m)                  | 42.75" (1.1 m)                 | 42.75" (1.1m)                  | 42.75" (1.1m)                  | 42.75" (1.1 m)                 |
| Max. operating slope                           | 20°                            | 20°                            | 20°                            | 20°                            | 20°                            | 20°                            |
| Sound in accordance with 2000/14/EEC standards | 109 dBa                        | 109 dBa                        | 112 dBa                        | 109 dBa                        | 109 dBa                        | 112 dBa                        |
| Sound at operator's ear                        | 88 dBa                         | 89 dBa                         | 91 dBa                         | 88 dBa                         | 89 dBa                         | 91 dBa                         |
| Vibration at operator position                 | 0.71 g (6.96m/s <sup>2</sup> ) | 0.32 g (3.16m/s <sup>2</sup> ) | 0.43 g (4.25m/s <sup>2</sup> ) | 0.71 g (6.96m/s <sup>2</sup> ) | 0.32 g (3.16m/s <sup>2</sup> ) | 0.43 g (4.25m/s <sup>2</sup> ) |

### SOUND



SOUND LEVEL 92 dB(a) at Operator Position

Sound tests were conducted in accordance with 2000/14/EEC, and were performed on 7-25-07 under the conditions listed below.

Sound power level listed is the highest value for any model covered in this manual. Please refer to serial plate on the unit for the sound power level for your model.

General Conditions:  
Temperature:  
Wind Speed:  
Wind Direction:  
Humidity:  
Barometric Pressure:

Sunny  
88°F (31.1°C)  
2 mph (3.8 kmh)  
South South East  
44%  
30.07"Hg (764 mm Hg)

### VIBRATION DATA

VIBRATION LEVEL 0.34g (3.29m/s<sup>2</sup>)

Vibration levels at the operator's handles were measured in the vertical, lateral and longitudinal directions using calibrated vibration test equipment. Tests were performed on 12-19-2007 under the conditions listed below.

General Conditions:  
Temperature:  
Wind Speed:  
Wind Direction:  
Humidity:  
Barometric Pressure:

Sunny  
50°F (10°C)  
4 mph (6.4kph)  
South Southeast  
68%  
30 Hg (101.6kpa)




## KVSP/TKVSP Owner's Manual

### INSTRUCTION LABELS

The labels shown below were installed on your BILLY GOAT® KV Vacuum. If any labels are damaged or missing, replace them before operating this equipment. Item numbers from the Illustrated Parts List and part numbers are provided for convenience in ordering replacement labels. The correct position for each label may be determined by referring to the Figure and Item numbers shown.



**LABEL DANGER KEEP HANDS AND FEET AWAY**  
ITEM #18 P/N 400424

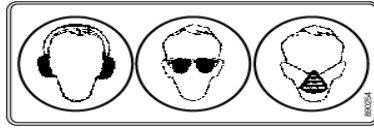

**LABEL EAR EYE BREATHING ITEM #20**  
P/N 890254



 
**DANGER FLYING DEBRIS**  
ITEM # 19 P/N 810736



**LABEL SPARK ARRESTOR**  
P/N 100252



**LABEL READ MANUAL**  
ITEM #17 P/N 890301



**LABEL EXPLOSIVE FUEL**  
ITEM # 16 P/N 400268




**CHIPPER WARNING LABEL**  
ITEM #82 P/N 890152 (TKV ONLY)



**LABEL DANGER GUARD**  
ITEM #39 P/N 900327

**BAG ENCLOSURE INSTRUCTION:**  
NOTE: IT IS IDEAL TO DO THIS PROCEDURE WITH THE BAG ON THE GROUND WITH BOTTOM PAD FACING UP.

**BAG FOLDING INSTRUCTIONS**  
LOCATED ON BAG

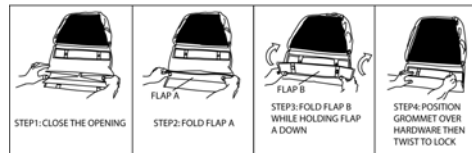

### ENGINE LABELS

#### HONDA

■ READ OWNER'S MANUALS BEFORE OPERATION.  
■ LIRE LE MANUEL D'UTILISATEUR AVANT USAGE.  
■ VOR INBETRIEBNAHME UNBEDINGT  
BEDIENUNGSANLEITUNG DURCHLESEN.  
■ NO UTILIZAR SIN ANTES NO HABER LEIDO EL MANUAL.



#### BRIGGS & STRATTON

Read Owner's Manual Before Operating.  
Lire le manuel d'utilisation avant la mise en route.  
Vor Inbetriebnahme Bedienungs- und Wartungsanleitung lesen.  
Favor leer las instrucciones de operacion antes de operar el motor.  
Consultare il Manuale Uso e Manutenzione prima dell'utilizzo.  
Las Skotselektionen Innan Start.

 
### ENGINE and Transmission CONTROLS



**Honda Throttle Control**



**Briggs Throttle Control**



**Bail Drive Engage/Disengage label**



## PACKING CHECKLIST

Your Billy Goat KV Vacuum is shipped from the factory in one carton, completely assembled except for the upper handle, debris bag, and bag quick disconnect.



**READ** all safety instructions before assembling unit.


**TAKE CAUTION** when removing the unit from the box the Handle Assembly is attached by cables and folded over



**PUT OIL IN ENGINE BEFORE STARTING**

## PARTS BAG & LITERATURE ASSY

Warranty card P/N- 400972, Owner's Manual P/N-891204, General Safety and Warnings Manual P/N-100294, Declaration of Conformity P/N-891057, Ty-wraps 900407 qty 2.

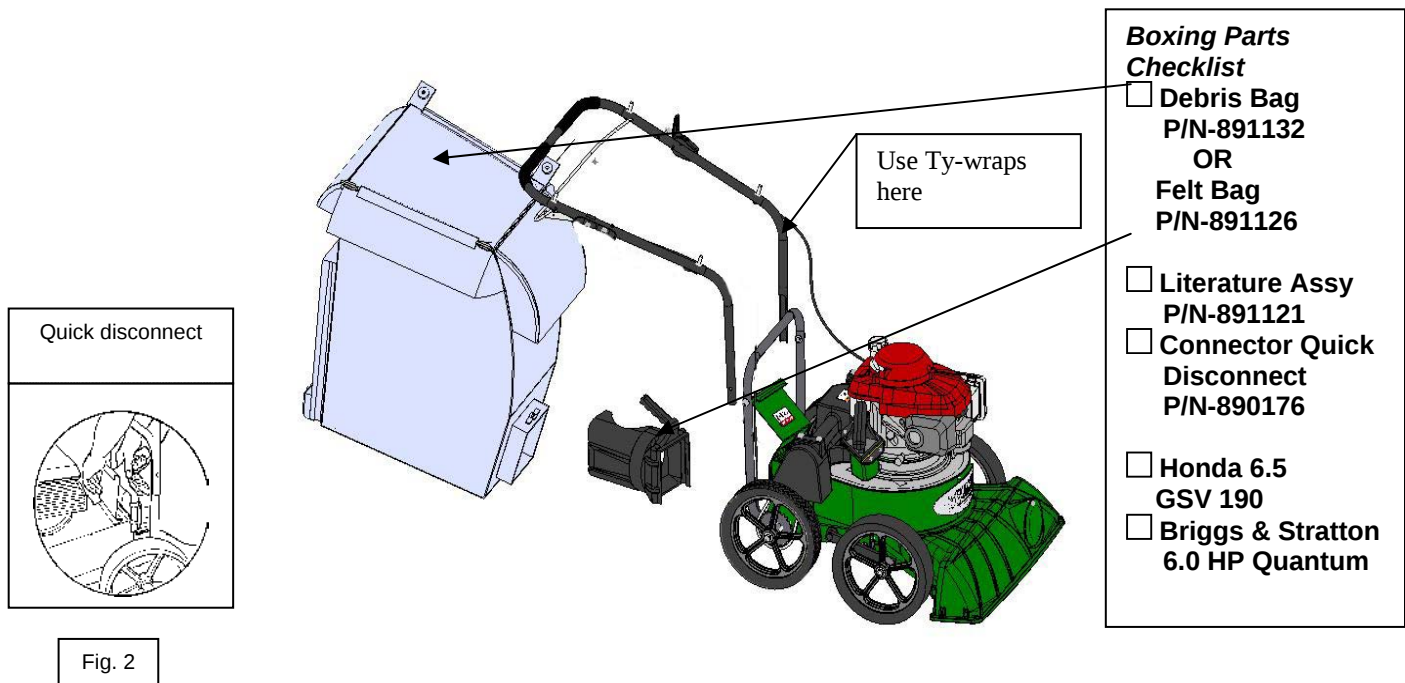

## ASSEMBLY


1. **ASSEMBLE** Lift upper handle (item 11), remove items 49, 50, & 51 from lower handle (item 10). Attach and secure upper handle as shown using same hardware.
2. **UNFOLD** the debris bag (item 21) and fasten bag neck to bag quick disconnect (item 12). Attach firmly to housing exhaust (item 1) see fig. 2.
3. **ATTACH** bag to four posts (item 13), preassembled to upper handle.
4. **CONNECT** spark plug wire.



## OPERATION

### VACUUMING OPERATION

**VACUUM NOZZLE HEIGHT ADJUSTMENT:** Nozzle height is raised and lowered by rotating the red knob near the left rear wheel. Nozzle height should be adjusted based on the task being performed.

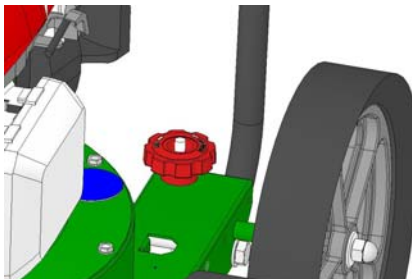


**FOR MAXIMUM PICKUP:** Adjust nozzle close to debris, but without blocking airflow into the nozzle. **NOTE:** Never bury nozzle into debris.

**CLEARING A CLOGGED NOZZLE & EXHAUST:** Turn engine off and wait for impeller to stop completely and disconnect spark plug wire. Wearing durable gloves, remove clog. **Danger**, the clog may contain sharp materials. Reconnect spark plug wire.



#### BAG ENCLOSURE INSTRUCTION:

**NOTE:** IT IS IDEAL TO DO THIS PROCEDURE WITH THE BAG ON THE GROUND WITH BOTTOM PAD FACING UP.

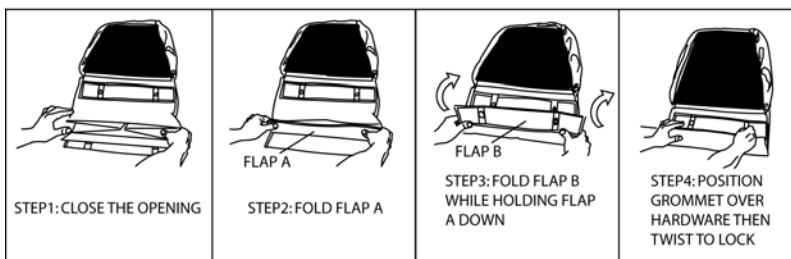

### DEBRIS BAG

(OPTIONAL DEBRIS BAGS ARE AVAILABLE FOR CHANGING CONDITIONS)

#### Debris bags are normal replaceable wear items.

**Note:** Frequently empty debris to prevent bag overloading with more weight than you can lift.

An optional felt bag is available for use where debris will be vacuumed in dusty conditions (see **Optional Accessories** shown on page 1).

**DO NOT place bag on or near hot surface**, such as engine. Be sure engine has come to a complete stop before removing or emptying bag.

**This vacuum is designed for picking up trash, organic material and other similar debris** (see Safety Warnings page 4-5).

However, many vacuums are used where dust is mixed with trash. Your unit can intermittently vacuum in dusty areas. Dust is the greatest cause of lost vacuum performance. However, following these rules will help maintain your machine's ability to vacuum in dusty conditions:

- Run machine at idle to quarter throttle.
- The debris bag must be cleaned more frequently. A vacuum with a clean, pillow soft bag will have good pickup performance. One with a dirty, tight bag will have poor pickup performance. If dirty, empty debris and vigorously shake bag free of dust.
- Pressure-wash debris bag if normal cleaning does not fully clean bag. Bag should be thoroughly dry before use.

**NOTE:** Having one or more spare debris bags is a good way to reduce down time while dirty bags are being cleaned.

**DO NOT** leave debris in bag while in storage.



## **COMPOST**

Vacuumed leaves, grass and other organic material from your own yard can be emptied into a pile or composter to provide enriched soil for later use as fertilizer in gardens and flower beds

**NOTE:** Allow green chips to dry before spreading around living plants.

## **MULCH**


Wood chips made from branches in your own yard make excellent mulch. A thick blanket of wood chips around plants and flowers to keeps weeds out and moisture in.

## **CHIPPER OPERATION (TKV only)**

Your **TKV** chipper is designed to process tree branches and limbs up to 2" (50.8mm) diameter.

Several small branches can be grouped together and fed together into the chipper (see figure right).

When feeding forked branches, squeeze forks together and feed into chipper entrance (DO NOT overload). If forks are too large, use a pair of loppers to trim forks down to size. A lopper storage bracket is provided on every unit (loppers are not included)

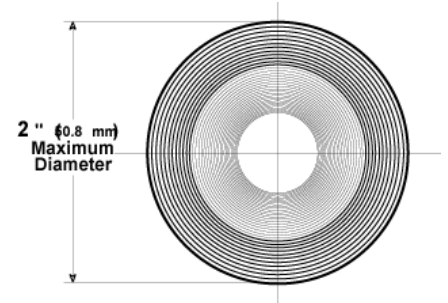

## **Clearing a clogged chipper (TKV only)**

**Under normal circumstances, allow time for machine to clear all wood from chipper hopper before stopping engine. Otherwise, remaining pieces of wood will jam inside of chipper when engine stops. (See Tamper below).**

Disconnect spark plug wire.

 Remove debris bag quick disconnect from debris outlet on machine. Wearing durable gloves, access impeller through debris outlet on fan housing and rotate impeller counter clock wise to dislodge and remove jam and remove debris from hopper with tongs or equivalent. Reconnect debris bag quick disconnect to machine. Reconnect spark plug wire.

## **TAMPER (TKV only)**

Before turning machine off, use the Tamper to slowly push remaining pieces of wood through the chipper. This can prevent any remaining wood from jamming in the chipper when machine is turned off. Do not leave tamper on the ground, store tamper in the chipper hopper.





## MAINTENANCE

### PERIODIC MAINTENANCE

Periodic maintenance should be performed at the following intervals:

| Maintenance Operation                     | Every Use (daily) | Every 5 hrs (daily) | Every 25 Hours |
|-------------------------------------------|-------------------|---------------------|----------------|
| Inspect for loose, worn or damaged parts. |                   | •                   |                |
| Clean Debris bag                          | •                 |                     |                |
| Check bag strap tightness                 | •                 |                     |                |
| Engine (See Engine Manual)                |                   |                     |                |
| Check for excessive vibration             |                   | •                   |                |

### IMPELLER REMOVAL

1. Wait for engine to cool and disconnect spark plug.
2. Drain fuel and oil from the engine.
3. Remove bag, quick release and upper handle. Do not kink, stretch, or break control cables, control housings, or end fittings while removing handles.
4. Remove the transmission cover, idler pulley, transmission and the belt from the transmission.
5. Remove the transmission plate and the housing top plate by removing bolts around outside of housing.
6. Leaving engine fastened to top plate; turn it upside down so the impeller is on top.
7. Remove impeller bolt and lock washer.
8. Lift impeller upward. If impeller slides freely, proceed to (step 10).
9. If the impeller does not loosen, obtain a 3/4-16x3" (Billy Goat part #440192) or longer bolt. Thread bolt by hand into nut until bolt rests against the shaft. Tighten the bolt slowly, which will pull the impeller away from the shaft, remove impeller from shaft. *Using a penetrating oil can help loosen a stuck impeller.*
10. Using a new impeller bolt, lockwasher, and washer, reinstall new impeller in reverse order.
11. Tighten impeller bolt. Torque impeller bolt to 33-38 Ft. Lbs. (44-51 N.m) (see item 45 on page 15).
12. Reinstall engine onto housing in reverse order of removal make sure the belt is inside the two fingers on the belt plate and that the belt is on the transmission pulley before securing the transmission.
13. Gas and oil.
14. Reconnect spark plug wire.


### DRIVE CHAIN REPLACEMENT AND ALIGNMENT

1. Wait for engine to cool and disconnect spark plug.
2. To replace a chain, first prop up the rear of the machine with small blocks to get the rear wheels off of the ground.
3. Remove the transmission cover, and the belt from the transmission.
4. Remove the bolts on both sides of the transmission holding the flange bearings; this should give enough slack to slip the chain off.
4. Replace the old chain with a new one.
5. Once the chain is on, put the bolts back into the flange bearings and tighten.
6. Finally, make sure the wheels rotate freely. If not, loosen the bearings and shift them to get the chain running straight up and down.
7. Reassemble the transmission components removed in steps 1-3 in reverse order.

## **BELT TENSION ADJUSTMENT**

### **DO NOT ADJUST WHILE THE MACHINE IS RUNNING!**

1. Wait for engine to cool and disconnect spark plug.
2. Remove the transmission cover
3. Using two ½" wrenches loosen the two nuts on the cable that connects to the idler arm.
4. The setting of the tension on the belt is controlled by the distance on the threads of the cable. To loosen tension, move the position towards the end of the threads and in the opposite direction to tighten.
5. Check the travel of the idler arm by engaging the bail, which the drive should start to engage when the bail is 2 ½ inches away from the handle. The spring, at a relaxed state should be 1.5 inches long on the coil, and when the bail is in contact with the handle it should be 1.75 inches long. If the belt is too tight it can cause premature failure and if it is too loose it can come off of the pulley.
6. When satisfied with the position, place the transmission cover back into place and secure. Then run the machine to make sure the transmission is engaging properly. If the drive will not engage or will not disengage repeat the previous steps.

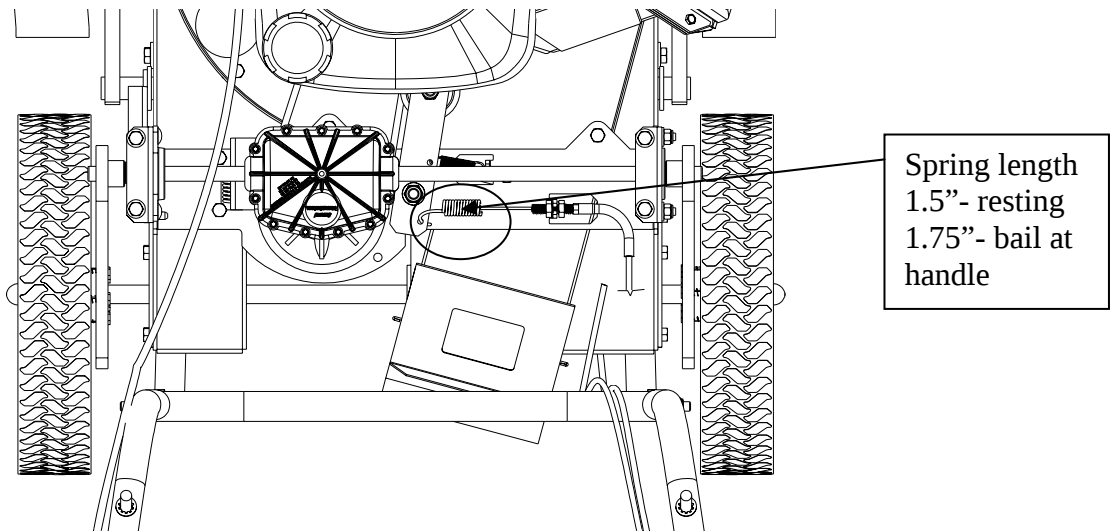

## **BELT REPLACEMENT**

1. Wait for engine to cool and disconnect spark plug.
2. Drain fuel and oil from the engine.
3. Remove bag, quick release and upper handle. Do not kink, stretch, or break control cables, control housings, or end fittings while removing handles.
4. Remove the transmission cover, idler pulley, transmission and the belt from the transmission.
5. Remove the transmission plate and the housing top plate by removing bolts around outside of housing.
6. Leaving engine fastened to top plate, turn it upside down so the impeller is on top.
7. Remove impeller bolt and lock washer.
8. Lift impeller upward. If impeller slides freely, proceed to (step 10).
9. If the impeller does not loosen, obtain a 3/4-16x3" (Billy Goat part #440192) or longer bolt. Thread bolt by hand into nut until bolt rests against the shaft. Tighten the bolt slowly, which will pull the impeller away from the shaft, remove impeller from shaft. *Using a penetrating oil can help loosen a stuck impeller.*
10. Place the new belt on the shaft.
11. Using a new impeller bolt and lockwasher, reinstall new impeller in reverse order.
12. Tighten impeller bolt. Torque impeller bolt to 33-40 Ft. Lbs. (44-54 N.m) (see item 45 on page 15).
13. Make sure the belt is in the groove on the impeller and feed it through the hole in the top plate.
14. Reinstall engine onto housing in reverse order of removal make sure the belt is inside the two fingers on the belt plate and that the belt is on the transmission pulley before securing the transmission.
15. Gas and oil.
16. Reconnect spark plug wire.




## CHIPPER BLADE REMOVAL AND SHARPENING (TKV ONLY)

Chipper blades are normal replaceable wear items.

**⚠ DANGER** Chipper blade is sharp. Replace any damaged blade.

Depending on the type and amount of wood being chipped, the chipper blade will eventually get dull, losing its cutting ability. Evidence of a dull blade is a noticeably reduced chipping ability or a rough cut on end of branch. **Note:** The chipper blade gap is factory set and should be checked each time impeller is removed from engine crankshaft and reset if required. If reassembly requires a different quantity of shim washers, Billy Goat® shim washer must be used.

1. Follow the steps 1-6 on the impeller removal instructions.
2. Using a 3/16" Allen wrench and 1/2" open end wrench, remove chipper blade from impeller.
3. Sharpen blade by lightly grinding the cutting edge of the blade at **40 degrees** (see figure below). It is not necessary to remove all nicks from the cutting edge. **CAUTION:** Be careful to avoid heat buildup in the blade during sharpening. This will reduce its heat-treated hardness properties and will reduce blade life. Evidence of too much heat build-up is a change of color along sharpened edge.
4. The same chipper blade can be sharpened several times. However, blade replacement is required when blade no longer overhangs the chip relief hole in impeller back plate or if increased vibration occurs (see fig below).
5. Chipper blade installation is in reverse order of removal.

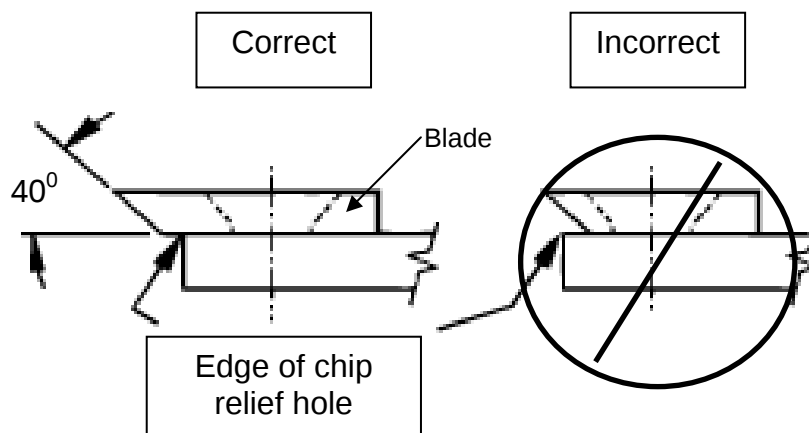




## Troubleshooting

| Problem                                         | Possible Cause                                                                                                                                      | Solution                                                                                                                                                                                  |
|-------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Abnormal vibration.                             | · Loose or out of balance impeller or loose engine                                                                                                  | · Check impeller and replace if required.<br>Check engine                                                                                                                                 |
| Will not vacuum or has poor vacuum performance  | · dirty debris bag. Hose kit cap missing.<br>· Clogged nozzle or exhaust. Excessive quantity of debris.<br>· Improper nozzle height                 | · Clean debris bag. Shake bag clean or wash. Check for hose kit cap. Unclog nozzle or exhaust. Allow air to feed with debris<br>· Adjust nozzle height so that it is closer to the debris |
| Engine will not start.                          | · Throttle in off position. Engine not in full choke position. Out of gasoline. Bad or old gasoline. Sparkplug wire disconnected. Dirty air cleaner | · Check stop switches, throttle, choke position and gasoline. Connect spark plug wire. Clean or replace air filter. Or contact a qualified service person.                                |
| Engine is locked, will not pull over.           | · Debris locked in impeller. Engine problem.                                                                                                        | · See page 5. Contact a engine service dealer for engine problems                                                                                                                         |
| Nozzle scrapes ground in lowest height setting. | Nozzle height out of adjustment                                                                                                                     | Adjust nozzle height (See Nozzle height fine adjustment for hard surfaces on page 5)                                                                                                      |
| No self-propelling                              | · Drive bail not engaged<br>· Drive belt worn or broken<br>· Drive clutch cable out of adjustment or broken.<br>· Drive chain off the sprocket.     | · Engage the drive bail.<br>· Check the drive belt.<br>· Check the drive clutch cable (see page 12).<br>· Check the drive chain (see page 12).                                            |
| Self propelled drive will not release           | · Improper drive clutch cable adjustment or cable is kinked.                                                                                        | · Check the drive clutch cable (see page 13).                                                                                                                                             |
| Noisy or broken chain                           | · No chain lubrication.<br>· Chain misalignment or tension.                                                                                         | · Lubricate chain.<br>· Check the drive chain (see page 12).                                                                                                                              |
| Unit does not free-wheel backwards              | · None                                                                                                                                              | · Push the unit slightly forward then the unit will free-wheel                                                                                                                            |
| Too much dust coming from bag.                  | · Vacuuming very dry, brittle or small debris                                                                                                       | · Switch to felt bag (see page 1 accessories)                                                                                                                                             |



PARTS DRAWING KVSP/TKVSP

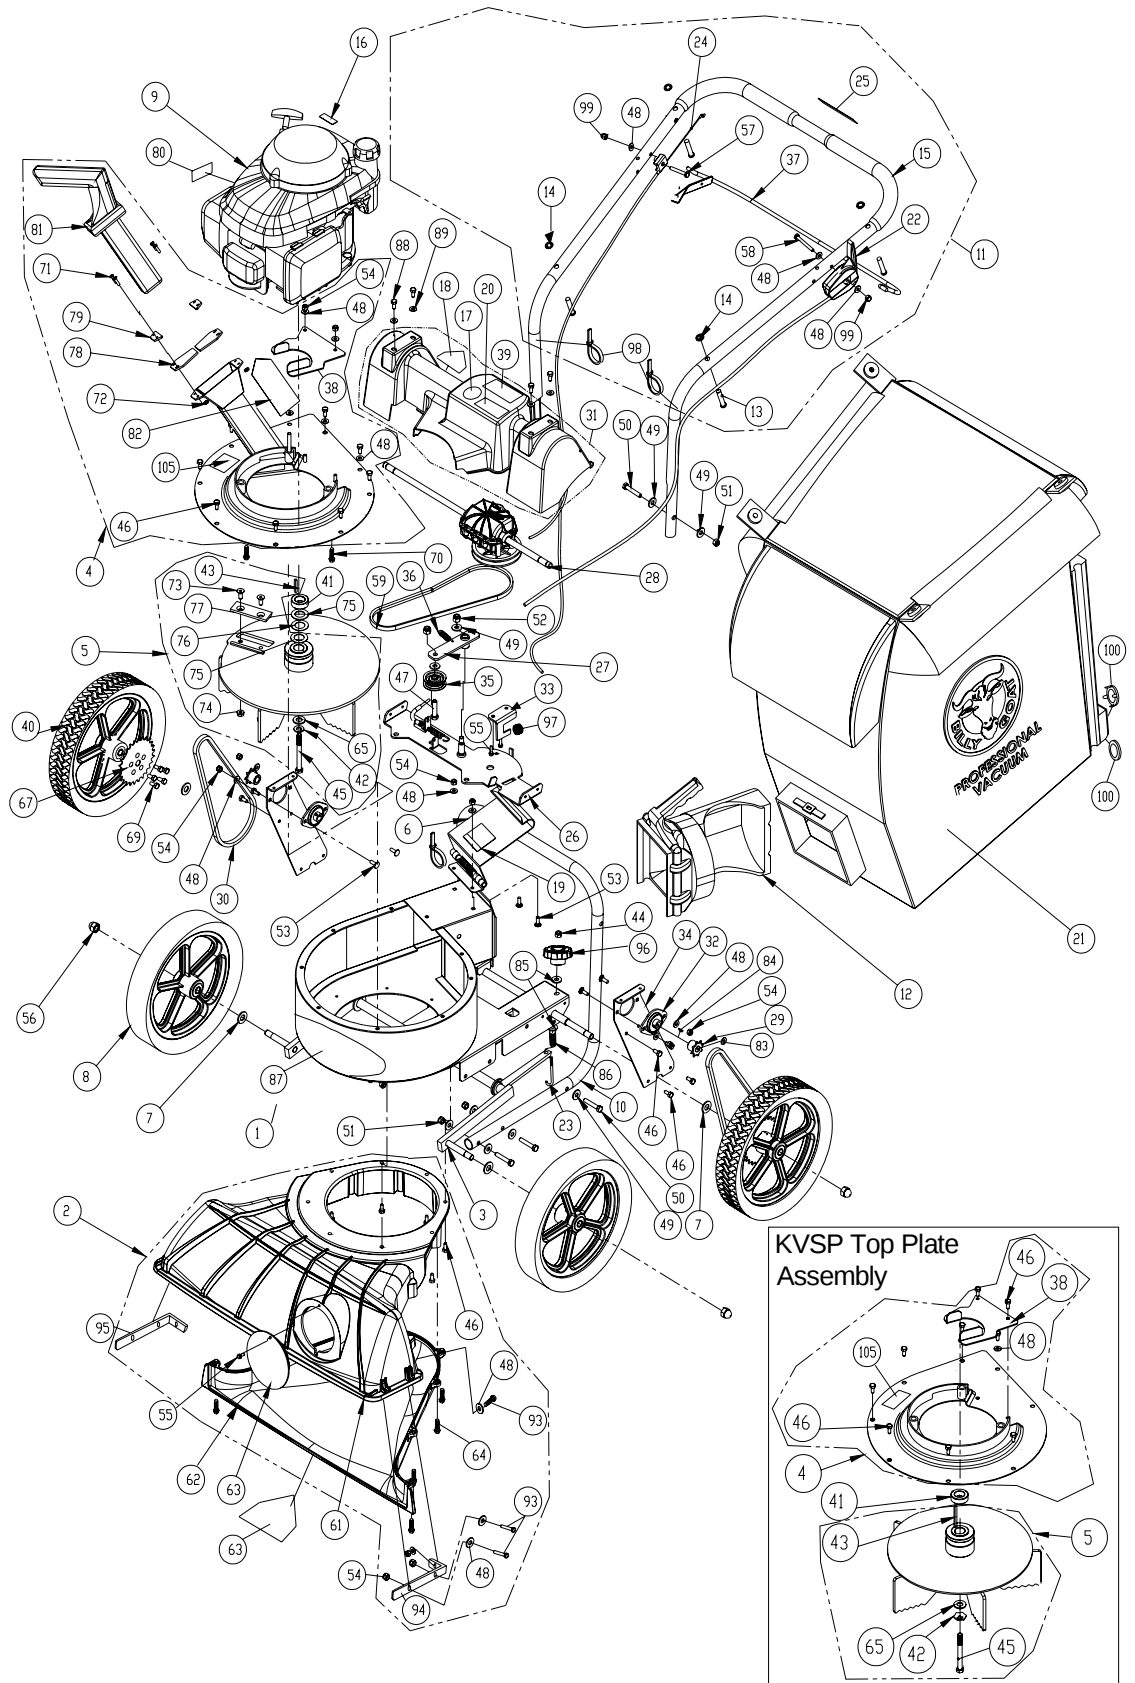



## KVSP/TKVSP Owner's Manual

### PARTS LIST KVSP/TKVSP

| ITEM NO. | Description                            | KV600SP/KV600SPFB<br>PART NUMBER | QTY | KV650SPH/KV650SPHFB<br>PART NUMBER | QTY | TKV650SPH/TKV650SPHFB<br>PART NUMBER | QTY |
|----------|----------------------------------------|----------------------------------|-----|------------------------------------|-----|--------------------------------------|-----|
| 1        | MAIN FRAME HOUSING KV                  | 891100-S                         | 1   | 891100-S                           | 1   | 891100-S                             | 1   |
| 2        | NOZZLE ASSEMBLY TKV                    | 891110-S                         | 1   | 891110-S                           | 1   | 891110-S                             | 1   |
| 3        | AXLE WA KV MICRO                       | 891138                           | 1   | 891138                             | 1   | 891138                               | 1   |
| 4        | PLATE TOP WA KVSP                      | 891101-S                         | 1   | 891101-S                           | 1   | 891107-S                             | 1   |
| 5        | IMPELLER SERRATED 14.25 WA KVSP        | 891104-S                         | 1   | 891104-S                           | 1   | 891109-S                             | 1   |
| 6        | DOOR EXHAUST ASSY RAW                  | 890148-01                        | 1   | 890148-01                          | 1   | 890148-01                            | 1   |
| 7        | WASHER 1/2" SAE Z/P                    | 8172011                          | 4   | 8172011                            | 4   | 8172011                              | 4   |
| 8        | WHEEL ASSY 12" X 2.5" TREAD            | 900509                           | 2   | 900509                             | 2   | 900509                               | 2   |
| 9        | ENGINE 6.5 HP HONDA GSV190AN1L         | -                                | -   | 840069                             | 1   | 840069                               | 1   |
|          | ENGINE 6 BRIGGSAND STRATTON            | 890622                           | 1   | -                                  | -   | -                                    | -   |
| 10       | LOWER HANDLE KV                        | 891050                           | 1   | 891050                             | 1   | 891050                               | 1   |
| 11       | HANDLE UPPER KVSP                      | 891054-S                         | 1   | 891054-S                           | 1   | 891054-S                             | 1   |
| 12       | QUICK DISCONNECT                       | 890176                           | 1   | 890176                             | 1   | 890176                               | 1   |
| 13       | PIN CLEVIS 3/8" x 2.125" LONG          | 520120                           | 4   | 520120                             | 4   | 520120                               | 4   |
| 14       | RETAINER                               | 360279                           | 4   | 360279                             | 4   | 360279                               | 4   |
| 15       | GRIP HANDLE 1"X 9.5" LG                | 430342                           | 2   | 430342                             | 2   | 430342                               | 2   |
| 16       | LABEL HOT ENGINE EN/SP                 | 100261                           | 1   | -                                  | -   | -                                    | -   |
| 17       | LABEL READ                             | 890301                           | 1   | 890301                             | 1   | 890301                               | 1   |
| 18       | LABEL WARNING DANGER                   | 400424                           | 2   | 400424                             | 2   | 400424                               | 2   |
| 19       | LABEL DANGER FLYING DEBRIS             | 810736                           | 1   | 810736                             | 1   | 810736                               | 1   |
| 20       | LABEL EAR EYE BREATHING                | 890254                           | 1   | 890254                             | 1   | 890254                               | 1   |
| 21       | BAG DEBRIS NO ZIPPER KV                | 891132                           | 1   | 891132                             | 1   | 891132                               | 1   |
|          | BAG DEBRIS FELT (FB MODELS)            | 891126                           | 1   | 891126                             | 1   | 891126                               | 1   |
| 22       | CABLE THROTTLE ASSY 42" W/CHOKE        | 891036                           | 1   | 891027                             | 1   | 891027                               | 1   |
| 23       | J BOLT 3/8-16 X 6"                     | 891071                           | 1   | 891071                             | 1   | 891071                               | 1   |
| 24       | CABLE CLUTCH DRIVE ASSY 40" KVSP       | 891032                           | 1   | 891032                             | 1   | 891032                               | 1   |
| 25       | LABEL CLUTCH VQ                        | 900328                           | 1   | 900328                             | 1   | 900328                               | 1   |
| 26       | BRACKET TRANS MOUNT WA KV              | 891106                           | 1   | 891106                             | 1   | 891106                               | 1   |
| 27       | ARM IDLER DRIVE WA KV                  | 891105                           | 1   | 891105                             | 1   | 891105                               | 1   |
| 28       | TRANS SINGLE SPEED W/DIFF              | 891020                           | 1   | 891020                             | 1   | 891020                               | 1   |
| 29       | SPROCKET 8 TOOTH #43 OR #65            | 891022                           | 2   | 891022                             | 2   | 891022                               | 2   |
| 30       | CHAIN #43 X 58 PITCHES                 | 891023                           | 2   | 891023                             | 2   | 891023                               | 2   |
| 31       | GUARD DRIVE KV                         | 891004-S                         | 1   | 891004-S                           | 1   | 891004-S                             | 1   |
| 32       | BEARING 1/2" PRESSED STEEL HOUSING     | 891025                           | 2   | 891025                             | 2   | 891025                               | 2   |
| 33       | BRACKET TRANS FIX KV                   | 891012                           | 1   | 891012                             | 1   | 891012                               | 1   |
| 34       | PLATE CHAIN REINFORCE KV               | 891014                           | 2   | 891014                             | 2   | 891014                               | 2   |
| 35       | PULLEY IDLER 2" OD X 3/8" ID           | 840087                           | 1   | 840087                             | 1   | 840087                               | 1   |
| 36       | SPRING TENSION                         | 800242                           | 1   | 800242                             | 1   | 800242                               | 1   |
| 37       | BAIL CLUTCH WA KVSP                    | 891102                           | 1   | 891102                             | 1   | 891102                               | 1   |
| 38       | BRACKET IDLER BELT FINGER KV           | 891028                           | 1   | 891028                             | 1   | 891028                               | 1   |
| 39       | LABEL DANGER GUARD                     | 900327                           | 1   | 900327                             | 1   | 900327                               | 1   |
| 40       | WHEEL ASSY SP 26T SPROCKET             | 890242                           | 2   | 890242                             | 2   | 890242                               | 2   |
| 41       | SPACER 1.50OD X .890ID X .5 THK        | -                                | -   | 840083                             | 1   | 840083                               | 1   |
| 42       | WASHER LOCK 3/8 ST MED                 | 8177012                          | 1   | 8177012                            | 1   | 8177012                              | 1   |
| 43       | SQ KEY 2.125 X .187                    | 9201087                          | 1   | 9201087                            | 1   | 9201087                              | 1   |
| 44       | NUT LOCK 3/8-16 THIN                   | 8161042                          | 1   | 8161042                            | 1   | 8161042                              | 1   |
| 45       | SCREW CAP 3/8-24 x 3 1/2 GR. 8 W/PATCH | 440151                           | 1   | 440151                             | 1   | 440151                               | 1   |



## KVSP/TKVSP Owner's Manual

|     |                                     | KV600SP/KV600SPFB<br>PART NUMBER | QTY | KV650SPH/KV650SPHFB<br>PART NUMBER | QTY | TKV650SPH/TKV650SPHFB<br>PART NUMBER | QTY |
|-----|-------------------------------------|----------------------------------|-----|------------------------------------|-----|--------------------------------------|-----|
| 46  | SCREWCAP 1/4 - 20 x 5/8 HWH         | 890359                           | 26  | 890359                             | 26  | 890359                               | 24  |
| 47  | BOLT IDLER 3/8-16 X 1 1/2           | 800888                           | 1   | 800888                             | 1   | 800888                               | 1   |
| 48  | WASHER 1/4" SAE ZP                  | 8172007                          | 17  | 8172007                            | 17  | 8172007                              | 17  |
| 49  | WASHER 5/16 FLATWASHER Z/P          | 8171003                          | 19  | 8171003                            | 19  | 8171003                              | 19  |
| 50  | SCREWCAP 5/16-18 X 1.75 ZP          | 8041031                          | 8   | 8041031                            | 8   | 8041031                              | 8   |
| 51  | NUT LOCK 5/16-18                    | 8160002                          | 8   | 8160002                            | 8   | 8160002                              | 8   |
| 52  | NYLON INSERT LOCKNUT, 3/8-16 UNC    | 8160003                          | 2   | 8160003                            | 2   | 8160003                              | 2   |
| 53  | SCREWCAP 1/4-20 X 3/4"              | 8041004                          | 2   | 8041004                            | 2   | 8041004                              | 2   |
| 54  | NYLON INSERT LOCKNUT, 1/4-20 UNC    | 8160001                          | 12  | 8160001                            | 12  | 8160001                              | 15  |
| 55  | SCREWCAP #10-14 X 3/4" HWH ZP       | 891043                           | 3   | 891043                             | 3   | 891043                               | 3   |
| 56  | 1/2-13 CAP NUT NP W/PATCH           | 890530                           | 4   | 890530                             | 4   | 890530                               | 4   |
| 57  | SCREWCAP 1/4-20 x 1 3/4 HCS ZP      | 8041009                          | 1   | 8041009                            | 1   | 8041009                              | 1   |
| 58  | SCREWCAP 1/4-20x2"                  | 8041010                          | 1   | 8041010                            | 1   | 8041010                              | 1   |
| 59  | BELT 3L310                          | 891026                           | 1   | 891026                             | 1   | 891026                               | 1   |
| 60  |                                     |                                  |     |                                    |     |                                      |     |
| 61  | NOZZLE TOP HALF KV                  | 891002                           | 1   | 891002                             | 1   | 891002                               | 1   |
| 62  | NOZZLE BOTTOM HALF KV               | 891003                           | 1   | 891003                             | 1   | 891003                               | 1   |
| 63  | PLUG HOUSING KD LB                  | 900146-01                        | 1   | 900146-01                          | 1   | 900146-01                            | 1   |
| 64  | SCREW PLASTIC 1/4-20 X 1            | 891039                           | 8   | 891039                             | 8   | 891039                               | 8   |
| 65  | WASHER 1.5 OD X .453 ID X .25 THK   | 440153                           | 1   | 440153                             | 1   | 440153                               | 1   |
| 66  |                                     |                                  |     |                                    |     |                                      |     |
| 67  | SPROCKET 65A26 26 TOOTH             | 890238                           | 2   | 890238                             | 2   | 890238                               | 2   |
| 68  |                                     |                                  |     |                                    |     |                                      |     |
| 69  | SCREW SELF TAP 1/4 x 0.75           | 900505                           | 10  | 900505                             | 10  | 900505                               | 10  |
| 70  | SCREW PLASTITE 1/4-20 X 3/4 HWH ZP  | 840082                           | 3   | 840082                             | 3   | 840082                               | 3   |
| 71  | SCREWCAP #10-24 X 5/8"              | -                                | -   | -                                  | -   | 8059135                              | 4   |
| 72  | NYLON INSERT LOCKNUT 10-32 UNF ZINC | -                                | -   | -                                  | -   | 8164005                              | 4   |
| 73  | SCREW SOCKET HD 5/16-18 X 3/4 GR. 8 | -                                | -   | -                                  | -   | 890103                               | 2   |
| 74  | NUT KEPS 5/16-18                    | -                                | -   | -                                  | -   | 890104                               | 2   |
| 75  | WASHER SHIM 0.875 ID X 0.060        | -                                | -   | -                                  | -   | 891065                               | 2   |
| 76  | WASHER SHIM 0.875 ID X 0.020        | -                                | -   | -                                  | -   | 891041                               | 0-3 |
| 77  | BLADE CHIPPER KD501                 | -                                | -   | -                                  | -   | 890101                               | 1   |
| 78  | GUARD FLAPPER                       | -                                | -   | -                                  | -   | 890119                               | 2   |
| 79  | PLATE FLAPPER ENTRANCE              | -                                | -   | -                                  | -   | 890127                               | 2   |
| 80  | LABEL SPARK ARRESTOR EN/SP          | -                                | -   | 100252                             | 1   | 100252                               | 1   |
| 81  | TAMPER CHIPPER                      | -                                | -   | -                                  | -   | 890229                               | 1   |
| 82  | LABEL DANGER CHIPPER                | -                                | -   | -                                  | -   | 890152                               | 1   |
| 83  | CLIP 1/2"                           | 350146                           | 4   | 350146                             | 4   | 350146                               | 4   |
| 84  | WOODRUFF KEY 1/8 X 1/2              | 510180                           | 2   | 510180                             | 2   | 510180                               | 2   |
| 85  | WASHER 1/2" FC                      | 8171006                          | 2   | 8171006                            | 2   | 8171006                              | 2   |
| 86  | SPRING COMPRESSION                  | 891072                           | 1   | 891072                             | 1   | 891072                               | 1   |
| 87  | LABEL DECAL KV/TKV                  | 891046                           | 1   | 891046                             | 1   | 891047                               | 1   |
| 88  | SCREW SM 1/4 X 3/4 DRILL PT         | 510208                           | 4   | 510208                             | 4   | 510208                               | 4   |
| 89  | WASHER 1/4" SAE BLACK OXIDE         | 510193                           | 4   | 510193                             | 4   | 510193                               | 4   |
| 91  |                                     |                                  |     |                                    |     |                                      |     |
| 92  | CARRIAGE BOLT 1/4"-20 X 3/4"        | 8024021                          | 4   | 8024021                            | 4   | 8024021                              | 4   |
| 93  | SCREWCAP 1/4-20 X 1" HCS ZP         | 8041006                          | 6   | 8041006                            | 6   | 8041006                              | 6   |
| 94  | KV REINFORCEMENT NOZZLE BRACKET LFT | 891062                           | 1   | 891062                             | 1   | 891062                               | 1   |
| 95  | KV REINFORCEMENT NOZZLE BRACKET RT  | 891064                           | 1   | 891064                             | 1   | 891064                               | 1   |
| 96  | KNOB 3/8-16 RED                     | 891070                           | 1   | 891070                             | 1   | 891070                               | 1   |
| 97  | SPRING LEVER GZ                     | 610429                           | 1   | 610429                             | 1   | 610429                               | 1   |
| 98  | TY WRAP                             | 900407                           | 4   | 900407                             | 4   | 900407                               | 4   |
| 99  | NUT 1/4-20 ACORN                    | 840071                           | 2   | 840071                             | 2   | 840071                               | 2   |
| 100 | RING CLASP FRONT BAG KV             | 891155                           | 2   | 891155                             | 2   | 891155                               | 2   |
| 105 | LABEL MADE IN U.S.A.                | 520116                           | 1   | 520116                             | 1   | 520116                               | 1   |