

GENERAL PRECAUTIONARY INFORMATION

⚠ WARNING

To prevent electrical shock and/or equipment damage, disconnect electric power to system at main fuse or circuit breaker box until installation is complete.

⚠ CAUTION

Do not use on circuits exceeding rating of transformer. Higher voltage will damage control and could cause personal injury or property damage.

NOTE


If power disconnect switch is not in sight, lock it in the open position and tag it to prevent unexpected application of power.

All wiring must conform to local and national electrical codes and ordinances.


All wiring should be performed by a qualified electrician.

The wiring to and from the transformer must be of proper gauge and type as required by code.

WIRING

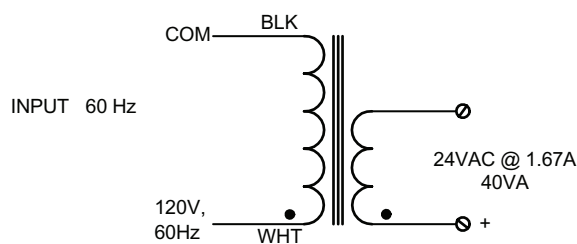

SCHEMATIC
S84-11
S84A-410

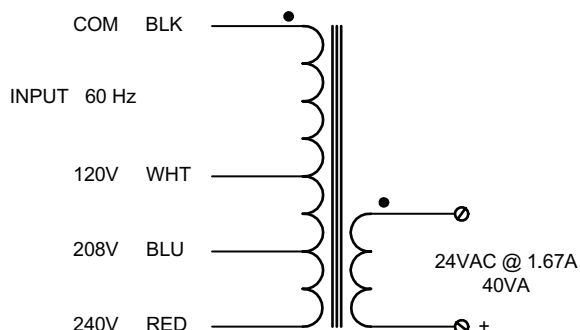

SCHEMATIC
S84Z-90
S84Z-501

NOTE

Unused primary leads must be insulated.
Dots indicate like polarity.