

OPERATOR'S MANUAL



Self Propelled Yard Vacuum/Chipper/Shredder/ Vacuum/Hose — Model Series 070

IMPORTANT

READ SAFETY RULES AND INSTRUCTIONS CAREFULLY BEFORE OPERATION

Warning: This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator. In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester for the muffler is available through your nearest engine authorized service dealer or contact the service department, P.O. Box 361131 Cleveland, Ohio 44136-0019.

This Operator's Manual is an important part of your new chipper shredder vacuum. It will help you assemble, prepare and maintain the unit for best performance. Please read and understand what it says.

Table of Contents

| | | | |
|---|----|--|-----------|
| Customer Support..... | 2 | Maintaining Your Chipper Shredder Vacuum . | 14 |
| Safety Labels | 3 | Troubleshooting..... | 18 |
| Safe Operation Practices | 4 | Parts List | 20 |
| Setting Up Your Chipper Shredder Vacuum | 6 | Warranty | Back Page |
| Operating Your Chipper Shredder Vacuum | 10 | | |

Finding and Recording Model Number

BEFORE YOU START ASSEMBLING
YOUR NEW EQUIPMENT,

please locate the model plate on the equipment and copy the information to the sample model plate provided to the right. You can locate the model plate by standing behind the unit and looking down at the frame below the engine. This information will be necessary to use the manufacturer's web site and/or obtain assistance from the Customer Support Department or an authorized service dealer.

 **TROY-BILT** LLC
www.troybilt.com P. O. BOX 361131
CLEVELAND, OH 44136
330-558-7220
800-828-5500




Customer Support






Please do **NOT** return the unit to the retailer from which it was purchased, without first contacting Customer Support.

If you have difficulty assembling this product or have any questions regarding the controls, operation, or maintenance of this unit, you can seek help from the experts. Choose from the options below:

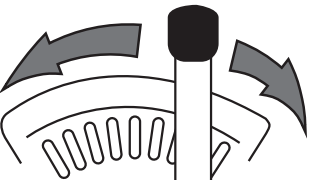1. Visit **troybilt.com**. Click on the Support tab.
2. Phone a **Customer Support Representative** at 1 (800) 828-5500.
3. The **engine manufacturer** is responsible for all engine-related issues with regards to performance, power-rating, specifications, warranty and service. Please refer to the engine manufacturer's Owner's/Operator's Manual, packed separately with your unit, for more information.

Safety Labels Found On Your Chipper Shredder Vacuum

| | | |
|--|--|---|
|  STOP | ⚠ DANGER Keep hands out of inlets while engine is running. Rotating blades are inside. |  |
| FRONT WHEEL / VACUUM NOZZLE HEIGHT ADJUSTER | | |
| <p>HIGH</p> <p>For use in grass to pick up leaves and debris</p> |  | <p>LOW</p> <p>To pick up wet material, pine cones, acorns or material on pavement.</p> |

| | |
|---|---|
| ⚠ DANGER TO AVOID SERIOUS INJURY |  |
| <ul style="list-style-type: none"> • READ OPERATOR'S MANUAL. • KEEP HANDS OUT OF INLET AND DISCHARGE OPENINGS WHILE MACHINE IS RUNNING. ROTATING BLADES ARE INSIDE. • TURN ENGINE OFF AND ALLOW IMPELLER TO COME TO COMPLETE STOP BEFORE REMOVING BAG. • DO NOT ATTEMPT TO CLEAR A CLOG OR JAM WITH THE ENGINE RUNNING. • DO NOT OPERATE UNIT WITHOUT BAG OR OPTIONAL BLOWER CHUTE IN PLACE. • DO NOT STAND OR WALK IN FRONT OF BLOWER CHUTE OR AIM IT AT BYSTANDERS. OBJECTS THROWN OUT OF DISCHARGE CAN CAUSE PERSONAL INJURY. • DO NOT OPERATE WHEN CHILDREN OR OTHERS ARE AROUND. • WEAR APPROVED SAFETY GLASSES. |     |

| | | |
|--|---|---|
| ⚠ DANGER | | |
| <ul style="list-style-type: none"> • KEEP HANDS OUT OF DISCHARGE OPENING. • DO NOT STAND OR WALK IN FRONT OF DISCHARGE OPENING OR AIM IT AT BYSTANDERS. OBJECTS THROWN OUT OF CHUTE CAN CAUSE PERSONAL INJURY • KEEP CHILDREN AND OTHERS AWAY | | |
|  |  |  |
| S 30270 | | |

1

Safety Labels



WARNING

DO NOT remove safety (or any) labels from chipper shredder vacuum for any reason.

2

Safe Operation Practices



WARNING

This symbol points out important safety instructions which, if not followed, could endanger the personal safety and/or property of yourself and others. Read and follow all instructions in this manual before attempting to operate this machine. Failure to comply with these instructions may result in personal injury. When you see this symbol.

HEED ITS WARNING!

Your Responsibility

Restrict the use of this power machine to persons who read, understand and follow the warnings and instructions in this manual and on the machine.



WARNING: Engine Exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to State of California to cause cancer and birth defects or other reproductive harm.

DANGER: This machine was built to be operated according to the rules for safe operation in this manual. As with any type of power equipment, carelessness or error on the part of the operator can result in serious injury. This machine is capable of amputating hands and feet and throwing objects. Failure to observe the following safety instructions could result in serious injury or death.

Training

1. Read, understand, and follow all instructions on the machine and in the manual(s) before attempting to assemble and operate. Keep this manual in a safe place for future and regular reference and for ordering replacement parts.
2. Be familiar with all controls and their proper operation. Know how to stop the machine and disengage them quickly.
3. Never allow children under 16 years old to operate this machine. Children 16 years old and over should read and understand the operation instructions and safety rules in this manual and should be trained and supervised by a parent.
4. Never allow adults to operate this machine without proper instruction.
5. Keep bystanders, helpers, pets, and children at least 75 feet from the machine while it is in operation. Stop machine if anyone enters the area.
6. Never run an engine indoors or in a poorly ventilated area. Engine exhaust contains carbon monoxide, an odorless and deadly gas.
7. Do not put hands and feet near rotating parts or in the feeding chambers and discharge opening. Contact with the rotating impeller can amputate fingers, hands, and feet.
8. Never attempt to unclog either the feed intake or discharge opening, remove or empty vacuum bag, or inspect and repair the machine while the engine is running. Shut the engine off and wait until all moving parts have come to a complete stop. Disconnect the spark plug wire and ground it against the engine.

Preparation

1. Thoroughly inspect the area where the equipment is to be used. Remove all rocks, bottles, cans, or other foreign objects which could be picked up or thrown and cause personal injury or damage to the machine.
2. Always wear safety glasses or safety goggles during operation or while performing an adjustment or repair, to protect eyes. Thrown objects which ricochet can cause serious injury to the eyes.
3. Wear sturdy, rough-soled work shoes and close-fitting slacks and shirts. Loose fitting clothes or jewelry can be caught in movable parts. Never operate this machine in bare feet or sandals. Wear leather work gloves when feeding material in the chipper chute.
4. Before starting, check all bolts and screws for proper tightness to be sure the machine is in safe working condition. Also, visually inspect machine for any damage at frequent intervals.
5. Maintain or replace safety and instructions labels, as necessary.
6. To avoid personal injury or property damage use extreme care in handling gasoline. Gasoline is extremely flammable and the vapors are explosive. Serious personal injury can occur when gasoline is spilled on yourself or your clothes which can ignite. Wash your skin and change clothes immediately.
 - a. Use only an approved gasoline container.
 - b. Extinguish all cigarettes, cigars, pipes, and other sources of ignition.
 - c. Never fuel machine indoors.
 - d. Never remove gas cap or add fuel while the engine is hot or running.
 - e. Allow engine to cool at least two minutes before refueling.
 - f. Never over fill fuel tank. Fill tank to no more than 1/2 inch below bottom of filler neck to provide space for fuel expansion.
 - g. Replace gasoline cap and tighten securely.
 - h. If gasoline is spilled, wipe it off the engine and equipment. Move machine to another area. Wait 5 minutes before starting the engine.
 - i. Never store the machine or fuel container inside where there is an open flame, spark, or pilot light (e.g. furnace, water heater, space heater, clothes dryer, etc.).
 - j. To reduce a fire hazard, keep machine free of grass, leaves, or other debris build-up. Clean up oil or fuel spillage and remove any fuel soaked debris.
 - k. Allow machine to cool at least 5 minutes before storing.

Operation

1. Do not put hands and feet near rotating parts or in the feeding chambers and discharge opening. Contact with the rotating impeller can amputate fingers, hands, and feet.
2. Before starting the machine, make sure the chipper chute, feed intake, and cutting chamber are empty and free of all debris.
3. Thoroughly inspect all material to be shredded and remove any metal, rocks, bottles, cans, or other foreign objects which could cause personal injury or damage to the machine.
4. If the impeller strikes a foreign object or if your machine should start making an unusual noise or vibration, immediately shut the engine off. Allow the impeller to come to a complete stop. Disconnect the spark plug wire, ground it against the engine and perform the following steps:
 - a. Inspect for damage.
 - b. Repair or replace any damaged parts.
 - c. Check for any loose parts and tighten to assure continued safe operation.
5. Do not allow an accumulation of processed material to build up in the discharge area. This can prevent proper discharge and result in kickback of material through the feed opening.
6. Do not attempt to shred or chip material larger than specified on the machine or in this manual. Personal injury or machine damage could result.
7. Never attempt to unclog either the feed intake or discharge opening while the engine is running. Shut the engine off, wait until all moving parts have stopped, disconnect the spark plug wire and ground it against the engine before clearing debris.
8. Never operate without vacuum bag and discharge chute properly attached to the machine. Never empty or change vacuum bag while the engine is running. Zippered end of vacuum bag must be kept closed at all times during operation.
9. Never operate without either the inlet nozzle or optional hose attachment properly attached to the machine. Never attempt to attach or change either attachment while the engine is running.
10. Keep all guards, deflectors and safety devices in place and operating properly.
11. Keep your face and body back and to the side of the chipper chute while feeding material into the machine to avoid accidental kickback injuries.
12. Never operate this machine without good visibility or light. Always be sure of your footing and keep a firm hold on the handles.
13. Do not operate this machine on a gravel surface.
14. Do not operate this machine while under the influence of alcohol or drugs.
15. Muffler and engine become hot and can cause a burn. Do not touch.
16. Never pick up or carry machine while the engine is running.

Maintenance & Storage

1. Never tamper with safety devices. Check their proper operation regularly.
2. Check bolts and screws for proper tightness at frequent intervals to keep the machine in safe working condition. Also, visually inspect machine for any damage and repair, if needed.
3. Before cleaning, repairing, or inspecting, stop the engine and make certain the impeller and all moving parts have stopped. Disconnect the spark plug wire and ground it against the engine to prevent unintended starting.
4. Do not change the engine governor settings or overspeed the engine. The governor controls the maximum safe operating speed of the engine.
5. Maintain or replace safety and instruction labels, as necessary.
6. Follow this manual for safe loading, unloading, transporting, and storage of this machine.
7. Never store the machine or fuel container inside where there is an open flame, spark or pilot light such as a water heater, furnace, clothes dryer, etc.
8. Always refer to the operator's manual for proper instructions on off-season storage.
9. If the fuel tank has to be drained, do this outdoors.
10. Observe proper disposal laws and regulations for gas, oil, etc. to protect the environment.

Do not modify engine

To avoid serious injury or death, do not modify engine in any way. Tampering with the governor setting can lead to a runaway engine and cause it to operate at unsafe speeds. Never tamper with factory setting of engine governor.

Notice regarding Emissions

Engines which are certified to comply with California and federal EPA emission regulations for SORE (Small Off Road Equipment) are certified to operate on regular unleaded gasoline, and may include the following emission control systems: Engine Modification (EM) and Three Way Catalyst (TWC) if so equipped.

Your Responsibility

Restrict the use of this power machine to persons who read, understand and follow the warnings and instructions in this manual and on the machine.

2

Safe Operation Practices



WARNING

This symbol points out important safety instructions, which if not followed, could endanger the personal safety and/or property of yourself and others. Read and follow all instructions in this manual before attempting to operate this machine. Failure to comply with these instructions may result in personal injury. When you see this symbol.

HEED IT'S WARNING!

Your Responsibility

Restrict the use of this power machine to persons who read, understand and follow the warnings and instructions in this manual and on the machine.

3

Setting Up Your Chipper Shredder Vacuum



IMPORTANT

This unit is shipped without gasoline or oil in the engine. Be certain to service engine with gasoline and oil as instructed in the separate engine manual before operating your machine.

NOTE: Reference to right and left hand side of the Chipper/Shredder Vacuum is observed from the operating position.

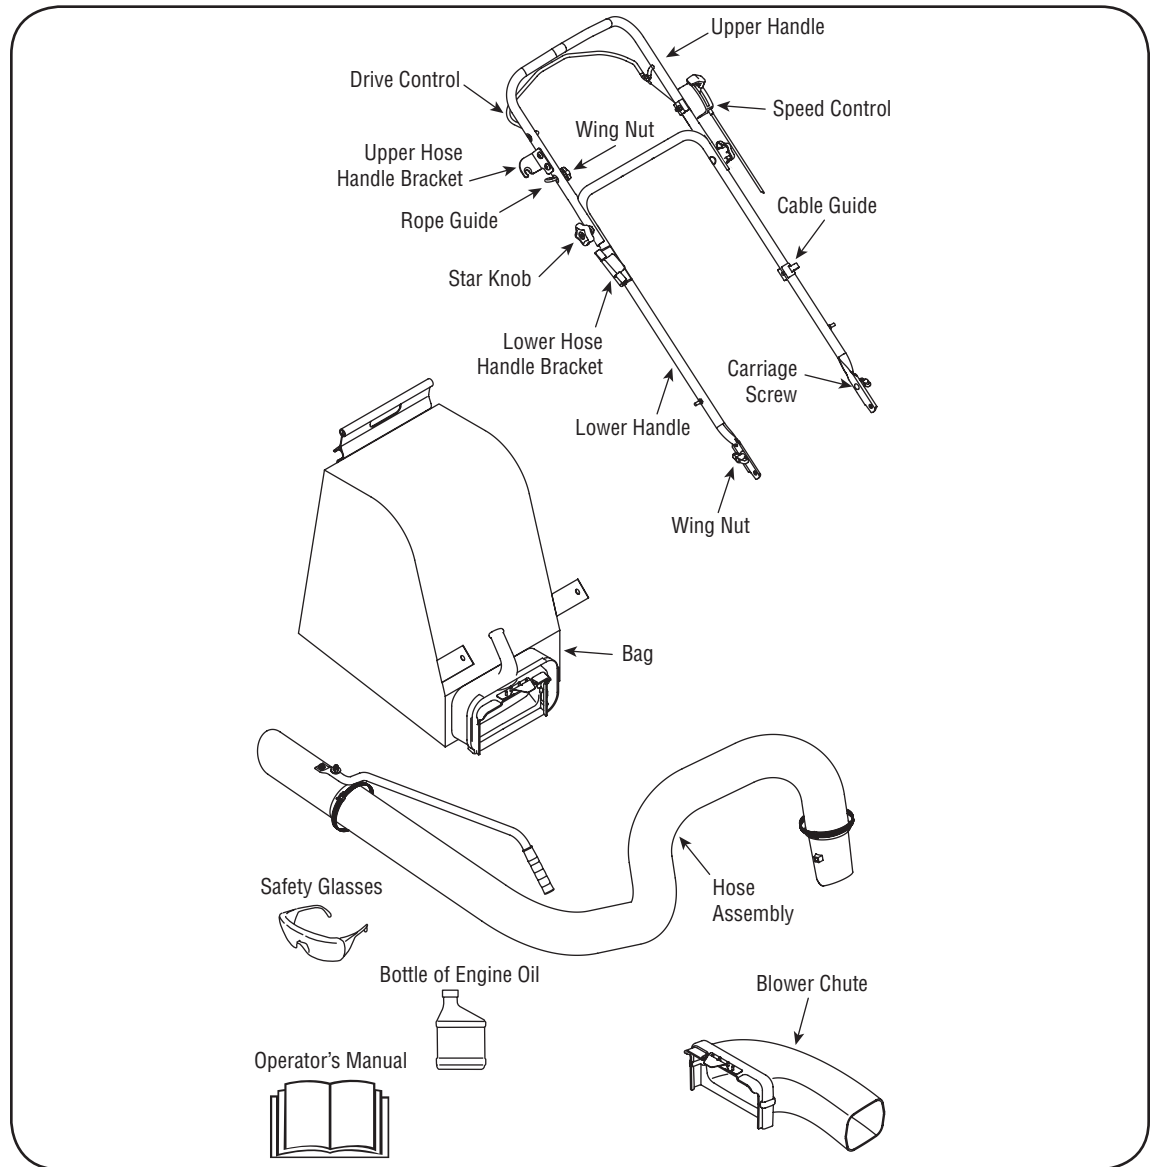


Figure 3-1

IMPORTANT: This unit is shipped without gasoline or oil in the engine. Be certain to service engine with gasoline and oil as instructed in the separate engine manual before operating your machine.

NOTE: Reference to right and left hand side of the Chipper/Shredder Vacuum is observed from the operating position.

Opening Carton

1. Cut each corner of the carton vertically from top to bottom.
2. Remove all loose parts.
3. Remove loose packing material.

Removing Unit From Carton

1. Lift unit from the rear to detach it from underlying carton material and roll unit out of carton.
2. Check carton thoroughly for any other loose parts.

NOTE: Make sure not to crimp cables while removing loose parts or the entire unit from the carton.

Loose Parts In Carton (See Figure 3-1)

- a. Upper and Lower Handle
- b. Hose Assembly
- c. Safety Glasses
- d. Engine Oil (May be located in bag)
- e. Bag
- f. Blower Chute (If Equipped)
- g. Operator's Manual

Attaching The Handle

1. Remove the hairpin clips from the handle brackets and remove the carriage screws and wing nuts from the lower handle.
 - a. Place the bottom holes in lower handle over the pins on the handle brackets and secure with hairpin clips. See Figure 3-2.
 - b. Insert carriage screws through upper hole in lower handle from the inside and secure with wing nuts. See Figure 3-2.
2. a. Unfold the upper handle until it aligns with lower handle. Make sure the rope guide is on the right side of upper handle. See Figure 3-3.

IMPORTANT: Make sure the cables are routed outside the lower handle. Also, do not crimp the cables while lifting up the handles.

- b. Secure the two handles by tightening the star knobs (carriage bolts must be seated properly into the handle). See Figure 3-3.
3. Pull the two cable ties attached to the cables tight approximately 8 inches from each cable end and place the cables into the cable guide.
 4. Loosen the wing nut that secures the rope guide to the right side of upper handle.
 - a. Pull the starter rope out of the engine slowly. See Figure 3-4.
 - b. Slip the starter rope into the rope guide. Tighten the wing nut. See Figure 3-4.

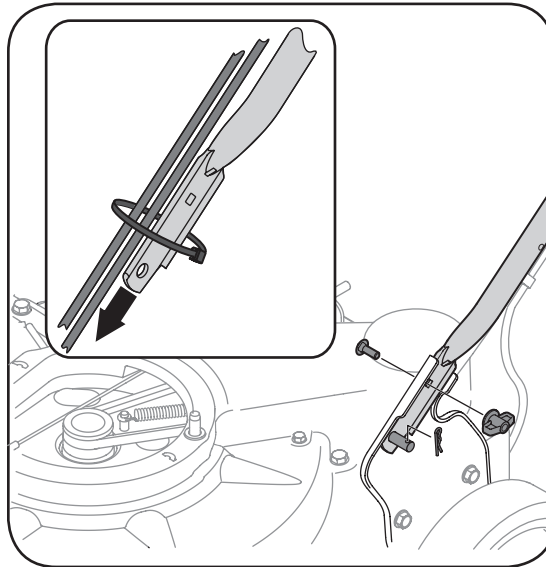


Figure 3-2

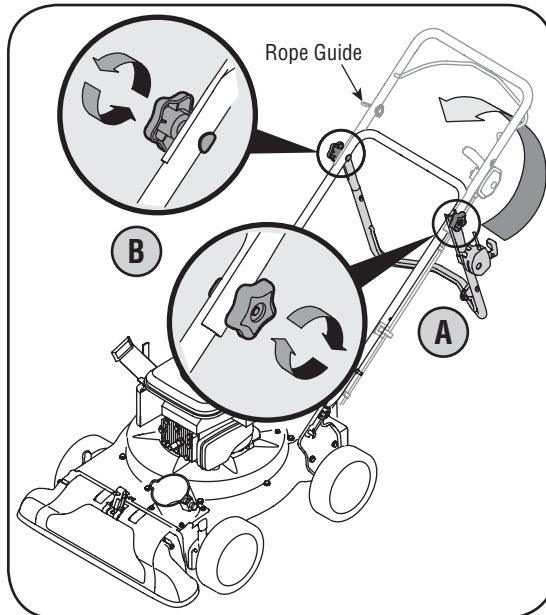


Figure 3-3

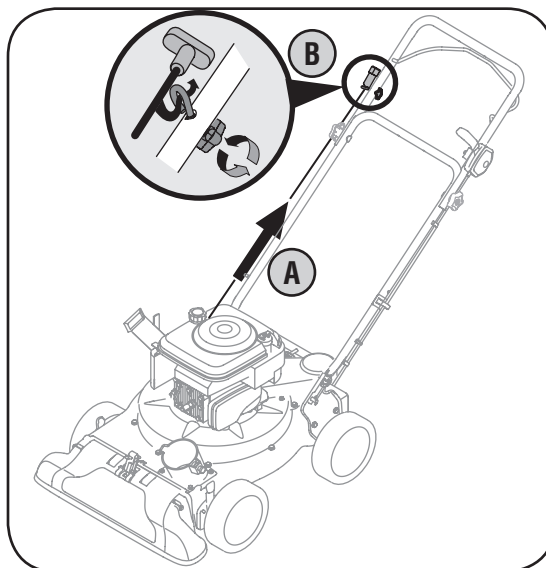


Figure 3-4

3

Setting Up Your Chipper Shredder Vacuum



IMPORTANT

Make sure the cables are routed outside the lower handle. Also, do not crimp the cables while lifting up the handles.

3

Setting Up Your Chipper Shredder Vacuum



NOTE: The bag/chute switch button attached to the mounting bracket must be fully depressed by the tip of front tab on bag handle when securing the bag or engine will not start.

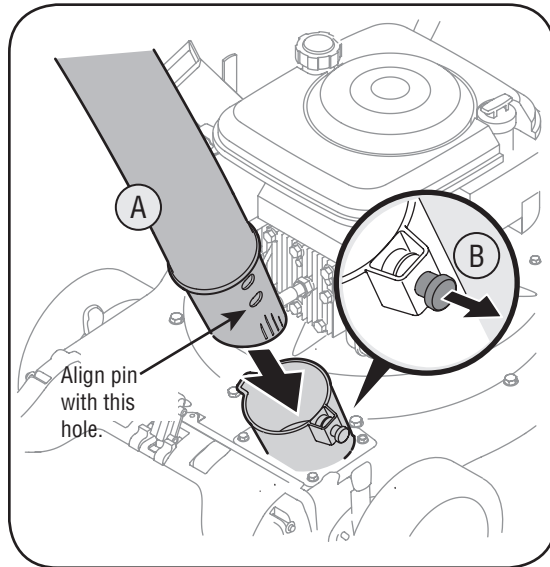


Figure 3-5

Attaching The Hose Assembly

5. a. Slide hose adapter of hose assembly into the base adapter located on the left front of the Yard Vacuum. See Figure 3-5.
b. Pull spring loaded pin out on the base and align pin with the first hole (closest to the end of the tube) in the hose adapter.
c. Release the pin to lock the hose in place.
6. a. Snap the hose handle first into the upper hose handle bracket and then into the lower hose handle bracket. See Figure 3-6.
b. Lay hose tubing on hanger bracket next to chipper chute.

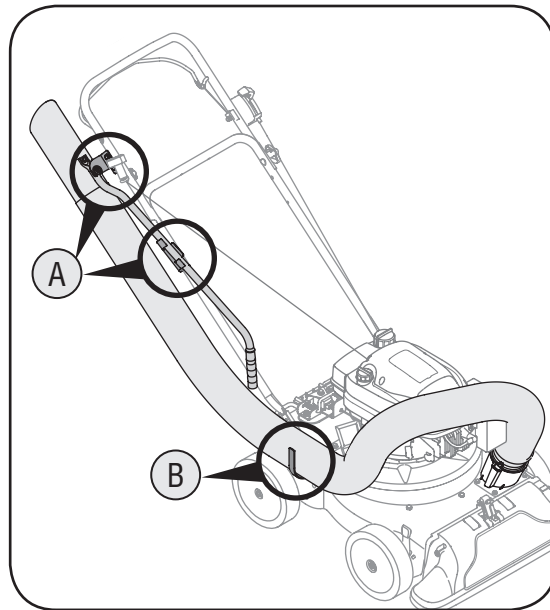


Figure 3-6

Attaching The Bag

7. Grasp bag handle with one hand and slide locking rod on mounting bracket with other hand toward engine. Use the end of mounting bracket as leverage when sliding the locking rod.
 - a. Slip bag over the rim of the discharge opening and release locking rod to secure bag in place. See Figure 3-7.
 - b. Snap bag clip to the top of the lower handle.
 - c. Place the lower straps on the bag over the top of lower handle, hooking them on the studs. See Figure 3-7.

NOTE: The bag/chute switch button attached to the mounting bracket must be fully depressed by the tip of front tab on bag handle when securing the bag or engine will not start.

Attaching The Blower Chute

(If Equipped)

NOTE: The bag must be removed before installing the blower chute.

8. a. Grasp blower chute with one hand and slide locking rod on mounting bracket with other hand toward engine. Use the end of mounting bracket as leverage when sliding the locking rod. See Figure 3-8.
- b. Slip blower chute over rim of discharge opening and release locking rod to secure chute in place.
- c. Raise the nozzle height to the highest setting when using the blower chute. Refer to nozzle height adjustment in the OPERATING YOUR CHIPPER/SHREDDER VACUUM section.

NOTE: The bag/chute switch button attached to the mounting bracket must be fully depressed by the tip of front tab on the blower chute or engine will not start.

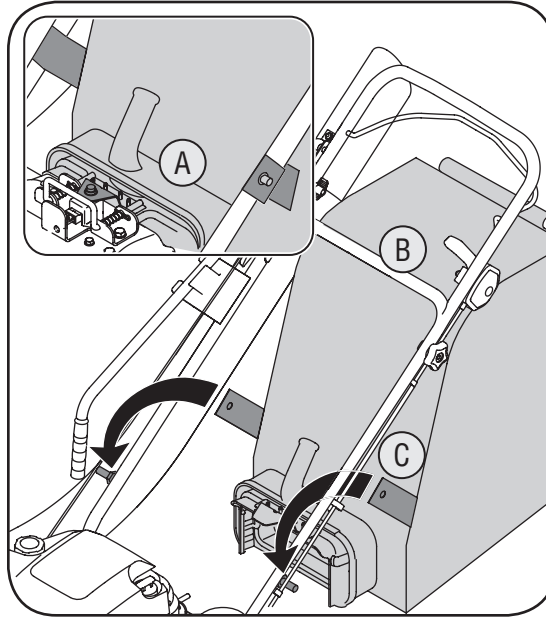


Figure 3-7

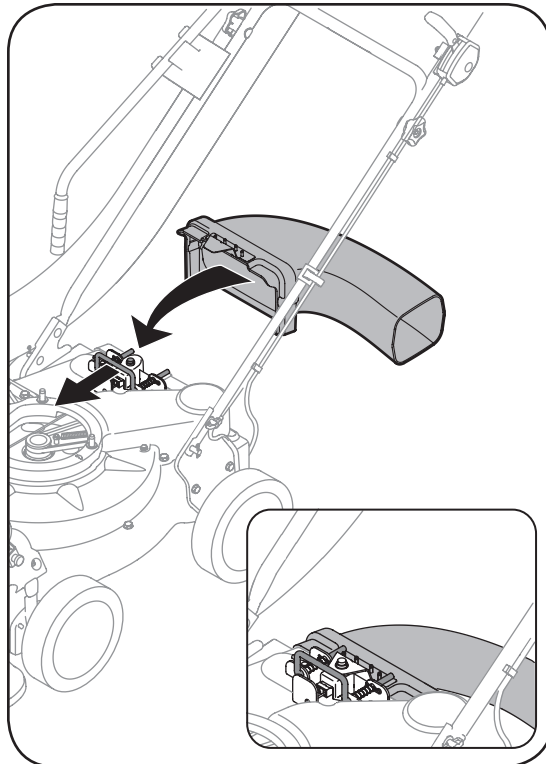


Figure 3-8

3

Setting Up Your Chipper Shredder Vacuum



NOTE: The bag must be removed before installing the blower chute.

4

Operating Your Chipper Shredder Vacuum



WARNING

The operation of any chipper shredder can result in foreign objects being thrown into the eyes, which can damage your eyes severely. Always wear the safety glasses provided with this unit or eye shields while operating or while performing any adjustments or repairs.



WARNING: The operation of any chipper shredder can result in foreign objects being thrown into the eyes, which can damage your eyes severely. Always wear the safety glasses provided with this unit or eye shields while operating or while performing any adjustments or repairs.

Chipper Chute

Allows twigs and small branches up to 1-1/2" in diameter to be fed into the impeller for chipping. See Figure 4-1.

Drive Control

Located on the underside of the upper handle, the drive control is used to engage/disengage wheels. Fully squeeze the drive control against the upper handle to engage the wheels; release to disengage. (DO NOT slip clutch).

Know Your Yard Vacuum

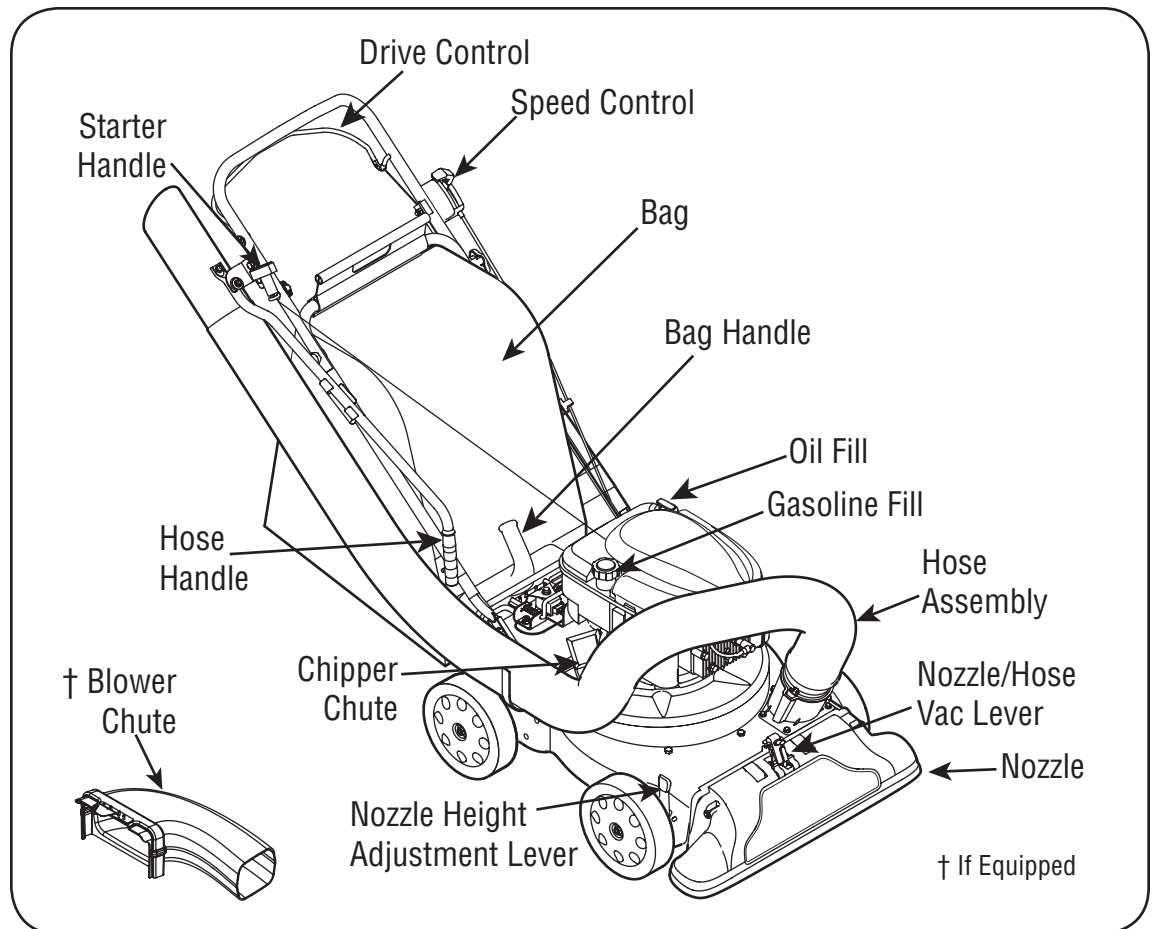


Figure 4-1

Now that you have set up your yard vacuum for operation, get acquainted with its controls and features. These are described below and illustrated on this page. This knowledge will allow you to use your new equipment to its fullest potential.

Speed Control

Located on the left side of the upper handle, the speed control is used to select the forward speed of the yard vacuum.

IMPORTANT: Move the speed control only when the engine is running. Changing the speed control setting with the engine off can damage the yard vacuum.

Nozzle Height Adjustment Lever

Used to adjust the nozzle ground clearance ranging approximately from 5/8" to 4 1/8". See Figure 4-1.

Engine Controls

See the separate engine manual for the location and function of the controls on the engine.

Nozzle

Yard waste such as leaves or pine needles can be vacuumed up through the nozzle for shredding.

Hose Assembly

Used as an alternative to the nozzle to vacuum yard waste such as leaves or pine needles in hard to reach places. See Figure 4-1.

Nozzle/ Hose Vac Lever

The nozzle/hose vac handle is located on top of the nozzle. Use it to switch vacuum suction between the nozzle and the hose assembly.

Hose Handle

Used to guide hose assembly when vacuuming.

Bag Handle

Used to grasp bag in order to assist in attaching, removing, and emptying bag. See Figure 4-1.

Bag

Collects shredded material fed through the chipper chute or vacuumed through the nozzle or hose.

Blower Chute (If Equipped)

When attached to unit, the blower chute is used to blow or scatter yard waste such as leaves, pine needle, or small twigs across yard.

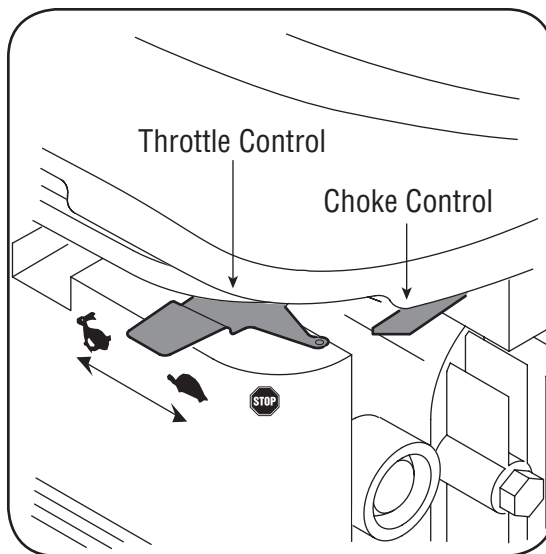


Figure 4-2



WARNING: Use extreme care when handling gasoline. Gasoline is extremely flammable and the vapors are explosive. Never fuel machine indoors or while the engine is hot or running. Extinguish cigarettes, cigars, pipes, and other sources of ignition.

Gas And Oil Fill-Up

1. Check oil level and add oil if necessary. Follow engine manual for this. See Figure 4-1 for location of the oil fill.
2. Service the engine with gasoline as instructed in the engine manual. See Figure 4-1 for location of gas fill.



WARNING: Never fill fuel tank indoors with engine running or until the engine has been allowed to cool for at least two minutes after running.

Starting Engine

IMPORTANT: The bag/chute switch button must be fully depressed by the tip of front tab on bag handle or blower chute for engine to start.

1. Attach spark plug wire to spark plug.
2. Make sure safety switch wire is connected to engine and properly grounded.
3. **Engines with choke lever:**
Move choke lever on engine to CHOKE position. (A warm engine may not require choking). See Figure 4-2.

Engines with primer:

Prime engine as instructed in separate engine manual.



WARNING: Never run the engine indoors or in a poorly ventilated area. Engine exhaust contains carbon monoxide, an odorless and deadly gas.

Stopping Engine

1. Move throttle control lever to slow (turtle) position. Whenever possible, gradually reduce engine speed before stopping engine.
2. Move throttle control lever to STOP or OFF position.
3. Disconnect spark plug wire and ground it to the retaining post to prevent accidental starting while the equipment is unattended.

NOTE: See your engine manual packed with your unit for more detailed instructions.

4

Operating Your Chipper Shredder Vacuum



WARNING

Use extreme care when handling gasoline. Gasoline is extremely flammable and the vapors are explosive. Never fuel machine indoors or while the engine is hot or running. Extinguish cigarettes, cigars, pipes, and other sources of ignition.

Never fill fuel tank indoors with engine running or until the engine has been allowed to cool for at least two minutes after running.

Never run the engine indoors or in a poorly ventilated area. Engine exhaust contains carbon monoxide, an odorless and deadly gas.

4

Operating Your Chipper Shredder Vacuum



IMPORTANT

Move the speed control only when the engine is running. Changing the speed control setting with the engine off can damage the chipper/shredder vacuum.

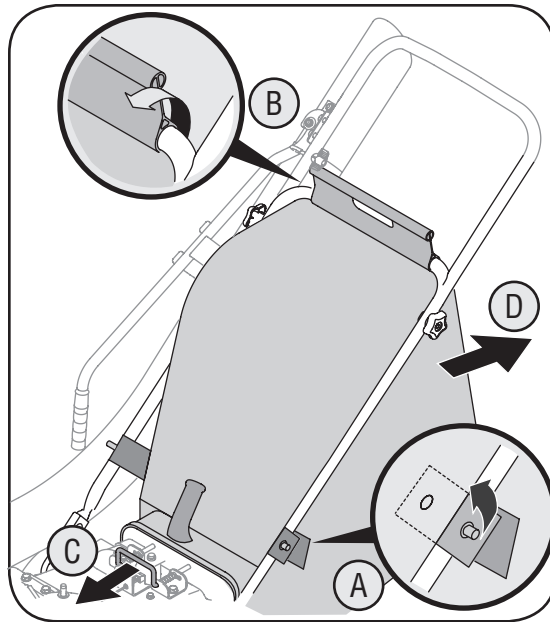


Figure 4-3

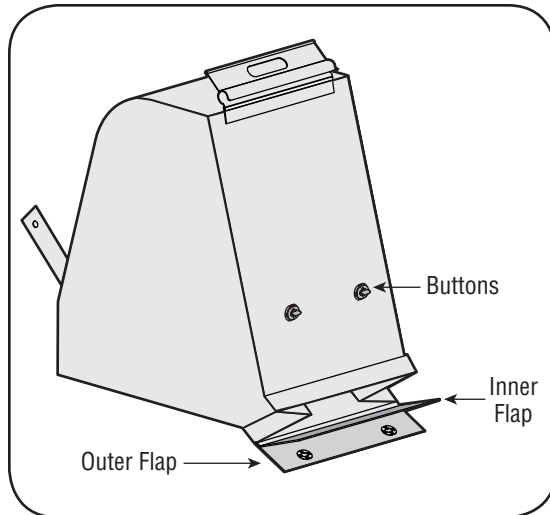


Figure 4-4

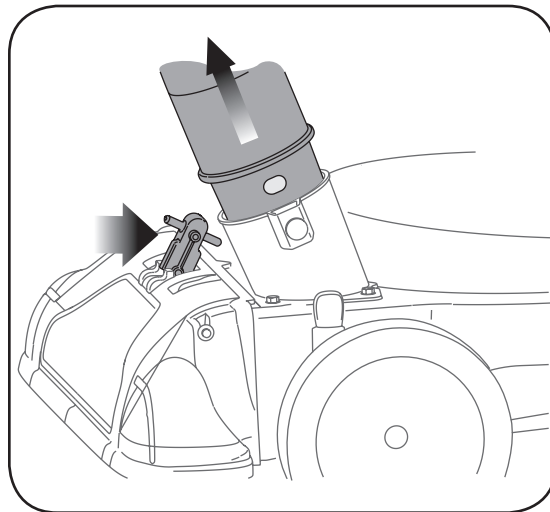


Figure 4-5

To Empty Bag

1. a. Unhook bag straps from the lower handle.
b. Unsnap bag clip from the top of lower handle. See Figure 4-3.
c. Grasp bag handle with one hand and pull lock rod on mounting bracket with other hand toward engine to release.
d. Lift bag off back of unit.
2. Twist the two buttons on the back of the bag to unlock and empty contents. See Figure 4-4. Hold bag handle and bag clip while emptying the contents.
3. Compress bag opening and fold inner flap over opening.
4. Fold outer flap over inner flap and insert buttons on the bag through metal outlets. See Figure 4-4.
5. Twist the buttons to lock bag. Place bag back onto unit as instructed in SETTING UP YOUR CHIPPER SHREDDER VACUUM.

To Remove Blower Chute

1. Grasp blower chute with one hand and pull lock rod on mounting bracket with other hand toward engine to release. Refer to Figure 3-8 in SETTING UP YOUR CHIPPER SHREDDER VACUUM.
2. Remove blower chute from rim of the discharge opening.

Using The Nozzle Vacuum

Yard waste such as leaves and pine needles can be vacuumed up through the nozzle for shredding. After material has been shredded by the flail blades on the impeller assembly, it will be discharged into catcher bag or through blower chute. Do not attempt to shred or chip any material other than vegetation found in a normal yard (i.e. branches, leaves, twigs, etc.) Avoid fibrous plants such as tomato vines until they are thoroughly dried out. Materials such as stalks or heavy branches up to 1-1/2" in diameter may be fed into the chipper chute.

1. Place nozzle/hose vac lever in the top position on the nozzle to vacuum through nozzle. See Figure 4-5.
2. The spring loaded pin must be in the first hole (closest to the end of the tube) of the hose adapter to operate the nozzle vac.
3. Place both hands on top of the upper handle and fully lift the drive control against the upper handle to propel the unit over yard.
4. Use the speed control to choose either the high or low speed. The speed control may be moved either while the unit is propelling or before engaging the wheels.

IMPORTANT: Move the speed control only when the engine is running. Changing the speed control setting with the engine off can damage the chipper/shredder vacuum.



WARNING: Do not attempt to shred, chip, or vacuum any material larger than specified on the machine or in this manual. Personal injury or damage to the machine could result.

IMPORTANT: The flail screen is located inside the housing in the discharge area. If the flail screen becomes clogged, remove and clean as instructed in MAINTAINING YOUR CHIPPER SHREDDER VACUUM. For best performance, it is also important to keep the chipper blade sharp.



WARNING: Do not at any time make any adjustments without first stopping engine and disconnecting spark plug wire.

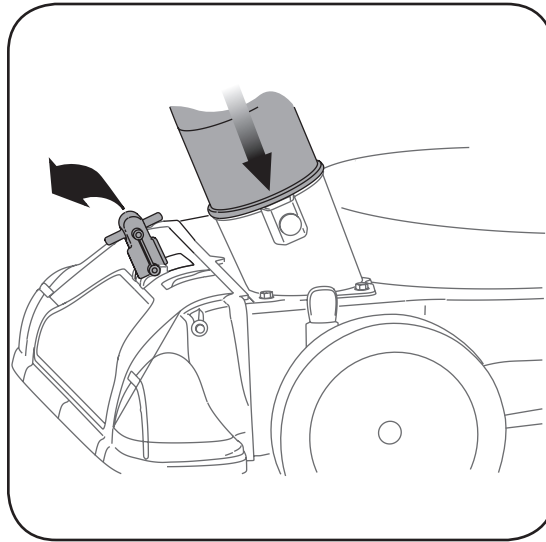


Figure 4-6

Using The Hose Assembly

1. Place nozzle/hose vac handle in the bottom position on the nozzle to redirect vacuum to the hose assembly. See Figure 4-6.
2. The spring loaded pin must be in the second hole of the hose adapter to operate the hose assembly.
3. Unhook the hose from upper handle bracket and grasp the hose handle to guide while vacuuming yard waste such as leaves or pine needles in hard to reach places.

Nozzle Height Adjustment

The nozzle can be adjusted to any six positions, ranging from 5/8" to 4 1/8" ground clearance. The nozzle height has to be adjusted according to chipper shredder conditions.

1. Depress nozzle height adjustment lever towards wheel. See Figure 4-7.
2. Move the height adjustment lever forward or backward to adjust the nozzle upwards or downwards. Make sure both levers are in the same position.
3. Release lever towards deck.

NOTE: In general, raise the nozzle height to vacuum a thick layer of leaves. Lower the nozzle height for smoother surfaces.

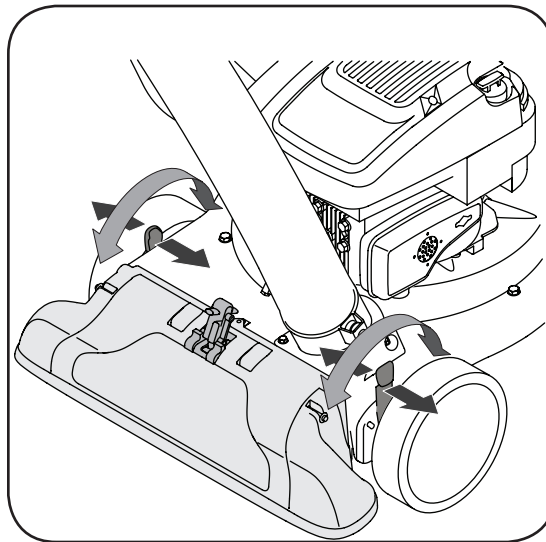


Figure 4-7

4

Operating Your Chipper Shredder Vacuum



WARNING

Do not attempt to shred, chip, or vacuum any material larger than specified on the machine or in this manual. Personal injury or damage to the machine could result.

Do not at any time make any adjustments without first stopping engine and disconnecting spark plug wire.

5

Maintaining Your Chipper Shredder Vacuum



WARNING

Always stop engine, disconnect spark plug, and ground against engine before cleaning, lubricating or doing any kind of maintenance on your machine.

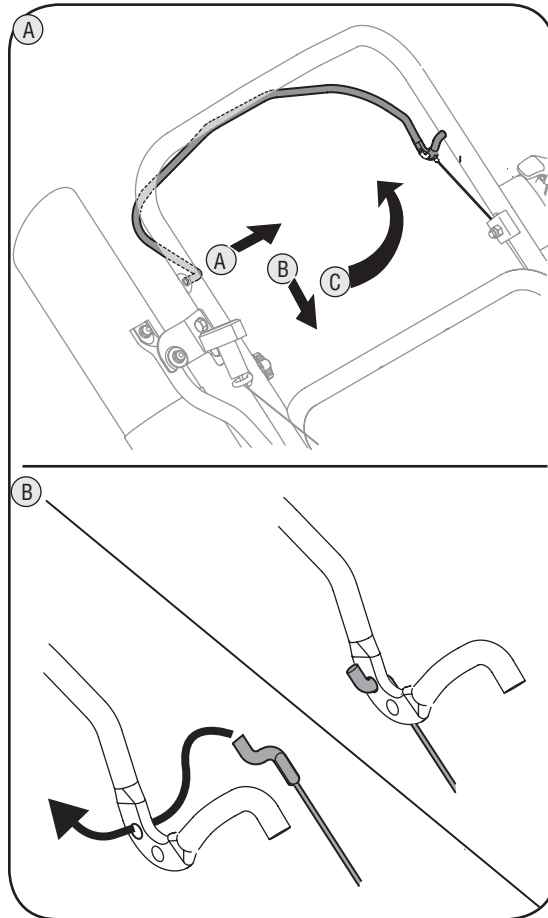


Figure 5-1



WARNING: Always stop engine, disconnect spark plug, and ground against engine before cleaning, lubricating or doing any kind of maintenance on your machine.

General Recommendations

- Always observe safety rules when performing any maintenance.
- The warranty on this chipper/shredder vacuum does not cover items that have been subjected to operator abuse or negligence. To receive full value from warranty, operator must maintain the equipment as instructed here.
- Some adjustments will have to be made periodically to maintain your unit properly.
- Periodically check all fasteners and make sure these are tight.

Lubrication

- **Wheels:** Lubricate each wheel shoulder screw (rear wheel) and pivot arm axle (front wheel) once a season with light oil.
- **Nozzle height adjustment levers:** Lubricate the pivot points of the nozzle height adjustment levers once a season with light oil.

- **Locking Rod:** Lubricate the locking rod with light oil to ease the application of attaching on or removing bag.
- **Nozzle/Hose Vac Lever:** Lubricate the nozzle/hose vac lever on top of the nozzle once a season with light oil.
- **Engine:** Follow the separate engine manual packed with your unit for lubrication instructions.

Equipment Care

- Clean the chipper/shredder vacuum thoroughly after each use.
- Wash bag periodically with water. Allow to dry thoroughly in shade.
- If the flail screen becomes clogged, remove and clean as instructed below.

NOTE: Cleaning with a forceful spray of water is not recommended as it could contaminate the fuel system.

Engine Care

Refer to the Maintenance section of the Engine Owner/Operator manual packed with your unit. Read and follow instructions carefully.

- Check **engine oil level** before each use as instructed in the separate engine manual.
- Clean or replace **air cleaner** every 25 hours under normal conditions. Clean every few hours under extremely dusty conditions. To service the air cleaner, refer to the separate engine manual.
- The **spark plug** should be cleaned and the gap reset once a season. Refer to the separate engine manual for correct plug type and gap specifications.
- Clean engine regularly with a cloth or brush. Keep area around engine clean to permit proper air circulation. Remove all grass, dirt and combustible debris from muffler area.

Drive Control Cable Adjustment

Adjust the drive control cable if the yard vacuum does not self propel with the drive control engaged, or if the unit hesitates while the engine maintains the same speed after approximately 20 hours of use.

To move the z-fitting of the drive control cable from its factory set position in the front hole of the drive control to the rear hole, proceed as follows:

1. a. Push the right side of the control out of the right hole in the upper handle. See Figure 5-1A.
b. Pivot control down towards the lower handle.
c. Pivot straight up to remove it from the left hole in the upper handle. See Figure 5-1A.
2. There is now sufficient slack in the drive control cable to grasp the z-fitting with your hand and move it from the front hole to the rear hole of the drive control. See Figure 5-1B.

IMPORTANT: Make sure to insert the z-fitting into the rear hole as it was inserted in the front hole, that is from the **outside** of the drive control.

3. You may now carefully reinstall the drive control by performing the previous steps in the opposite order and manner of removal.

IMPORTANT: Once assembled and prior to restarting, make sure that the cable is properly adjusted. With the drive control disengaged, the unit should freely pull in reverse.



WARNING: Before performing any type of maintenance on the machine, wait for all parts to stop moving and disconnect the spark plug wire. Failure to follow this instruction could result in personal injury or property damage.

Removing the Flail Screen

If the discharge area becomes clogged, remove the flail screen and clean area as follows:

1. Stop the engine. Make certain the chipper/shredder vacuum has come to a complete stop.
2. Before unlogging the discharge chute, **disconnect and ground the spark plug wire to retaining post.**
3. Remove the vacuum bag from the unit as instructed in the OPERATION section to obtain access to flail screen.
4. Remove the three self tapping screws securing the belt cover, and remove belt cover. See Figure 5-2.
5. Remove self tapping screw on right side of unit that attaches to the flail screen. It may be necessary to remove the hose bracket hanger to get access to the screw. See Figure 5-3.
6. Remove hex screw on top of rear housing near mounting bracket and the flange lock nut that secures flail screen. See Figure 5-3.
7. Remove and clean the screen by scraping or washing with water. See Figure 5-4.
8. Reinstall the screen.

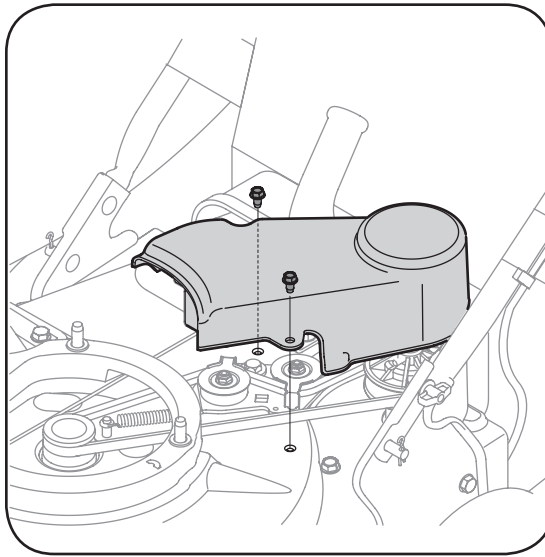


Figure 5-2

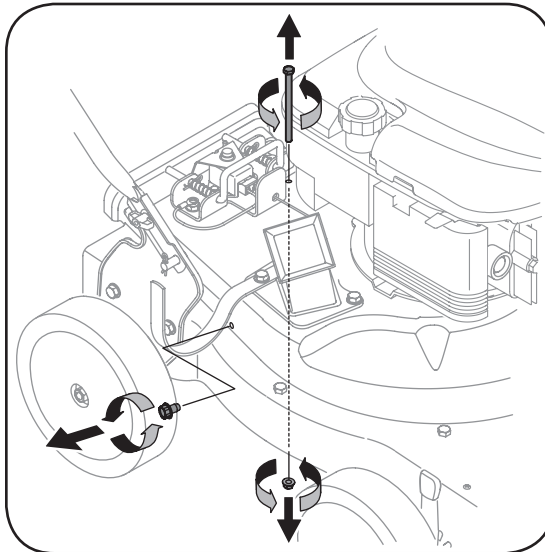


Figure 5-3

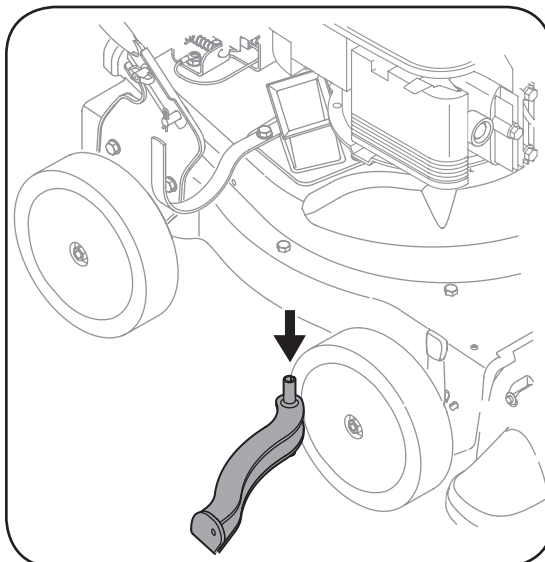


Figure 5-4

5

Maintaining Your Chipper Shredder Vacuum



WARNING

Before performing any type of maintenance on the machine, wait for all parts to stop moving and disconnect the spark plug wire. Failure to follow this instruction could result in personal injury or property damage.

5

Maintaining Your Chipper Shredder Vacuum

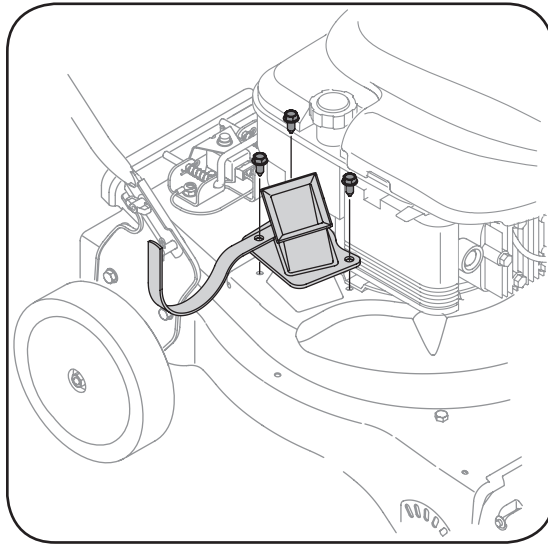


Figure 5-5

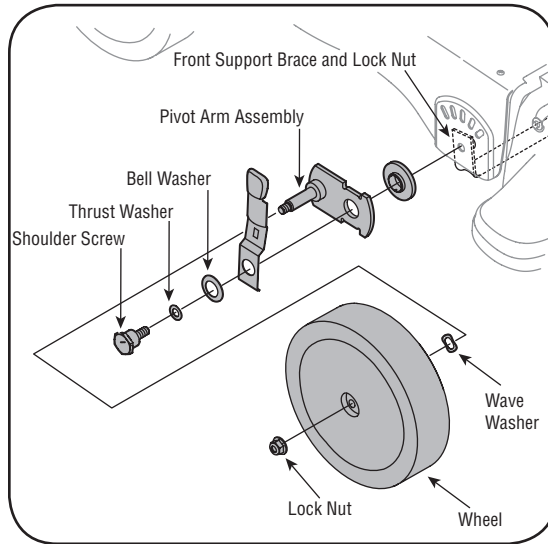


Figure 5-6

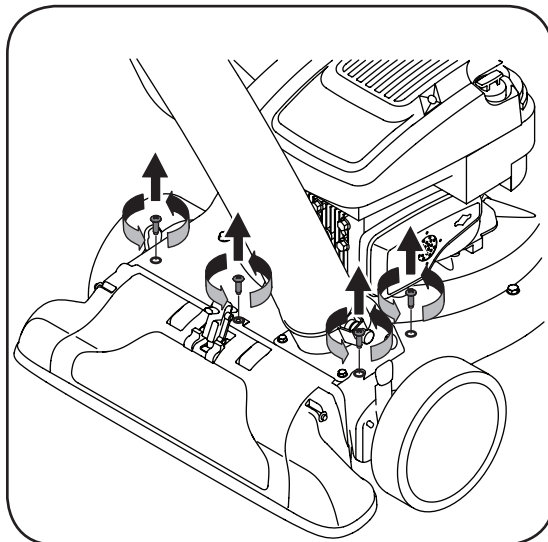


Figure 5-7

Sharpening or Replacing Chipper Blade

NOTE: When tipping the unit, empty the oil and fuel tank and keep engine spark plug side up.

1. **Disconnect and ground the spark plug wire to retaining post.**
2. Remove bag assembly or blower chute.
3. Remove the three hex cap screws holding the hose hanger bracket and chipper chute to the upper housing. See Figure 5-5.
4. Remove the flange lock nuts, front wheels, and wave washers that attach to the pivot arm assemblies. See Figure 5-6.
5. Remove the shoulder screws, thrust washers, and bell washers that go through the pivot arms to the front support brace. The front support brace and lock nut can be removed at this time as well.
6. Remove the four screws on the upper housing that secure the nozzle cover. See Figure 5-7.

7. Carefully tilt and support the unit up to provide access underneath to the nozzle mounting hardware and impeller. Remove the three shoulder bolts securing the black plastic lower flail housing to the lower housing. Refer to Figure 5-8.
8. Tilt top of black plastic lower flail housing toward the engine to remove.
9. Using a 3/16" allen wrench, remove the flat head cap screws that hold the chipper blade to the impeller. These screws are accessible through the opening created when the chipper chute was removed earlier. See Figure 5-9.
10. The nuts on the flat head cap screws can be reached from underneath using a 1/2-inch socket, universal, and extension. See Figure 5-10.
11. Replace or sharpen chipper blade. The blade can be sharpened with a file or on a grinding wheel.

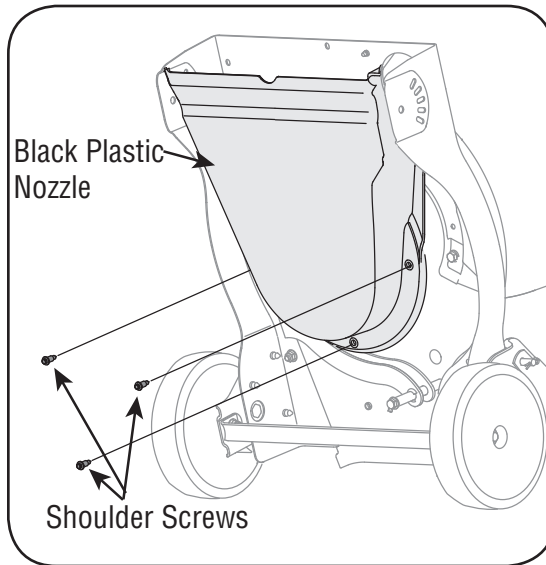


Figure 5-8



WARNING: The chipper blade is sharp. When sharpening blade, wear leather work gloves to protect your hands and follow the original angle of grind.

12. Reassemble by performing the previous steps in the opposite order and manner of removal.

NOTE: Tighten blade screws to 210 - 250 in-lbs. Make certain chipper blade is reassembled with the sharp edge facing upward.

Off Season Storage

- When storing the chipper/shredder vacuum in an unventilated or metal storage shed, care should be taken to rustproof the non-painted surfaces. Using a light oil or silicone, coat the equipment, especially any springs, bearings, and cables.
- Remove all dirt from exterior of engine and equipment.
- Follow lubrication recommendations.
- Refer to engine manual for correct engine storage instructions.
- Store equipment in a clean, dry area. Do not store in an area where equipment is present that may use a pilot light or has a component that can create a spark.

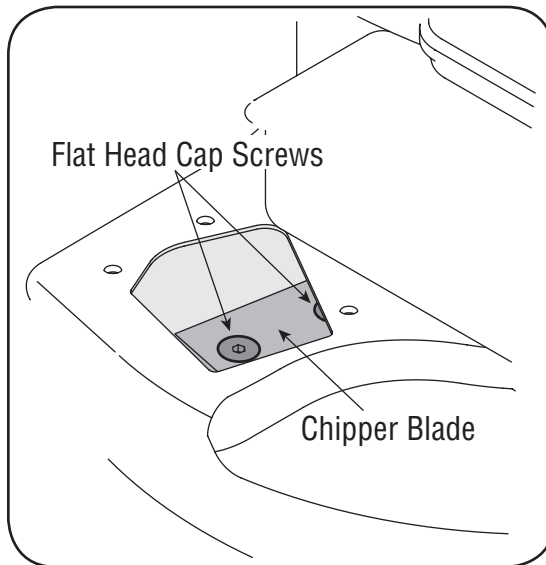


Figure 5-9

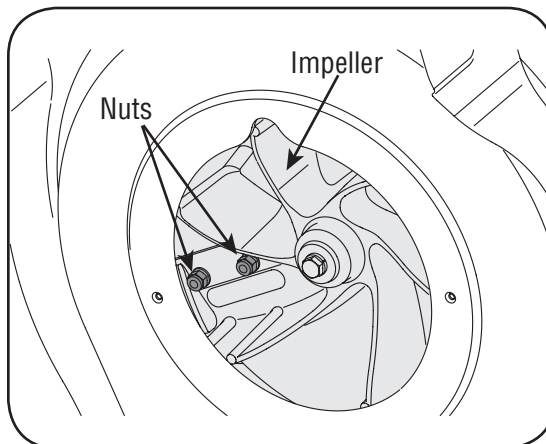


Figure 5-10

5

Maintaining Your Chipper Shredder Vacuum



WARNING

The chipper blade is sharp. When sharpening blade, wear leather work gloves to protect your hands and follow the original angle of grind.

6

Trouble Shooting



For repairs beyond the minor adjustments listed here, contact an authorized service dealer.

| Problem | Cause | Remedy |
|--|--|--|
| Engine fails to start | <ol style="list-style-type: none"> 1. Throttle lever not in correct starting position. 2. Spark plug wire disconnected. 3. Choke not in CHOKE position (if equipped). 4. Fuel tank empty or stale fuel. 5. Engine not primed (if equipped). 6. Faulty spark plug. 7. Safety switch not depressed. 8. Safety switch wire is not connected to engine or not properly grounded. | <ol style="list-style-type: none"> 1. Move throttle lever to FAST or START position. 2. Connect wire to spark plug. 3. Move choke lever to CHOKE position. 4. Fill tank with clean, fresh gasoline. 5. Prime engine as instructed in Engine Manual. 6. Clean, adjust gap, or replace. 7. Safety switch must be depressed by the front tab on the bag handle when securing the bag. 8. Connect safety switch wire to engine connector and ground to mounting bracket. |
| Engine runs erratic | <ol style="list-style-type: none"> 1. Spark plug wire loose. 2. Unit running on CHOKE (if equipped). 3. Blocked fuel line or stale fuel. 4. Low engine RPM. 5. Water or dirt in fuel system. 6. Dirty air cleaner. 7. Carburetor out of adjustment. | <ol style="list-style-type: none"> 1. Connect and tighten spark plug wire. 2. Move choke lever to OFF position. 3. Clean fuel line; fill tank with clean, fresh gasoline. 4. Always run engine at full throttle. 5. Drain fuel tank. Refill with fresh fuel. 6. Refer to engine manual. 7. See authorized service dealer. |
| Engine overheats | <ol style="list-style-type: none"> 1. Engine oil level low. 2. Dirty air cleaner. 3. Carburetor not adjusted properly. | <ol style="list-style-type: none"> 1. Fill crankcase with proper oil. 2. Refer to engine manual. 3. See authorized service dealer. |
| Occasional skips (hesitates) at high speed | <ol style="list-style-type: none"> 1. Spark plug gap too close. 2. Carburetor idle mixture adjustment improperly set. | <ol style="list-style-type: none"> 1. Adjust gap to .030". 2. See authorized service dealer. |
| Excessive Vibration | <ol style="list-style-type: none"> 1. Loose parts or damaged impeller. | <ol style="list-style-type: none"> 1. See authorized service dealer. |
| Unit does not discharge | <ol style="list-style-type: none"> 1. Discharge area clogged. 2. Foreign object lodged in impeller. 3. Low engine RPM. 4. Vacuum bag is full. | <ol style="list-style-type: none"> 1. Stop engine immediately and disconnect spark plug wire. Clean flail screen and inside of discharge opening. 2. Stop engine and disconnect spark plug wire. Remove lodged object. 3. Always run engine at full throttle. 4. Empty bag. |
| Rate of discharge slows considerably or composition of discharged material changes | <ol style="list-style-type: none"> 1. Low engine RPM. 2. Chipper blade dull. | <ol style="list-style-type: none"> 1. Always run engine at full throttle. 2. Replace chipper blade or see your authorized service dealer. |
| Unit fails to propel itself or slips when drive control is engaged | <ol style="list-style-type: none"> 1. Drive control cable out of adjustment. 2. Drive belt worn or damaged. | <ol style="list-style-type: none"> 1. Follow adjustment procedure in Servicing Your Yard Vacuum section of manual. 2. See authorized service dealer. |

NOTES

Use this page to make notes and write down important information.

7




Parts List



To order replacement parts, contact
1-800-828-5500,
1-330-558-7220
 or visit
www.troybilt.com.

| Ref. | Part No. | Description | Ref. | Part No. | Description |
|------|-----------|---|------|-----------|--|
| 1. | 736-0451 | Saddle Washer, .320 x.93 | 43. | 710-1650 | Shoulder Screw, #12-24 x .30 x .46 |
| 2. | 749-04163 | Upper Handle | 44. | 710-1220 | Screw, #12-16 x .750 |
| 3. | 720-0279 | Knob | 45. | 711-04245 | Impeller Hub |
| 4. | 710-1205 | Eye Bolt | 46. | 715-0221 | Dowel Pin |
| 5. | 781-1056 | Upper Handle Bracket | 47. | 781-04082 | Front Wheel Support Brace |
| 6. | 710-0726 | Hex Cap Screw 5/16-12 x.750 | 48. | 781-04081 | Rear Wheel Support Brace |
| 7. | 720-04072 | Star Knob | 49. | 714-0104 | Cotter Pin |
| 8. | 710-1174 | Carriage Bolt | 50. | 716-0104 | E-Ring |
| 9. | 731-04911 | Nozzle Handle Clip | 51. | 736-0258 | Flat Washer, .385 x 1.00 x .135 |
| 10. | 749-04165 | Lower Handle | 52. | 736-0232 | Wave Washer.531 ID x.781 OD |
| 11. | 711-1293 | Studs | 53. | 738-1015 | Shoulder Screw 3/8-16 |
| 12. | 710-0703 | Carriage Screw 1/4-20 x.75 | 54. | 734-04018 | Wheel, 8 x 2.125 |
| 13. | 712-0397 | Wing Nut 1/4-20 | 55. | 716-0865 | Snap Ring |
| 14. | 710-1611B | TT Screw, 5/16-18 x .750 | 56. | 741-0751 | Height Adjustment Bearing |
| 15. | 710-0599 | Screw, 1/4-20 x .500 | 57. | 687-02094 | Pivot Arm Assembly |
| 16. | 712-0442 | Cap Lock Nut, 1/4-20 | 58. | 720-0426 | Height Adjustment Knob |
| 17. | 710-0751 | Hex Cap Screw 1/4-20 x.620 | 59. | 732-1026 | Spring Lever |
| 18. | 681-0195 | Hose Base Adapter Assembly (Incl. Ref.# 19-21) | 60. | 736-0741 | Bell Washer.760 ID x.25 OD |
| 19. | 716-0104 | E Ring.500 Dia | 61. | 738-1172 | Shoulder Screw,.750 x.500 |
| 20. | 732-3035 | Compression Spring | 62. | 687-02051 | Height Lever Assembly (Incl. Ref.# 58-59) |
| 21. | 711-1571 | Clevis Pin | 63. | 734-04033 | Wheel 8 x 2 |
| 22. | 736-3020 | Flat Washer.271 ID x.630 OD | 64. | 710-1652 | Screw, 1/4-20 x .625 |
| 23. | 781-04069 | Upper Flail Housing | 65. | 712-04065 | Flange Lock Nut, 3/8-16 |
| 24. | 746-04156 | Drive Control Cable | 66. | 731-04879 | Belt Cover |
| 25. | 731-1820 | Cable Guide | 67. | 736-0314 | Thrust Washer.375 ID x.70 OD |
| 26. | 681-0122 | Chipper Chute Assembly | 68. | 731-2522 | Wheel Cover |
| 27. | 746-04155 | Speed Control Cable | 69. | 732-04217 | Extension Spring,.375 x 2.95 |
| 28. | 710-1122 | Hex Screw, 1/4-20 x 2.50 | 70. | 736-0369 | Flat Washer,.508ID x1.00OD x.020 |
| 29. | 781-1058 | Hose Hanger Bracket | 71. | 738-0930 | Shoulder Screw,.560 x.165 |
| 30. | 712-04064 | Flange Lock Nut, 1/4-20 | 72. | 741-04108 | Drive Axle Bushing |
| 31. | 748-0457 | Spacer | 73. | 781-04078 | Transmission Mounting Bracket |
| 32. | 731-2478 | Hose Nozzle | 74. | 710-0597 | Screw, 1/4-20 x 1.00 |
| 33. | 710-3288 | Hex Cap Screw 1/4-20 x 2.625 | 75. | 712-04064 | Flange Lock Nut, 1/4-20 |
| 34. | 723-0295 | Adjustment Clamp | 76. | 741-0124 | Ball Bearing |
| 35. | 749-1270 | Nozzle Handle | 77. | 750-1050 | Flange Spacer,.260 x.659 x.517 |
| 36. | 764-0648 | Vacuum Hose | 78. | 754-0369 | Belt, 3/8 x 32.5 |
| 37. | 07071 | Handle Grip | 79. | 781-04077 | Idler Bracket |
| 38. | 731-2292 | Hose Adapter | 80. | 782-7598 | Belt Keeper |
| 39. | 747-04305 | Drive Control | 81. | 717-1762 | Spur Gear - RH |
| 40. | 725-0157 | Cable Tie | — | 717-1761 | Spur Gear - LH (Not Shown) |
| 41. | 618-04175 | Transmission Assembly | 82. | 681-0156A | Handle Bracket Ass'y RH |
| 42. | 681-04027 | Idler Assembly (Incl. Ref.# 74-80) | — | 681-0155A | Handle Brkt Ass'y LH (Not Shown) |

Model Series 070

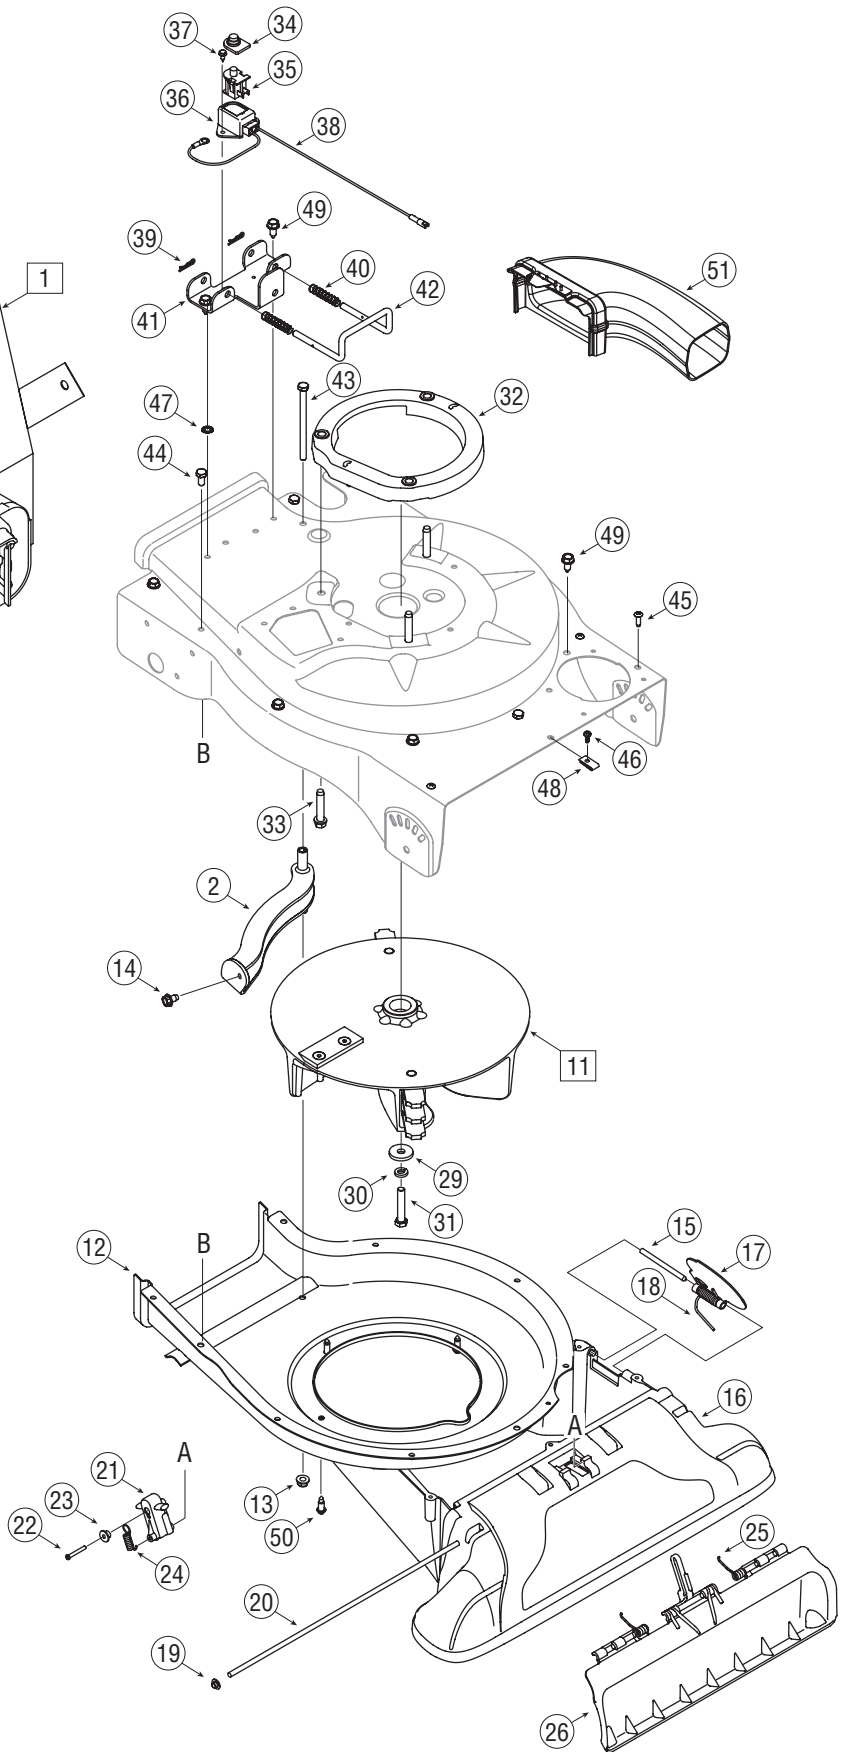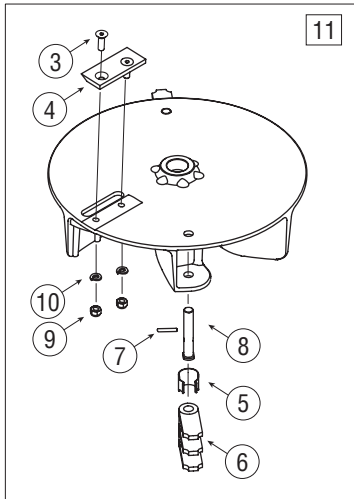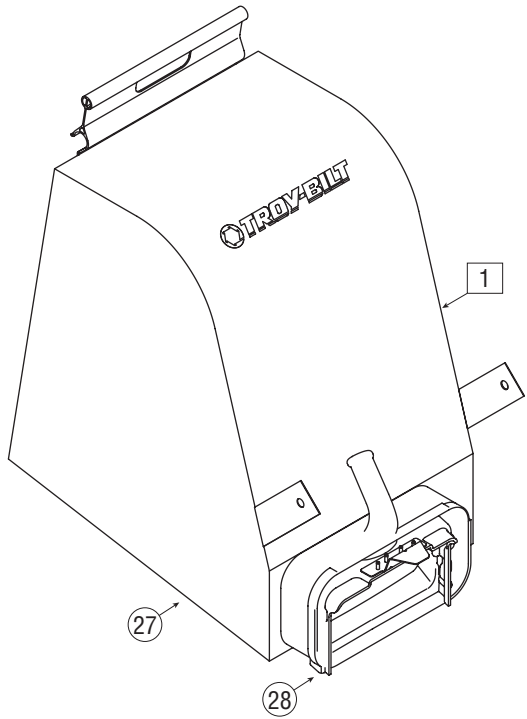

7

Parts List



To order replacement parts, contact
1-800-828-5500,
1-330-558-7220
 or visit
www.troybilt.com.

| Ref. | Part No. | Description |
|------|-----------|----------------------------|
| 1. | 664-04031 | Bag Assembly |
| 2. | 681-0154 | Screen Assembly |
| 3. | 710-1054 | Hex Screw 5/16-24 x 1.0 |
| 4. | 781-0490 | Chipper Blade |
| 5. | 781-0735 | Pin Clip |
| 6. | 719-0329 | Flail |
| 7. | 715-0166 | Spiral Pin |
| 8. | 711-1401 | Clevis Pin |
| 9. | 712-0411 | Lock Nut, 5/16-24 |
| 10. | 736-0119 | Lock Washer, 5/16 |
| 11. | 681-0152 | Impeller Assembly |
| | | (Incl. Ref.# 3 – 10) |
| 12. | 781-0721B | Lower Flail Housing |
| 13. | 712-04063 | Flange Lock Nut 5/16-18 |
| 14. | 710-0607 | Screw, 5/16-18 x.500 |
| 15. | 747-04297 | Hinge Pin |
| 16. | 731-2293A | Nozzle |
| 17. | 781-1064 | Base Adapter Door |
| 18. | 732-1156 | Torsion Spring |
| 19. | 726-0106 | Cap Speed Nut 1/4 |
| 20. | 711-1551 | Pivot Rod |
| 21. | 731-04967 | Nozzle Door Lever |
| 22. | 710-1256 | Hex Screw, #8-18 x 1.25 |
| 23. | 750-1294 | Shoulder Spacer |
| 24. | 732-3118 | Extension Spring |
| 25. | 732-1151A | Nozzle Door Torsion Spring |
| 26. | 731-2294A | Nozzle Door |

| Ref. | Part No. | Description |
|------|-----------|------------------------------------|
| 27. | 664-04029 | Bag |
| 28. | 631-0083 | Chute Assembly |
| 29. | 736-0247 | Flat Washer.375 ID x 1.25 OD |
| 30. | 736-0217 | Lock Washer 3/8 |
| 31. | 710-1273 | Hex Cap Screw, 3/8-24 x 2.75 |
| 32. | 631-04118 | Engine Spacer Assembly |
| 33. | 710-1008 | Screw, 3/8-16 x 1.875 |
| 34. | 725-1700 | Switch Cover |
| 35. | 725-3166 | Safety Switch |
| 36. | 731-1613 | Safety Switch Cover |
| 37. | 710-0224 | Hex Washer Screw #10-16 x.50 |
| 38. | 629-0920A | Wire Harness |
| 39. | 714-0104 | Cotter Pin |
| 40. | 732-0962 | Compression Spring |
| 41. | 781-0778A | Mounting Bracket |
| 42. | 747-1153 | Lock Rod |
| 43. | 710-3195 | Hex Cap Screw 5/16-18 x 4.5 |
| 44. | 710-3025 | Hex Cap Screw 5/16-18 x.625 |
| 45. | 710-1220 | Screw, #12-16 x.750 |
| 46. | 710-0351 | Screw #10 - 16 x.500 |
| 47. | 736-0607 | External L-Washer 5/16 |
| 48. | 726-0139 | Speed Nut |
| 49. | 710-0726 | Hex Index Screw, 5/16-12 x.750 |
| 50. | 710-1650 | Shoulder Screw, #12-24 x .30 x .46 |
| 51. | 631-0090† | Blower Chute |
| — | 723-0400 | Safety Glasses (Not Shown) |
| | | |

† If Equipped

MANUFACTURER'S LIMITED WARRANTY FOR



The limited warranty set forth below is given by Troy-Bilt LLC with respect to new merchandise purchased and used in the United States and/or its territories and possessions, and by MTD Products Limited with respect to new merchandise purchased and used in Canada and/or its territories and possessions (either entity respectively, "Troy-Bilt").

"Troy-Bilt" warrants this product (excluding its *Normal Wear Parts and Attachments* as described below) against defects in material and workmanship for a period of two (2) years commencing on the date of original purchase and will, at its option, repair or replace, free of charge, any part found to be defective in materials or workmanship. This limited warranty shall only apply if this product has been operated and maintained in accordance with the Operator's Manual furnished with the product, and has not been subject to misuse, abuse, commercial use, neglect, accident, improper maintenance, alteration, vandalism, theft, fire, water, or damage because of other peril or natural disaster. Damage resulting from the installation or use of any part, accessory or attachment not approved by Troy-Bilt for use with the product(s) covered by this manual will void your warranty as to any resulting damage.

Normal Wear Parts are warranted to be free from defects in material and workmanship for a period of thirty (30) days from the date of purchase. Normal wear parts include, but are not limited to items such as: batteries, belts, blades, blade adapters, tines, grass bags, wheels, rider deck wheels, seats, snow thrower skid shoes, friction wheels, shave plates, auger spiral rubber and tires.

Attachments — Troy-Bilt warrants attachments for this product against defects in material and workmanship for a period of one (1) year, commencing on the date of the attachment's original purchase or lease. Attachments include, but are not limited to items such as: grass collectors and mulch kits.

HOW TO OBTAIN SERVICE: Warranty service is available, WITH PROOF OF PURCHASE, through your local authorized service dealer. To locate the dealer in your area:

In the U.S.A.

Check your Yellow Pages, or contact Troy-Bilt LLC at P.O. Box 361131, Cleveland, Ohio 44136-0019, or call 1-866-840-6483, 1-330-558-7220 or log on to our Web site at www.troybilt.com.

In Canada

Contact MTD Products Limited, Kitchener, ON N2G 4J1, or call 1-800-668-1238 or log on to our Web site at www.mtdcanada.com.

This limited warranty does **not** provide coverage in the following cases:

- a. The engine or component parts thereof. These items may carry a separate manufacturer's warranty. Refer to applicable manufacturer's warranty for terms and conditions.
- b. Log splitter pumps, valves, and cylinders have a separate one-year warranty.

- c. Routine maintenance items such as lubricants, filters, blade sharpening, tune-ups, brake adjustments, clutch adjustments, deck adjustments, and normal deterioration of the exterior finish due to use or exposure.
- d. Service completed by someone other than an authorized service dealer.
- e. Troy-Bilt does not extend any warranty for products sold or exported outside of the United States and/or Canada, and their respective possessions and territories, except those sold through Troy-Bilt's authorized channels of export distribution.
- f. Replacement parts that are not genuine Troy-Bilt parts.
- g. Transportation charges and service calls.
- h. Troy-Bilt does not warrant this product for commercial use.

No implied warranty, including any implied warranty of merchantability of fitness for a particular purpose, applies after the applicable period of express written warranty above as to the parts as identified. No other express warranty, whether written or oral, except as mentioned above, given by any person or entity, including a dealer or retailer, with respect to any product, shall bind Troy-Bilt. During the period of the warranty, the exclusive remedy is repair or replacement of the product as set forth above.

The provisions as set forth in this warranty provide the sole and exclusive remedy arising from the sale. Troy-Bilt shall not be liable for incidental or consequential loss or damage including, without limitation, expenses incurred for substitute or replacement lawn care services or for rental expenses to temporarily replace a warranted product.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

In no event shall recovery of any kind be greater than the amount of the purchase price of the product sold. **Alteration of safety features of the product shall void this warranty.** You assume the risk and liability for loss, damage, or injury to you and your property and/or to others and their property arising out of the misuse or inability to use the product.

This limited warranty shall not extend to anyone other than the original purchaser or to the person for whom it was purchased as a gift.

HOW STATE LAW RELATES TO THIS WARRANTY: This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

IMPORTANT: Owner must present Original Proof of Purchase to obtain warranty coverage.

**Troy-Bilt LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019; Phone: 1-866-840-6483, 1-330-558-7220
MTD Canada Limited - KITCHENER, ON N2G 4J1; Phone 1-800-668-1238**