

128M00

Illustrated Parts List

Model Series

128M00

TYPE NUMBERS

0001, 0002, 0003, 0004, 0005, 0006, 0007, 0010, 0011, 0012, 0014, 0015, 0016, 0017, 0018,
0019, 0020, 0021, 0022, 0023, 0024, 0025, 0026, 0027, 0028, 0029, 0032, 0110, 0111, 0114,
0115, 0116, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0124, 0126, 0127, 0128, 0129, 0130,
0131, 0133, 0134, 0135, 0136, 0410, 0412, 0414, 0418, 0420, 0423, 0440, 0466, 0867, 0926,
0928, 0943, 0952, 0962, 0989, 0995, 1305, 1313, 1447, 1448, 1468, 1470, 1612, 3120, 3423,
3424, 3425, 3426, 3456, 5062, 5116, 5305, 5423, 5426, 5468.

Not for
Reproduction





PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.


1319 WARNING LABEL












1330 REPAIR MANUAL

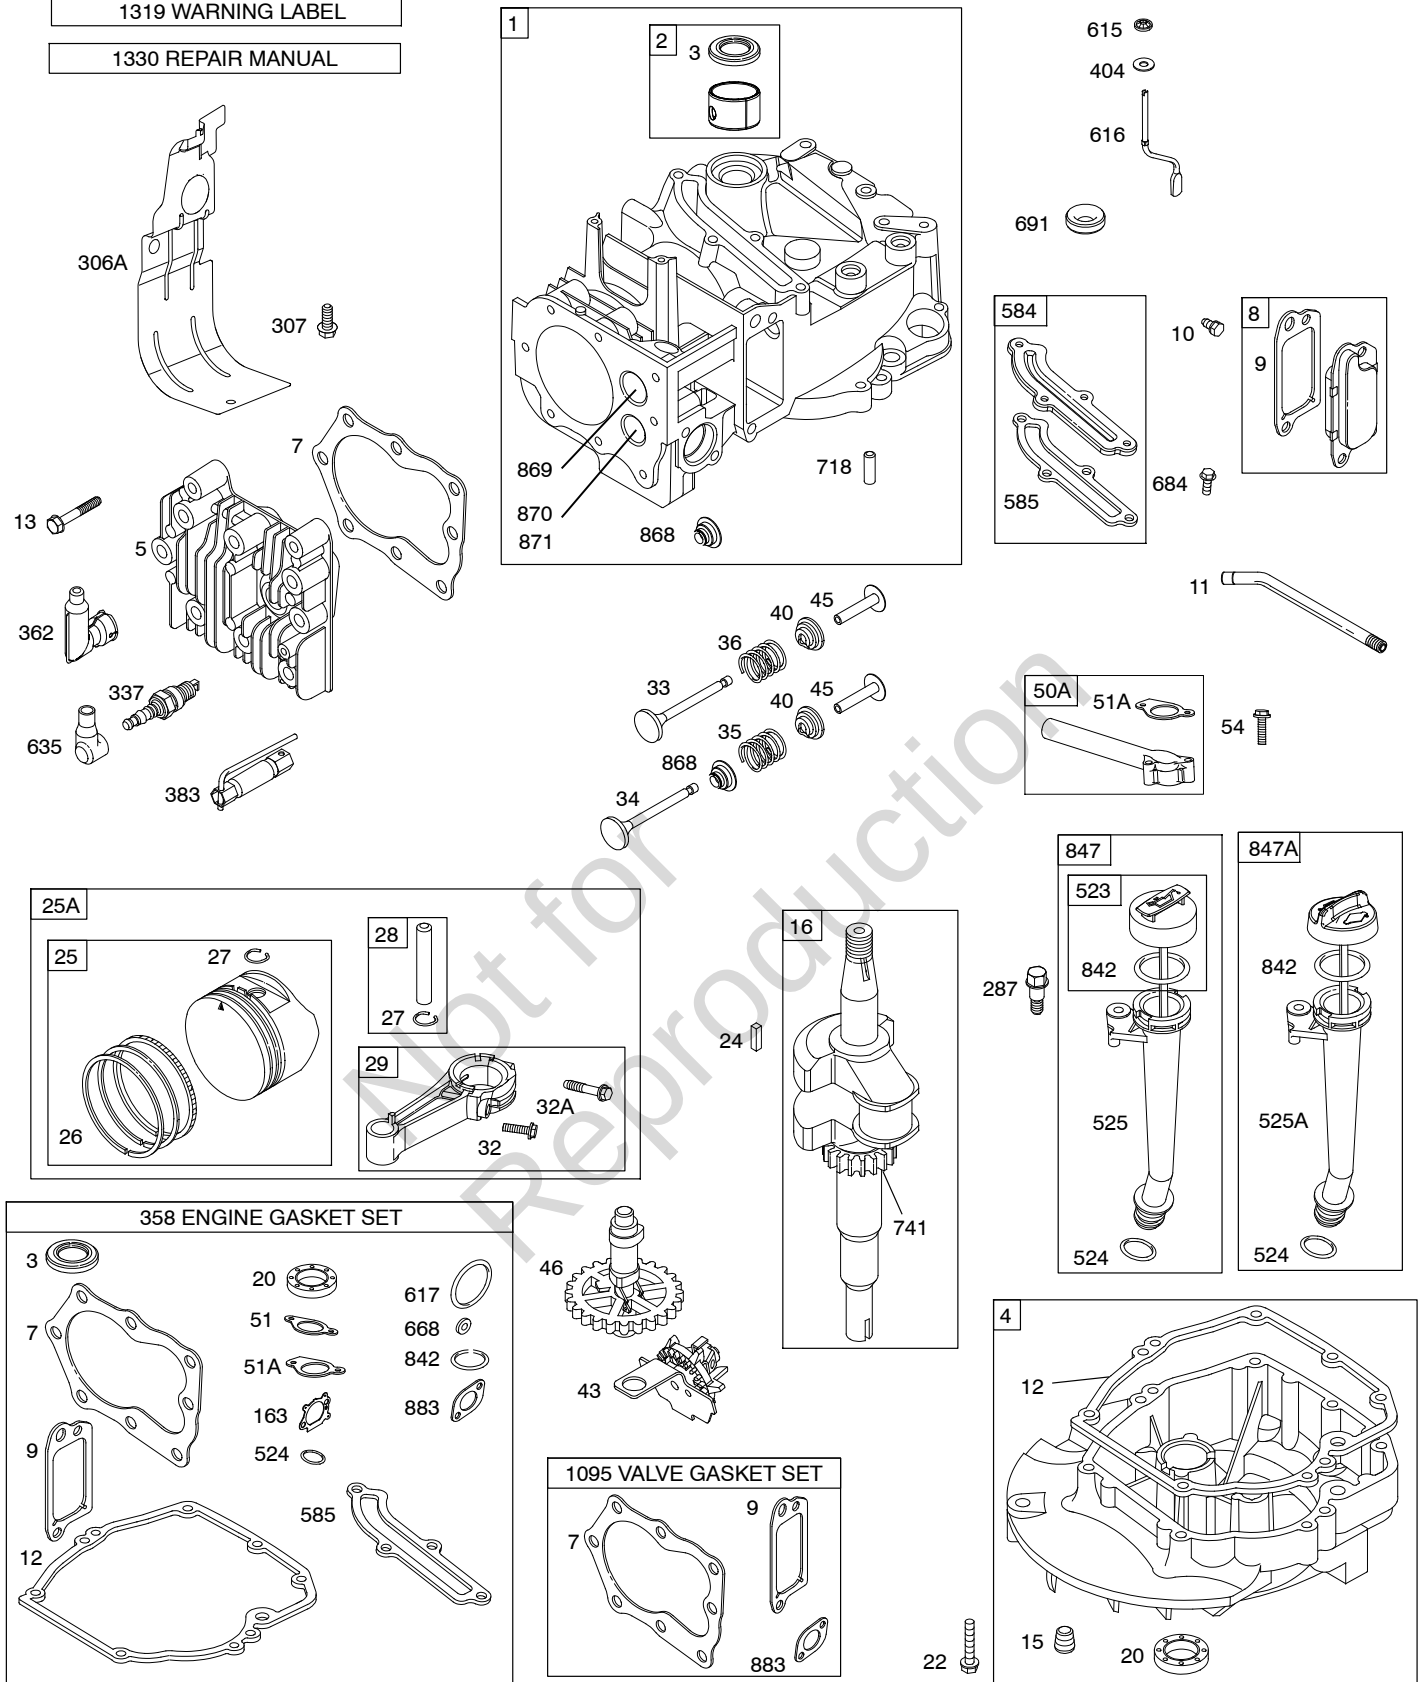


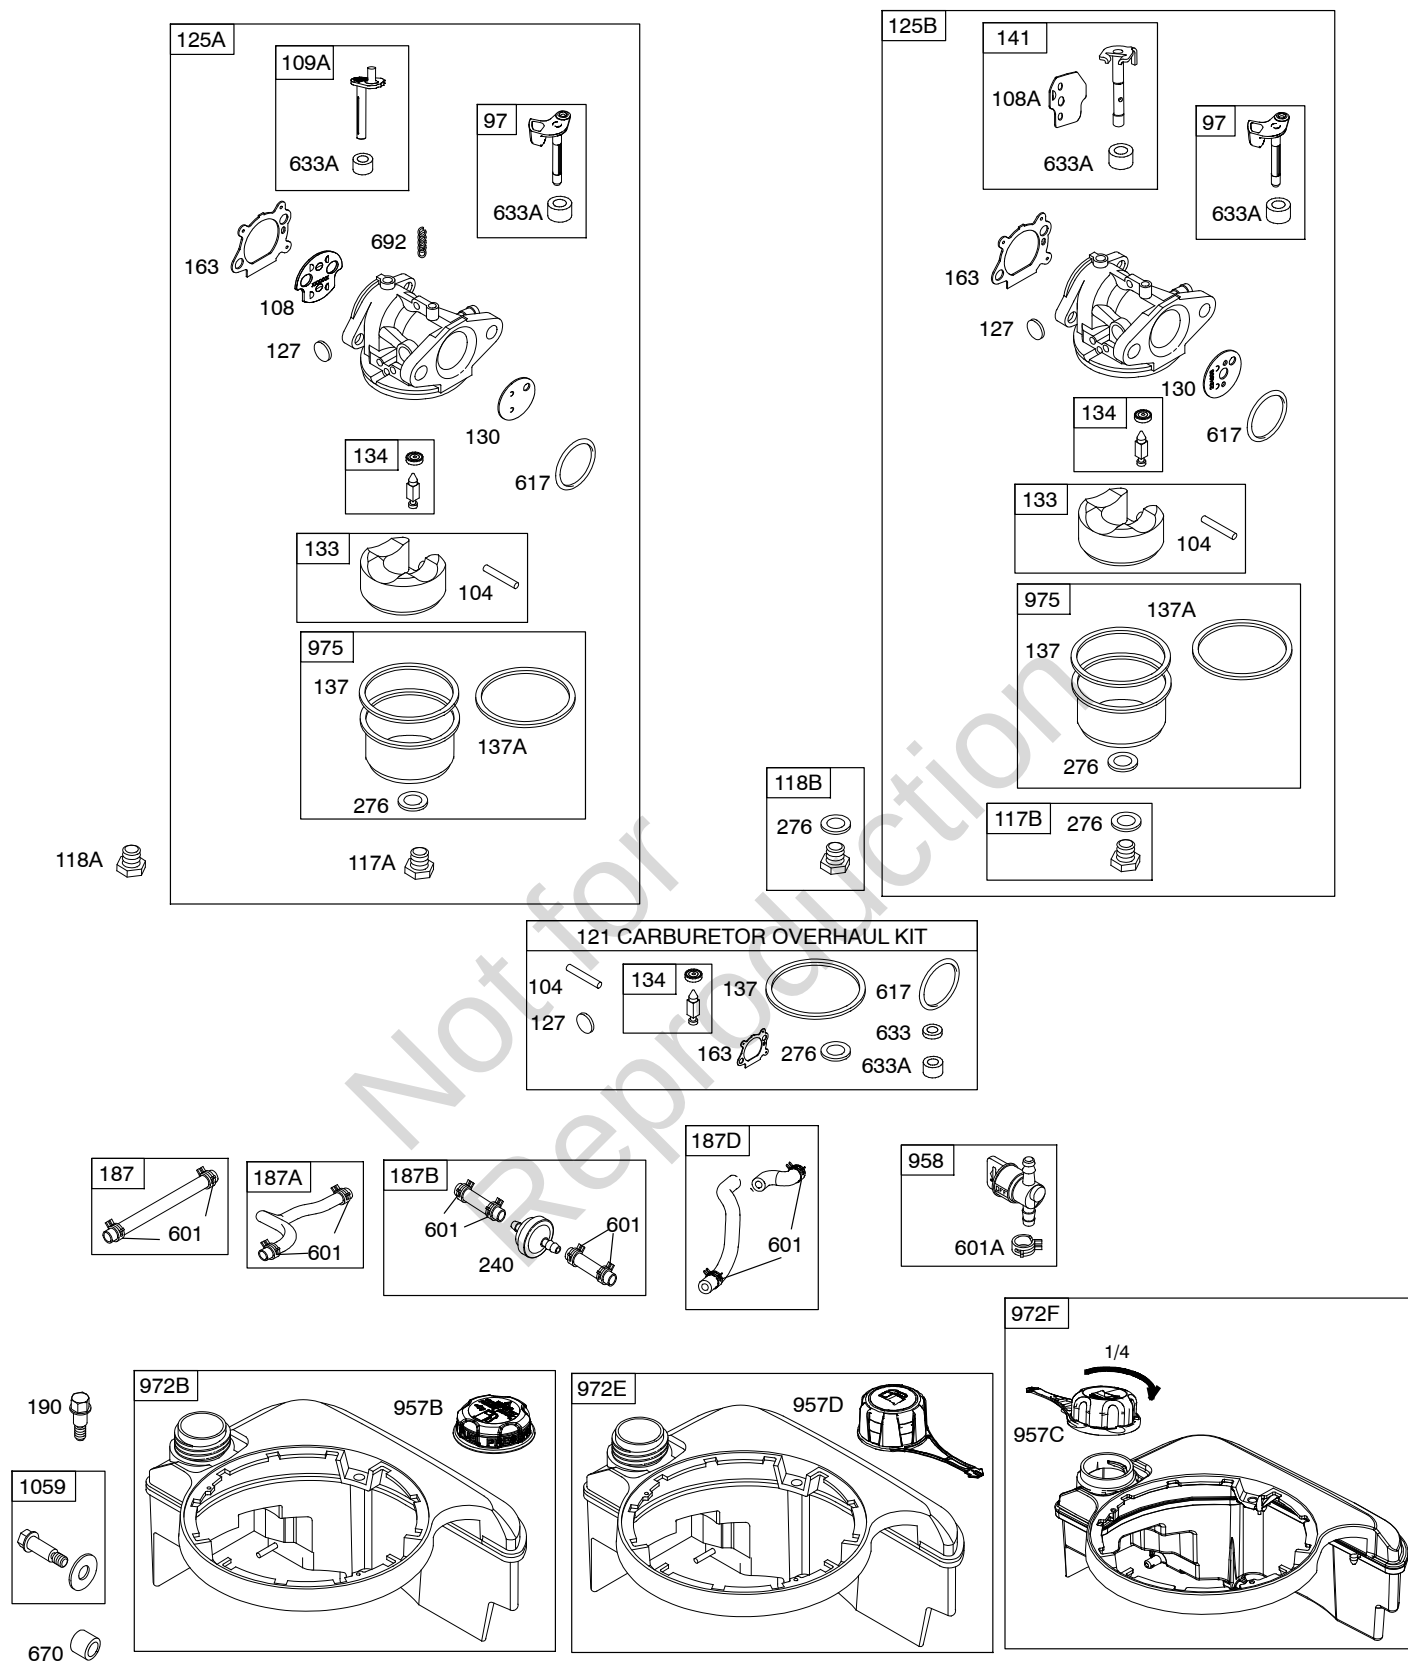

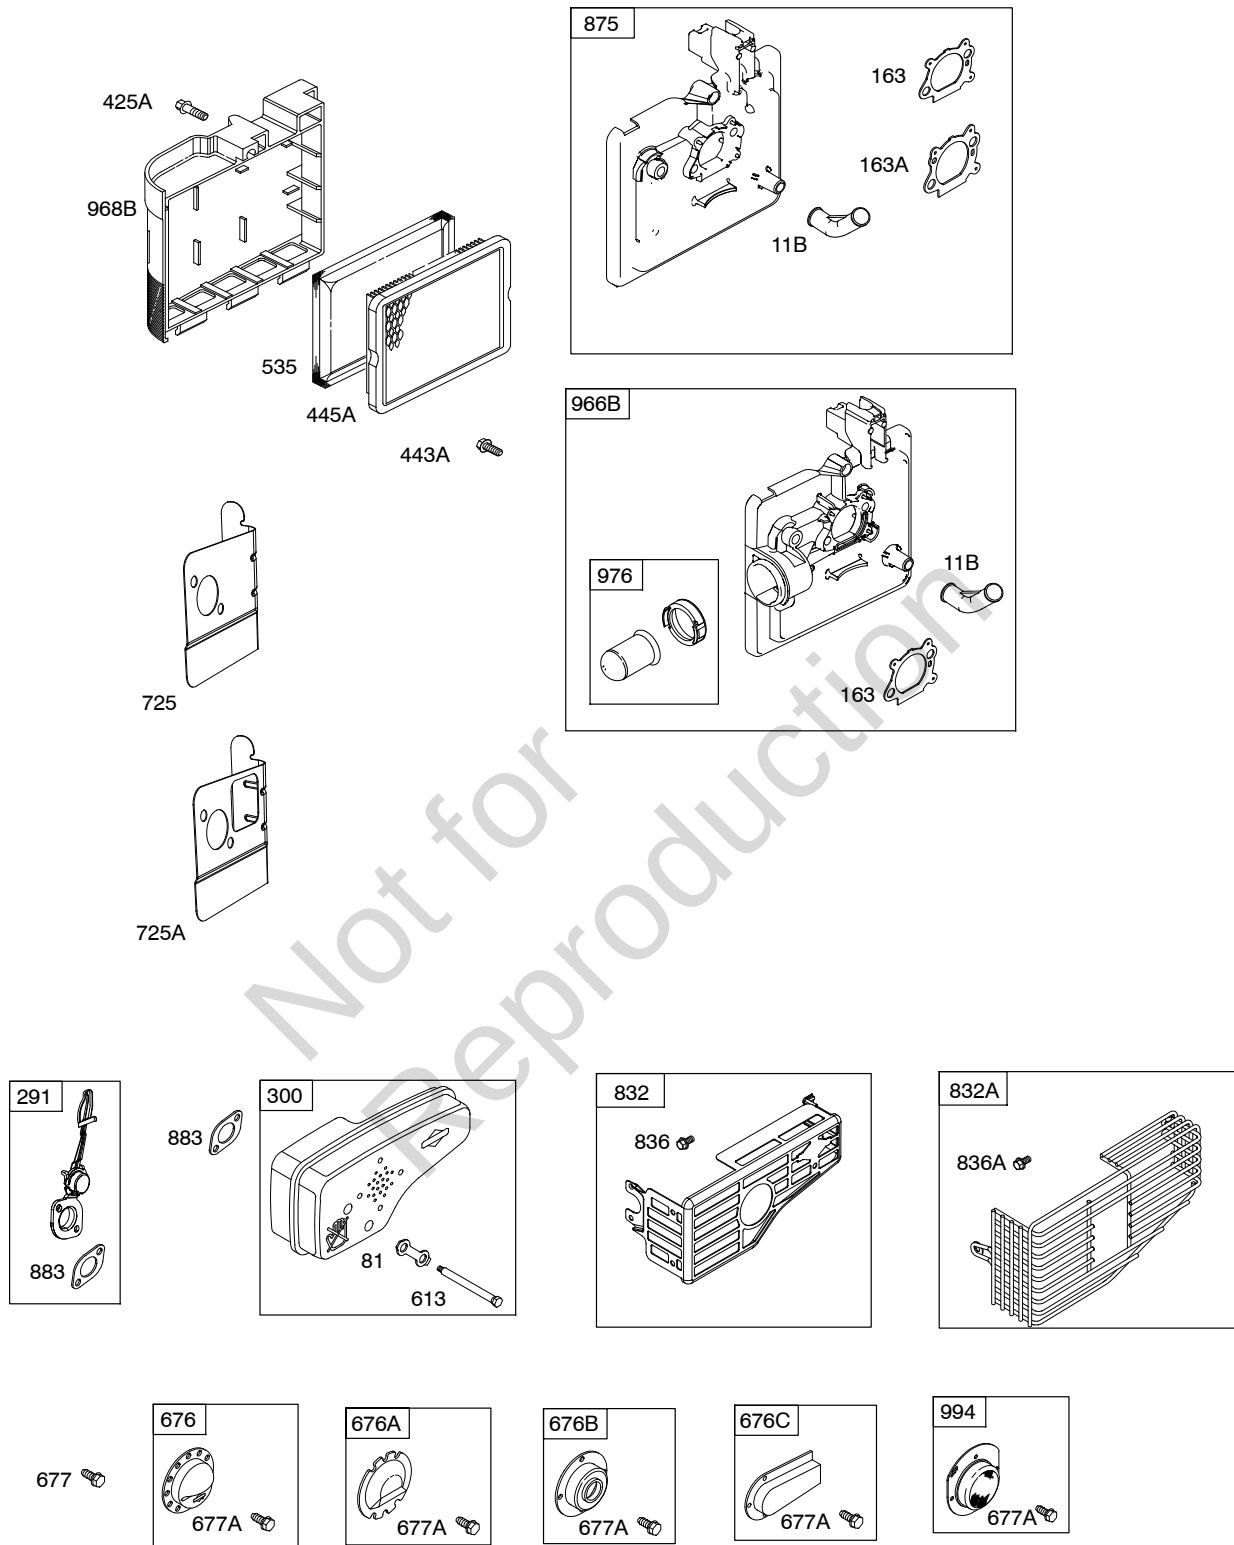

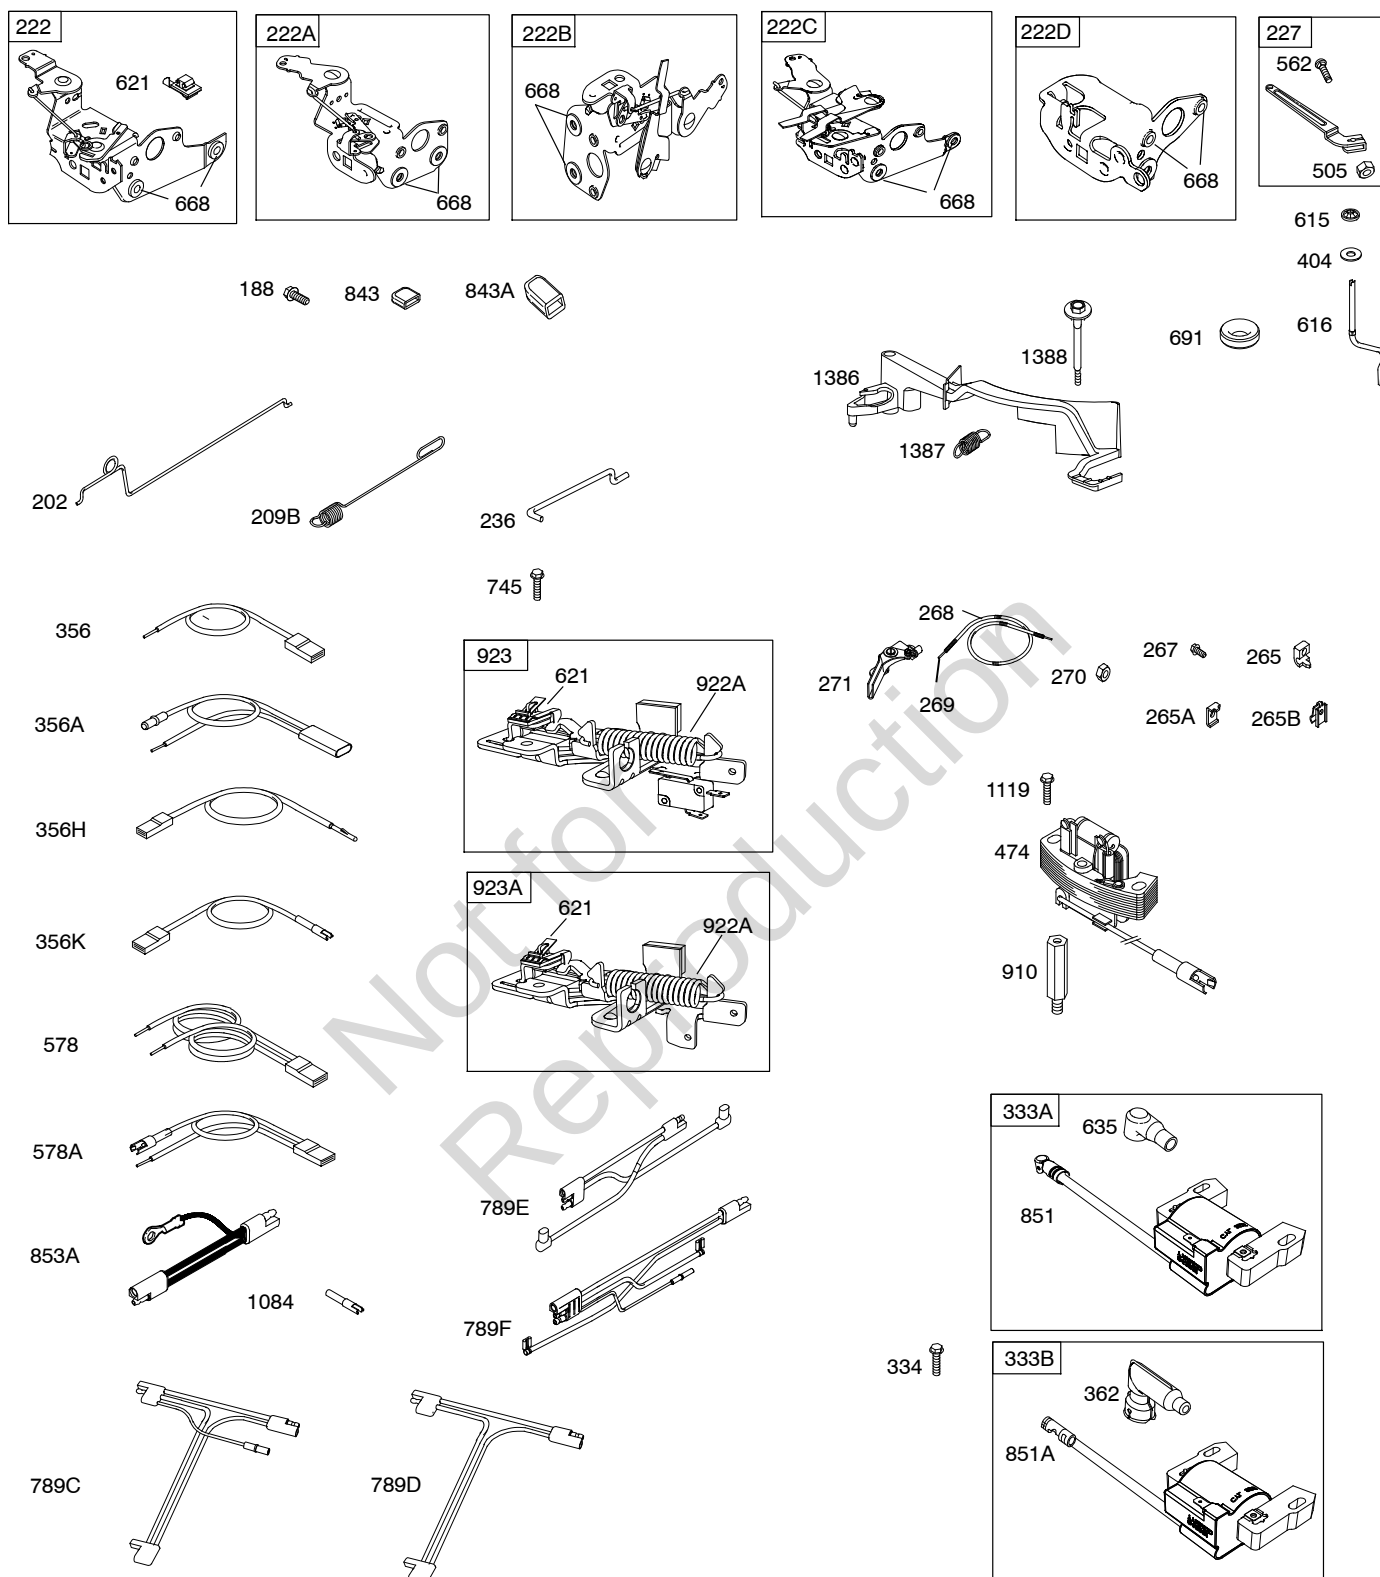

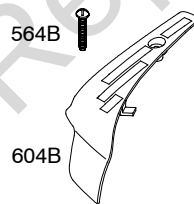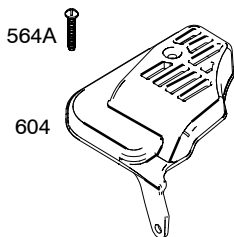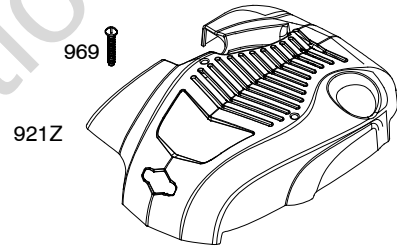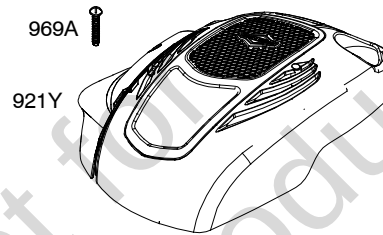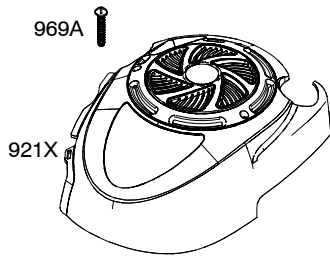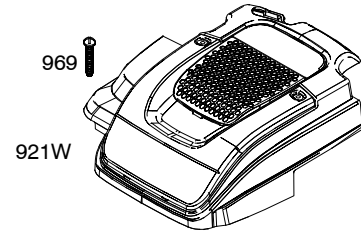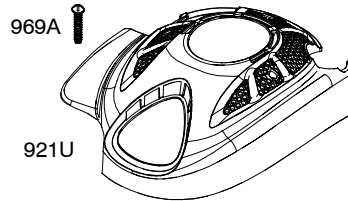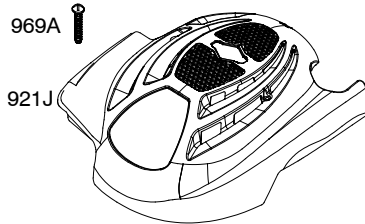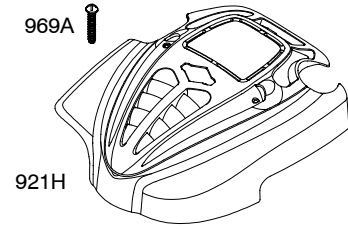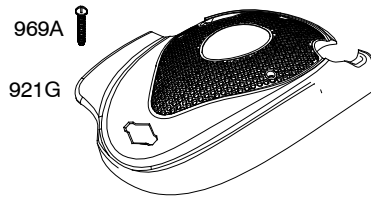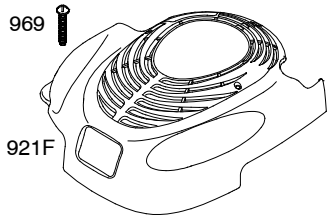

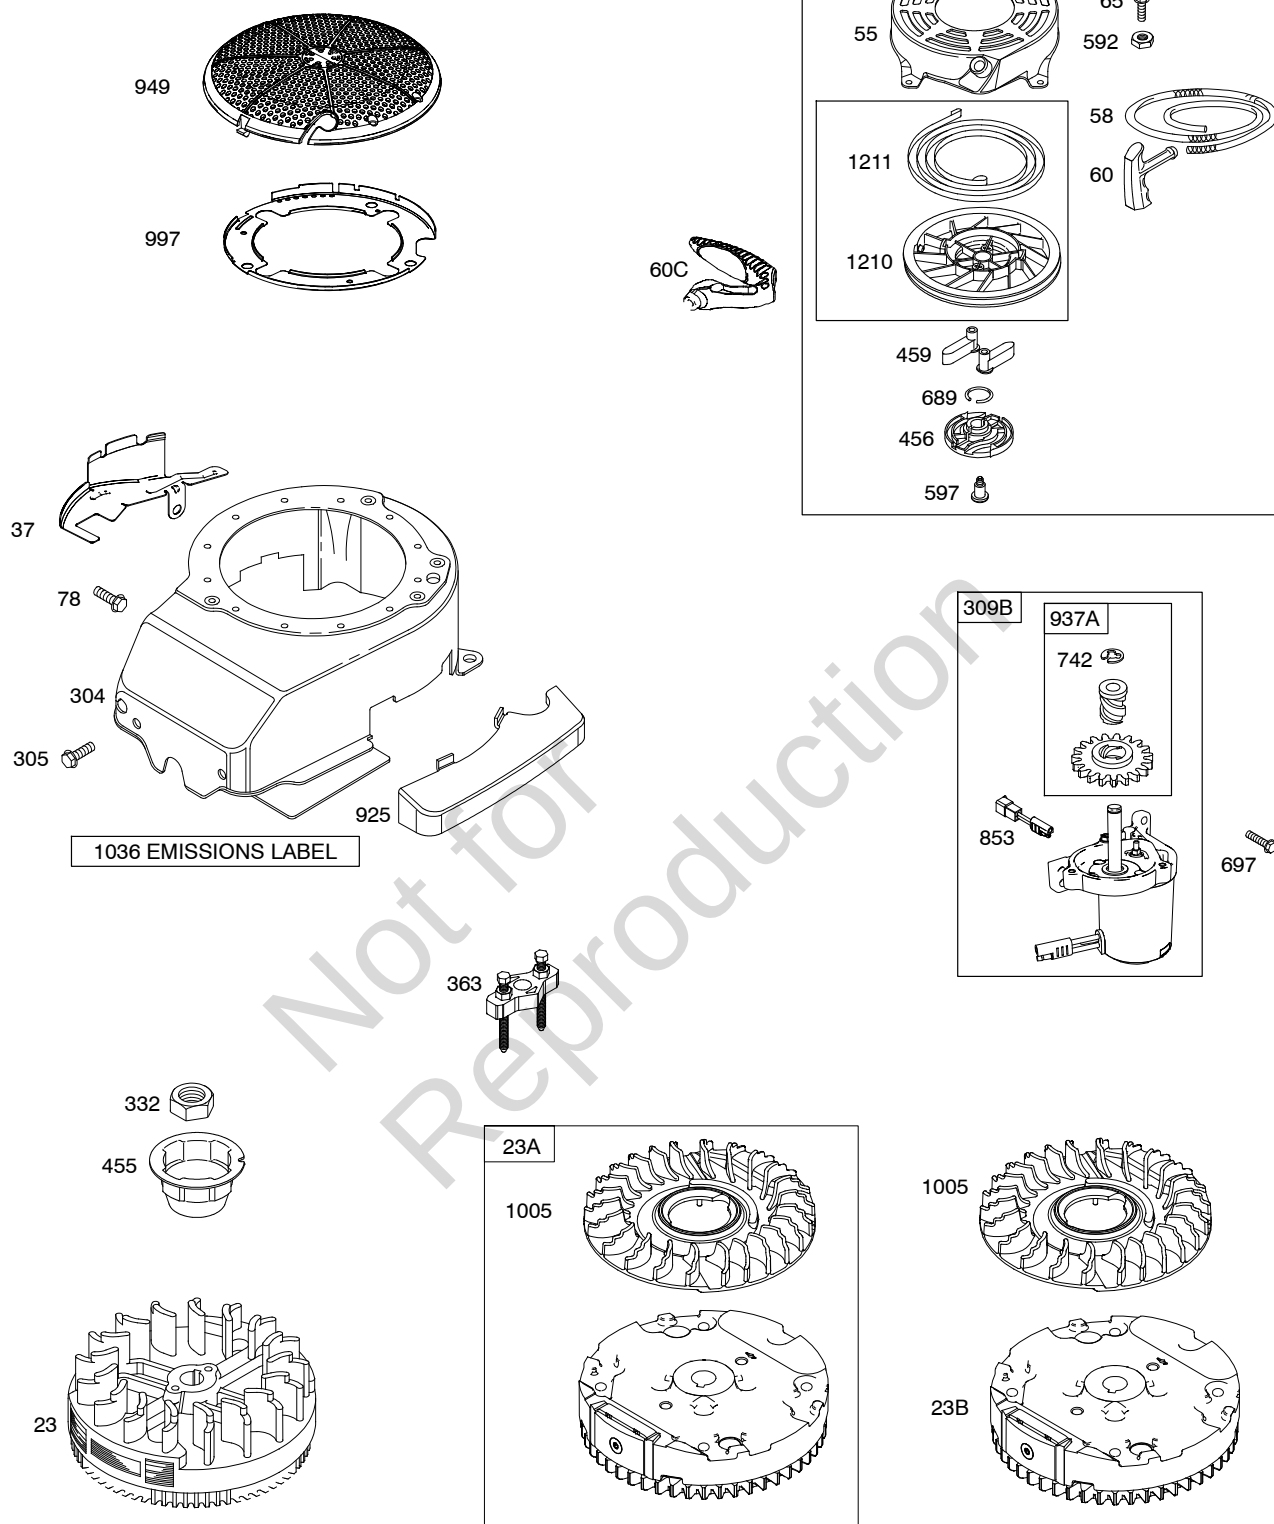

128M00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	592645	Cylinder Assembly	23	691987	Flywheel	60	281434s	Grip-Starter Rope
2	796961	Kit-Bushing/Seal (Magnet Side)	23A	591282	Flywheel Used on Type No(s). 0135.	60C	799716	Grip-Starter Rope
3	299819s	Seal-Oil (Magnet Side)	23B	790536	Flywheel Used on Type No(s). 0001, 0002, 0005, 0010, 0018, 0023, 0119, 0134, 0136, 3456.	65	690837	Screw (Rewind Starter)
4	493279	Sump-Engine				78	691108	Screw (Flywheel Guard)
5	590411	Head-Cylinder				81	691740	Lock-Muffler Screw
7	799875	Gasket-Cylinder Head				97	696565	Shaft-Throttle
8	590395	Breather Assembly				104	797622	Pin-Float Hinge
9	699833	Gasket-Breather				108	796993	Valve-Choke
10	691125	Screw (Breather Assembly)	24	222698s	Key-Flywheel	108A	795935	Valve-Choke
11	691781	Tube-Breather	25	590404	Piston Assembly (Standard)	109A	498593	Shaft-Choke
11B	691923	Tube-Breather			----- Note -----	117A	797574	Jet-Main (Standard)
12	692232	Gasket-Crankcase			590405 Piston Assembly (.020" Oversize)	117B	590440	Jet-Main (Standard)
13	590422	Screw (Cylinder Head)				118A	591298	Jet-Main (High Altitude)
15	691680	Plug-Oil Drain (Square Socket)	26	590402	Ring Set (Standard)	118B	798661	Jet-Main (High Altitude)
16	797017	Crankshaft			----- Note -----	121	498260	Kit-Carburetor Overhaul
		----- Note -----			590403 Ring Set (.020" Oversize)	125A	799869	Carburetor Used on Type No(s). 0010, 0018, 0024, 0135, 0136.
		590807 Crankshaft Used on Type No(s). 0016, 0017, 0026, 0019, 0021, 0027, 0110, 0111, 0133, 3120, 3423, 3424, 3425, 3426, 5423, 5426.	27	691588	Lock-Piston Pin	125B	799866	Carburetor (Auto Choke System)
		590808 Crankshaft Used on Type No(s). 0001, 0002, 0119, 3456.	28	298909	Pin-Piston			----- Note -----
		592646 Crankshaft Used on Type No(s). 0005.	29	797306	Rod-Connecting			592647 Carburetor (Auto Choke System) Used on Type No(s). 0017, 0021, 0032.
		593810 Crankshaft Used on Type No(s). 0010.	32	691664	Screw (Connecting Rod)	127	694468	Plug-Welch
		593811 Crankshaft Used on Type No(s). 0023, 0134.	32A	695759	Screw (Connecting Rod)	130	696564	Valve-Throttle
		797018 Crankshaft Used on Type No(s). 0018, 0024, 0135, 0136.	33	590394	Valve-Exhaust	133	398187	Float-Carburetor
20	399781s	Seal-Oil (PTO Side)	34	590393	Valve-Intake	134	398188	Kit-Needle/Seat
22	691092	Screw (Crankcase Cover/Sump)	35	691270	Spring-Valve (Intake)			----- Note -----
			36	691270	Spring-Valve (Exhaust)			593873 Kit-Needle/Seat Used on Type No(s). 0017, 0021, 0032.
			37	793756	Guard-Flywheel	137	796610	Gasket-Float Bowl (1/8" Thick)
			40	692194	Retainer-Valve	137A	693981	Gasket-Float Bowl (1/16" Thick)
			43	691997	Slinger-Governor/Oil			
			45	690548	Tappet-Valve			
			46	590463	Camshaft			
			50A	796703	Manifold-Intake			
			51	272199s	Gasket-Intake			
			51A	796704	Gasket-Intake			
			54	691650	Screw (Intake Manifold)			
			55	691421	Housing-Rewind Starter			
			58	697316	Rope-Starter (Cut To Required Length)			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
141	796193	Shaft-Choke	222A	593542	Bracket-Control (Used After Code Date 14020200). Used on Type No(s). 0002, 0005, 0019, 0023, 0025, 0027, 0032, 0114, 0131, 0134, 0412, 5062.	291	593208	Thermostat
163	795629	Gasket-Air Cleaner				300	593581	Muffler (Used After Code Date 13122200). ----- Note -----
163A	592649	Gasket-Air Cleaner Used on Type No(s). 0017, 0021, 0032.						790828 Muffler (Used Before Code Date 13122300).
187	791766	Line-Fuel (Cut to Required Length)	222B	593823	Bracket-Control Used on Type No(s). 0010, 0024. ----- Note -----			593819 Muffler Used on Type No(s). 0010, 0018, 0135, 0136. (Used After Code Date 13122200).
187A	791873	Line-Fuel (Molded)						692038 Muffler Used on Type No(s). 0010, 0018, 0024, 0135, 0136. (Used Before Code Date 13122300).
187B	791891	Line-Fuel (Includes Filter)	222C	692150	Bracket-Control Used on Type No(s). 0018, 0135, 0136. (Used After Code Date 14021200).	304	790826	Housing-Blower ----- Note -----
187D	795090	Line-Fuel (Molded)						791291 Housing-Blower Used on Type No(s). 0001, 0002, 0005, 0023, 0032, 0119, 0134, 3456.
188	693399	Screw (Control Bracket)	222D	593582	Bracket-Control (Fixed Speed)			493294 Housing-Blower Used on Type No(s). 0010, 0018, 0135, 0136.
190	690940	Screw (Fuel Tank)	227	690783	Lever-Governor Control	305	691108	Screw (Blower Housing)
202	691829	Link-Mechanical Governor	236	691826	Link-Lockout	306A	790836	Shield-Cylinder ----- Note -----
209B	699056	Spring-Governor ----- Note -----	240	298090s	Fuel-Filter			690450 Shield-Cylinder Used on Type No(s). 0010, 0018, 01353, 0136.
		691851 Spring-Governor Used on Type No(s). 0003, 0019, 0027, 0032, 0114, 0131, 0412.	265	690798	Clamp-Casing	307	690345	Screw (Cylinder Shield)
		691292 Spring-Governor Used on Type No(s). 0001, 0016, 0017, 0021, 0026, 0110, 0111, 0119, 0133, 3120, 3423, 3424, 3425, 3426, 3456, 5423, 5426.	265A	691024	Clamp-Casing			
		691291 Spring-Governor Used on Type No(s). 0010, 0018, 0024, 0135, 0136.	265B	692179	Clamp-Casing			
222	790143	Bracket-Control (Remote/Manual Friction)(Primer) (Used Before Code Date 14020300). Used on Type No(s). 0002, 0005, 0019, 0025, 0027, 0114, 0131, 0134, 0412, 5062.	267	691044	Screw (Casing Clamp)			
			268	691025	Casing-Control Wire (Cut to Required Length)			
			269	691026	Wire-Control (Cut to Required Length)			
			270	691027	Nut (Control Wire Casing)			
			271	691028	Lever-Control			
			276	271716	Washer-Sealing			
			287	690940	Screw (Dipstick Tube)			

128M00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309B	799045	Motor-Starter	445A	491588s	Filter-Air Cleaner	604B	790703	Cover-Control
332	690662	Nut			Cartridge	608	497680	Starter-Rewind
		(Flywheel)	455	791960	Cup-Flywheel	613	790833	Screw
333	802574	Armature-Magneto	456	692299	Plate-Pawl Friction			(Muffler)
		(Used Before Code	459	281505s	Plate-Ratchet			----- Note -----
		Date 12022900).	474	691991	Alternator			691340 Screw
333A	590454	Armature-Magneto	505	691251	Nut			(Muffler)
		(Used After Code Date			(Governor Control			Used on Type No(s).
		12022800).			Lever)			0010, 0018, 0135,
333B	590455	Armature-Magneto	523	499621	Dipstick			0136.
		Used on Type No(s).	524	692296	Seal-Dipstick Tube	615	690340	Retainer-Governor
		0006, 0018, 0019,	525	495265	Tube-Dipstick			Shaft
		0022, 0023, 0024,	525A	593806	Tube-Dipstick	616	698801	Crank-Governor
		0025, 0110, 0111,			(Mow N Stow)			----- Note -----
		0115, 0119, 0122,			Used on Type No(s).			593871 Crank-
		0123, 0124, 0127,			0017, 0021, 0032.			Governor
		0128, 0129, 0135-F4,	535	493537s	Filter-Pre Cleaner			(Mow N Stow)
		0136-F4, 0410, 0412,	562	691119	Bolt			Used on Type No(s).
		0420, 1447, 1448,			(Governor Control			0017, 0021, 0032.
		5062.			Lever)	617	270344s	Seal-O Ring
334	691061	Screw	564A	690351	Screw			(Intake Manifold)
		(Magneto Armature)			(Blower Housing	621	692310	Switch-Stop
337	591868	Plug-Spark			Cover)	633	691321	Seal-Choke/Throttle
337A	591910	Plug-Spark	564B	698589	Screw			Shaft
		Used on Type No(s).			(Control Cover)	633A	693867	Seal-Choke/Throttle
		0006, 0014, 0015,	578	398153	Wire-Assembly			Shaft
		0025, 0128, 0129,	578A	695283	Wire-Assembly	635	66538s	Boot-Spark Plug
		0466, 0867, 0952,	584	697734	Cover-Breather	668	493823	Spacer
		0962, 1305, 1313,			Passage	670	692294	Spacer-Fuel Tank
		1447, 1468, 1470,	585	691879	Gasket-Breather	676	396548	Deflector-Muffler
		1612, 5062, 5305,			Passage	676A	393756	Deflector-Muffler
		5468.	592	690800	Nut	676B	397931	Deflector-Muffler
356	692390	Wire-Stop			(Rewind Starter)	676C	493871	Deflector-Muffler
356A	795609	Wire-Stop	597	691696	Screw	677	690661	Screw
356H	690791	Wire-Stop			(Pawl Friction Plate)			(Muffler Deflector)
356K	696030	Wire-Stop	601	791850	Clamp-Hose			(Thread Forming)
358	590508	Gasket Set-Engine	601A	691038	Clamp-Hose	677A	593440	Screw
362	793351	Boot-Spark Plug	604	691757	Cover-Control			(Self Drilling) (Thread
363	19069	Flywheel Puller			Used on Type No(s).			Forming)
383	89838s	Wrench-Spark Plug			0018, 0135, 0136.			
404	690272	Washer						
		(Governor Crank)						
425A	690670	Screw						
		(Air Cleaner Cover)						
443A	692523	Screw						
		(Air Cleaner Primer						
		Base)						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
684	690345	Screw (Breather Passage Cover)	870	690380	Seat-Valve (Exhaust)	958	698183	Valve-Fuel Shut Off
689	691855	Spring-Friction	871	590409	Bushing-Valve Guide	966B	795259	Base-Air Cleaner Primer
691	593837	Seal-Governor Shaft	875	593580	Base-Air Cleaner	968B	692298	Cover-Air Cleaner
692	590931	Spring Detent		----- Note -----	969	690700	Screw (Blower Housing Cover)	
697	691127	Screw (Drive Cap)		593832	Base-Air Cleaner	969A	691138	Screw (Blower Housing Cover)
718	690959	Pin-Locating		Used on Type No(s). 0017, 0021, 0032.				
725	590459	Shield-Heat	883	691881	Gasket-Exhaust			
725A	590460	Shield-Heat	910	691094	Stud (Alternator)	972B	699374	Tank-Fuel (Plastic)(Threaded)
741	797521	Gear-Timing (Metal)	921F	697343	Cover-Blower Housing	972E	796578	Tank-Fuel (Plastic) (Threaded) (Flourinated)
742	93941	Retainer-E Ring	921G	792675	Cover-Blower Housing	972F	590490	Tank-Fuel (Plastic) (1/4 Turn)
745	691648	Screw (Brake)	921H	790037	Cover-Blower Housing			
789C	796385	Harness-Wiring	921J	790036	Cover-Blower Housing	975	796611	Bowl-Float
789D	796574	Harness-Wiring	921U	794355	Cover-Blower Housing	976	694395	Primer-Carburetor
789E	594392	Harness-Wiring	921W	796921	Cover-Blower Housing	994	398067	Arrestor-Spark
789F	594393	Harness-Wiring	921X	796706	Cover-Blower Housing	997	696310	Shield-Debris
832	593875	Guard-Muffler	921Y	591955	Cover-Blower Housing	1005	691346	Fan-Flywheel
832A	793568	Guard-Muffler Used on Type No(s). 0027, 0135, 0136.	921Z	593818	Cover-Blower Housing	1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
836	690664	Screw (Muffler Guard)	922A	692135	Spring-Brake	1059	692311	Kit-Screw/Washer
836A	790745	Screw (Muffler Guard)	923	796136	Brake (Rewind Starter)	1084	280080s	Connector-Terminal
842	691031	Seal-O Ring (Dipstick Tube)	923A	796387	Brake (With Stop Switch) (Electric Starter)	1095	590507	Gasket Set-Valve
843	691884	Sleeve-Lever	925	795403	Cover-Linkage	1119	692979	Screw (Alternator)
843A	691895	Sleeve-Lever (Choke)	937A	799420	Spline-Starter	1210	498144	Pulley/Spring Assembly (Pulley)
847	692047	Dipstick/Tube Assembly	949	696306	Guard-Debris Screen Used on Type No(s). 0018, 0135, 0136.	1211	498144	Pulley/Spring Assembly (Spring)
847A	593808	Dipstick/Tube Assembly (Mow N Stow) Used on Type No(s). 0017, 0021, 0032.	957B	692046	Cap-Fuel Tank (Black) (Threaded)	1319	794467	Label-Warning
851	493880s	Terminal-Spark Plug	957C	799585	Cap-Fuel Tank (Black) (1/4 Turn)	1330	270962	Manual-Repair
851A	692424	Terminal-Spark Plug		----- Note -----	1386	790848	Vane-Air (Auto Choke System)	
853	695268	Adapter-Wire		591003	Cap-Fuel Tank (Red) (1/4 Turn)	1387	790849	Spring-Air Vane
853A	695897	Adapter-Wire	957D	796577	Cap-Fuel Tank (Black) (Threaded)	1388	790850	Screw (Air Vane)
868	590410	Seal-Valve						
869	691155	Seat-Valve (Intake)						

Not for
Reproduction

