

# 12kW generator

## Battery

**▲ WARNING** Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

The installer must supply and install a sealed, valve-regulated, lead-acid rechargeable starting battery. The starting battery MUST conform to the specifications shown below in the chart.

Battery Specifications	
Volts	12 Volt DC
Amps (MIN)	600 CCA (cold cranking amps)
Type	AGM (Absorbed glass mat)
Terminal Hardware	M6
Dimensions (MAX):	
Width	5.5 inches (140mm)
Length	9.0 inches (230mm)
Height	8.25 inches (210mm)

Install the battery as described in *Servicing the Battery* in the *Maintenance* section of the Operator's Manual.

Install the battery as described in *Servicing the Battery* in the *Maintenance* section of the Operator's Manual. Always make sure the **NEGATIVE** cable is connected last.

**▲ WARNING** Storage batteries give off explosive hydrogen gas during recharging. Slightest spark will ignite hydrogen and cause explosion, resulting in death, serious injury and/or property damage.

Battery electrolyte fluid contains acid and is extremely caustic. Contact with battery contents could cause severe chemical burns. A battery presents a risk of electrical shock and high short circuit current.

- DO NOT dispose of battery in a fire. Recycle battery.
- DO NOT allow any open flame, spark, heat, or lit cigarette during and for several minutes after charging a battery.
- DO NOT open or mutilate the battery.
- Wear protective goggles, rubber apron, rubber boots and rubber gloves.
- Remove watches, rings, or other metal objects.
- Use tools having insulated handles.

Use the supplied tie-down strap (A) to secure the battery to the unit. Each end of the strap should be attached to the existing tabs in the base of the unit.

