



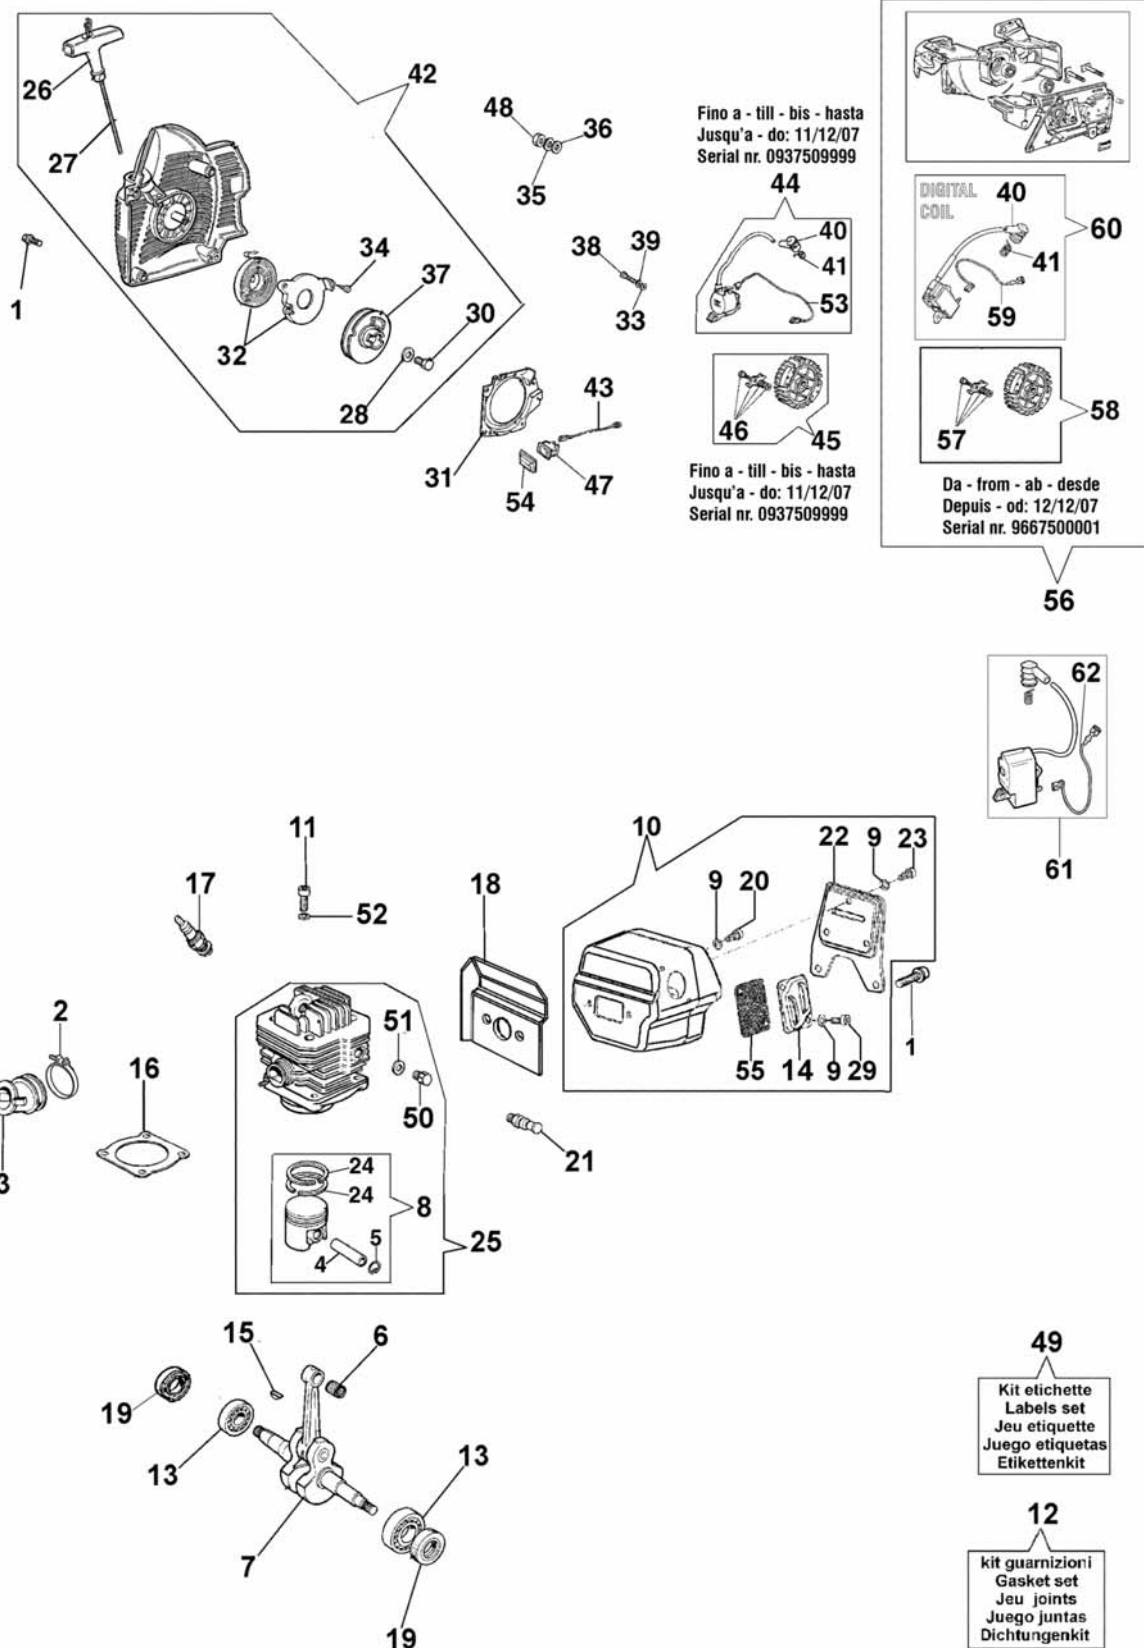


165 - Starter assy and engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	3	097000092AR	Screw				
2	1	50200015AR	Clamp				BT4-093-10/08
3	1	50010026	Manifold				
4	1	50010031R	Piston pin				
5	2	007201198	Ring				
6	1	3037014	Bearing				
7	1	50090048R	Crankshaft				
8	1	50092013	Piston assy Ø48				
9	2	3033074	Washer				
10	1	50012110	Cpl. muffler				
11	4	005100906AR	Screw				
12	1	50012052A	Gasket set				
13	2	3034012R	Bearing				
14	1	50010198	Deflector				
15	1	094500028R	Key				
16	1	50010046B	Gasket				
17	1	3055118	Spark plug				
18	1	50010058A	Gasket				
19	1	007201313R	Seal ring				
20	2	3801045	Screw				
21	1	50010215	Decompressor				
22	1	50010145	Cover				
23	3	3801052R	Screw				
24	2	50020004R	Piston ring Ø48				
25	1	50092028	Cylinder assy Ø48				
26	1	097000064A	Handle				
27	1	097000037R	Starter rope				
28	1	3918006	Washer				
29	2	005100913B	Screw				
30	1	3908036	Screw				
31	1	50010019A	Flange				
32	1	098000060AR	Spring				
33	2	3916004	Washer				
34	2	3960017AR	Screw				
35	1	3833080	Washer				
36	1	005000361	Washer				
37	1	52010439CR	Starter pulley				
38	2	094000227	Screw				
39	2	006000315	Washer				
40	1	094600097A	Spark plug cap				
41	1	094600169A	Spring				
42	1	50010315BR	Starter assy				
43	1	097000121A	Cable				
44	1	50020007BR	Ignition coil				BT4-090-01/08
45	1	50090035R	Flywheel				BT4-090-01/08
46	1	52012027	Pawl kit				
47	1	2317021R	Switch				
48	1	004000142	Nut				
49	1	50092033	Labels kit				
50	1	52010093	Screw				
51	1	3078012	Washer				
52	4	3833076	Washer				
53	1	097000122A	Cable				BT4-090-01/08
54	1	2317013	Guard				
55	1	50010197	Screen				
56	1	50090057	Conversion kit				BT4-090-01/08
57	1	52012027	Pawl kit				BT4-090-01/08
58	1	52020247R	Flywheel				BT4-090-01/08
59	1	50010333R	Cable				BT4-090-01/08, BT4-096-07/09
60	1	50020061R	Ignition coil				BT4-090-

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
							01/08, BT4-096-07/09
61	1	50020061R	Ignition coil				BT4-096-07/09
62	1	50020062R	Cable				BT4-096-07/09

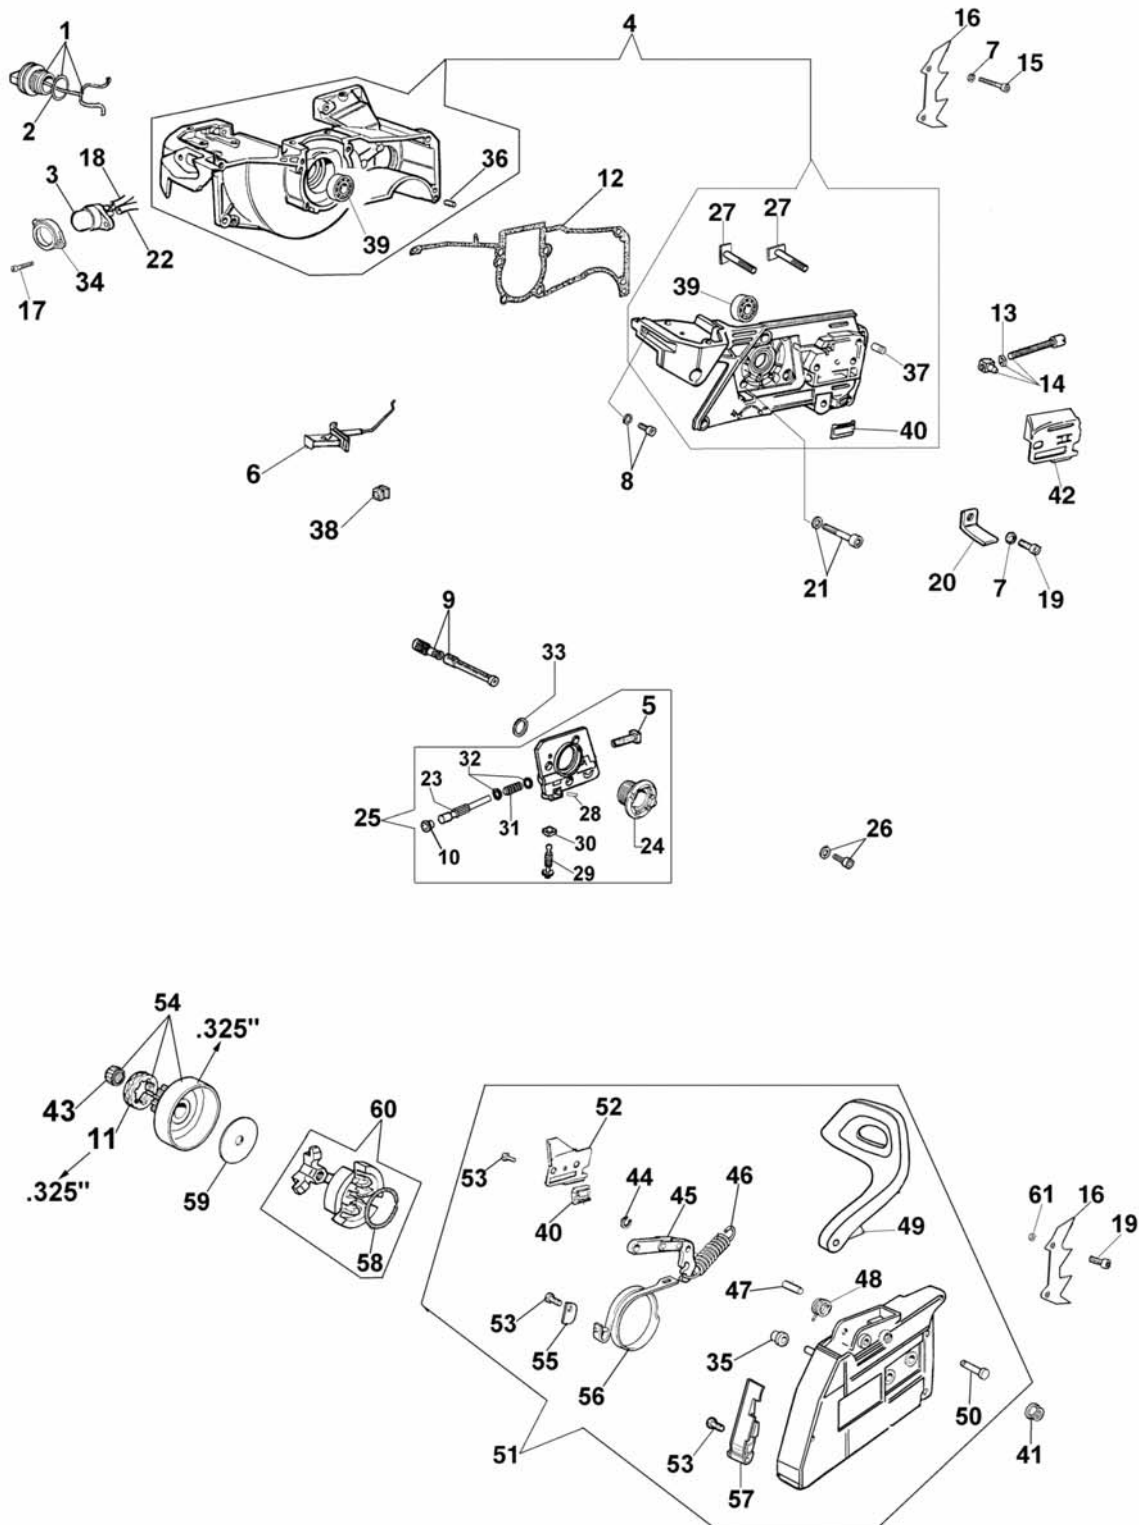


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50012009R	Cpl. cap				
2	1	099900090	O-ring				
3	1	50010032R	Air purge				
4	1	50090059	Crankcase				
5	1	50010163	Tube				
6	1	50010065	Starter lever				
7	8	3833073	Washer				
8	1	005100987	Screw				
9	1	097000147A	Oil filter				
10	1	097000078	Cap				
11	1	094500046	Ring .325"				
11	1	006100730	Ring 3/8"				
12	1	50010047AR	Gasket				
13	1	50010079	Clamp				
14	1	50010151	Chain tensioner				
15	4	006100303	Screw				
16	2	50010050B	Spike				
17	2	3960106	Screw				
18	1	50010090A	Tube				
19	4	006000251R	Screw				
20	1	097000283	Plate				
21	4	3801035	Screw				
22	1	61060012A	Oil line				
23	1	097000069B	Piston pump				
24	1	50010036AR	Worm gear				BT4-081-11/06
25	1	50012138	Oil pump				BT4-081-11/06
26	3	006000024	Screw				
27	2	50010301	Screw				
28	1	097000062	Pin				
29	1	50010037	Adjust. screw				
30	1	097000068	Clamp				
31	1	097000071A	Spring				
32	2	097000070	Washer				
33	1	50010044	Washer				
34	1	50010175	Guard				
35	1	006000300	Bushing				
36	1	3023008R	Pin				
37	1	097000229R	Breather valve				
38	1	097000057	Grommet				
39	2	3034012R	Bearing				
40	1	50070149	Guard				
41	2	50010148R	Nut				
42	1	50010010A	Plate				
43	1	3037016	Bearing				
44	1	3026003	Ring				
45	1	097000146	Lever				
46	1	099900152A	Spring				
47	1	097000107	Pin				
48	1	50010088AR	Spring				
49	1	50010126	Guard				
50	1	097000106	Pin				
51	1	50012044AR	Chain cover				
52	1	50070124A	Plate				
53	1	3960045	Screw				
54	1	50012050	Clutch drum .325"				
54	1	50022034	Clutch drum 3/8"				
55	1	50010084	Plate				
56	1	50010039	Brake band				
57	1	50010353R	Deflector				
58	1	004900137B	Spring				
59	1	375100012A	Washer				
60	1	50012023AR	Clutch				
61	2	3914003	Nut				

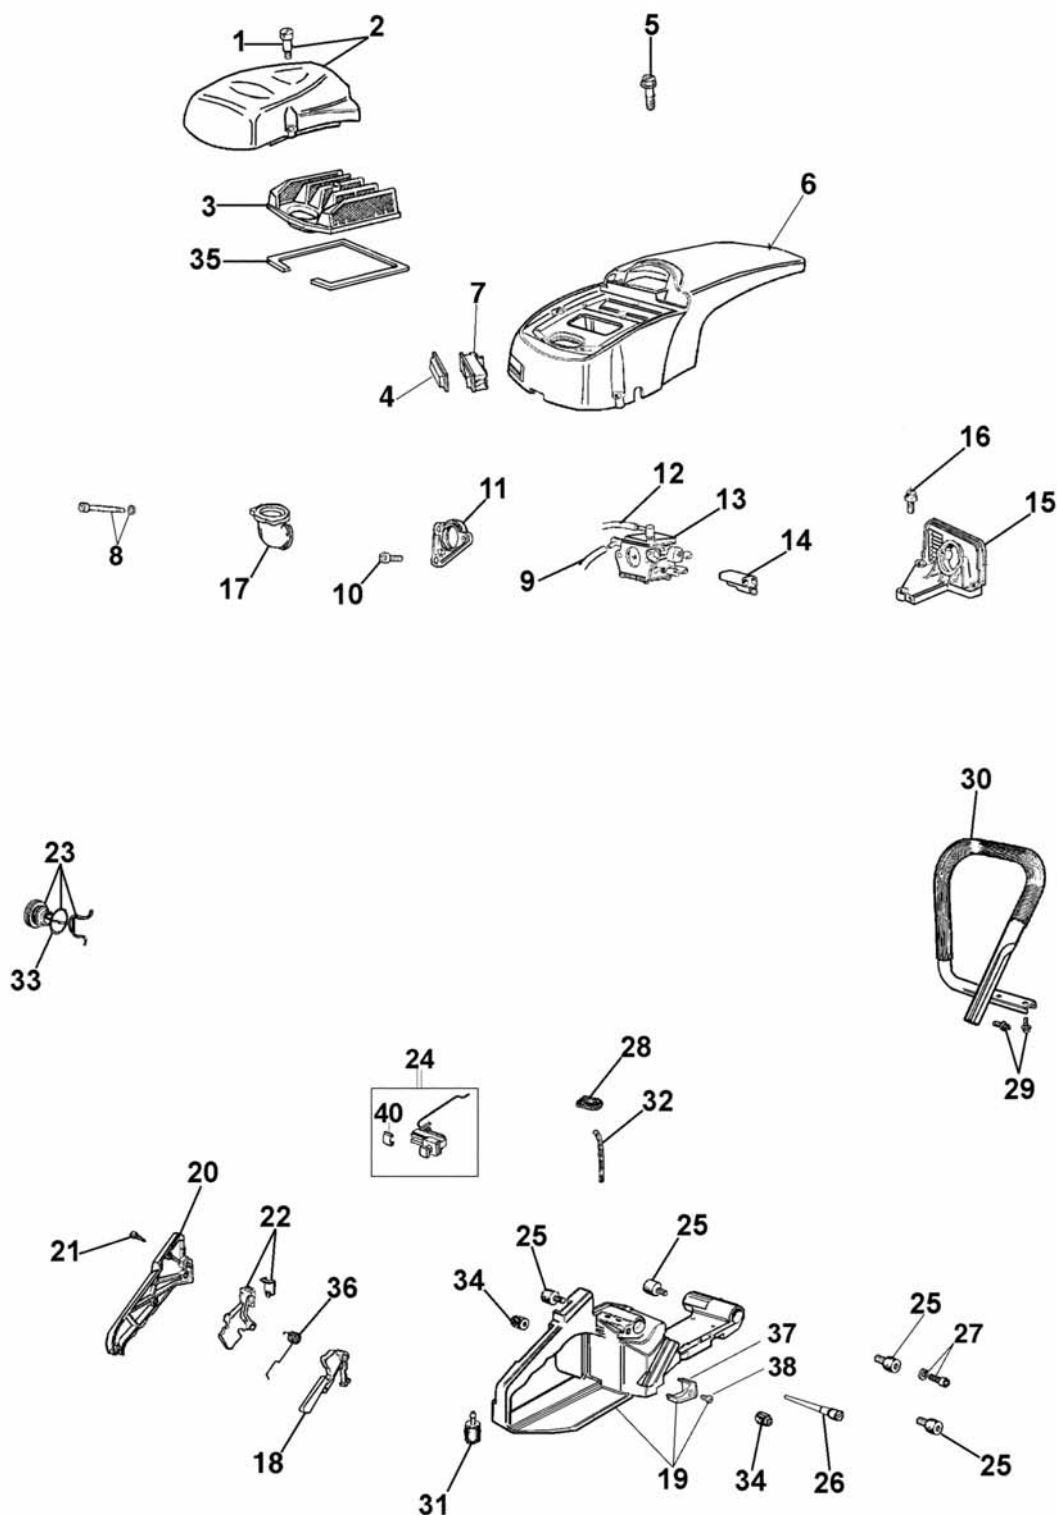

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	093000468A	Screw				
2	1	50012048A	Cover				
3	1	098000092R	Air filter nylon				BT1-017-07/07
3	1	097000044R	Air filter flock				BT1-017-07/07
4	1	2317013	Guard				
5	1	099900296R	Screw				
6	1	50012099R	Cover				
7	1	2317021R	Switch				
8	2	61052009B	Screw				
9	1	098000319	Tube				
10	3	3960057R	Screw				
11	1	50010028	Flange				
12	1	094000215A	Tube				
13	1	50010302A	Carburetor kit HDA-160C				
14	1	50010125	Screw guide				
15	1	50010017	Support				
16	3	097000092AR	Screw				
17	1	50010027R	Manifold				
18	1	097000025AR	Throttle lever				
19	1	52020086DR	Fuel tank				BT4-097-07/09; BT4-108-02/11
20	1	50010083	Cover				
21	1	3960040R	Screw				
22	1	50010157	Throttle				
23	1	50012008R	Fuel cap				
24	1	52022048A	Throttle				BT4-097-07/09
25	4	097000038AR	Shock absorber				
26	1	099900083A	Tank breather				
27	4	3833073R	Washer				
28	1	50010029	Grommet				
29	1	097000061A	Screw				
30	1	50020016R	Handle				
31	1	50010218R	Fuel filter				
32	1	098000319	Tube				
33	1	099900090	O-ring				
34	2	50010061R	AV-mount				
35	1	097000056	Gasket				
36	1	097000028R	Spring				
37	1	50010377	Guard				BT4-108-02/11
38	1	3960098	Screw				BT4-108-02/11
40	1	52010134R	Plate				BT4-097-07/09

mod. Walbro HDA-160D

compl. p.n. 2318780B

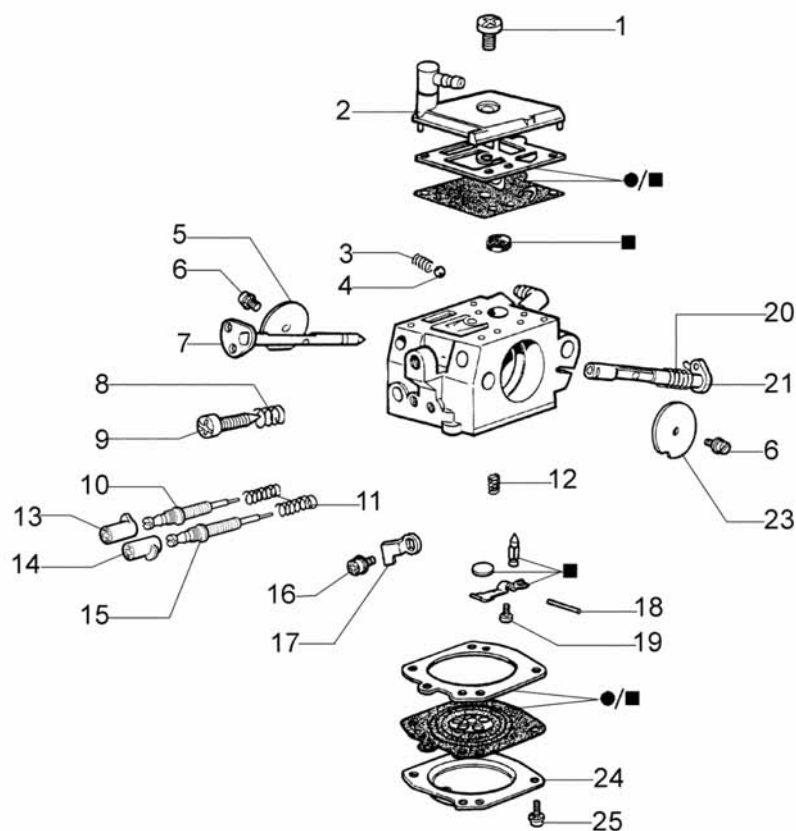

26 ■ KIT RIPARAZIONE
REPAIR KIT

22 ● KIT MEMBRANE & GUARNIZIONI
DIAPHRAGM & GASKET SET

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50010109	Screw				
2	1	50010097	Cover				
3	1	095000146	Spring				
4	1	094600143	Ball				
5	1	50010100	Starter valve				
6	2	035000160	Screw				
7	1	50010096	Shaft				
8	1	094600148	Spring				
9	1	074000240	Adjust.screw				
10	1	2318782	Screw H				
11	2	095000147	Spring				
12	1	50070164	Spring				
13	1	2318694	Cap				
14	1	2318695	Cap				
15	1	2318781	Screw L				
16	1	003300209	Screw				
17	1	50010101	Clamp				
18	1	003300201	Spindle				
19	1	003300202	Screw				
20	1	50010106	Spring				
21	1	50010095	Shaft				
22	1	50010122A	Diaphragm and gasket set				
23	1	50010099	Starter valve				
24	1	50010098	Cover				
25	4	035000162	Screw				
26	1	50010123A	Repair kit				