MVH1334A

Model: VH1334VN VH1334GX



instructions of page one

Brave 34 Ton Vertical / Horizontal Log Splitter

Model VH1334





Owner / Operator and Safety Manual



Initial Start-up Instructions


Read all assembly, operating, and safety instructions.

- Complete and return the warranty card to register your log splitter.
 Write the serial number and date-of-purchase in this manual.
 Assemble the log splitter.
- ☐ Make sure the oil filter is properly installed. (See "Assembly Procedure" section).
- ☐ Fill the hydraulic tank with the recommended type and quantity of oil. (See "Start-Up Procedure" section).
- ☐ Fill the engine crankcase with the manufacturer's recommended type and quantity of oil. (See "Start-Up Procedure" section).
- ☐ Fill the engine fuel tank with fresh, clean, lead-free gasoline. (Do not mix oil with gasoline).
- Bleed the air out of the cylinder before starting the log splitter. (See "Start-Up Procedure" section).
- Make sure the trailer hitch of the towing vehicle is equipped with a 2 inch ball.

NOTE: Brave reserves the right to make technical changes for product improvement. This manual may contain illustrations and photographs, for demonstration purposes, which slightly deviate from the actual product design.

Serial Number	
Date-of-Purchase	

Please enter the serial number and purchase date of your log splitter in the space provided. Keep this manual for future reference.

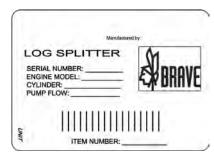

Contents

Introduction
Safety
Personal Protection
Worksite Safety
Operating Safety
Log Splitting Safety
Maintenance and Repair6
Towing
Refueling
Preventing Fires
Assembly Instructions
Required Tools
Shipping List
Unpacking the Crate
Assembly Procedure
Start-Up Procedure17
Towing 19
Operation
Operation – Horizontal Position
Operation – Vertical Position
Inspection and Maintenance28
General Maintenance Check (before operating)
Engine Service
Storage
Hydraulic Oil Change
Specifications
Mechanical Specifications
Hydraulic Specifications
Replacement Filters
Hydraulic Oil Specifications (non-foaming)
Troubleshooting
Decals
Parts
Warranty
Warranty Card
Optional Attachments
Log Cradle, Log Dislodger, and Safety Flag

A WARNING



To avoid personal injury or death, carefully read and understand all instructions pertaining to the Brave log splitter.

Do not attempt to assemble, operate, or maintain our product without fully understanding all our instructions and safety precautions. Do not operate the log splitter unless you read and understand the instructions and warnings in this manual. If any doubt or question arises about the correct or safe method of performing anything found in this or other Brave manuals, contact your Brave dealer or call the Sales and Service representatives at our main headquarters. Proper care is your responsibility.

A WARNING

Accidents can often be avoided by being alert and recognizing potentially hazardous situations. Any individuals operating, maintaining, or repairing products manufactured by Brave should have the necessary training, skills, and tools required to perform these functions properly and safely. The safety information in this manual serves as a basic guide in an attempt to prevent injury or death.

Brave cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this manual and on the product itself are, therefore, not all-inclusive. If tools, procedures, work methods, or operating techniques that are not specifically mentioned by Brave are used, you must satisfy yourself that they are safe for you and for others. Make sure the log splitter will not be damaged or made unsafe by any operation, lubrication, maintenance, or repair procedures that you choose.

DO NOT proceed if any doubt arises about the correct or safe method of performing anything found in this or other Brave manuals. Seek out expert assistance from a qualified person before continuing.

AWARNING

CALIFORNIA PROPOSITION 65

Engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

800-350-8739 3 Brave

Introduction

This professional quality VH1334 Vertical/Horizontal Log Splitter is designed for tough applications in both vertical and horizontal positions. With 34 tons of splitting force, a 15 second cycle time, and an 11 HP engine, the VH1334 will handle most of your log splitting needs. An attractive, powder-coated finish provides the finest protection available and Brave's rigid, quality-control and component testing help ensure years of productive, reliable service. Since 1982, the name Brave has stood for quality and reliability when it comes to log splitters and wood processing products.

Brave offers the finest log splitter on the market today!

- ✔ Rugged, heavy-duty construction for years of exceptional service.
- ✓ Ergonomic design, for use in vertical and horizontal operating positions.
- ✓ Rigid, quality-control during manufacturing ensures greater reliability.
- ✓ Factory testing of all major components and hydraulic tank.
- ✔ Powder-coated finish for the best appearance and weather protection.
- ✓ Year-round manufacturing, parts, and support.

For additional information, contact us at:

Brave

20195 S. Diamond Lk. Rd., STE 100

Rogers, MN 55374

Phone: (800) 350-8739 (toll free)

Fax: (866) 779-9963

E-mail: sales@braveproducts.com Web Site: www.braveproducts.com

Safety

The following is a list of safety rules you must follow in order to use your log splitter safely.

Personal Protection



To avoid personal injury or death, carefully read and understand all instructions pertaining to the log splitter, including the engine manufacturer's operating and maintenance instruction manual.











Always wear protective gear, such as safety goggles, tight-fitting gloves without drawstrings or loose cuffs, steel-toed shoes, and a protective hearing device.



To prevent injury, make sure all decals are attached to the log splitter and are legible at all times.

Worksite Safety



To avoid tripping, do not leave tools, logs, or other components laying around the work area.



NEVER operate your log splitter on slippery, wet, muddy, or icy surfaces. The location you choose should be flat, dry, and free from any tall grass, brush, or other interferences.



NEVER operate the engine in an enclosed area. Exhaust fumes contain carbon monoxide that can be deadly when inhaled. Make sure the area is well ventilated.



NEVER attempt to move your log splitter while the engine is running.



NEVER leave the log splitter running unattended. Shut off engine if you are going to be away from the log splitter even for a short period of time.



NEVER attempt to move your log splitter over hilly or uneven terrain without a tow vehicle.



NEVER use your log splitter at night.





ALWAYS operate your log splitter on dry, solid, level ground.




ALWAYS block the wheels to prevent movement of the machine while in operation.

Operating Safety

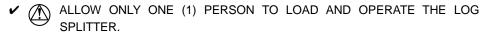

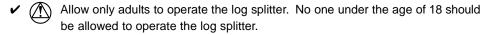

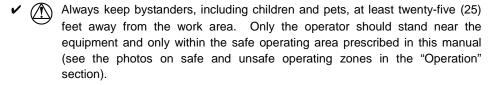

When the ram of the log splitter is in the return mode, keep your hands off the machine — the log splitter is designed to automatically stop when the cylinder is fully retracted.

✓ ⚠ ALWAYS disconnect the spark plug wire when the log splitter is not in operation.

Do not allow any person to operate the log splitter until they have read and understood the safe operating instructions contained in this manual.

800-350-8739

7

Brave

X



Do not, under any circumstances, alter your log splitter. This equipment was designed and engineered to be used in accordance with the operating instructions. Altering the equipment, or using the equipment in such a way as to circumvent its design capabilities and capacities, could result in serious or fatal injury and WILL VOID THE WARRANTY.

X



Never operate, or allow anyone else to operate, this equipment while under the influence of medication, drugs, or alcohol.

X (Sales)

Never wear loose clothing or jewelry that may get caught or become entangled in the log splitter.

X (No.

NEVER place hands or feet between the log and splitting wedge or between the log and ram during the forward or reverse stroke.

x

DO NOT STRADDLE OR REACH ACROSS THE SPLITTING AREA WHEN OPERATING THE LOG SPLITTER.

Do not step over your log splitter when the engine is running because you may trip or accidentally engage the ram.

x

NEVER attempt to load your log splitter while the ram is in motion.

Only use your hand to operate the control lever. NEVER use your foot, knee, a rope, or any other extension device.

Log Splitting Safety

Always keep your fingers away from any cracks that open in the log during the splitting operation.

ALWAYS make sure that both ends of the log you are splitting are cut as square as possible. This will prevent the log from sliding out of position while under pressure. Logs should be 24 inches or shorter in length.

x (

NEVER try to split two logs on top of each other.

ALWAYS keep full attention on the splitting zone to prevent injury. Hazards can arise from wood defects (knots, irregular shapes, etc).

Never pile logs to be split in a manner that will cause you to reach across the log splitter.

Maintenance and Repair



Follow all safety rules, because most accidents involving the operation, maintenance, or repair of products occur because the assembler/owner/operator failed to observe basic safety rules or operating instructions.



ALWAYS inspect your log splitter before each use. Make sure all nuts, bolts, screws, hydraulic fittings, hose clamps, etc. are securely tightened.

800-350-8739

- ALWAYS check the oil level in the hydraulic oil tank and engine reservoir.
- NEVER operate your log splitter when it is in need of repair or is in poor mechanical condition.
- NEVER tamper with the engine to run it at excessive speeds. The maximum engine speed is preset and is within safety limits.
- NEVER make alterations to your log splitter in any manner. Such alterations may cause the log splitter to become unsafe and WILL VOID THE WARRANTY.
- NEVER attach a rope or extension to the control lever or add width or height to the splitting wedge. Such ALTERATIONS may cause the log splitter to become UNSAFE and WILL VOID THE WARRANTY.
- ALWAYS clean the unit after each use. If possible, store the unit inside or cover it completely, if stored outside.

Towing

- ALWAYS check before towing to make certain your log splitter is correctly and securely attached to the towing vehicle. Be sure that the ball hitch you are using is the proper size for the hitch coupler on the log splitter (see "Specification" section). Be sure the safety chains are properly hooked to the vehicle leaving enough slack for turning.
- ALWAYS allow for added length of the log splitter when turning, parking, crossing intersections, and in all driving situations.
- ALWAYS be careful when backing up. You could jackknife your log splitter if care is not taken.
- ALWAYS disconnect your log splitter from your towing vehicle before attempting to use it.
- NEVER exceed 35 mph when towing your log splitter. Obey all state and local regulations when towing on state and local roads and highways. Adjust your speed for terrain and conditions, as needed. Be extra cautious when towing over rough terrain, especially over a railroad crossing.
- X NEVER tow your log splitter when there is fuel in the engine's tank.
- NEVER allow anyone to sit or ride on your log splitter.
- X NEVER carry any cargo or wood on your log splitter.

Refueling



ONLY refuel the log splitter outdoors in a clear area, void of gas fumes or spilled gasoline.



ALWAYS use an approved fuel container to carry gasoline.



ALWAYS replace the log splitter gas cap and the fuel container cap securely.



If gasoline is spilled, move the machine away from the area of the spill and avoid creating any source of ignition until the spilled gasoline has completely evaporated.



Take a class B fire extinguisher with you when operating the log splitter in dry areas as a precautionary measure against possible flying sparks.



Always store gasoline in an approved, tightly sealed container. Store the container in a cool, dry place. Do not store the container in a house or near any heating appliance.





Do not smoke or have open flames when refueling the engine. Do not spill fuel. If fuel should spill, quickly wipe up the spill and allow the excess to evaporate before continuing. Make sure gasoline soaked rags are properly disposed of.

DO NOT fill the gas tank while the engine is hot or running. Allow time for the engine to cool down before refueling.

Preventing Fires

X



NEVER operate the log splitter near a flame or spark. Oil and gasoline are flammable and can explode.





NEVER smoke while operating or refueling the log splitter. Gasoline, oil, and even gas fumes can explode.

Important Notice

The log splitter is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered, or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the owner and/or operator.

Assembly Instructions

Required Tools

- 10" crescent wrench
- Flat head screwdriver
- Two 1/2" open end wrenches
- Two 3/4" open end wrenches
- Funnel
- Pliers
- · Band cutters

Shipping List

The following chart contains the list of parts that should be shipped as part of the VH1334 Log Splitter.

Qty	Description
1	Base Unit (engine) ¹
1	Rail Unit (hydraulic cylinder) ¹
1	Oil Filter ²
	Hitch Assembly Parts
1	Hitch Coupler (2") ²
2	Bolt (1/2-13 x 3-1/2") ²
2	Locknut (1/2-13) ²
2	Safety Chain ²
2	Safety Quick-Link
	Tongue and Front Leg Assembly
1	Tongue and Front Leg Weldment ¹
2	Bolt (1/2-13 x 3-1/2") ²
2	Locknut (1/2-13) ²
	Rail Latch Assembly
1	Rail Rest Weldment ²
2	Bolt (1/2-13 x 1-1/2") ²
2	Lockwasher (1/2") ²
2	Nut (1/2-13) ²


ty	Description
	Rail to Base Assembly
2	Bolt (1/2-13 x 1-1/2") ²
2	Lockwasher (1/2") ²
2	Nut (1/2-13) ²
	Valve Assembly
1	Control Lever (valve) ²
1	Chain Link ²
1	Clevis Pin ²
1	Cotter Pin ²
	Fender Assembly
2	Fender ²
4	Bolt (5/16-18 x 3/4") ²
4	Locknut (5/16-18) ²
	Jack Assembly
1	Jack with Wheel ²
2	Mounting Straps ²
4	Bolt ²
4	Locknut ²

¹ On the pallet.


² In cardboard box.

Unpacking the Crate


 Cut the metal banding and remove the top, sides, ends, and protective plastic covering of the packing crate. Do not remove the base unit or the rail assembly from the bottom pallet at this time.

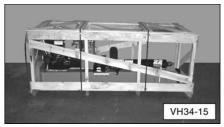

Carefully check the larger components on the shipping pallet for damage. If the parts are damaged call Brave at (815) 672-8861.

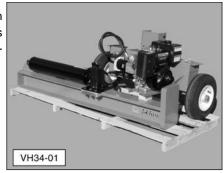

 Cut all the remaining banding straps, open the cardboard box, and make sure all the smaller parts have been shipped. The chart in the "Shipping List" section provides a complete list of all the parts shipped with your log splitter. If any parts are missing call Brave at (815) 672-8861.

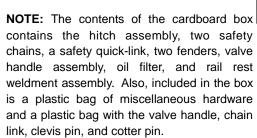



Assembly Procedure


CAUTION




Some components are very heavy and can be damaged if mishandled. Also, to help prevent personal injury, it is strongly recommended that two (2) people work together to uncrate and assemble the log splitter.

NOTE: This manual may contain illustrations and photographs which slightly deviate from the actual product design.


- Remove and read all instructions and safety recommendations before assembling or operating this log splitter.
- Before removing the base unit from the pallet, remove the tongue and front leg assembly.

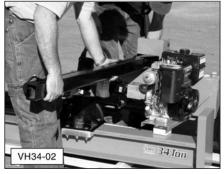

- 3. Attach wheeled Jack assembly
 - a. Place the tongue assembly in a position that allows installation of the wheeled jack assembly.
 - b. Determine which side of the log splitter to place the jack handle (owner's discretion). Place the jack assembly with mounting bracket against the tongue and install two bolts through the top mounting holes, as shown. Place the two mounting straps over the bolts on the opposite side of the tongue and loosely install the locknuts.

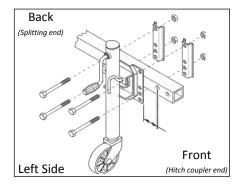

- c. Insert the two lower bolts through the center mounting hole of the bracket and the mounting strap. Loosely install the lock-nuts.
- d. Position the front edge of the bracket approximately 2-1/2 inches from the rear hitch coupler bolt hole, as shown.
- e. Tighten all four locknuts using a torque wrench and tighten to 25 foot pounds. Use an alternating pattern to ensure they are evenly tightened.
- 4. Install the tongue and front leg assembly to the base unit using two 1/2-13 x 3-1/2 inch long hex head bolts and locknuts. Tighten the nuts securely. Roll the tongue/base unit off the pallet and lower the front leg and lock it into position.

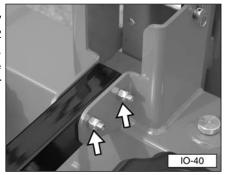


WARNING

Make sure the rail assembly is standing on a flat, level area. Have a helper steady the rail to prevent it from tipping over. The rail assembly weighs approximately 300 pounds and will cause bodily injury if it falls on someone.


5. Carefully stand the rail assembly in an upright, vertical position.

NOTE: If also installing an optional BR021180 Log Cradle, assemble it at this time. The log cradle uses the first and third holes.




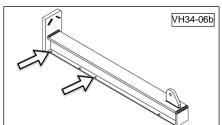

6. Align the holes in the hinge bracket with the holes in the rail assembly.

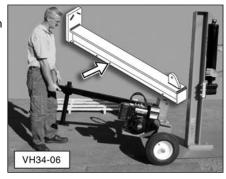


 Bolt the base unit to the rail assembly using two 1/2-13 x 1-1/2 inch long hex head bolts, lockwashers, and nuts, as shown. Hand tighten the nuts securely.

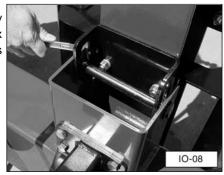

 Bolt the rail rest weldment to the rail assembly using two 1/2-13 x 1-1/2 inch long hex head bolts, lockwashers, and nuts, as shown. Hand tighten the nuts securely.

Pull the latch mechanism outward and rotate the handle to hold the lock pin in the unlocked position.

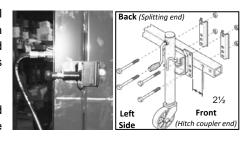

Place one foot on the base plate of the leg and carefully lower the rail assembly to a horizontal position.

NOTE: Block the wheels to prevent the base unit from moving.

Securely tighten the nuts holding the base unit to the rail assembly (Step 7) and the nuts holding the rail rest assembly (Step 8).




 Link the ends of the safety chains together with the safety quick-link and tighten the link's locknut securely with a wrench.




11. Place the hitch over the attachment tube, aligning the bolt holes, and insert the rear 1/2 x 3-1/2 inch bolt (A). Install and tighten the locknut.


Insert the end of the quick-link into the front tube of the rail assembly and insert a $1/2 \times 3-1/2$ inch bolt (B) through link and hitch. Install and tighten the locknut.

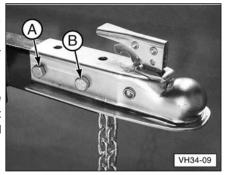

12. Insert the chain link into the valve body, as shown, with the pins facing upward.

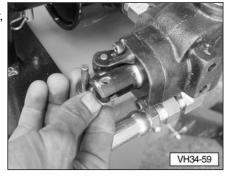


 Position the control lever, as shown, and install it onto the chain link pin. Place the chain link side plate on top of the two pins.

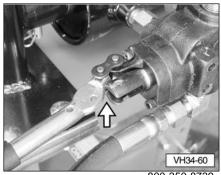

14. Secure the side plate by using a pair of pliers to slide the retaining clip in place onto the two pins.

Attach the control lever to the valve spool using a 1/4" x 1" long clevis pin. Secure the clevis pin with a cotter pin (bend the ends of the cotter pin to hold it in place).

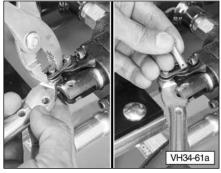

15. Attach the high-pressure hose from the filter assembly to the top valve fitting. Securely tighten the hose fitting.

NOTE: The high-pressure hose is self-sealing and does not require any type of sealing material. Tighten the fitting with a 10 inch crescent wrench.



16. Attach the other high-pressure hose from the bottom valve fitting to the pump. Coat the threads of the fitting with a thread sealing material and securely tighten the hose fitting.



17. Remove the oil filter from the plastic cover and apply a thin coat of oil to the rubber seal. Screw the filter onto the filter head, located near the hydraulic tank. Once the filter makes contact with the filter head, turn it an additional 3/4 turn. Hand-tighten only.



18. Bolt the fenders onto the fender brackets using two 5/16-18 x 3/4 inch long hex head bolts and locknuts. The fenders are interchangeable (left or right). Position the fender over the tire with equal spacing in the front and back.



19. The log splitter is now completely assembled. Follow the "Start-Up Procedure," in the following section, which adds oil to the engine and hydraulic tank before trying to start the engine.



Start-up Procedure

Important Notice

Do not start the engine. Follow all of the instructions in the "Start-up Procedure" before operating the log splitter. Failure to follow this recommendation will result in engine and hydraulic pump damage.

If this log splitter is purchased without an engine, the customer assumes all liabilities that might arise from an engine that is incompatible with the design of the log splitter. Also, any unauthorized changes or modifications to the log splitter will void all warranties.

IMPORTANT: The hydraulic system oil filter, for your log splitter, is not factory installed. Make sure the filter is installed before attempting to fill the hydraulic tank or start the engine. (Installation instructions are provided in the "Assembly Instructions" section and are also printed on the side of the filter).

IMPORTANT: Before starting the engine, read the engine manufacturer's operating and maintenance instruction manual. If an engine manual was not supplied with the log splitter, it is your responsibility to obtain a manual. Start by contacting the store where you purchased the log splitter. If they cannot help you, contact the engine manufacturer.

Fill the hydraulic tank with SAE 10W or AW 32 tractor hydraulic oil or automatic transmission fluid, such as Dexron VI, Mercon V, or equivalent. The tank is full when the oil level is approximately one inch from the top of the tank. Do not tighten the fill cap at this time.

NOTE: The total hydraulic system oil capacity for this unit is 9.2 gallons.

- 2. Fill the engine's crank case with the engine manufacturer's recommended oil.
- **3**. Lubricate the surface of slide rail with grease. This will help to prevent wear between the slide plates and the slide rail.
- 4. Remove the spark plug wire from the engine. This prevents the engine from starting until the hydraulic pump and cylinder are completely filled with oil. Make sure the spark plug wire is held away from the spark plug with string or other nonconductive material.
- 5. Push the valve control handle to the forward position (towards the front of the cylinder) with one hand. Pull the engine starter cord (about 15 times) with the other hand, until the cylinder piston moves forward. (Keep everything away from the splitting wedge during this step).

NOTE: Extending the cylinder draws the hydraulic fluid through the system and expels any trapped air in the cylinder.

6. Check the fluid level in the hydraulic tank and add oil as needed.

AWARNING



Be careful not to spill fuel when filling the engine. If fuel should spill, quickly wipe off and allow the excess fuel to evaporate before continuing. Fuel and fuel vapors are highly flammable and can cause personal injury or even death when ignited.

Important Notice

If your log splitter is equipped with a factory installed engine, do not mix oil with the gasoline. Using mixed oil/gasoline in a four cycle engine can cause engine damage.

- 7. Fill the engine's fuel tank with fresh, clean, lead-free automotive gasoline.
- 8. Attach the spark plug wire and start the engine per the manufacturer's instructions.
- 9. With the engine running, push the valve control handle to the retract position and retract the cylinder piston. The cylinder valve will automatically stop the cylinder from retracting when it reaches the end of its stroke. Cycle the log splitter several times.
- **10**. Again, check the fluid level in the hydraulic tank and add oil as needed. Replace and tighten the fill cap.
- 11. Your log splitter is now ready to use.

Towing

AWARNING

Maximum Speed Limit — 35 mph

Your log splitter is built on a solid, unsuspended axle. To prevent damage or possible loss of vehicle control, use extreme caution when towing and do not exceed a vehicle speed of 35 mph, especially when driving on a bumpy road.

 Position the hitch coupler of the log splitter over or onto the tow vehicle's tow ball. In some cases, the hitch coupler may not totally engage with the tow ball without raising the jack leg assembly. Pull the latch assembly on the hitch coupler up and into the open position.



Release the latch assembly on the hitch coupler and lock the hitch coupler onto the tow ball.



Raise the front leg to the towing position by pulling the spring pin. If not already secure, make sure the hitch coupler is properly and securely attached to the tow ball.



4. Attach the towing safety chains to the tow vehicle.



Place a customer supplied lock or lock pin into the latch assembly of the hitch coupler.

WARNING

Making sure the log splitter is securely attached to the vehicle is the responsibility of the owner/operator. Failure to securely attach the log splitter can cause loss of control of the vehicle or the log splitter being separated from the towing vehicle, resulting in serious injury or death.



Operation

A WARNING



Do not attempt to operate the log splitter without fully understanding all our instructions, safety precautions, and/or warnings. If any doubt or question arises about the correct or safe method of performing anything found in this or other Brave' manuals, contact your Brave' dealer or call the Sales and Service representatives at our main headquarters. Proper care is your responsibility.

When operating the log splitter make sure you are standing in the **safe operating zone**, as shown in these pictures. You must stay in the **safe operating zone** at all times when the splitting wedge is in motion (whether extending or retracting). Never place any part of your body in a position which would cause an unsafe operating condition.

- Position your log splitter on flat, dry ground.
 Make sure you read all the
 recommendations from the "Safety"
 section before using the log splitter.
- Make sure both ends of the log you are splitting are cut as square as possible. This will prevent the log from sliding out of position while under pressure. All logs should be 24 inches long or shorter.












Always wear protective gear, such as


safety goggles, tight-fitting gloves without drawstrings or loose cuffs, steel-toed

WARNING

Never attempt to split wood across the grain. The log splitter was not designed for cross-grain splitting. Doing so will damage the log splitter and may cause personal injury.



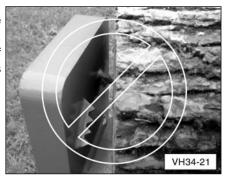

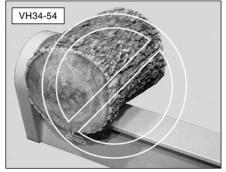

 Start the engine using the instructions from the engine manual. If the log splitter has not been running (cold engine), warm up the engine and hydraulic system by running the engine at half throttle for three to four minutes, then advance the engine throttle control to maximum speed.

Operation – Horizontal Position

AWARNING











Before loading and operating the log splitter, put on the proper protective gear such as safety goggles, face shield, hearing protection, tight-fitting gloves (without drawstrings or loose cuffs), and steel-toed shoes.

- Use the following photos for the correct and incorrect methods of splitting logs. Never split a log using an incorrect or unsafe method.
 - a. Place the log on the log splitter. Grasp the log on the sides near the middle of the block. Center the log, side-to-side on the rail of the log splitter, making sure that the sawed end is against the large plate (end plate), opposite the splitting wedge.



CAUTION



Do not place your hands on the ends of the log when loading the log splitter. This is a very

UNSAFE method and could result in injury to your hands.



Brave 22

b. Only using your hand, push the control lever forward (towards the log). If the log moves before it is contacted by the splitting wedge, release the control lever and then reposition the log. Operate the log splitter only when standing in the safe operating area, as shown in the picture.



CAUTION



Make sure you stand clear from the engine's exhaust. Hot exhaust is intense and can cause serious injury.

CAUTION



If you find you must hold the log until the splitting wedge touches it and holds it in place, be very

careful not to put your hand between the log and the end plate or the log and the splitting wedge. If you must, hold the log on top and in the middle. Remove your hand immediately when the splitting wedge engages the log. Never use your hip or any extension device to operate the valve control handle.



WARNING



Do not operate the log splitter by reaching across the rail. Do not reach or step across the rail while

the log splitter is running. This is a very UNSAFE method which could cause personal injury or even death.



- c. Hold the control lever, extending the splitting wedge, until the log is split or the cylinder rod stops at its maximum travel position. Stop the log splitter (forward movement), at any point in the splitting process, if you feel an unsafe log splitting condition is occurring. As the log is being split, DO NOT reach forward and attempt to catch the split wood let it fall to the ground.
- d. Once the wedge reaches its full forward travel, pull back on the control lever to the full retract position. The ram of the cylinder will automatically retract into the cylinder. It is not necessary to hold the control lever as the cylinder retracts. Stop the wedge if the log sticks (see caution below). When the cylinder is fully retracted, the control valve will automatically shift to a neutral position.
- e. DO NOT load another log or remove split pieces until the wedge has completely stopped and the control handle automatically returns to the neutral position.

CAUTION



Depending on the type of wood being split, a log may not always break into two pieces and fall to

the ground. If a log sticks to the wedge, place the valve handle in the neutral position (stop the wedge from retracting) and carefully remove the log from the wedge. Allowing the log to remain attached to the wedge when it is fully retracted could lead to possible injury and/or damage to the log splitter.





Log Dislodger (Part No. BR021172)



SAFETY PRECAUTIONS

WARNING – Injury to body parts will occur if they are caught between the dislodge arms and the wood. Keep hands away from pinch point areas.

- ✓ Helps eject any log that sticks to the splitting wedge.
- Protects control valve and other hydraulic components from damage.
- Rugged construction to last the life of your log splitter.

Operation – Vertical Position

AWARNING











Before loading and operating the log splitter, put on the proper protective gear such as safety goggles, face shield, hearing protection, tight-fitting gloves (without drawstrings or loose cuffs), and steel-toed shoes.

- Use the following photos for the correct and incorrect methods of splitting logs. Never split a log using an incorrect or unsafe method.
 - a. To operate the log splitter in a vertical position, pull the spring-loaded locking lever and twist it in either direction to lock it in the "unlocked" position.

NOTE: Before raising the log splitter into a vertical position, make sure the locking lever, located by the hydraulic tank, is in the unlocked position. Not following this recommendation may result in damage to the plunger.

b. Block the wheels and stand the rail assembly up into a vertical position.





c. Turn the knob handle until the pin slides into the slot. This allows the plunger to snap into place, securing the rail assembly in a vertical position.



d. Move the log under the splitting wedge, keeping your hands on the sides of the log near the middle of the block. Center the log making sure that the sawed end is sitting on the large plate (base plate).

CAUTION



Make sure you stand clear from the engine's exhaust. Hot exhaust is intense and can cause serious injury.

CAUTION



hands.

Do not place your hands on top of the log when loading the log splitter. This is a very UNSAFE method and could result in injury to your



CAUTION



If you find you must hold the log until the splitting wedge touches it and holds it in place, be very careful not to put your hand on top of the log. If you must, hold the log in the middle of the block. Remove your hand immediately when the splitting wedge engages the log. Never use your hip or

control handle. e. Only using your hand, push the control


any extension device to operate the valve

lever down (towards the log). If the log moves before it is contacted by the splitting wedge, release the control lever and then reposition the log. Operate the log splitter only when standing in the safe operating area, as shown in the picture.






f. Hold the control lever, extending the splitting wedge, until the log is split or the cylinder rod stops at its maximum travel position. Stop the log splitter (forward movement), at any point in the splitting process, if you feel an unsafe log splitting condition is occurring. As the log is being split, DO NOT reach forward and attempt to catch the split wood — let it fall to the ground.

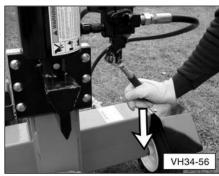

g. Once the wedge reaches its full forward travel, pull back on the control lever to the full retract position. The ram of the cylinder will automatically retract into the cylinder. It is not necessary to hold the control lever as the cylinder retracts. Stop the wedge if the log sticks (see caution below). When the cylinder is fully retracted, the control valve will automatically shift to a neutral position.

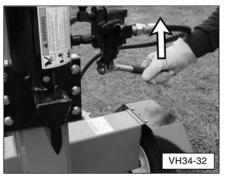

h. DO NOT load another log or remove the split pieces until the splitting wedge has completely stopped and the control handle automatically returns to the neutral position.

CAUTION



Depending on the type of wood being split, a log may not always break into two pieces and fall to

the ground. If a log sticks to the wedge, place the valve handle in the neutral position (stop the wedge from retracting) and carefully remove the log from the wedge. Allowing the log to remain attached to the wedge when it is fully retracted could lead to possible injury and/or damage to the log splitter.

Inspection and Maintenance

General Maintenance Check (before operating)

The hydraulic system (hoses, cylinder, and pump) should be carefully inspected before each use. Also, inspect the mechanical parts at the same time. Make sure all clamps, nuts, bolts, fittings, etc. are properly installed and tightened.

AWARNING



Do not check for leaks with your hand. Leaks can be located by passing a piece of cardboard or wood around the suspected leak and looking for discoloration. High-pressure fluid escaping from a very small hole can be almost invisible. Escaping fluid, under pressure, can have sufficient force to penetrate skin, causing serious injury or even death. If fluid is injected into your skin, it must be treated immediately by a doc- tor familiar with this type of injury.

Always replace frayed, kinked, or cracked hoses and/or other damaged hydraulic components with Brave authorized parts and components specified in the "Parts" section of this manual. Replacement parts from secondary suppliers (not original Brave replacement parts) can lead to product damage and/or personal injury and will void the warranty.

A CAUTION



Do not remove the cap from the hydraulic tank/reservoir while the log splitter is running. Hot oil, under pressure, could be expelled resulting in serious injury.

Should it become necessary to loosen or remove any hydraulic fitting or line, be sure to relieve all hydraulic pressure by shutting off the engine, removing spark plug wire, and moving the valve control handle back and forth several times until no cylinder movement is visible.

Engine Service

Refer to the engine manufacturers' manual for engine maintenance and repair.

Storage

Refer to the engine manufacturers' manual for engine storage. No special procedures are required for the hydraulic system to store the log splitter.


Hydraulic Oil Change

Brave recommends an oil and filter change every 100 hours of operation. Refer to the "Specifications" section, in this manual for the type and quantity of oil.

Important Notice

Never run the log splitter unless the hydraulic oil tank is full.

- 1. Drain the head end of the cylinder.
 - a. Remove the spark plug wire and spark plug to help reduce the back pressure on the engine and to prevent it from starting.
 - b. Disconnect return hose (1) from the oil filter housing and place it in a waste oil container. (Please properly dispose of the waste oil per local regulations.)
 - c. Extend the cylinder by holding the valve handle forward and pulling on the engine's pull start cord until oil from the return line stops flowing. This step drains the head end of the cylinder.

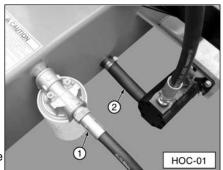

2. Drain the hydraulic tank.

- a. Place a waste oil container under inlet hose (2).
- **b**. Remove the inlet hose from the pump.
- **c**. Slightly lower the front of the log splitter to completely drain the tank.
- 3. Remove and replace the oil filter.
 - **a**. Remove the existing oil filter and properly dispose of it.
 - **b**. Apply a thin coat of oil to the rubber seal of the new oil filter.
 - c. Screw the filter onto the filter head. Once the filter makes contact with the filter head, turn it an additional 3/4 turn. Hand-tighten only.



Important Notice

DO NOT mix tractor hydraulic oil with transmission fluid. Use one or the other.

- 4. Refill the hydraulic tank.
 - a. Reconnect inlet hose (2) to the pump.
 - b. Remove the hydraulic tank fill cap and fill the tank with the recommended type and quantity of oil. Replace the cap.
- **5**. Drain and refill the piston end of the cylinder.
 - a. Hold the valve handle in the retract position and pull the engine pull start cord until the rod is fully retracted. This step removes the old oil from the piston end of the cylinder.
 - b. Reconnect return hose (1) to the oil filter.
 - c. Extend the cylinder by holding the valve handle forward and pulling on the engine's pull start cord until the cylinder is completely extended. This step refills the piston end of the cylinder.
- 6. Start the engine and cycle the cylinder.
 - Replace the spark plug and spark plug wire.
 - **b.** Start the engine and cycle the cylinder several times.
 - **c**. Retract the cylinder and shut off the engine.
 - d. Recheck the hydraulic tank to make sure oil is filled within one inch from the top of the tank.



Specifications

Mechanical Specifications

Slide Rail 6 inch heavy-duty, formed steel beam Wedge High carbon steel, compound angle Force/Tonnage 34 ton Cylinder Stroke 24 inches Log Opening 25 inch maximum Cycle Time 15 seconds (approx.) Operating Positions Vertical/Horizontal Wheels & Tires High-Speed, 4.80 x 8" Safety Chains Standard 2" Hitch Coupler Standard Engine Briggs & Stratton (standard) or Honda GX (optional)
Hydraulic Specifications
Cylinder Size
Replacement Filters
Replacement Filters NAPA 1553 FRAM PF1654 FRAM PF1654

Hydraulic Oil Specifications (non-foaming)

..... WIX 51552

Important Notice

DO NOT mix tractor hydraulic oil with automatic transmission fluid. Also, DO NOT mix different types of hydraulic oils and transmission fluids (e.g., synthetic with non-synthetic). Hydraulic oil is NOT compatible with transmission fluid, and different TYPES of hydraulic oils and transmission fluids MAY NOT BE compatible with each other.

Troubleshooting

The following section will detail procedures for checking your log splitter, should you encounter a malfunction. Brave recommends that you do not attempt to make repairs to the log splitter. In the long run, it is better to take your log splitter to a servicing lawn and garden dealer for repairs.

Problem: When the control handle is pushed forward (extend), the splitting wedge does not move.

- Check the hydraulic tank to make sure the oil level is one inch from the top
 of the tank
- Remove the pump from the engine flange. Check the coupler, making sure the drive keys are in place and there is no damage to the blue urethane spider.
- Disconnect the splitting wedge from the cylinder. Grasp the hydraulic cylinder shaft and try to pull it out. If the rod comes out easily, you will need to rebuild or replace the cylinder.
- **4**. Once you have determined that the engine-to-pump coupler is intact and the cylinder is in good condition, you will need to replace the pump.

Problem: The engine stalls when the splitting wedge engages the wood.

- 1. The engine may not be properly adjusted. Take the engine to a service center for repair and/or adjustment.
- 2. If all engine settings are correct, replace the pump.

Problem: The splitting wedge moves slowly, but will split wood.

- 1. Check the oil level in the hydraulic tank and fill if necessary.
- Check the high-pressure hose, fittings, and valve openings for dirt and debris that may have obstructed the openings.
- 3. If the ram speed is still slow, replace the pump.

Problem: The ram will not automatically retract.

- 1. Check the slide rail or splitting wedge for damage.
- 2. Push the valve handle to the retract position. If the handle will not stay in this position, replace the valve assembly.

Problem: Oil squirts from the fill plug during operation.

- 1. The oil tank may be over-filled. Drain oil to 1 inch below the top of the tank.
- 2. The log splitter is not level. Make sure the log splitter is on level ground.

Decals

AWARNING



Make sure all decals are attached to the log splitter and/or engine and are legible at all times.

Item	Part No.	Description	Qty.	Model			
The state of the s	6,8	33 Ton 11,13	14-		-12 7, -1	, 10	4,5
1	BR002652	Decal, Notice	1	All			
2	BR002625	Decal, 34 Ton Logo	2	All			
3	BR002625 BR002308	Decal, 34 Ton Logo Decal Kit, Standard Models	2	All			
2 3 4	BR002625 BR002308 BR002621	Decal, 34 Ton Logo Decal Kit, Standard Models Decal, Flag	2 1 1	All All			
2 3 4 5	BR002625 BR002308 BR002621 BR002521	Decal, 34 Ton Logo Decal Kit, Standard Models Decal, Flag Decal, Serial Number	2 1 1	All All All			
2 3 4 5 6	BR002625 BR002308 BR002621 BR002521 BR002653	Decal, 34 Ton Logo Decal Kit, Standard Models Decal, Flag Decal, Serial Number Decal, Maximum Speed	2 1 1 1 1	All All All All			
2 3 4 5 6 7	BR002625 BR002308 BR002621 BR002521 BR002653 BR002310	Decal, 34 Ton Logo Decal Kit, Standard Models Decal, Flag Decal, Serial Number Decal, Maximum Speed Warning, Crush Injury	2 1 1 1 1	All All All All All All			
2 3 4 5 6 7 8	BR002625 BR002308 BR002621 BR002521 BR002653 BR002310 BR002311	Decal, 34 Ton Logo Decal Kit, Standard Models Decal, Flag Decal, Serial Number Decal, Maximum Speed Warning, Crush Injury Warning, Tow Safety	2 1 1 1 1 1 1	All All All All All All All All			
2 3 4 5 6 7	BR002625 BR002308 BR002621 BR002521 BR002653 BR002310	Decal, 34 Ton Logo Decal Kit, Standard Models Decal, Flag Decal, Serial Number Decal, Maximum Speed Warning, Crush Injury Warning, Tow Safety Warning, Pinch Point-Dislodger	2 1 1 1 1	All All All All All All			
2 3 4 5 6 7 8	BR002625 BR002308 BR002621 BR002521 BR002653 BR002310 BR002311	Decal, 34 Ton Logo Decal Kit, Standard Models Decal, Flag Decal, Serial Number Decal, Maximum Speed Warning, Crush Injury Warning, Tow Safety Warning, Pinch Point-Dislodger Proper Machine Loading	2 1 1 1 1 1 1	All All All All All All All All			
2 3 4 5 6 7 8	BR002625 BR002308 BR002621 BR002521 BR002653 BR002310 BR002311 BR002505	Decal, 34 Ton Logo Decal Kit, Standard Models Decal, Flag Decal, Serial Number Decal, Maximum Speed Warning, Crush Injury Warning, Tow Safety Warning, Pinch Point-Dislodger	2 1 1 1 1 1 1 1	All			
2 3 4 5 6 7 8 9	BR002625 BR002308 BR002621 BR002521 BR002553 BR002310 BR002311 BR002505 BR002559	Decal, 34 Ton Logo Decal Kit, Standard Models Decal, Flag Decal, Serial Number Decal, Maximum Speed Warning, Crush Injury Warning, Tow Safety Warning, Pinch Point-Dislodger Proper Machine Loading	2 1 1 1 1 1 1 1 1 1 1	All			
2 3 4 5 6 7 8 9 10	BR002625 BR002308 BR002621 BR002521 BR002653 BR002310 BR002311 BR002505 BR002559 39259	Decal, 34 Ton Logo Decal Kit, Standard Models Decal, Flag Decal, Serial Number Decal, Maximum Speed Warning, Crush Injury Warning, Tow Safety Warning, Pinch Point-Dislodger Proper Machine Loading Warning, Carbon monoxide	2 1 1 1 1 1 1 1 1	All			

NOTICE

HYDRAULIC FILL PLUG

Maintain level of hydraulic oil at 1" below plug.

Recommended to use Universal Hydraulic Oil or Dextron II Transmission Fluid.

PN002652



(1)

(3)





Read safety instructions before operating this equipment. Failure to do so may result in crush and/or amputation injuries from moving parts.

SAFETY INSTRUCTIONS

- · Operate log splitter on flat, dry ground.
- Lock rail into Vertical or Horizontal position before using. (Some Iron & Oak models operate only in Horizontal position.)
- NO ONE under age 18 is allowed to operate log splitter.
- Keep bystanders, children, and helpers at least 25 ft. away.
- Wear safety glasses, tight fitting work gloves, and safety shoes.
 Keep hands and all body parts away from splitting wedge, base plate, partially split wood,
- and moving parts.

 Lift logs by the sides, not the ends.
- Only one person is permitted to stabilize logs and operate the controls.
- Do not check for oil leaks with your hand. Use a cloth, High pressure hydraulic fluid can penetrate your skin, causing blood poisoning.
 Never operate log splitter under the influence of alcohol or drugs.





Read and understand operator's manual before using this machine. Failure to follow instructions could result in serious injury.

OPERATING INSTRUCTIONS

- Read Owner/Operator manual for complete instructions.
- 2. Start engine using instructions from engine manual.
- Advance throttle control to maximum speed.

 3. Lift loss by sides and place onto rail against
- Lift log by sides and place onto rail, against base plate or wedge.
- If necessary, stabilize log by holding the top, never the end.
- Move control handle to FORWARD position to extend cylinder.
- Release handle to STOP the cylinder.
 Move control handle to REVERSE position to retract cylinder, Cylinder will retract automatically.


CONTROL VALVE

Reverse

Neutral

Forward



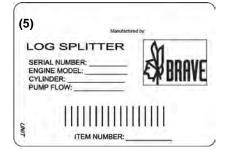

(6)

Maximum Towing Speed 35 mph.


Only load log splitter by holding logs by their sides. Failure to do so may result in crush or amputation injury.

(8)





(10)

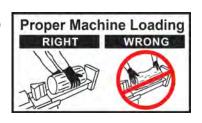

(11)

AWARNING

POISONOUS GAS

This product's use gives off carbon monoxide, an odorless gas that can kill you.

 ONLY use outdoors and away from air intakes.

 NEVER use inside homes, garages or sheds. EVEN IF you run a fan or open doors and windows.

See product manual for more details.

(12)



WARNING

FIRE HAZARD

Hot exhaust can ignite dry brush, trees, or grass.

•Equip engine with a spark arrestor if you will be using near ignitable forest, brush or grassy covered land.

•Keep a fire extinguisher on hand that is rated for ordinary combustibles & flammable liquids.

N 39259

(13)




(14)



Item	Part No.	Description	Qty	Model
1	BR02124911SO	Weldment, Base Tank	1	All
2	BR008301B	Seal, Inside	2	All
3	BR008301A	Bearing, Tapered Roller	4	All
4	BR008301	Tire 4.8" x 8"	2	All
5	BR008301D	Washer, Thrust	2	All
6	BR008301F	Key, Cotter, 1/8"	2	All
7	82520	Nut, Spindle	2	All
8	BR008301G	Dust Cap	2	All
9	BR007016	Fender	2	All
10	BR001209	Bolt, 5/16-18 x 3/4"	4	All
11	82020	Locknut, 5/16-18	4	All
12	82494	Bolt, 5/16-18 x 1-3/4"	4	All
13	82021	Washer, 5/16"	8	All
14	82100	Lockwasher, 5/16"	4	All
15	82508	Nut, 5/16-18	4	All
16	BR02139412	Weldment, Tongue	1	All
17	BR020284WJ	Jack	1	All
		Assembly	2	
		Mounting	4	
		Strap Bolt	4	
18	82037	Locknut, 1/2-13	4	All
19	82490br	Bolt, 1/2-13 x 3-1/2"	4	All
20	783948	Safety Quick-Link	2	All
21	1130	Chain Assembly	2	All

Item	Part No.	Description	Qty	Model
22	BR008540	Coupler, Hitch, 2"	1	All
27	BR021251	Pin, Hinge	1	All
28	BR031102	Bracket, Hinge	1	All
29	BR001764	Clip, Hairpin, 3/32 x 2-1/2"	1	All
30	BR021396	Pin, Plunger	1	All
31	BR008151	Spring	1	All
32	BR001090	Pin, Slotted Spring, 3/16"	1	All
33	BR008152	Knob, Bar	1	All
34	BR001021	Plug, Fill Vented	1	All
35	BR001025	O-ring, Vented Fill Plug	1	All
36	82493	Bolt, 1/2-13 x 1-1/2"	2	All
37	82519	Lockwasher, 1/2"	2	All
38	82509	Nut, 1/2-13	2	All

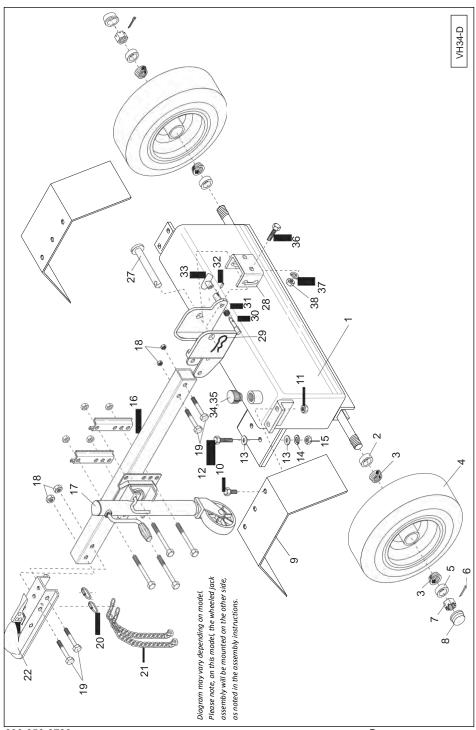


Item	Part No.	Description	Qty	Model
1	BR02126408SO	Weldment, Rail	1	All
2	BR02139302	Weldment, Rail Rest	1	All
3	82509	Nut, 1/2-13	8	All
4	82519	Lockwasher, 1/2"	8	All
5	82493	Bolt, 1/2-13 x 1-1/2"	2	All
6	BR013103	Guide, Slide	2	All
7	BR013104	Retainer, Slide	2	All
8	BR001761	Clip, Hairpin, 3/32 x 1-5/8"	1	All
9	82499	Bolt, Carriage, 1/2-13 x 2-1/2"	6	All
10	BR021163	Weldment, Slide Wedge	1	All
11	BR001765	Pin, Clevis, 1/2 x 3" long	1	All
12	BR004065	Cylinder	1	All
13	BR008531A	Pin, Grooved, 1" dia.	1	All
14	BR001705	Clip, Hairpin (Cylinder)	2	All
15	BR021396	Pin, Plunger	1	All
16	BR008151	Spring	1	All
17	BR001090	Pin, Slotted Spring, 3/16" dia	1	All
18	BR008152	Knob, Bar	1	All
19	BR021172R	Dislodger	1	All
20	BR021174	Plate, Dislodger	2	All
21	82405	Bolt, 3/8"-16 x 1-1/4",Gr 5, Zinc	4	All
22	82028	Washer, Flat 3/8"	4	All
23	82027	Locknut, 3/8"	4	All

Note 1: Hole is used to attach optional BR021180 Log Cradle.

Note 2: Hole is **not** used in this application.


Note 3: Hole is used to attach optional BR021180 Log Cradle and to attach rail weldment to base unit.

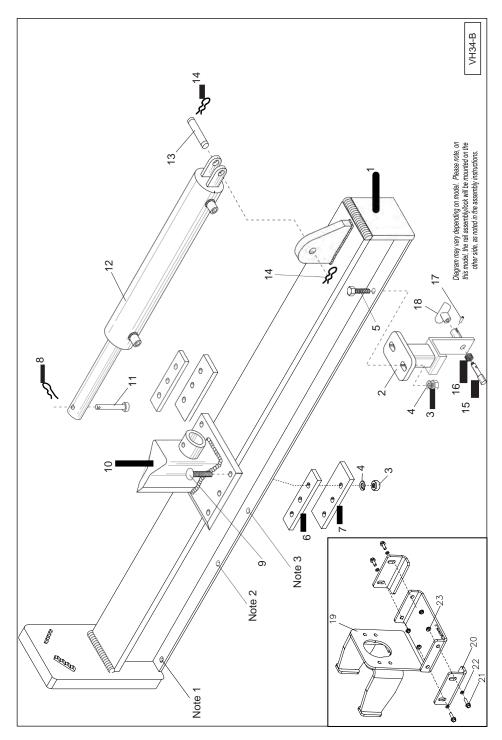

œ	
<u>u</u>	J
\subset)
\sim	١
$\overline{}$	
ċ.	١
ŏ	֡
v	
\subset	
т	
α	3
-	ī
>	
۵	
~	

Item	Part No.	Description	Qty	Model
1	GNEGX270	Engine, GX 270	1	VH1334GX
	BR003023	Engine, 10 HP	'	VH1334VN
2	784168	Key, Engine Shaft	1	VH1334VN
3	82515	Screw, Set, 5/16-18	2	All
4	BR006001C	Coupling, Engine	1	All
5	BR006001B	Spider	1	All
6	BR006001D	Coupling, Pump	1	All
7	BR020110	Flange, Engine	1	All
8	82100	Lockwasher, 5/16"	4	All
9	82092	Bolt, 5/16-24 x 1" long	4	All
11	BR002002M	Pump, Hydraulic	1	All
12	BR001113	Element, Filter	1	All
13	BR001112	Casting, Head Filter	1	All
14	BR005061	Hose, High-Pressure	1	All
15	BR005036	Hose, High-Pressure	1	All
16	BR001017	Fitting, High-Pressure 90°	1	All
20	BR004165	Chain Link	1	All
21	BR004214	Pin, Clevis, 1/4 x 1"	1	All
22	BR004215	Pin, Cotter, 3/32 x 1/2"	1	All
23	BR004117A	Lever, Control	1	All

Item	Part No.	Description	Qty	Model
24	777835	Clamp, Hose, No. 16	2	All
25	BR004998	Hose, Low-Pressure, 1 x 9"	1	All
26	BR004100	Valve	1	All
28	BR001052	Fitting, Straight	1	All
29	778705	Fitting, 90° Elbow	1	All
30	BR004119N	Hose, High-Pressure	1	All
31	82086	Bolt, 5/16-24 x 3/4", G5	4	All

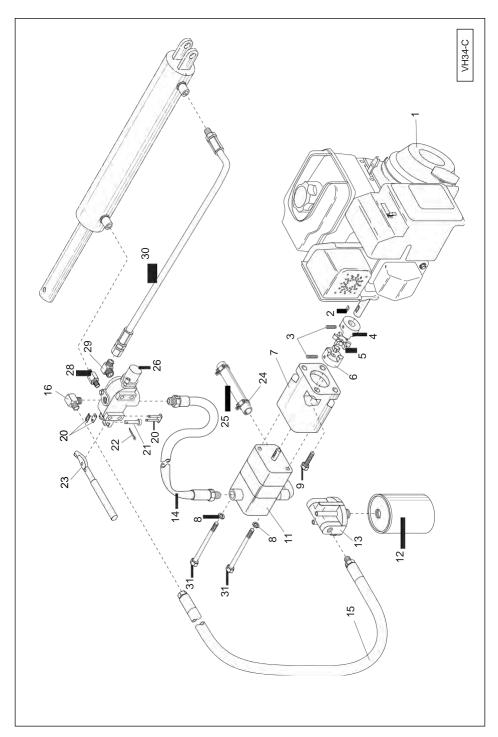

Warranty

For one year from the date of purchase, Brave will replace for the original purchaser, or repair free of charge, all parts of the Brave Hydraulic Log Splitter returned to our factory PREPAID and found upon inspection by us to be faulty, due to defects in materials or workmanship.

The warranty shall not apply to any unit which has been overloaded or misused or which has been installed, used, or operated contrary to our instructions, or which has been repaired or altered by anyone other than our authorized representative.

We shall not be liable for any contingent liabilities arising out of the improper function of any parts.

We make NO WARRANTY with respect to parts NOT of our manufacture, but we will carry out the terms of the warranties of their respective manufacturers.

For commercial and rental use the warranty period is for 30 days from date of purchase.

If a service representative cannot be found in your area, call Brave at 800-350-8739 (Toll Free). Have your model and serial number on hand before calling.

Brave 42 800-350-8739

Important Warranty Information

To activate your Brave log splitter warranty, please fill out the information in the form below and mail in an envelope to the address listed on the right or go online to www.braveproducts.com

Brave 20195 S. Diamond Lake Rd., STE 100 Rogers, MN 55374


Brave Log Splitter Warranty Information - Please Print -Model: <u>VH1334</u> SERIAL #: _____ OWNER'S NAME: ADDRESS: CITY: ______STATE: _____ ZIP: _____ PHONE: ______E-MAIL (opt):_____ YOUR SIGNATURE: _____ DATE: _____ Street Address:


City: _____ State: ____ Zip: __

Optional Attachments

Log Cradle (Part No. BR021180)

- ✓ Catches split logs no more stooping to pick up the split pieces.
- ✓ Each shelf is infinitely adjustable up to 45 degrees to accommodate various sizes of logs.
- ✓ Mounts easily to H-beam rail all hardware included, requires no drilling or welding on current model log splitters.

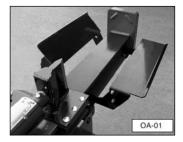

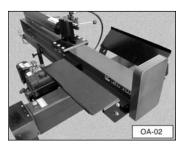

Safety Flag Kit (Part No. BR012104)



- ✓ Improves visibility of log splitter when backing up or towing.
- Heavy-duty tapered fiberglass pole won't bend over at towing speeds.
- ✓ Installs in minutes, no drilling required.
- ✓ Mounting instructions included.



Brave

20195 S. Diamond Lk Rd., STE 100

Rogers, MN 55374

Phone: 800-350-8739 (Toll Free)

Fax: 866-779-9963

E-mail: sales@braveproducts.com Website: www.braveproducts.com