Electro-HELPS I



ELECTRO MATE PLENUM HEATERS

A complete product line to fit all your application needs

The Electro-Mate® has been heating America's homes and businesses since 1979. We take pride in our craftsmanship and we use only the best materials to ensure a high quality product. We are committed to you and we are confident that you will be completely satisfied with the Electro-Mate.

GENERAL PRODUCT FEATURES

- ◆ Spin finned rod elements (20-year warranty)
- ♦ 2-year parts warranty
- ♦ All inclusive controls
- ♦ Quiet operation with individual DC relays
- ◆ Circuit breakers
- ♦ Electric utility control (heat and cool)
- ♦ Single thermostat control
- ♦ Stat override safety timer (SOT)





WarmFlo® Select SL1 Series - Wiring & Specifications

SL1 Series

This unit can be used in conjunction with a single stage heat pump, with one or two-stage air conditioning, or without air conditioning. This unit is compatible with single or multi-stage gas or oil furnaces with or without variable speed blowers. This unit includes automatic dual fuel control, with manual override switch. A **conventional** 4-wire thermostat must be used when installing with a heat pump.

Features

- Application selection dial HP or non-HP
- All-inclusive controls, can be used with either heat pump or air conditioning
- Modulates electric elements to maintain precise output temperature
- Quiet operation with individual DC relays
- Energy control selector
- Load shed

Support Documents

- Literature sheet EL703
- Installation manual EI709
- Wiring diagrams EH709, EH712

Upflow	Downflow	kW @ 240VAC	Btu/h	Amps	Circuit Breakers	Load Shed CT
EM-WU102S†-SL	1 EM-WD102S [†] -SL1	10	34,000	21-21	60	Optional
EM-WU153S [†] -SL	1 EM-WD153S [†] -SL1	15	51,000	21-21-21	60-30	Optional
EM-WU204S†-SL	1 EM-WD204S [†] -SL1	20	68,000	21-21-21	60-60	Optional
EM-WU254S†-SL	1 EM-WD254S [†] -SL1	25	85,000	21-21-32-32	60-60-30	Optional

[†] 5 = 15" Wide 8 = 18" Wide

WarmFlo® Select SL2 Series - Wiring & Specifications

SL2 Series

This unit is specifically designed to be used in conjunction with 2-stage heat pump systems. This unit is compatible with single or multi-stage gas or oil furnaces, with or without variable speed blowers. This unit includes dual fuel control, with manual override switch. This unit uses a **conventional** 4-wire thermostat and can be configured to be used in 1H/1C or 2H/2C mode. This unit will not work with a heat pump thermostat. This unit does not apply to 1 or 2-stage air conditioning, use WarmFlo Select SL1 Series.

Features

- Application selection dial HP
- All-inclusive controls, can be used with 2-stage heat pump
- Modulates electric elements to maintain precise output temperature
- Quiet operation with individual DC relays
- Energy control selector
- Load shed


Support Documents

- Literature sheet EL703
- Installation manual El710
- Wiring diagram EH710


Upflow	Downflow	kW @ 240VAC	Btu/h	Amps	Circuit Breakers	
EM-WU102D†-SL2	EM-WD102D†-SL2	10	34,000	21-21	60	_
EM-WU153D†-SL2	EM-WD153D†-SL2	15	51,000	21-21-21	60-30	
EM-WU204D†-SL2	EM-WD204D†-SL2	20	68,000	21-21-21	60-60	
EM-WU254D†-SL2	EM-WD254D†-SL2	25	85,000	21-21-32-32	60-60-30	





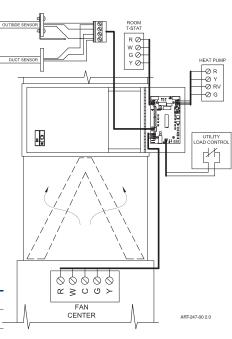



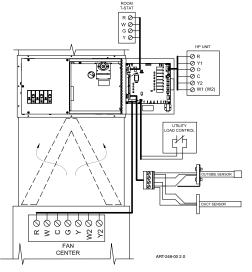

WarmFlo® Select SLC Series - Wiring & Specifications

SLC Series

This unit is specifically designed to be used in conjunction with Bryant Evolution™ or Carrier Infinity™ heat pump communicating thermostat systems. This unit allows for easy interface to either the Evolution or the Infinity system. This unit does not apply to Evolution or Infinity air conditioning systems, for air conditioning use WarmFlo Select SL1 Series. Note: The 286A or 288A outdoor unit and the "-B" thermostat control must be used in this application.

Features

- Specifically designed for Evolution[™] or Infinity[™]
- · All-inclusive controls, for use with heat pump
- Modulates electric elements to maintain precise output temperature
- Quiet operation with individual DC relays
- Energy control selector

Support Documents

- Literature sheet EL703
- Installation manual EI711
- Wiring diagram EH711

Upflow	Downflow	kW @ 240VAC	Btu/h	Amps	Circuit Breakers
EM-WU102D†-SLC	EM-WD102D†-SLC	10	34,000	21-21	60
EM-WU153D†-SLC	EM-WD153D†-SLC	15	51,000	21-21-21	60-30
EM-WU204D†-SLC	EM-WD204D†-SLC	20	68,000	21-21-21	60-60
EM-WU254D†-SLC	EM-WD254D†-SLC	25	85,000	21-21-32-32	60-60-30
† 5 = 15" Wide	8 = 18" Wide				

EZ-Mate[™] Series - Wiring & Specifications

EZ-Mate Series

This unit can be used in conjunction with a single stage heat pump, with one or two-stage air conditioning, or without air conditioning. This unit is compatible with single or multi-stage gas or oil furnaces with or without variable speed blowers. This unit includes automatic dual fuel control, with manual override switch. A conventional 4-wire thermostat must be used when installing with a heat pump.


Features

- Load shed
- Application selection dial HP or non-HP
- All-inclusive controls, can be used with either heat pump or air conditioning
- Stages electric elements to maintain precise output temperature
- Quiet operation with individual DC relays
- Energy control selector


Support Documents

- Literature sheet EL830
- Installation manual EI820
- Wiring diagrams EH808, EH810, EH811


Upflow	Downflow	kW @ 240VAC	Btu/h	Amps	Circuit Breakers	Load Shed CT
EM-LV104L [†]	EM-LD104L [†]	10	34,000	21-21	60	Yes
EM-LV104Z [†]	EM-LD104Z [†]	10	34,000	21-21	60	No

 



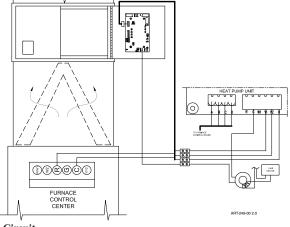



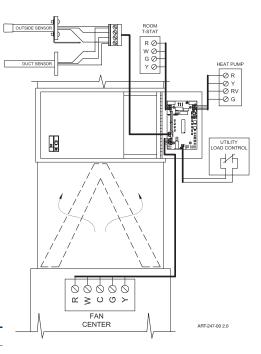

HeatChoice II[™] Series - Wiring & Specifications

HeatChoice II Series

This unit is compatible to be used with single or multi-stage gas or oil furnaces, with or without variable speed blowers. This unit can be installed with or without air conditioning. The air conditioning can be either single stage or two stage. This unit includes dual fuel control, with manual override switch. This unit **cannot** be used with heat pumps.

Features

- Energy control selector (dual fuel)
- Stat override timer (SOT) 90/180 minutes or disable
- All inclusive controls
- Variable speed blower connection
- Automatic switch to backup during load control

Support Documents

- Literature sheet EL201
- Installation manual El204

KWH METER	HeatChoice II EXISTING OR NEW STAND-BY FURNACE	O O O O C FAN CENTER	ROM STAT R W G Y D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D D	
	·`,	,	ART-246-00 1.0	

ι	pflow	Downflow	kW @ 240VAC	Btu/h	Amps	Circuit Breakers
EH	H-U10- [†]	EH-D10- [†]	10	34,000	21-21	60
EH	H-U15- [†]	EH-D15- [†]	15	51,000	21-21-21	60-30
EH	H-U20- [†]	EH-D20-†	20	68,000	21-21-21	60-60
EH	I-U25-8	-	25	85,000	21-21-32-32	60-60-30

^{† 5 = 15&}quot; Wide 8 = 18" Wide

Plenum Heater Product Dimensions


Upflow

18" Model = 19 1/2" 15" Model = 16 1/2" BACK 11 0 0 18" Model = 18" 15" Model = 15" FRONT 18" Model = 16 7/8" 15" Model = 13 7/8" 17 5/16 6 1/16" Q 0 2X Ø1 1/8" KO — Ø1 3/8" KO — Ø 1 3/4" KO — 18" Model = 18 2X Ø7/8" KO -15" Model = 15'


Downflow 18" Model = 19 1/2" BACK 2 1/16 11 1/8' 0 0 18" Model = 18" 15" Model = 15" FRONT 18" Model = 16 7/8" 15" Model = 13 7/8' 21" MAX 17 7/8" MIN 17 5/16" 6 1/16" Q 0 2X Ø1 1/8" KO – Ø1 3/8" KO-2X Ø7/8" KO -Ø 1 3/4" KO-

ART-126-00 2.0


Plenum Heater Installation

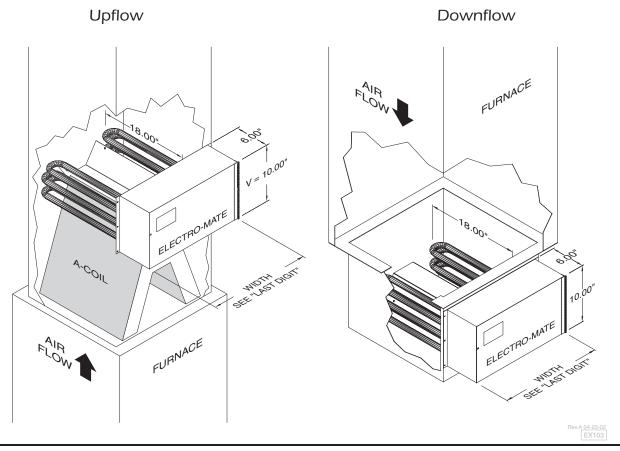

Basic Mechanical, Upflow

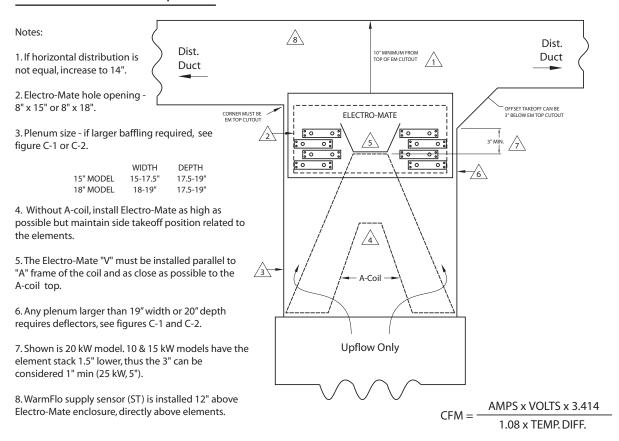


Large Plenums, Required Baffling

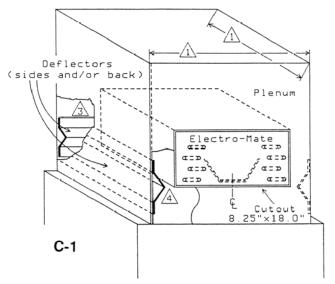

NOTES:


- Any plenum larger than 19" width or 20" depth requires special deflectors. Use the following:
 - A. Any side 19" to 20 1/2", use kit A, P/N **EM-5750**.
 - B. Any side 21" to 22 1/2", use kit B, P/N EM-5751.
 - C. Any side larger than 23", refer to C-2.
- 2. Side deflectors are extremely important for A-coil installations.
- 3. Space behind the elements must be closed.
- 4. Deflector points to bottom element.
- 5. The above relates to 18" model, for 15" model reduce by 3".

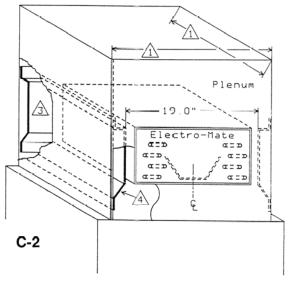

NOTES:

- 1. Any plenum larger than 23" (width or depth) requires special deflectors. These must be field constructed to provide an internal 19" x 19" box.
- 2. Side deflectors are extremely important for A-coil installations.
- 3. Space behind the elements must be closed.
- 4. Note angled slope (45°).

Horizontal

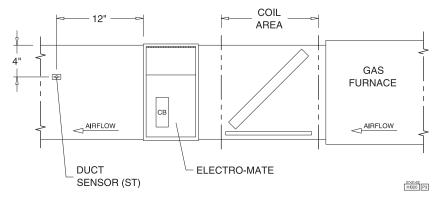

HeatChoice II - must use EH-D* model, instruction manual outlines installation details, extra HL sensor probe (shipped loose) installed in discharge top.

WarmFlo Select (EM-WU Series) - upflow model is approved, but position sensitive. CB's must be down, hi-limit probe must be at top. Install WarmFlo sensor as shown.

Airflow arrangements must be as shown - furnace/refrigerant coil/Electro-Mate.

If 90° turn A-coil, Electro-Mate center deflector must be in line with "top of A".

Spacing

- 90° A-coil, Electro-Mate center deflector close to coil end
- Slant or horizontal coil, maximum allowable spacing between EM and coil

Specifications subject to change without notice, all rights reserved.



ELECTRO INDUSTRIES, INC.

2150 West River Street, PO Box 538, Monticello, MN 55362 763.295.4138 • 800.922.4138 • fax 763.295.4434 sales@electromn.com • www.electromn.com

TO LOCATE A CONTRACTOR OR DISTRIBUTOR IN YOUR AREA VISIT WWW.ELECTROMN.COM AND CLICK ON DEALER FINDER

05/28/2009