

104M00

Illustrated Parts List

Model Series

104M00

TYPE NUMBERS


0001, 0002, 0003, 0004, 0005, 0006, 0008, 0009, 0010, 0012, 0013, 0014, 0015, 0016, 0017, 0018,
0019, 0020, 0021, 0022, 0023, 0024, 0025, 0026, 0027, 0028, 0029, 0030, 0031, 0032, 0033, 0034,
0035, 0036, 0037, 0038, 0039, 0040, 0041, 0042, 0043, 0044, 0045, 0046, 0047, 0048, 0049, 0050,
0051, 0052, 0053, 0054, 0055, 0056, 0057, 0058, 0059, 0060, 0061, 0062, 0063, 0064, 0065, 0066,
0067, 0068, 0069, 0070, 0071, 0072, 0073, 0074, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0082,
0083, 0085, 0086, 0087, 0088, 0089, 0090, 0091, 0092, 0093, 0094, 0095, 0096, 0097, 0098, 0099,
0100, 0101, 0102, 0103, 0104, 0105, 0106, 0107, 0108, 0109, 0110, 0111, 0112, 0113, 0114, 0115,
0116, 0117, 0118.

Not for
Reproduction




PRINTED IN U.S.A.






COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

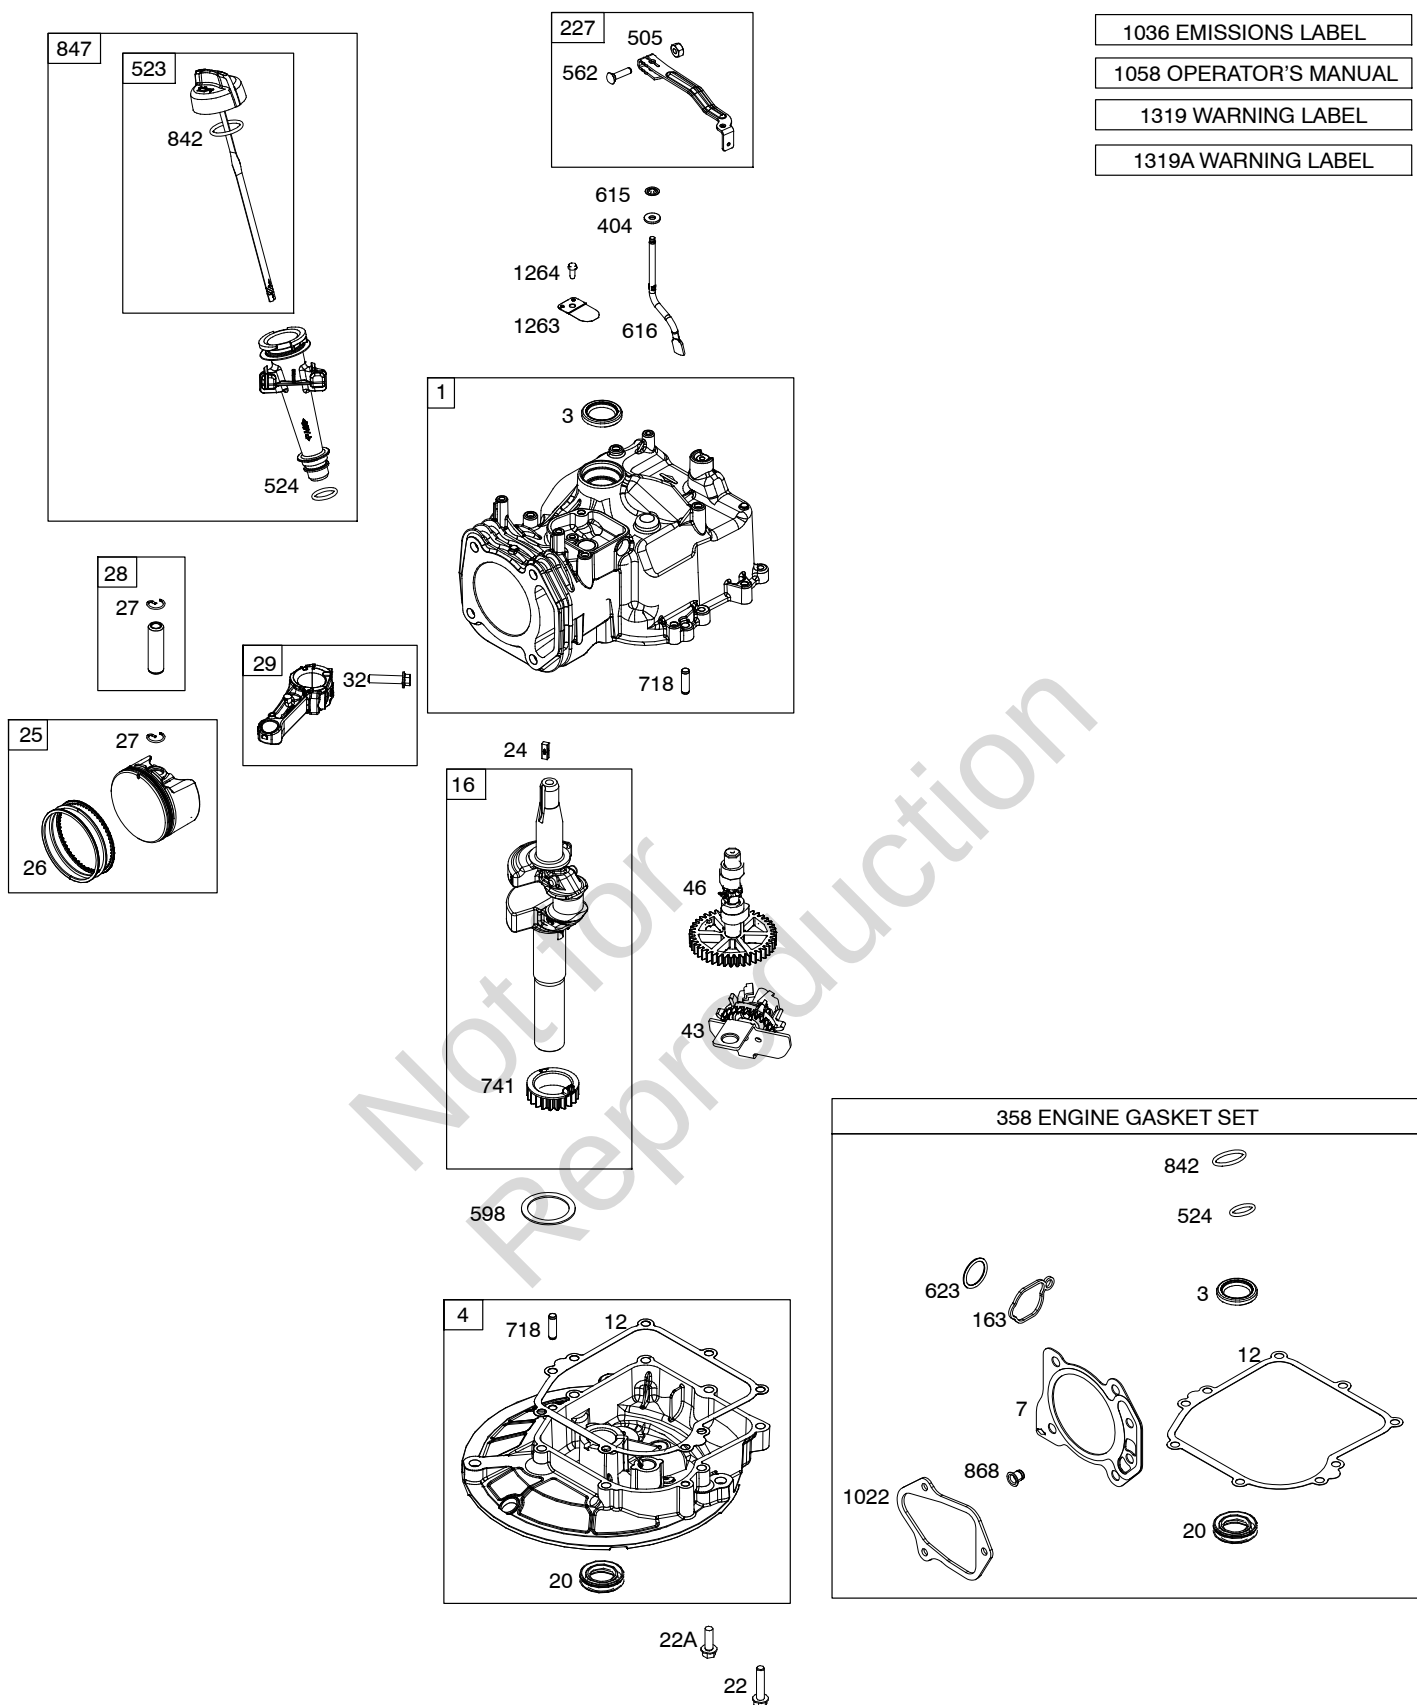





Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

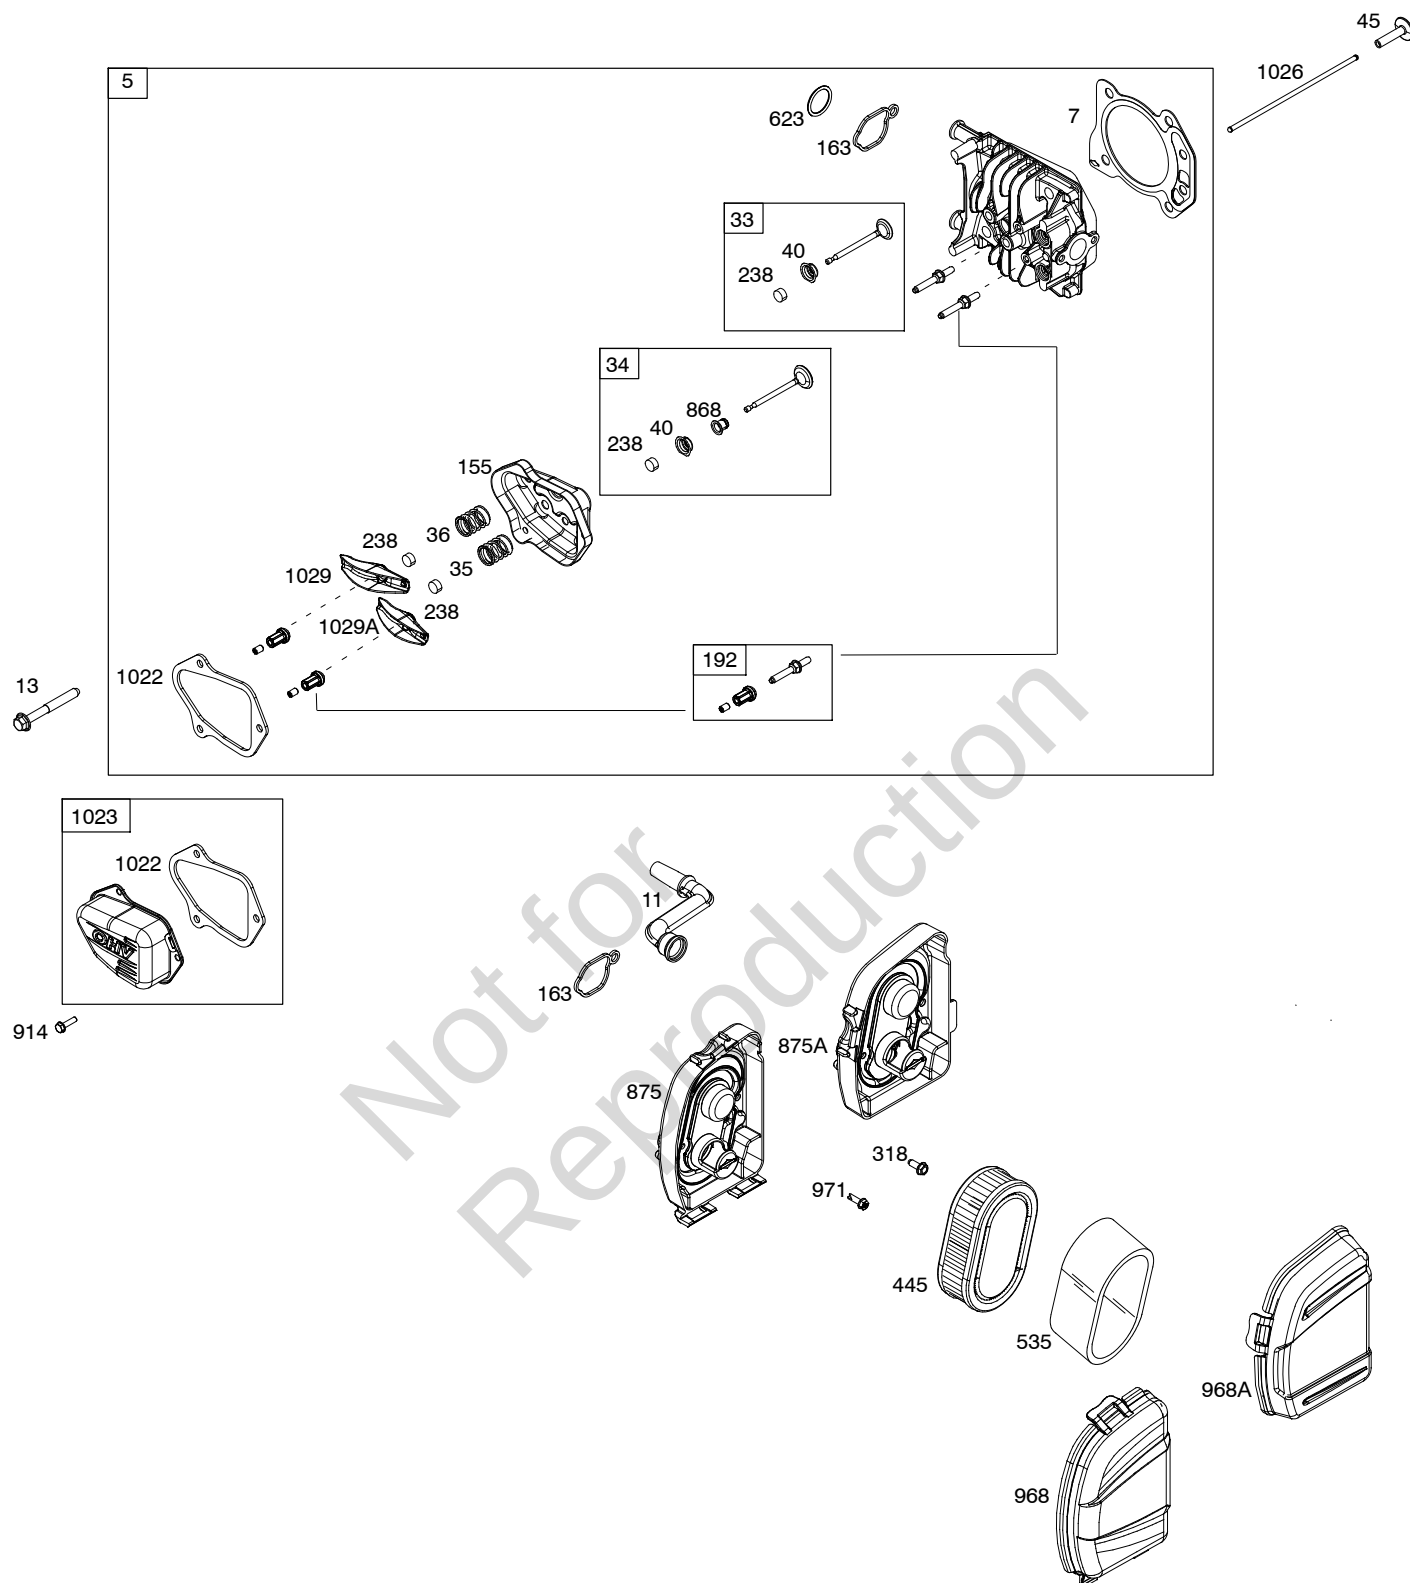


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

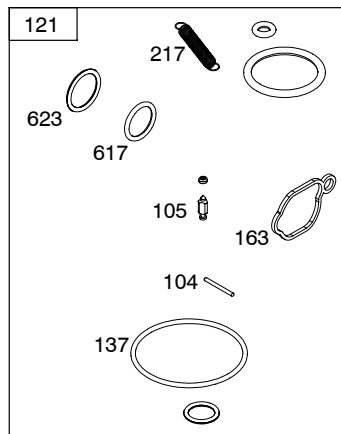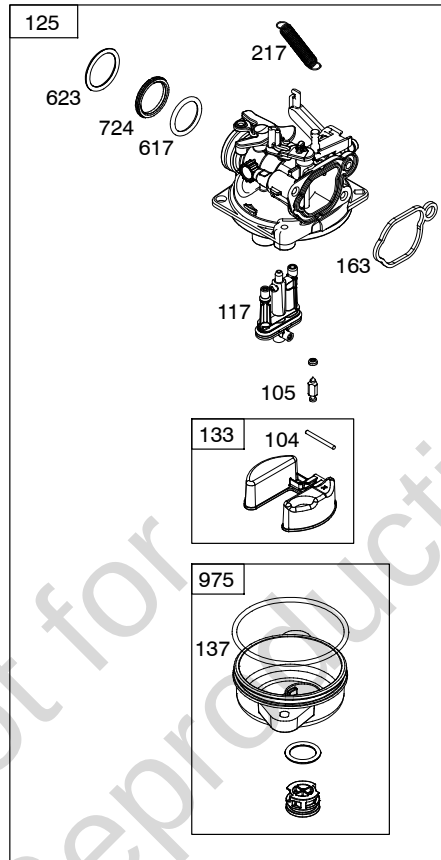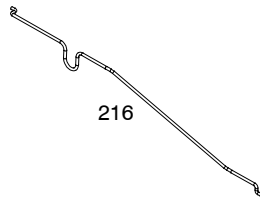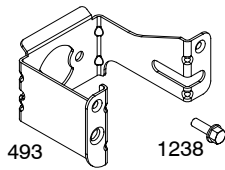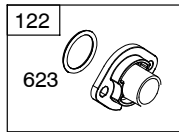


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

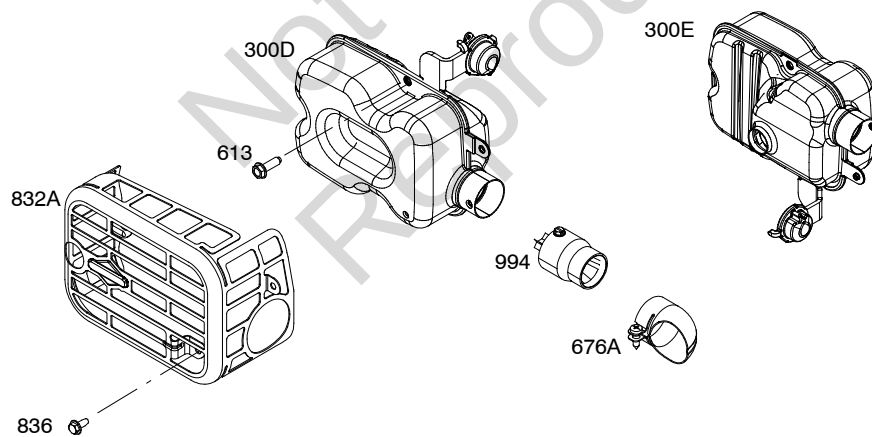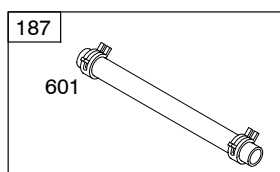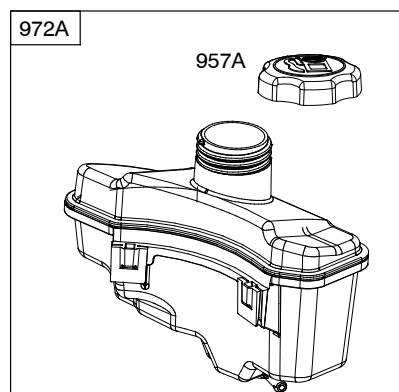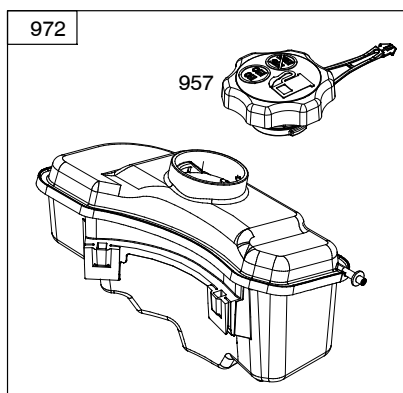


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

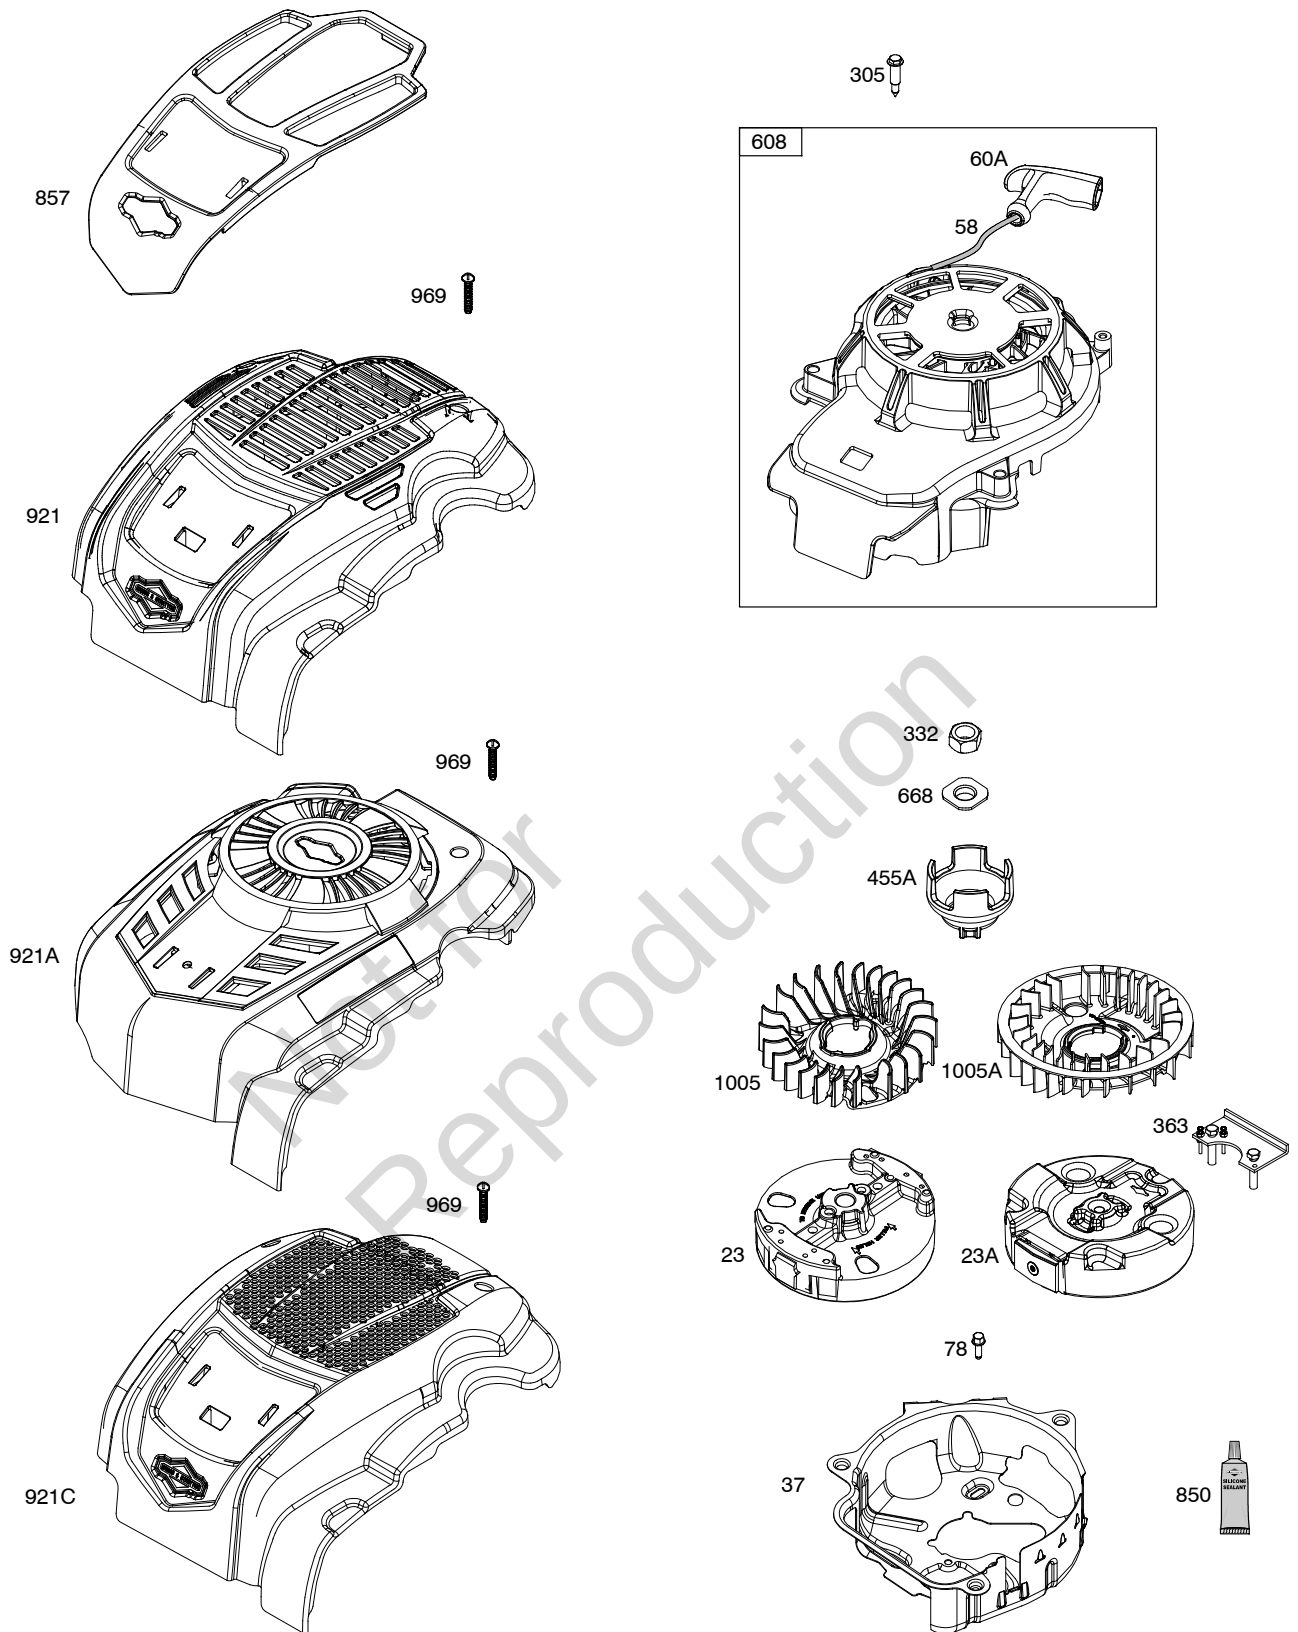

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

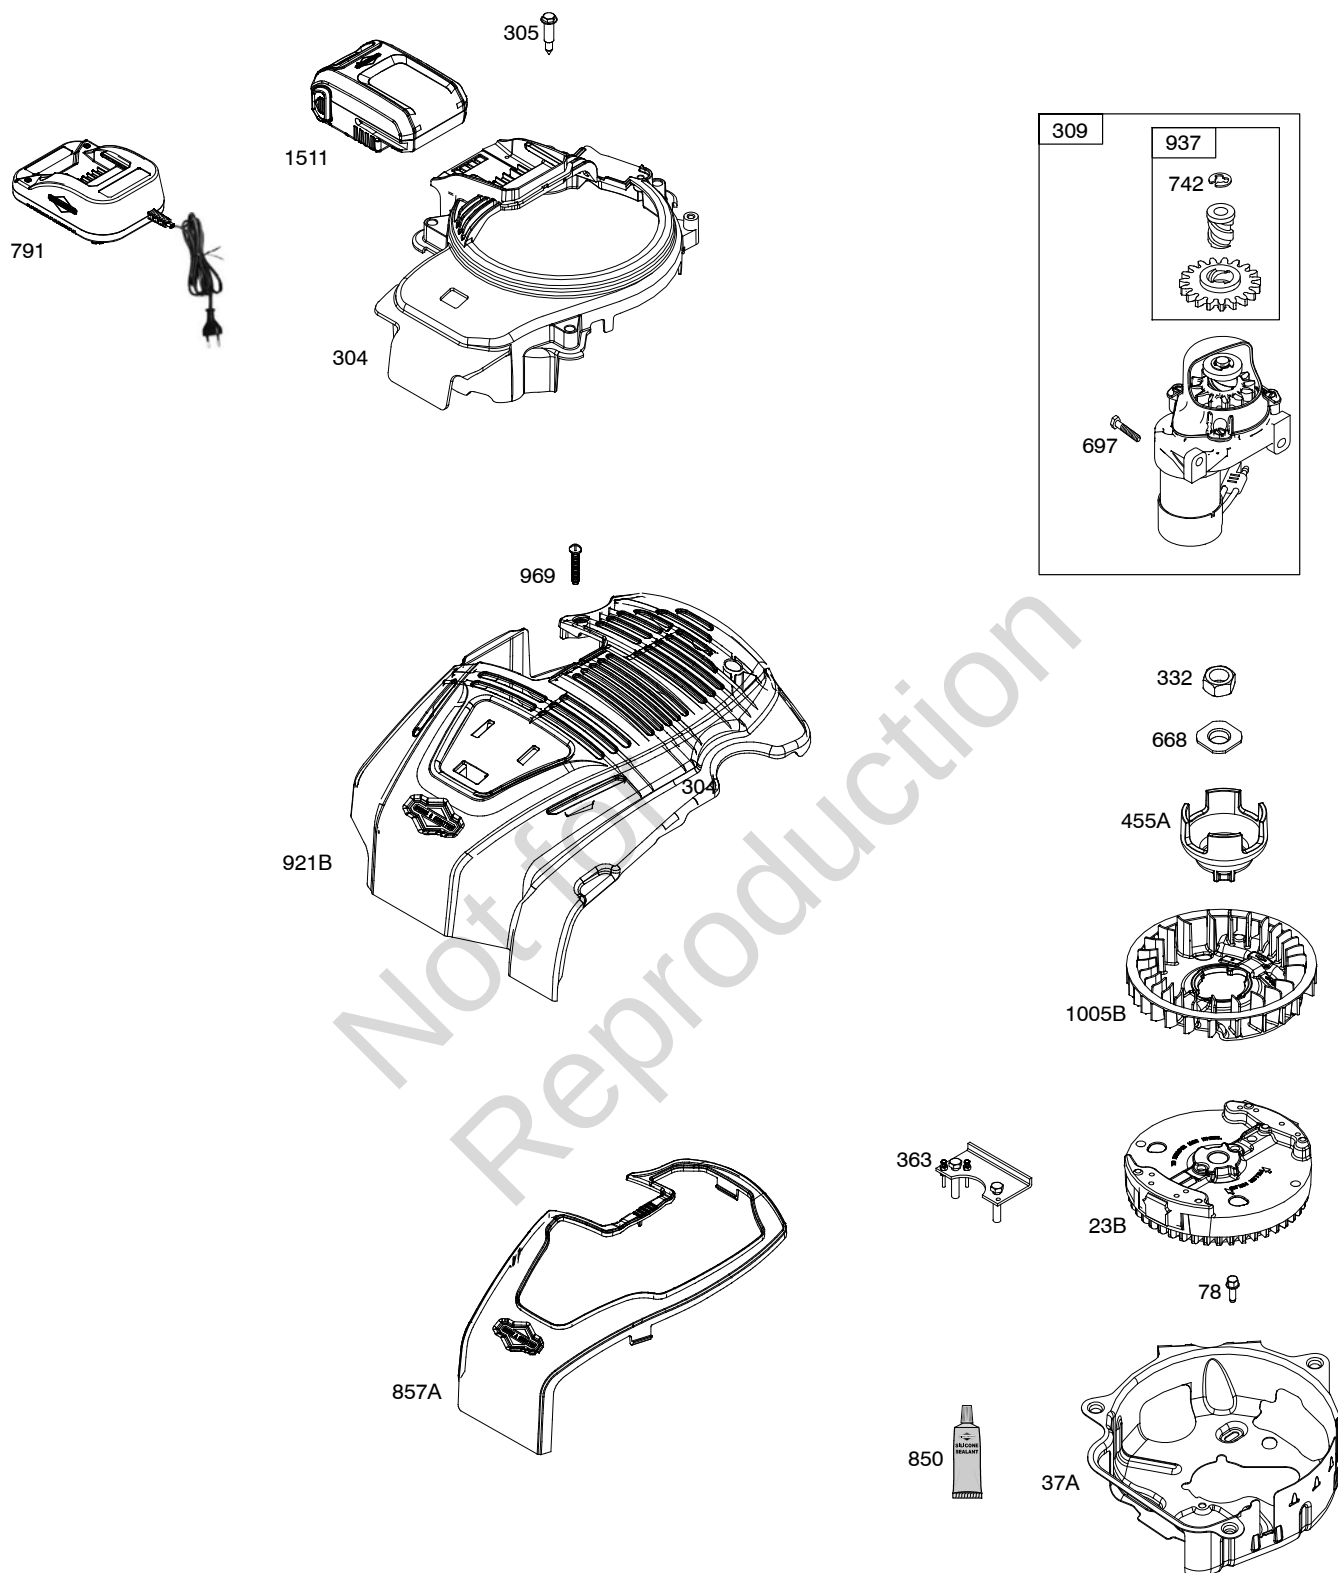

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

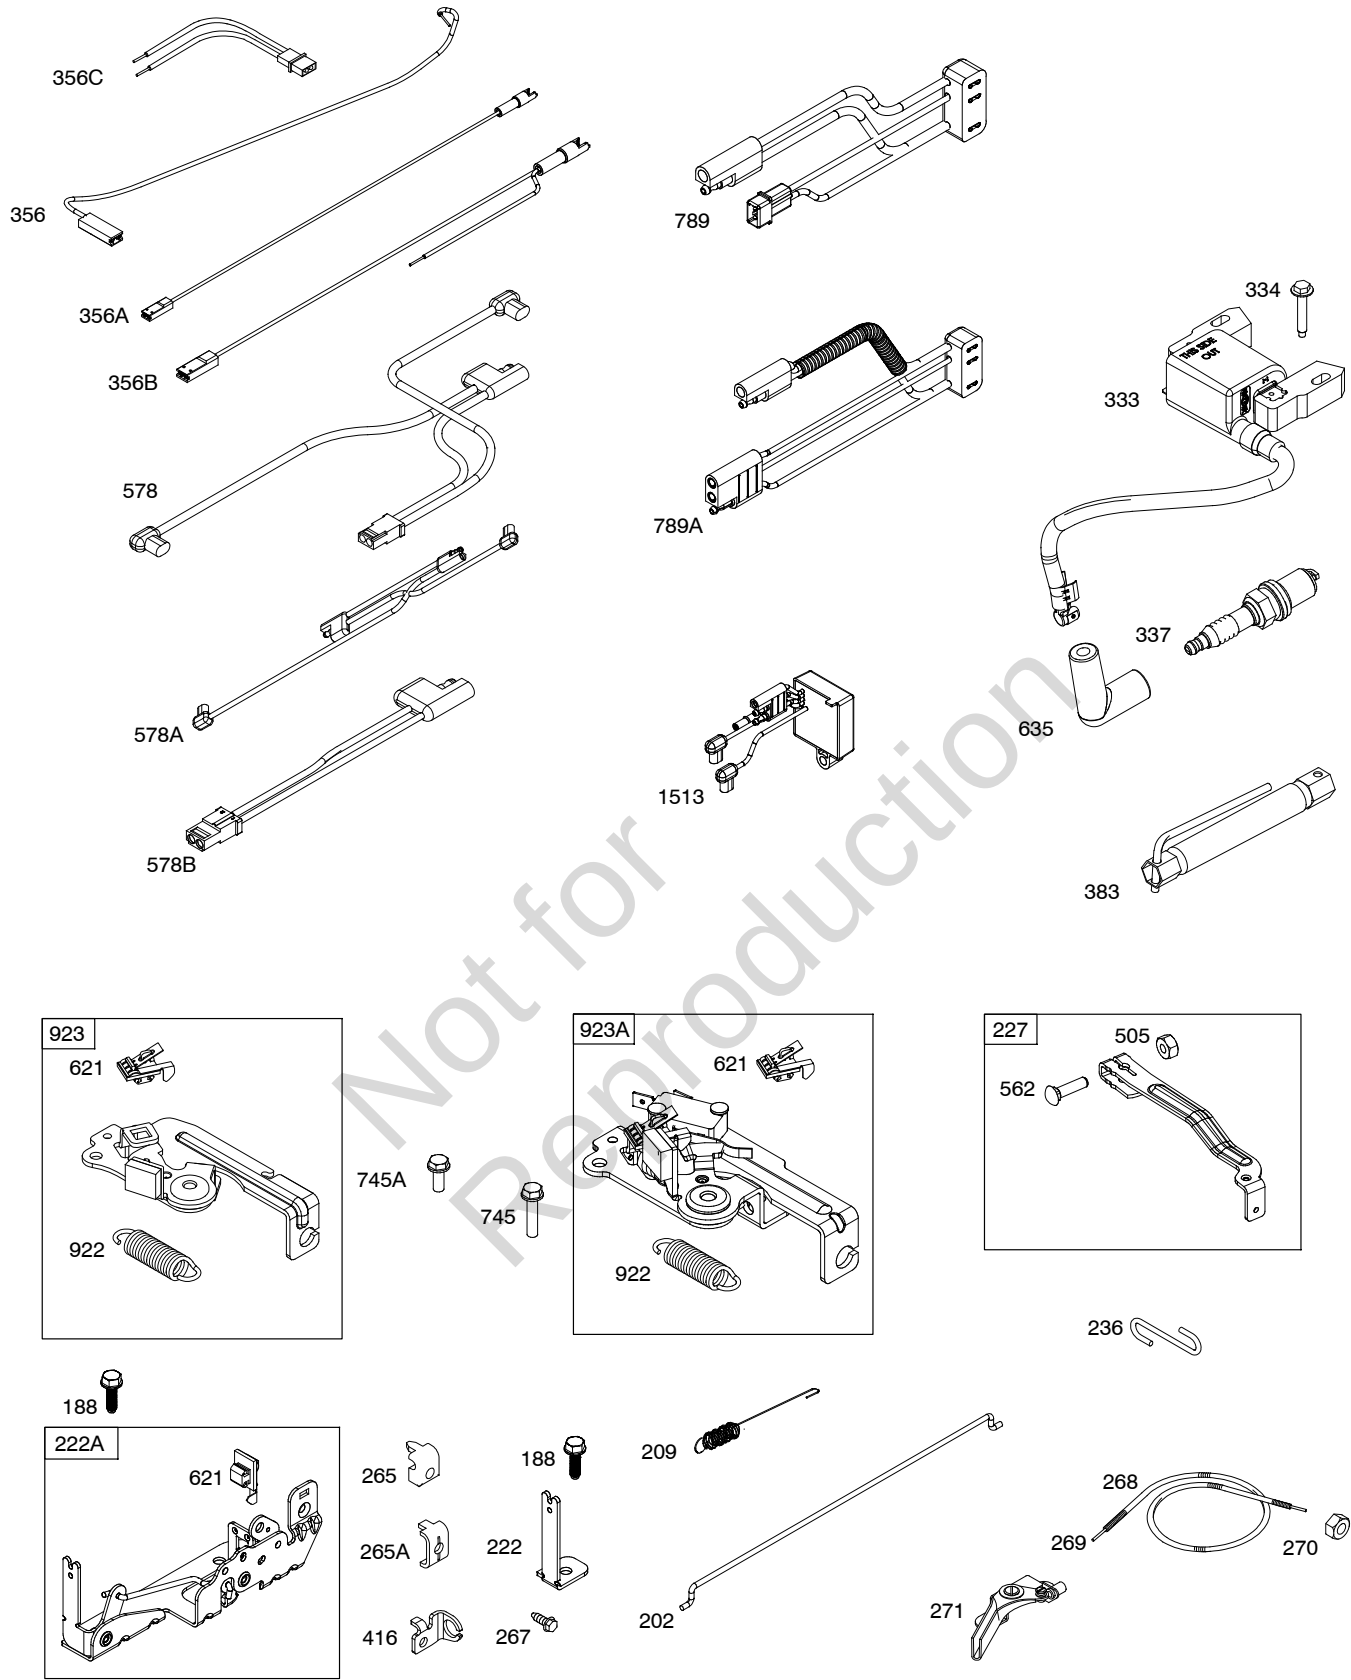

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

[illegible]

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

10510-9	Assemblies include all parts shown in frames.	06/10/2016
----------------	--	-------------------

104M00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
37	594103	Guard- Flywheel Used on Type No(s). 0001, 0002, 0003, 0004, 0005, 0006, 0008, 0009, 0010, 0012, 0013, 0018, 0019, 0020, 0021, 0022, 0027, 0028, 0029, 0030, 0031, 0033, 0034, 0035, 0036, 0041, 0043, 0045, 0046, 0049, 0053, 0056, 0058, 0066, 0071, 0074, 0081, 0086, 0088, 0089, 0092, 0096, 0100, 0104, 0108, 0109, 0110, 0118. ----- Note ----- 594573 Guard- Flywheel Used on Type No(s). 0014, 0015, 0016, 0017, 0025, 0039, 0044, 0052, 0055, 0060, 0070, 0083, 0085, 0089, 0094, 0095, 0097, 0098, 0102, 0112, 0115.	43	697799	Slinger- Governor/Oil ----- Note ----- 594560 Slinger- Governor/Oil Used on Type No(s). 0012, 0016, 0053, 0055, 0060, 0074, 0095, 0096. 45 590514 Tappet- Valve 46 594090 Camshaft 58 591108 Rope- Starter 60A 281434s Grip- Starter Rope 78 793480 Screw (Flywheel Guard) 104 590558 Pin- Float Hinge 105 594581 Valve- Float Needle ----- Note ----- 698537 Valve- Float Needle Used on Type No(s). 0060. 117 594060 Jet- Main (Standard) Used on Type No(s). 0001, 0002, 0003, 0004, 0005, 0006, 0008, 0009, 0010, 0013, 0017, 0020, 0021, 0026, 0028, 0038, 0040, 0043, 0051, 0056, 0057, 0060, 0067, 0070, 0071, 0072, 0073, 0074, 0085, 0087, 0088, 0090, 0093, 0094, 0097, 0098, 0099, 0101, 0103, 0107, 0113, 0114. ----- Note ----- 594558 Jet- Main (Standard) Used on Type No(s). 0012, 0016, 0025, 0039, 0052, 0053, 0055, 0083, 0095, 0096.	595011	Jet- Main (Standard) Used on Type No(s). 0014, 0015, 0018, 0019, 0022, 0023, 0024, 0027, 0029, 0030, 0031, 0032, 0033, 0034, 0035, 0036, 0037, 0041, 0042, 0044, 0045, 0046, 0047, 0048, 0049, 0050, 0054, 0058, 0059, 0061, 0062, 0063, 0064, 0065, 0066, 0068, 0069, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0086, 0089, 0091, 0092, 0100, 0102, 0104, 0105, 0106, 0108, 0109, 0110, 0111, 0112, 0115, 0116, 0117, 0118. 118 594063 Jet- Main (High Altitude) Used on Type No(s). 0001, 0002, 0003, 0004, 0005, 0006, 0008, 0009, 0010, 0013, 0017, 0020, 0021, 0026, 0028, 0038, 0040, 0043, 0051, 0056, 0057, 0060, 0067, 0070, 0071, 0072, 0073, 0074, 0085, 0087, 0088, 0090, 0093, 0094, 0097, 0098, 0099, 0101, 0103, 0107, 0113, 0114. ----- Note ----- 594559 Jet- Main (High Altitude) Used on Type No(s). 0012, 0016, 0025, 0039, 0052, 0053, 0055, 0083, 0095, 0096.	
37A	595188	Guard- Flywheel Used on Type No(s). 0023, 0024, 0026, 0032, 0037, 0038, 0040, 0042, 0047, 0048, 0050, 0051, 0054, 0057, 0059, 0061, 0062, 0063, 0064, 0065, 0067, 0068, 0069, 0072, 0073, 0075, 0076, 0077, 0078, 0079, 0080, 0082, 0090, 0091, 0093, 0101, 0103, 0105, 0106, 0107, 0111, 0113, 0114, 0116, 0117. ----- Note ----- 595189 Guard- Flywheel Used on Type No(s). 0037, 0087, 0099.	40	594092	Retainer- Valve			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

06/10/2016

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		595015 Jet- Main (High Altitude) Used on Type No(s). 0014, 0015, 0018, 0019, 0022, 0023, 0024, 0027, 0029, 0030, 0031, 0032, 0033, 0034, 0035, 0036, 0037, 0041, 0042, 0044, 0045, 0046, 0047, 0048, 0049, 0050, 0054, 0058, 0059, 0061, 0062, 0063, 0064, 0065, 0066, 0068, 0069, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0086, 0089, 0091, 0092, 0100, 0102, 0104, 0105, 0106, 0108, 0109, 0110, 0111, 0112, 0115, 0116, 0117, 0118.			----- Note ----- 594529 Carburetor Used on Type No(s). 0012, 0016, 0025, 0039, 0052, 0053, 0055, 0056, 0083, 0095, 0096. 594926 Carburetor Used on Type No(s). 0014, 0015, 0018, 0019, 0022, 0023, 0024, 0027, 0029, 0030, 0031, 0032, 0033, 0034, 0035, 0036, 0037, 0041, 0042, 0044, 0045, 0046, 0047, 0048, 0049, 0050, 0054, 0058, 0059, 0061, 0062, 0063, 0064, 0065, 0066, 0068, 0069, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0086, 0089, 0091, 0092, 0100, 0102, 0104, 0105, 0106, 0108, 0109, 0110, 0111, 0112, 0115, 0116, 0117, 0118. 595192 Carburetor Used on Type No(s). 0060.	209	590541	Spring- Governor Used on Type No(s). 0001, 0002, 0003, 0004, 0005, 0006, 0008, 0009, 0010, 0013, 0014, 0015, 0020, 0021, 0026, 0037, 0039, 0044, 0057, 0067, 0071, 0072, 0073, 0085, 0086, 0087, 0088, 0089, 0094, 0099, 0101, 0102, 0103, 0107, 0113, 0114, 0115. ----- Note ----- 594506 Spring- Governor Used on Type No(s). 0010, 0017, 0018, 0019, 0022, 0023, 0025, 0027, 0028, 0031, 0033, 0034, 0035, 0036, 0038, 0039, 0040, 0045, 0046, 0047, 0048, 0049, 0050, 0054, 0057, 0058, 0059, 0061, 0062, 0063, 0064, 0065, 0066, 0069, 0075, 0078, 0079, 0082, 0083, 0090, 0100, 0108, 0109, 0111, 0116, 0117, 0118. 594538 Spring- Governor Used on Type No(s). 0012, 0016, 0053, 0055, 0074, 0095, 0096. 595176 Spring- Governor Used on Type No(s). 0060. 590539 Spring- Governor Used on Type No(s). 0024, 0029, 0030, 0032, 0041, 0042, 0043, 0051, 0052, 0068, 0076, 0077, 0080, 0081, 0091, 0092, 0104, 0105, 0107, 0110.
121	590589	Kit- Carburetor Overhaul (Used Before Code Date 15030900) ----- Note ----- 594636 Kit- Carburetor Overhaul (Used After Code Date 15030800)						
122	590549	Spacer- Carburetor	133	591120	Float- Carburetor			
125	594058	Carburetor Used on Type No(s). 0001, 0002, 0003, 0004, 0005, 0006, 0008, 0009, 0010, 0013, 0017, 0020, 0021, 0026, 0028, 0038, 0040, 0043, 0051, 0056, 0057, 0060, 0067, 0070, 0071, 0072, 0073, 0074, 0085, 0087, 0088, 0090, 0093, 0094, 0097, 0098, 0099, 0101, 0103, 0107, 0113, 0114.	137	593235	Gasket- Float Bowl (Pack of 5) (Used Before Code Date 15030900) ----- Note ----- 594633 Gasket- Float Bowl (Pack of 5) (Used After Code Date 15030800)			
			155	594093	Plate- Cylinder Head			
			163	799580	Gasket- Air Cleaner			
			187	791766	Line- Fuel (Cut To Required Length)			
			188	793480	Screw (Control Bracket)			
			192	590535	Adjuster- Rocker Arm			
			202	590517	Link- Mechanical Governor			

104M00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		590542 Spring-Governor Used on Type No(s). 0056, 0070, 0097, 0098.	309	594360	Motor- Starter Used on Type No(s). 0023, 0024, 0026, 0032, 0037, 0038, 0040, 0042, 0047, 0048, 0050, 0051, 0054, 0057, 0059, 0061, 0062, 0063, 0064, 0065, 0067, 0068, 0069, 0072, 0073, 0075, 0076, 0077, 0078, 0079, 0080, 0082, 0087, 0090, 0091, 0093, 0099, 0101, 0103, 0105, 0106, 0107, 0111, 0113, 0114, 0116, 0117.			----- Note ----- 491055s Plug- Spark Used on Type No(s). 0001, 0003, 0008, 0009, 0016, 0018, 0019, 0022, 0023, 0024, 0027, 0028, 0029, 0030, 0031, 0032, 0038, 0039, 0041, 0042, 0043, 0045, 0046, 0047, 0048, 0049, 0050, 0051, 0052, 0054, 0058, 0059, 0065, 0066, 0068, 0069, 0072, 0074, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0088, 0090, 0091, 0093, 0094, 0096, 0100, 0104, 0105, 0106, 0110, 0111, 0116, 0117, 0118.
216	590547	Link- Choke						792015 Plug- Spark Used on Type No(s). 0017, 0024, 0033, 0034, 0035, 0036, 0044, 0056, 0061, 0062, 0063, 0064, 0070, 0092, 0108, 0109, 0112.
217	590740	Spring- Choke Return						----- Note ----- 692390 Wire- Stop Used on Type No(s). 0014, 0015, 0016, 0017, 0037, 0055, 0070, 0085, 0087, 0094, 0095, 0097, 0098, 0099, 0112, 0115.
222	590560	Bracket- Control	318	793480	Screw (Mounting Bracket)	356A	595379	Wire- Stop Used on Type No(s). 0025, 0039, 0052, 0060, 0083.
222A	590561	Bracket- Control	332	690662	Nut (Flywheel)	356B	595383	Wire- Stop Used on Type No(s). 0067, 0069, 0103, 0111, 0117.
227	590520	Lever- Governor Control	333	595009	Armature- Magneto	356C	796798	Wire- Stop Used on Type No(s). 0012, 0018, 0019, 0038, 0090, 0096, 0113, 0114.
236	591292	Link- Lockout	334	691061	Screw (Magneto Armature)			358 594114 Gasket Set- Engine
238	594097	Cap- Valve	337	594056	Plug- Spark Used on Type No(s). 0002, 0004, 0005, 0006, 0010, 0012, 0013, 0014, 0015, 0020, 0021, 0025, 0026, 0037, 0040, 0053, 0055, 0057, 0060, 0067, 0071, 0073, 0082, 0083, 0085, 0086, 0087, 0089, 0095, 0097, 0098, 0099, 0101, 0102, 0103, 0107, 0113, 0114, 0115.	363	19619	Puller- Flywheel
265	690798	Clamp- Casing						
265A	691024	Clamp- Casing						
267	691044	Screw (Casing Clamp)						
		----- Note ----- 692577 Screw (Casing Clamp) Used on Type No(s). 0017, 0018, 0019, 0038, 0044, 0086, 0089, 0090, 0096.						
		799013 Screw (Casing Clamp) Used on Type No(s). 0014, 0016.						
268	691025	Casing- Control Wire (Cut To Required Length)						
269	691026	Wire- Control (Cut To Required Length)						
270	691027	Nut (Control Wire Casing)						
271	691028	Lever- Control						
300D	594108	Muffler						
300E	595012	Muffler						
304	595186	Housing- Blower						
305	590586	Screw (Blower Housing)						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
383	19576s	Wrench- Spark Plug	578B	595381	Wire Assembly			593576 Charger- Battery
404	690272	Washer			Used on Type No(s).			(United Kingdom)
		(Governor Crank)			0037, 0087, 0099.			595887 Charger- Battery
416	595196	Bracket- Throttle Cable	598	592587	Shim- End Play			(Australia)
445	593260	Filter- Air Cleaner			(Crankshaft or			
		Cartridge			Camshaft Bearing)	832A	594109	Guard- Muffler
455A	593960	Cup- Flywheel	601	791850	Clamp- Hose	836	690661	Screw
493	590551	Bracket- Mounting	608	594062	Starter- Rewind			(Muffler Guard)
		(Carburetor)	613	590562	Screw	842	691031	Seal- O Ring
		----- Note -----			(Muffler)			(Dipstick Tube)
		593330 Bracket- Mounting	615	690340	Retainer- Governor Shaft	847	594110	Dipstick/Tube Assembly
		(Carburetor)	616	590516	Crank- Governor	850	100106	Sealant- Liquid
		Used on Type No(s).	617	270344s	Seal- O Ring	857	594111	Trim- Blower Housing Cover
		0014, 0015, 0016,			(Intake Manifold)			
		0017, 0018, 0019,	621	692310	Switch- Stop	857A	595207	Trim- Blower Housing Cover
		0025, 0033, 0037,	623	799581	Seal- O Ring			Used on Type No(s).
		0038, 0039, 0052,			(Carburetor Spacer)			0023.
		0055, 0060, 0070,	635	692076	Boot- Spark Plug			
		0083, 0085, 0086,	668	590546	Spacer	868	594096	Seal- Valve
		0087, 0088, 0089,			(Flywheel)			(Intake)
		0090, 0094, 0095,	676A	594563	Deflector- Muffler	875	594107	Base- Air Cleaner
		0096, 0097, 0098,	697	691127	Screw	875A	594574	Base- Air Cleaner
		0099, 0102, 0112,	718	690959	Pin- Locating	914	591103	Screw
		0113, 0114, 0115.			(Crankcase			(Rocker Cover)
					Cover/Sump)	921	594116	Cover- Blower Housing
505	793515	Nut	724	697478	Retainer- Seal	921A	594550	Cover- Blower Housing
		(Governor Control	741	594105	Gear- Timing			Used on Type No(s).
		Lever)			(Plastic)			0008, 0009, 0072,
523	796503	Dipstick	742	93941	Retainer- E Ring			0074.
524	691876	Seal- Dipstick Tube	745	691146	Screw	921B	595180	Cover- Blower Housing
535	595191	Filter- Air Cleaner			(Brake)			Used on Type No(s).
		Foam	745A	690859	Screw			0023, 0024, 0032,
562	793514	Bolt			(Brake)			0037, 0042, 0047,
		(Governor Control	789	595197	Harness- Wiring			0048, 0050, 0054,
		Lever)			Used on Type No(s).			0059, 0061, 0062,
578	594368	Wire Assembly			0023, 0024, 0032,			0063, 0064, 0065,
		Used on Type No(s).			0037, 0042, 0047,			0067, 0068, 0069,
		0023, 0024, 0032,			0048, 0050, 0054,			0075, 0076, 0077,
		0037, 0038, 0042,			0059, 0061, 0062,			0078, 0079, 0080,
		0047, 0048, 0050,			0063, 0064, 0065,			0087, 0090, 0091,
		0054, 0059, 0061,			0068, 0075, 0076,			0099, 0101, 0103,
		0062, 0063, 0064,			0077, 0078, 0079,			0105, 0111, 0114,
		0065, 0068, 0069,			0080, 0087, 0090,			0116.
		0075, 0076, 0077,			0091, 0099, 0101,	921C	595212	Cover- Blower Housing
		0078, 0079, 0080,			0105, 0114, 0116.			(High Debris)
		0087, 0090, 0091,	789A	595380	Harness- Wiring			Used on Type No(s).
		0099, 0101, 0103,			Used on Type No(s).			0060, 0070, 0071,
		0105, 0106, 0107,			0067, 0069, 0103,			0088, 0094, 0112.
		0111, 0116, 0117.			0111, 0117.	922	692135	Spring- Brake
578A	595181	Wire Assembly	791	593561	Charger- Battery	923	691487	Brake
		Used on Type No(s).			(U.S./Canada)			----- Note -----
		0026, 0040, 0051,			----- Note -----			595812 Brake
		0057, 0072, 0073,			593562 Charger- Battery			Used on Type No(s).
		0082, 0093, 0113.			(European Union)			0118.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10510- 13 Assemblies include all parts shown in frames. 06/10/2016

104M00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
923A	595195	Brake Used on Type No(s). 0023, 0024, 0026, 0032, 0038, 0040, 0042, 0047, 0048, 0050, 0051, 0054, 0057, 0059, 0061, 0062, 0063, 0064, 0065, 0067, 0068, 0069, 0072, 0073, 0075, 0076, 0077, 0078, 0080, 0082, 0090, 0091, 0093, 0101, 0105, 0106, 0107, 0111, 0114, 0116, 0117.	994	594562	Arrestor- Spark	1058	80011926USCN	Manual- Operator's (U.S/Canada) (English, French, Spanish) ----- Note ----- 80011926WST Manual- Operator's (European Union) (Multi- Language) 80014268USCN Manual- Operator's (In- start) (U.S/Canada) (English, French, Spanish) 80014268WST Manual- Operator's (In- start) (European Union) (Multi- Language)
937	799420	Spline- Starter	1005	594102	Fan- Flywheel	1127	590554	Screw (Float Bowl to Carburetor Body)
951	591104	Lever- Choke	1005A	595184	Fan- Flywheel Used on Type No(s). 0025, 0039, 0052, 0060, 0070, 0083, 0094, 0112.	1238	590562	Screw (Carburetor Spacer)
957	594061	Cap- Fuel Tank	1005B	595182	Fan- Flywheel Used on Type No(s). 0023, 0024, 0026, 0032, 0037, 0038, 0040, 0042, 0047, 0048, 0050, 0051, 0054, 0057, 0059, 0061, 0062, 0063, 0064, 0065, 0067, 0068, 0069, 0071, 0072, 0073, 0075, 0076, 0077, 0078, 0079, 0080, 0082, 0087, 0090, 0091, 0093, 0099, 0113, 0114, 0116, 0117.	1263	697124	Reed- Breather
957A	595214	Cap- Fuel Tank	1022	594088	Gasket- Rocker Cover	1264	793453	Screw (Breather Reed)
968	594106	Cover- Air Cleaner	1023	594087	Cover- Rocker	1319	794467	Label- Warning
968A	594575	Cover- Air Cleaner	1026	590515	Rod- Push	1319A	797669	Label- Warning
969	594115	Screw (Blower Housing Cover)	1029	590526	Arm- Rocker (Exhaust)	1511	593559	Battery (In- start) (U.S/Canada) ----- Note ----- 593560 Battery (In- start) (EU/AU)
971	590552	Screw (Air Cleaner Base to Carburetor/Throttle Body)	1029A	590527	Arm- Rocker (Intake)	1513	595382	Module- Starter
972	594112	Tank- Fuel	1036		Label- Emissions (Available From A Briggs & Stratton Authorized Dealer)			
972A	595190	Tank- Fuel						
975	591492	Bowl- Float (Used Before Code Date 15030900) ----- Note ----- 594632 Bowl- Float (Used After Code Date 15030800)						

Not for
Reproduction

Not for
Reproduction

