

19N100

Illustrated Parts List

Model Series

19N100

TYPE NUMBERS

0001, 0002, 0003, 0004, 0005, 0008, 0009, 0010, 0013, 0014, 0018, 0019, 0020, 0021, 0022, 0024, 0025, 0027, 0028, 0029, 0030, 0031, 0032, 0033, 0034, 0035, 0036, 0037, 0039, 0042, 0044, 0045, 0047, 0048, 0049, 0050, 0051, 0052, 0053, 0055, 0058, 0059, 0060, 0062, 0063, 0064, 0065, 0066, 0067, 0068, 0070, 0071, 0072, 0075, 0076, 0077, 0079, 0080, 0082, 0083, 0084, 0085, 0087, 0088, 0089, 0090, 0091, 0092, 0094, 0095, 0097, 0098, 0099, 0102, 0103, 0104, 0218, 0221, 0222.

Not for
Reproduction



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



 
 
19N100

1036 EMISSIONS LABEL










1058 OPERATOR'S MANUAL





1319 WARNING LABEL

1319A WARNING LABEL

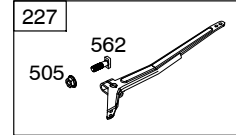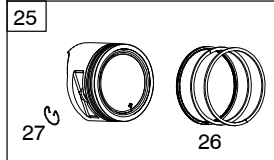







614

  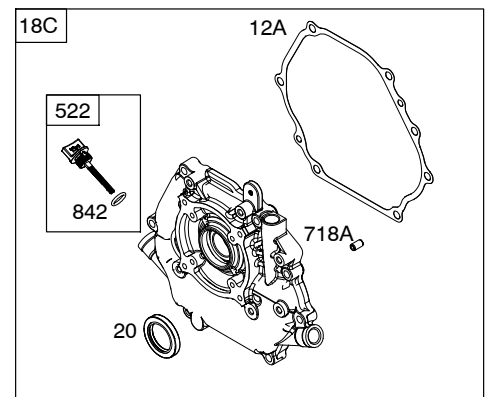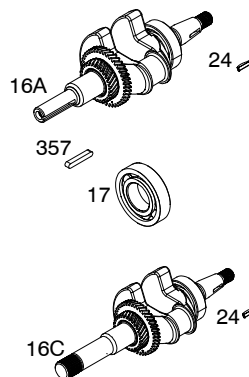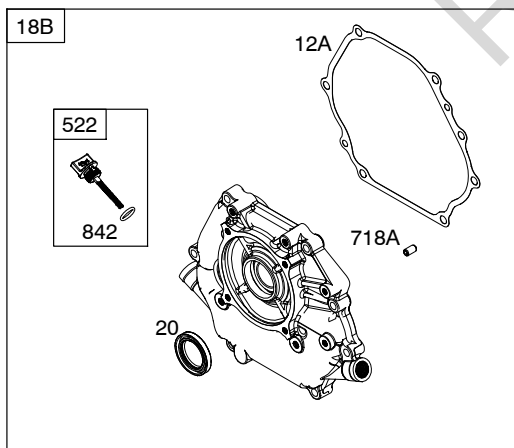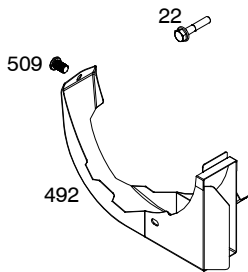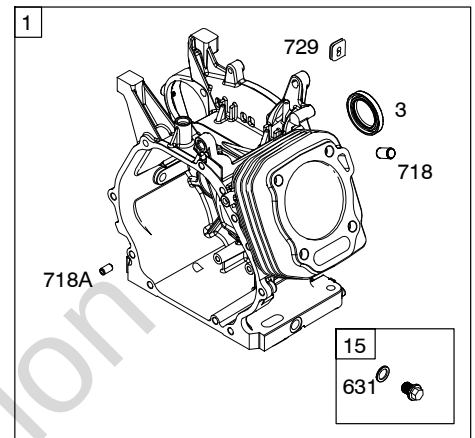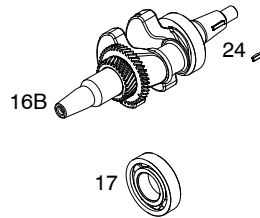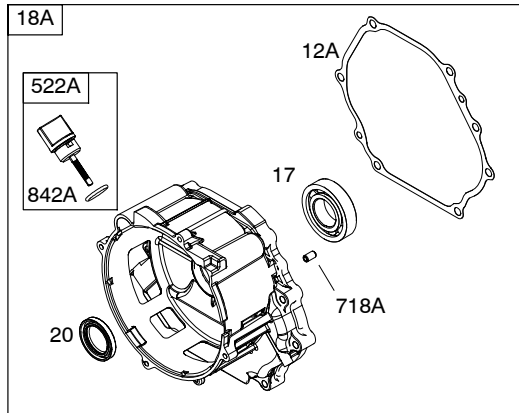

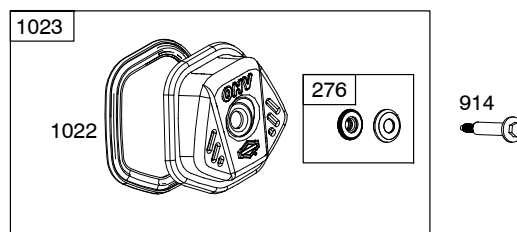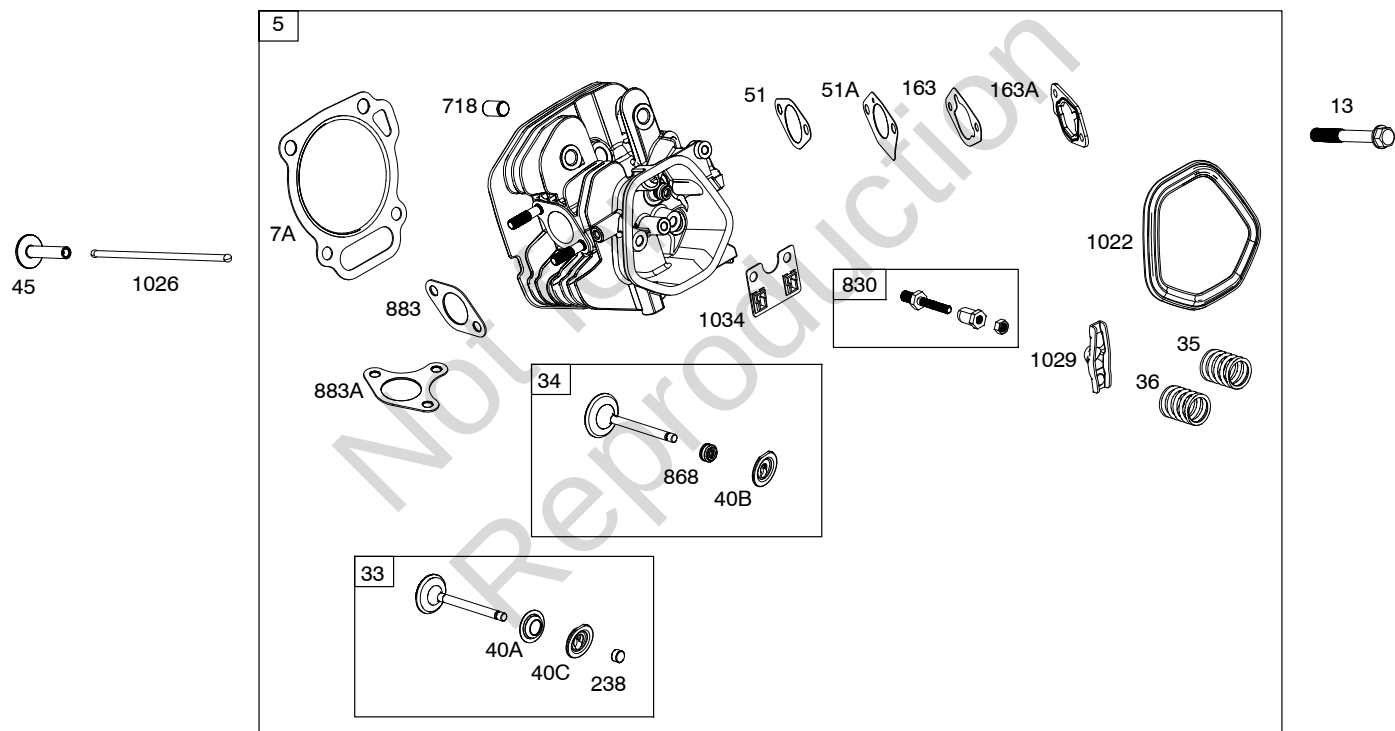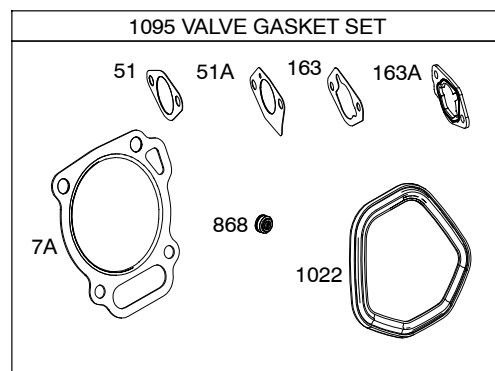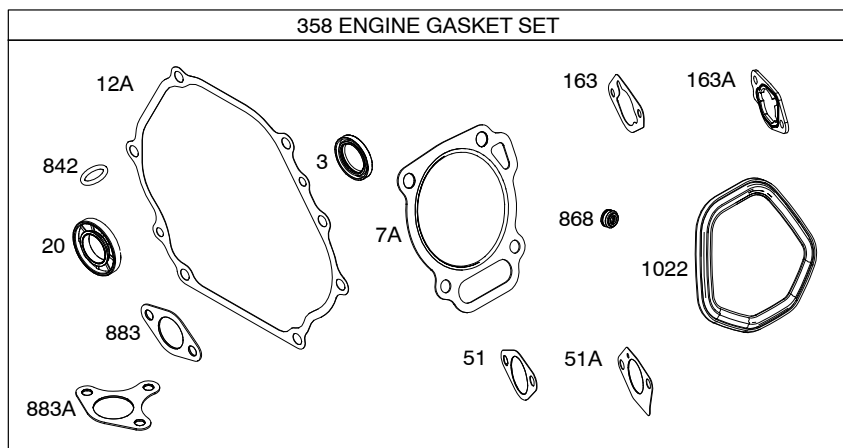




Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

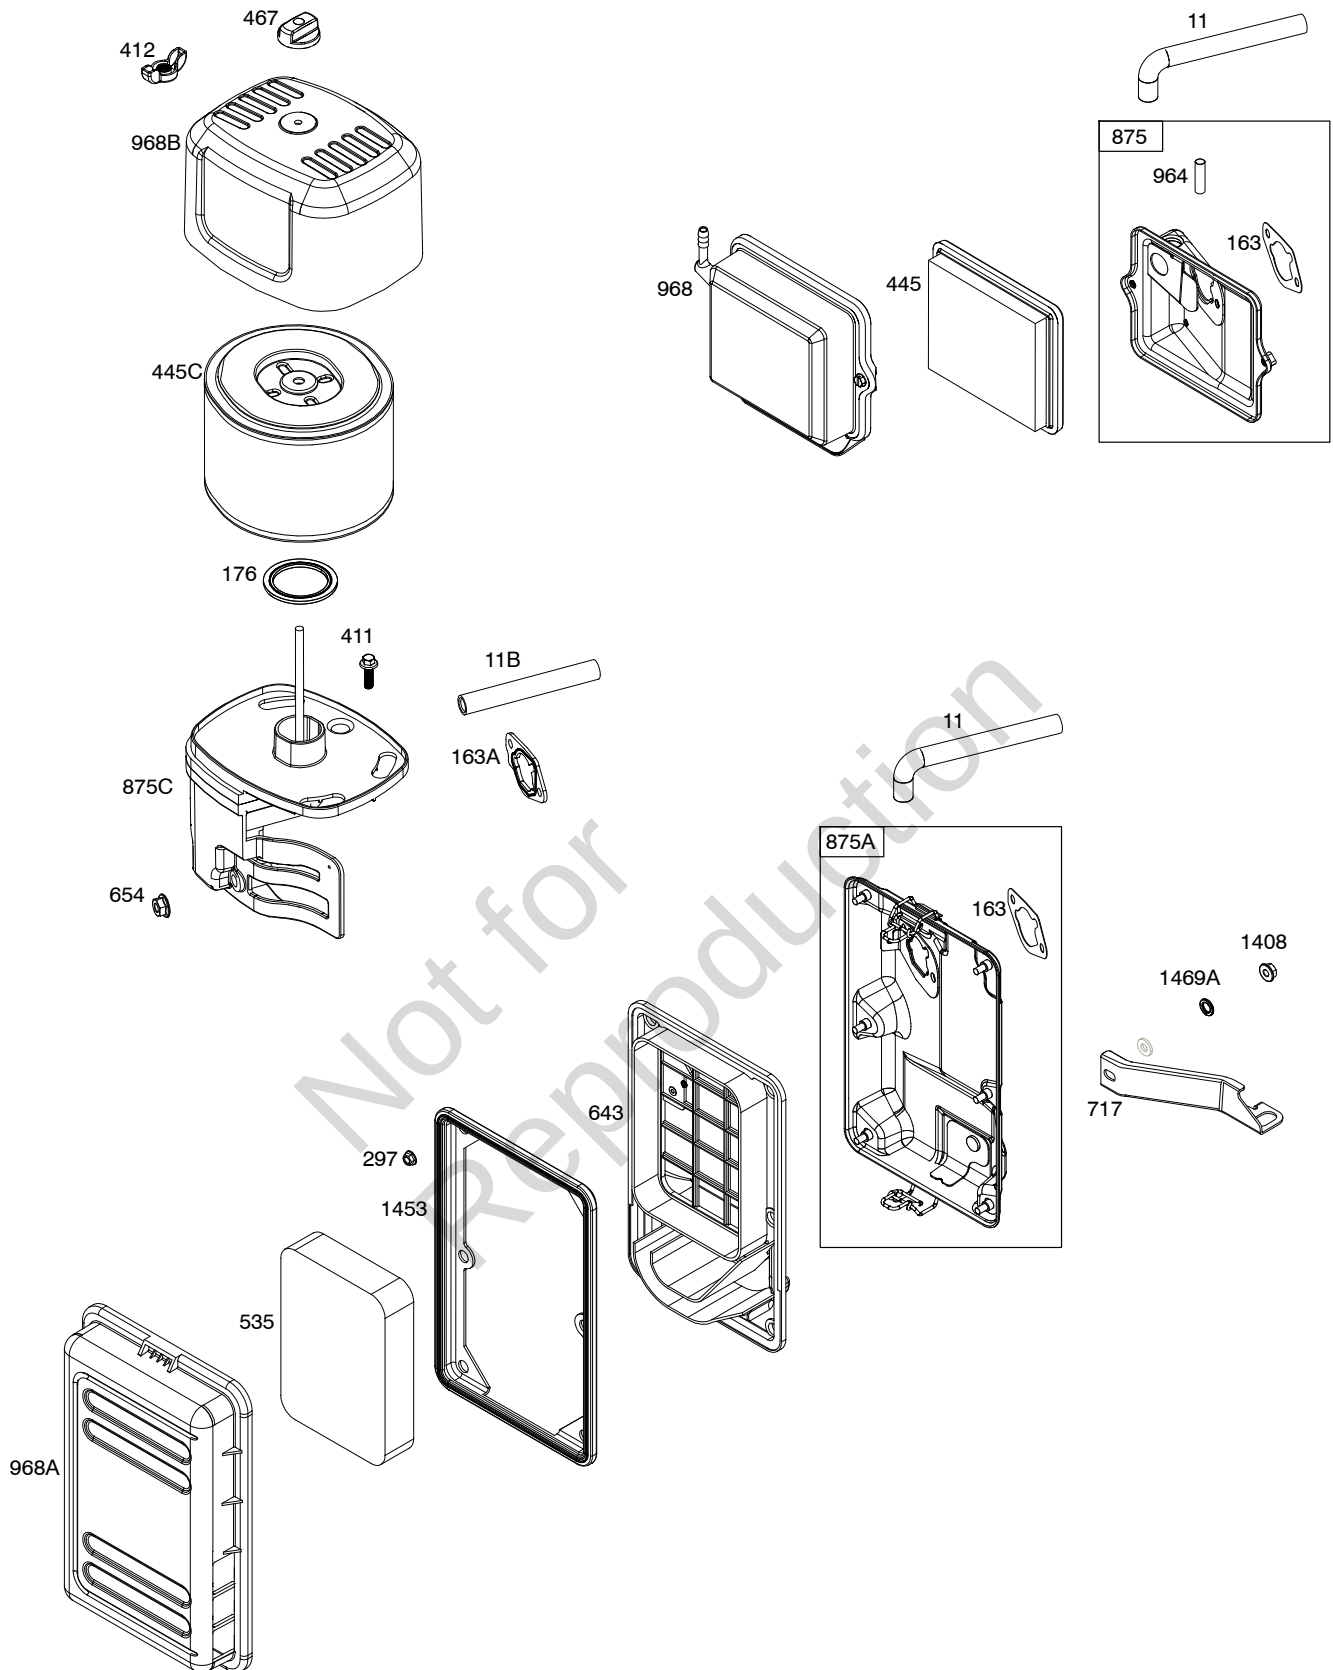

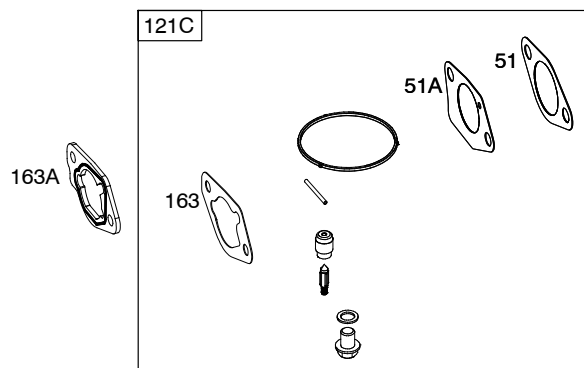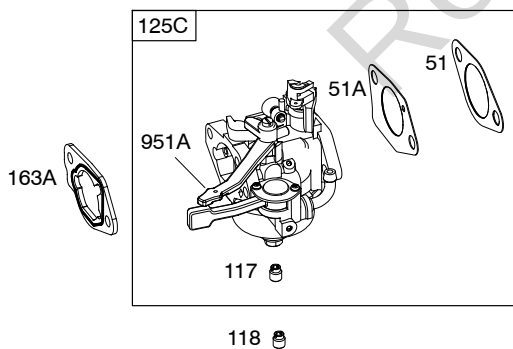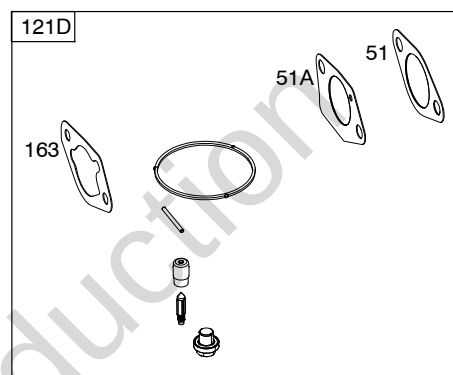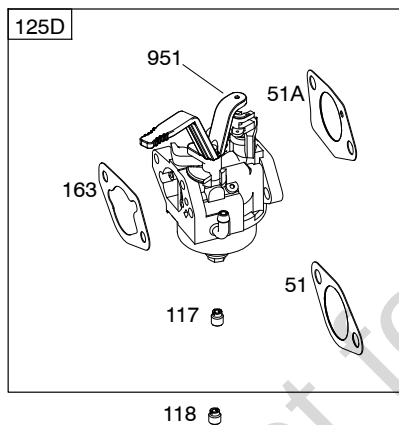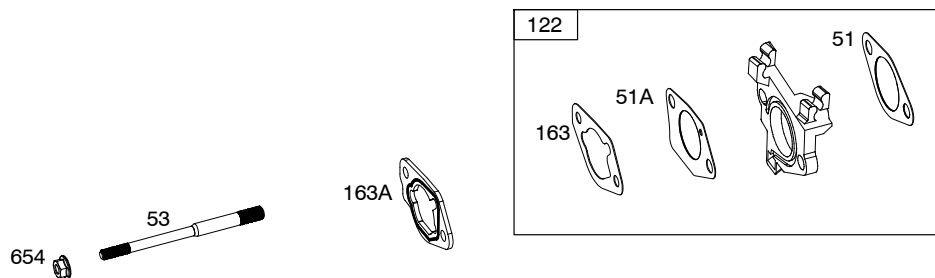






Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

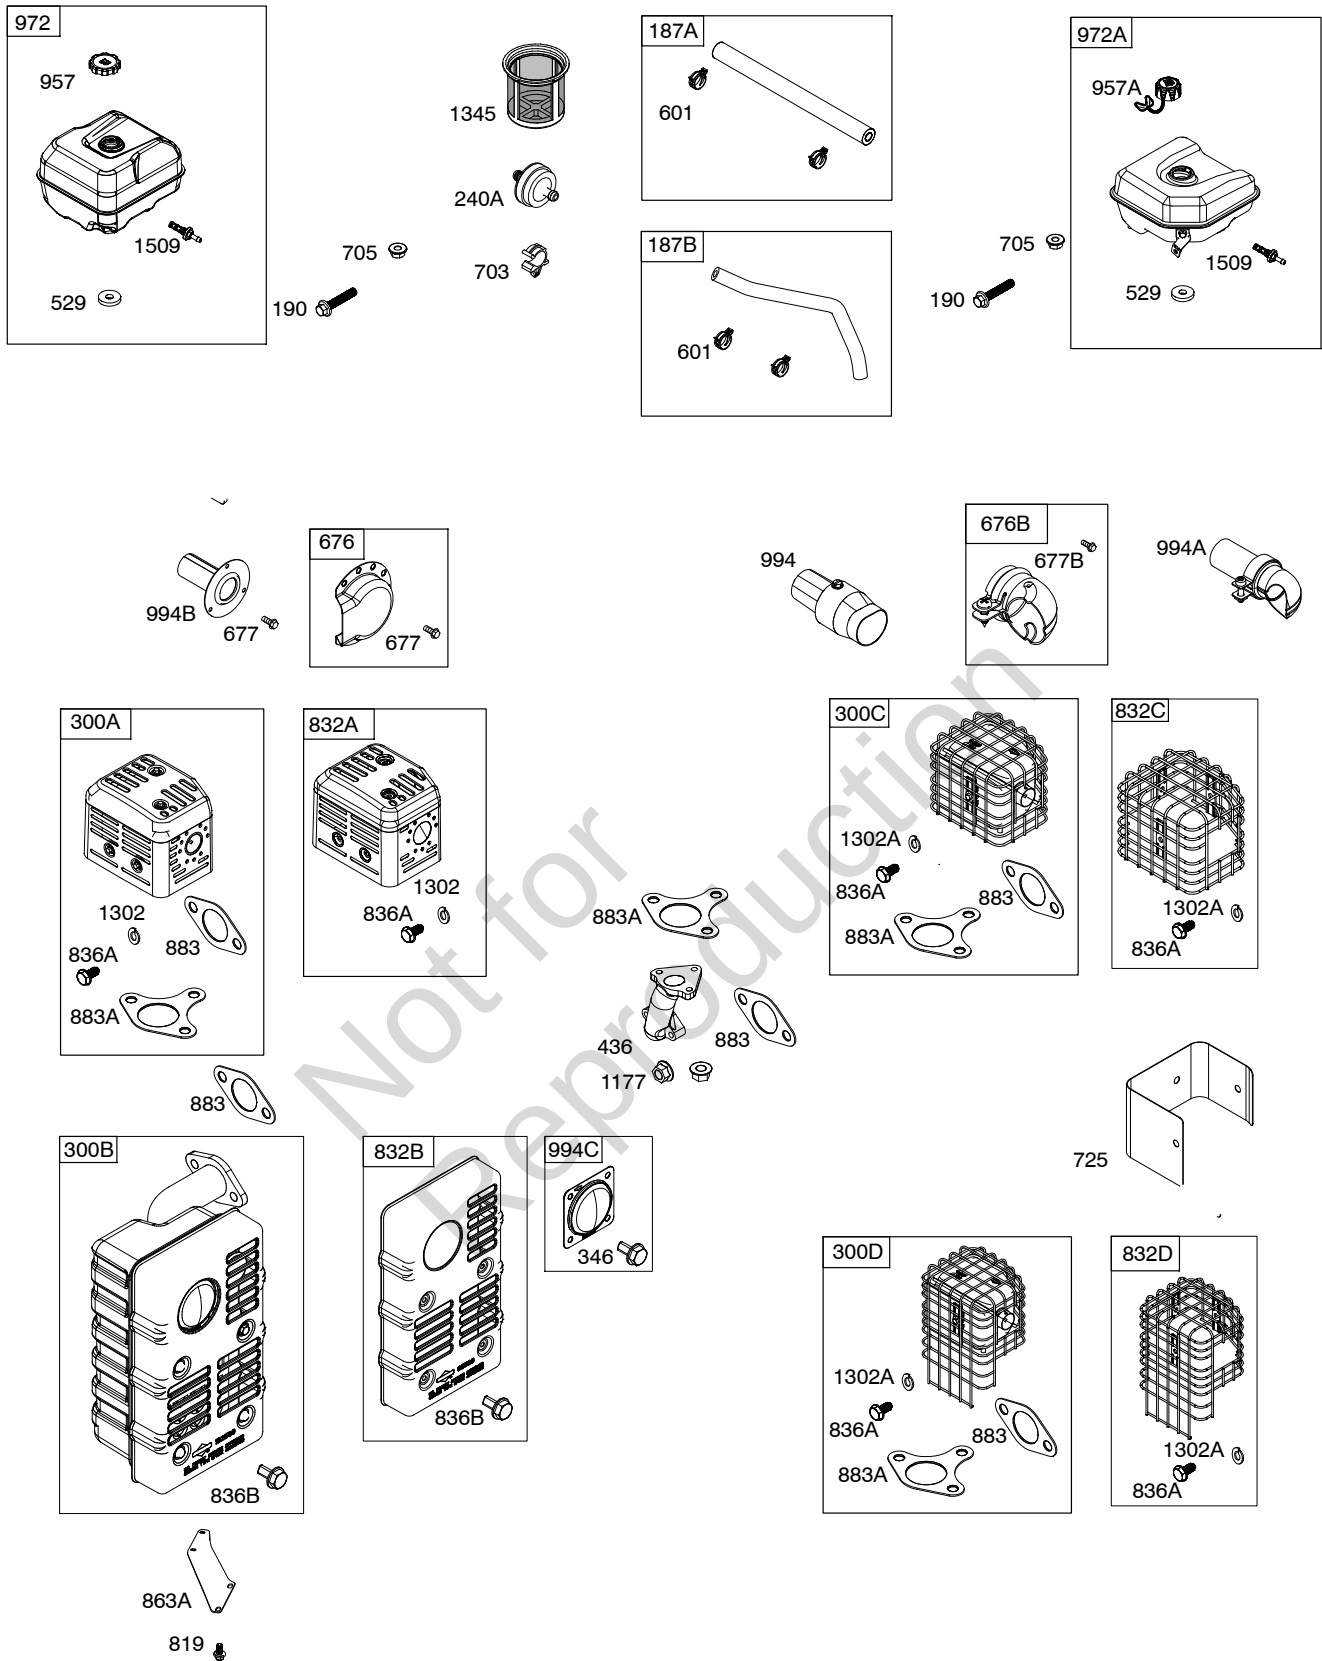

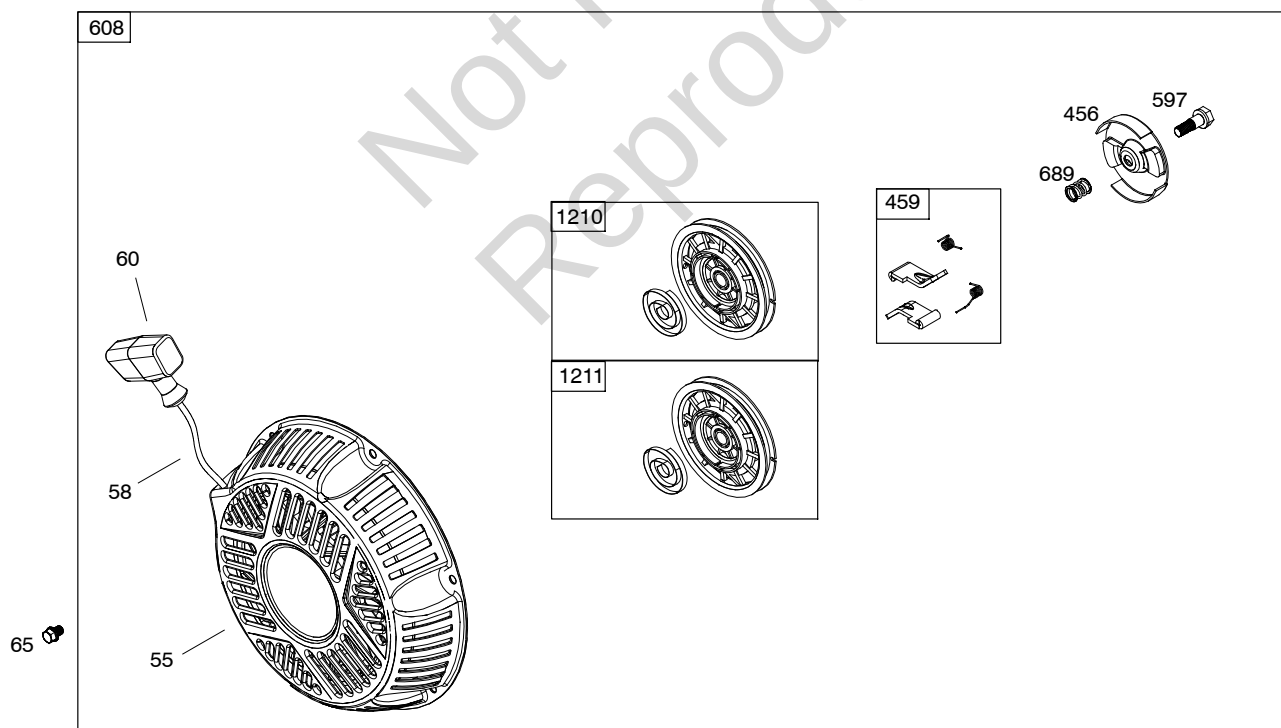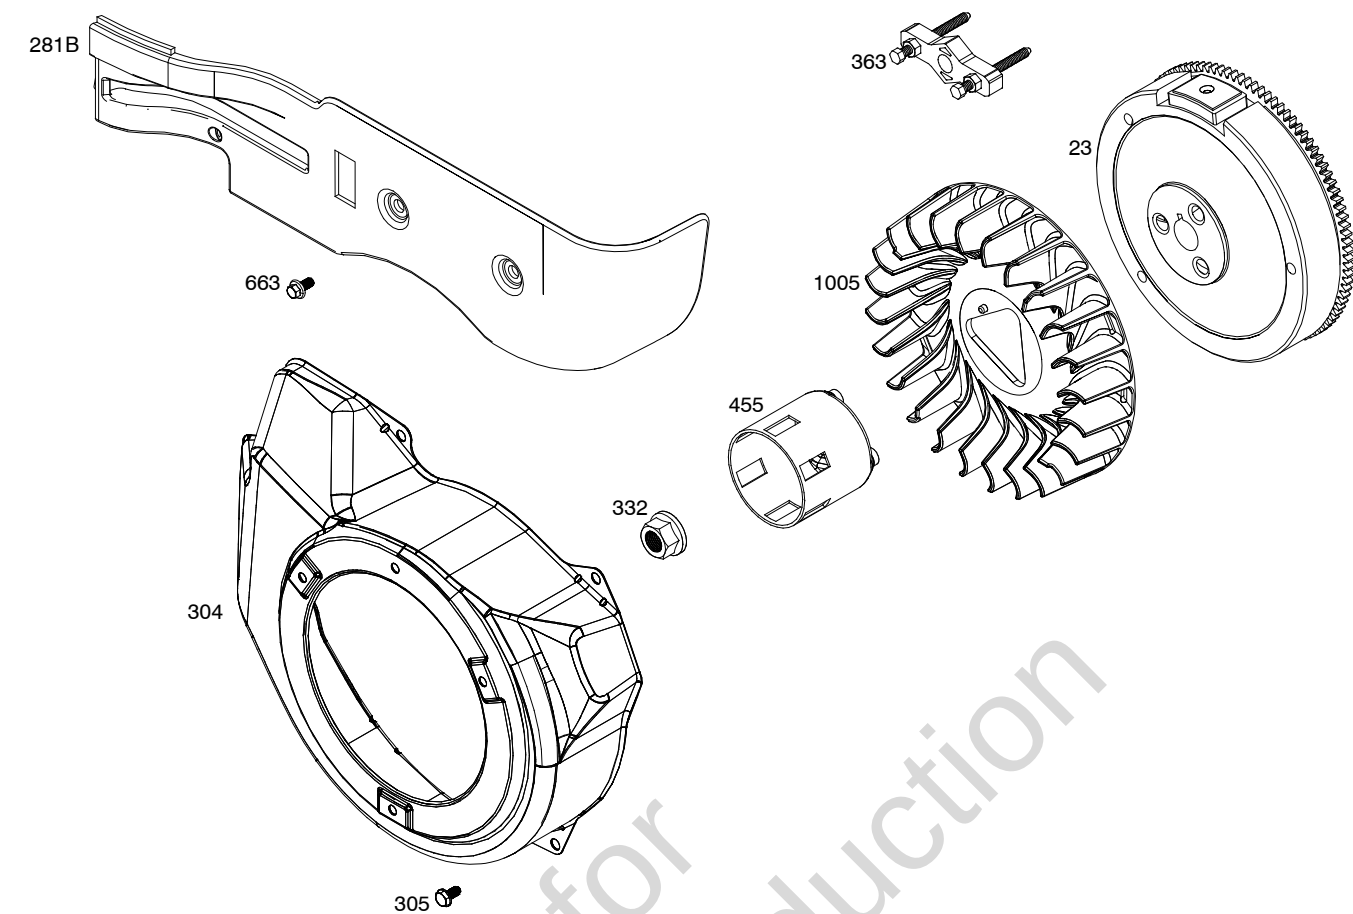

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

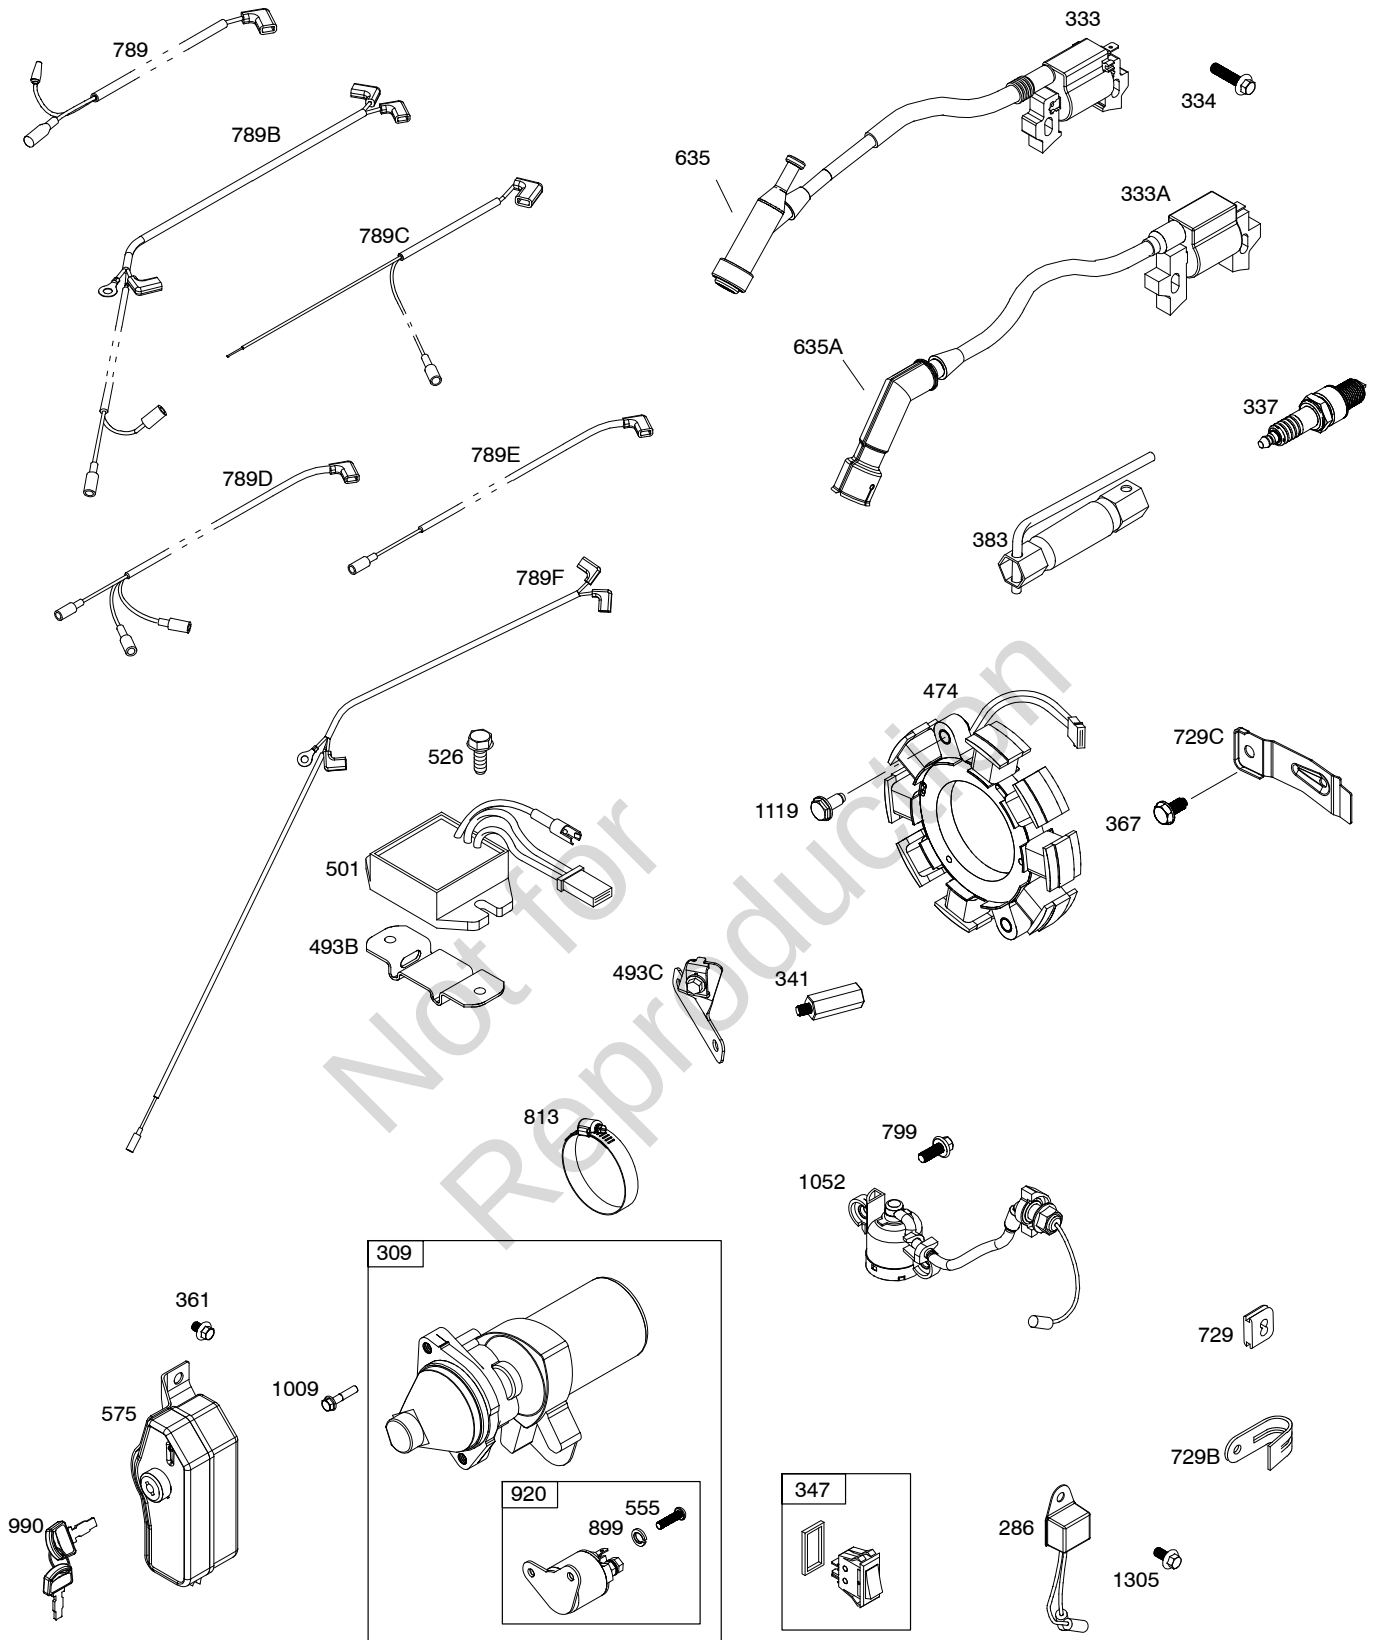

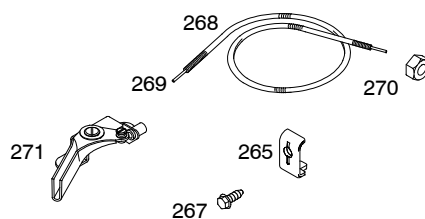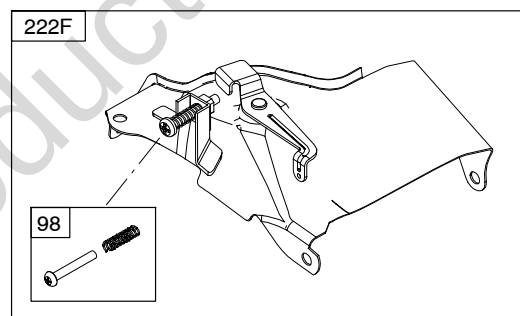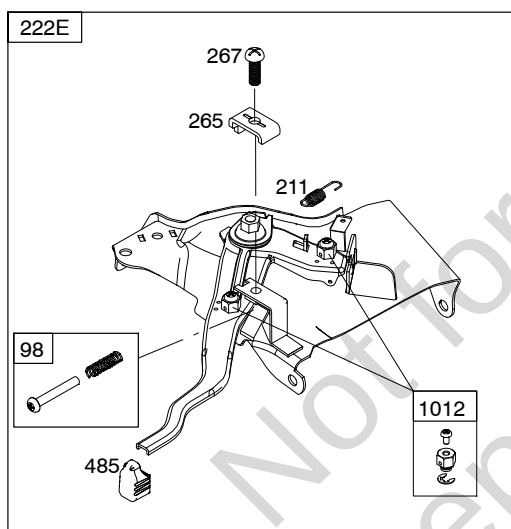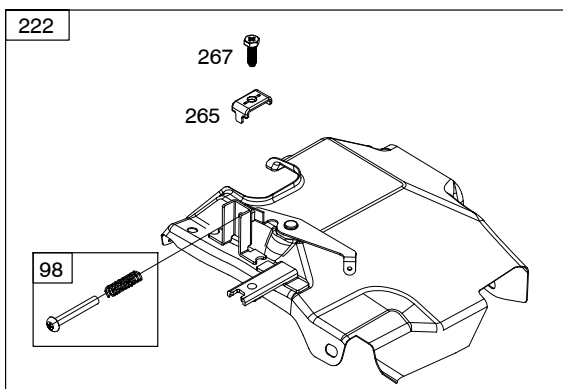

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

19N100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
0104								
1	593106	Cylinder Assembly ----- Note ----- 593140 Cylinder Assembly Used on Type No(s). 0009, 0027, 0030, 0036, 0042, 0044, 0049, 0050, 0052, 0058, 0066, 0070, 0075, 0076, 0077, 0082, 0104. 593726 Cylinder Assembly Used on Type No(s). 0020, 0021, 0034, 0037, 0048, 0051, 0071, 0079, 0080, 0085, 0099, 0221. 593736 Cylinder Assembly Used on Type No(s). 0032, 0053, 0060, 0062, 0065, 0072, 0084, 0091, 0094.	16B	591835	593662 Crankshaft Used on Type No(s). 0051, 0053, 0077, 0084, 0085. 593691 Crankshaft Used on Type No(s). 0055, 0065. 595298 Crankshaft Used on Type No(s). 0090, 0091, 0097. Crankshaft Used on Type No(s). 0006, 0009, 0027, 0028, 0036, 0045, 0049, 0102, 0103, 0104. ----- Note ----- 591836 Crankshaft Used on Type No(s). 0013, 0014, 0015. Crankshaft Used on Type No(s). 0008, 0050, 0067, 0083.	20	591793	Seal- Oil (PTO Side)
3	591794	Seal- Oil (Magneto Side)	17	591792	Bearing- Ball (Crankshaft)	22	797776	Screw (Crankcase Cover/Sump)
5	593093	Head- Cylinder ----- Note ----- 593132 Head- Cylinder Used on Type No(s). 0006, 0013, 0014, 0015, 0045, 0067, 0080, 0091, 0099, 0102.	18A	592038	Cover- Crankcase Used on Type No(s). 0013, 0014, 0015, 0037, 0044, 0050, 0065, 0066, 0067, 0071, 0072, 0079, 0082, 0097.	22A	593107	Screw (Crankcase Cover/Sump)
7A	592834	Gasket- Cylinder Head	18B	593083	Cover- Crankcase ----- Note ----- 593114 Cover- Crankcase Used on Type No(s). 0003, 0021, 0022, 0034, 0047, 0058, 0062, 0063, 0064, 0068, 0070, 0075, 0080, 0087, 0094, 0098, 0221, 0222.	23	593100	Flywheel ----- Note ----- 593139 Flywheel Used on Type No(s). 0009, 0027, 0030, 0032, 0036, 0044, 0050, 0052, 0053, 0058, 0060, 0062, 0065, 0066, 0070, 0072, 0075, 0076, 0077, 0082, 0087, 0091, 0094, 0095, 0104. 593735 Flywheel Used on Type No(s). 0042, 0049. 593690 Flywheel Used on Type No(s). 0084.
11	592353	Tube- Breather	18C	593661	Cover- Crankcase Used on Type No(s). 0019, 0031, 0032, 0035, 0039, 0051, 0052, 0053, 0055, 0059, 0060, 0076, 0077, 0083, 0099. ----- Note ----- 593747 Cover- Crankcase Used on Type No(s). 0033.	24	797812	Key- Flywheel
11B	799832	Tube- Breather (Cut To Required Length)				25	592613	Piston Assembly (Standard) ----- Note ----- 593108 Piston Assembly (.010" Oversize) 593109 Piston Assembly (.020" Oversize)
12A	592597	Gasket- Crankcase				26	592614	Ring Set (Standard) ----- Note ----- 593110 Ring Set (.010" Oversize) 593111 Ring Set (.020" Oversize)
13	797791	Screw (Cylinder Head)				27	592044	Lock- Piston Pin
15	797793	Plug- Oil Drain				28	592045	Pin- Piston
16A	593084	Crankshaft ----- Note ----- 593115 Crankshaft Used on Type No(s). 0003, 0021, 0022, 0033, 0034, 0047, 0058, 0062, 0063, 0064, 0068, 0070, 0075, 0080, 0221, 0222.				29	592046	Rod- Connecting
						33	592612	Valve- Exhaust
						34	592611	Valve- Intake
						35	591814	Spring- Valve (Intake)
						36	591814	Spring- Valve (Exhaust)
						40A	797782	Retainer- Valve
						40B	591815	Retainer- Valve
						40C	591816	Retainer- Valve

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
45	797786	Tappet- Valve	121D	593133	Kit- Carburetor Overhaul	190	590964	Screw (Fuel Tank)
46	592617	Camshaft (Used Before Code Date 15061500).	122	591797	Spacer- Carburetor	202	591834	Link- Mechanical Governor
		----- Note -----	125C	592594	Carburetor	209	591786	Spring- Governor
		595929 Camshaft (Used After Code Date 15061400).			----- Note -----	211	799927	Spring- Governed Idle
51	591779	Gasket- Intake			593745 Carburetor Used on Type No(s). 0047, 0048, 0050, 0075, 0218, 0221, 0222.	222	591810	Bracket- Control
51A	591798	Gasket- Intake				222E	593105	Bracket- Control
53	590390	Stud (Carburetor)	125D	592596	Carburetor Used on Type No(s). 0006, 0095.	222F	593315	Bracket- Control Used on Type No(s). 0009, 0027, 0028, 0036, 0049.
		----- Note -----			----- Note -----	227	592616	Lever- Governor Control
		591801 Stud (Carburetor) Used on Type No(s). 0006, 0013, 0014, 0015, 0045, 0067, 0088, 0103, 0104.			592595 Carburetor Used on Type No(s). 0013, 0014, 0015, 0045, 0067, 0088, 0103, 0104.	232	797809	Spring- Governor Link
55	591787	Housing- Rewind Starter	163	797756	Gasket- Air Cleaner	238	591817	Cap- Valve
58	691921	Rope- Starter (Cut To Required Length)	163A	799883	Gasket- Air Cleaner	240A	394358s	Filter- Fuel
60	691915	Grip- Starter Rope	176	799834	Seal- O Ring (Air Cleaner Base)	265	691024	Clamp- Casing
65	797654	Screw (Rewind Starter)	187A	592072	Line- Fuel	267	699492	Screw (Casing Clamp)
98	592978	Kit- Idle Speed	187B	593092	Line- Fuel	268	691025	Casing- Control Wire (Cut To Required Length)
117	592598	Jet- Main (Standard)			----- Note -----	269	691026	Wire- Control (Cut To Required Length)
		----- Note -----			592072 Line- Fuel Used on Type No(s). 0045, 0067.	270	691027	Nut (Control Wire Casing)
		592928 Jet- Main (Standard) Used on Type No(s). 0006.			593721 Line- Fuel Used on Type No(s). 0019, 0031, 0032, 0033, 0034, 0035, 0037, 0039, 0051, 0052, 0053, 0055, 0060, 0062, 0063, 0065, 0071, 0072, 0076, 0077, 0079, 0080, 0083.	271	691028	Lever- Control
		593503 Jet- Main (Standard) Used on Type No(s). 0013, 0014, 0015, 0045, 0067, 0088, 0103, 0104.			595442 Line- Fuel (Used After Code Date 14060800). Used on Type No(s). 0002, 0003, 0004, 0008, 0009, 0010, 0018, 0020, 0021, 0022, 0024, 0025, 0027, 0028, 0029, 0030, 0036, 0042, 0044, 0049, 0058, 0064, 0068, 0070, 0082, 0087, 0089, 0092, 0094, 0098.	276	797847	Washer- Sealing (Rocker Cover)
		----- Note -----						----- Note -----
		592928 Jet- Main (Standard) Used on Type No(s). 0006.						590987 Washer- Sealing (Rocker Cover) Used on Type No(s). 0002, 0003, 0004, 0006, 0018, 0020, 0021, 0022, 0047, 0048, 0050, 0058, 0066, 0075, 0082, 0089, 0098, 0218, 0221, 0222.
118	594713	Jet- Main (High Altitude)				281B	593099	Panel- Control
		799774 Jet- Main (High Altitude) Used on Type No(s). 0006.						----- Note -----
		594712 Jet- Main (High Altitude) Used on Type No(s). 0013, 0014, 0015, 0045, 0067, 0088, 0103, 0104.						593314 Panel- Control Used on Type No(s). 0009, 0027, 0028, 0036, 0049, 0102.
								593732 Panel- Control Used on Type No(s). 0030, 0032, 0034, 0042, 0044, 0050, 0052, 0053, 0060, 0062, 0066, 0071, 0072, 0075, 0080,
121C	592229	Kit- Carburetor Overhaul	188	798618	Screw (Control Bracket)			

19N100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0087, 0091, 0094.						(Crankcase Cover)
286	797772	Module- Oil Sensor	474	591100	Alternator	725	595432	Shield- Heat
287	798618	Screw	485	797339	Knob- Control	729	797750	Clip- Wire
		(Dipstick Tube)	492	592037	Shield- Crankcase	729B	592311	Clip- Wire
297	591808	Nut	493B	691177	Bracket- Mounting	729C	593137	Clip- Wire
		(Air Filter Retainer)	493C	591342	Bracket- Mounting	789	797856	Harness- Wiring
300A	593090	Muffler	501	845907	Regulator			Used on Type No(s).
300B	192569GS	Muffler	505	690939	Nut			0006, 0013, 0014,
300D	593128	Muffler			(Governor Control			0015, 0032, 0045,
304	591785	Housing- Blower			Lever)			0053, 0060, 0062,
305	798618	Screw	509	798840	Screw			0067, 0103, 0104.
		(Blower Housing)			(Crankcase Shield)	789B	593082	Harness- Wiring
306	591790	Shield- Cylinder	522	799941	Plug- Dipstick/Fill			Used on Type No(s).
307	798618	Screw	522A	797762	Plug- Dipstick/Fill			0002, 0003, 0004,
		(Cylinder Shield)	526	690297	Screw			0008, 0009, 0010,
309	591780	Motor- Starter			(Regulator)			0018, 0019, 0022,
332	797811	Nut	529	799933	Grommet			0024, 0025, 0028,
		(Flywheel)			(Fuel Tank)			0029, 0031, 0033,
333	797769	Armature- Magneto	535	591778	Filter- Air Cleaner			0035, 0039, 0047,
333A	798616	Armature- Magneto			Foam			0055, 0058, 0063,
334	797655	Screw	555	799532	Screw			0064, 0068, 0070,
		(Magneto Armature)			(Starter Solenoid)			0082, 0083, 0089,
337	798615	Plug- Spark	562	797230	Bolt			0102, 0218, 0222.
341	591341	Stud- Mounting			(Governor- Control	789C	590371	Harness- Wiring
346	B5763GS	Screw			Lever)			Used on Type No(s).
347	797340	Switch- Rocker	575	593734	Switch- Starting			0034, 0080.
357	590960	Key- Drive Pulley	597	799972	Screw	789D	590372	Harness- Wiring
		----- Note -----			(Pawl Friction Plate)			Used on Type No(s).
		591054 Key- Drive	601	791850	Clamp- Hose			0027, 0030, 0036,
		Pulley	608	591781	Starter- Rewind			0042, 0044, 0049,
		Used on Type No(s).	614	797229	Pin- Cotter			0050, 0052, 0066,
		0003, 0021, 0022,	616	592615	Crank- Governor			0075, 0076, 0077,
		0033, 0047, 0058,	621	692310	Switch- Stop			0087, 0095.
		0064, 0070, 0075,	631	797794	Washer	789E	591390	Harness- Wiring
		0094, 0221, 0222.			(Oil Drain Plug)			Used on Type No(s).
358	593112	Gasket Set- Engine	635	797658	Boot- Spark Plug			0071, 0072, 0091,
361	798618	Screw	635A	797685	Boot- Spark Plug			0094.
		(Starting Switch)	643	591806	Retainer- Air Filter	789F	593722	Harness- Wiring
363	19203	Puller- Flywheel	654	690939	Nut			Used on Type No(s).
367	798618	Screw			(Carburetor)			0020, 0021, 0037,
		(Wire Clip)	663	799846	Screw			0048, 0051, 0059,
383	19576S	Wrench- Spark Plug			(Control Panel)			0065, 0079, 0092,
411	797686	Screw	676	590953	Deflector- Muffler			0099, 0221.
		(Air Cleaner Base to	676B	697816	Deflector- Muffler	799	798975	Screw
		Carburetor)	677	699203	Screw			(Oil Sensor)
412	799830	Nut			(Muffler Deflector)	813	590392	Clamp
		(Air Cleaner Cover)	677B	699776	Screw	819	798618	Screw
436	593089	Manifold- Exhaust			(Muffler Deflector)			(Muffler Bracket)
445	491588s	Filter- Air Cleaner	689	799669	Spring- Friction	830	591088	Stud- Rocker Arm
		Cartridge	703	590967	Clip	832A	593091	Guard- Muffler
445C	592605	Filter- Air Cleaner			(Fuel Hose)	832B	595453	Guard- Muffler
		Cartridge	705	590965	Nut	832C	595433	Guard- Muffler
455	591820	Cup- Flywheel			(Fuel Tank)	832D	595434	Guard- Muffler
456	799973	Plate- Pawl Friction	717	593134	Bracket- Air Cleaner	836A	798976	Screw
459	799976	Pawl- Ratchet	718	797792	Pin- Locating			(Muffler Guard)
467	691985	Knob- Air Cleaner			(Cylinder Head)	836B	595455	Screw
			718A	797761	Pin- Locating			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		(Muffler Guard)						
842	797327	Seal- O Ring	968	590958	Cover- Air Cleaner	1058	80006756USCN	Manual- Operator's
		(Dipstick Tube)			Used on Type No(s).			----- Note -----
842A	797763	Seal- O Ring			0013, 0014.			80006756WST
		(Dipstick Tube)			----- Note -----			Manual- Operator's
842B	691031	Seal- O Ring			791082 Cover- Air			80006756EST
		(Dipstick Tube)			Cleaner			Manual- Operator's
847	593174	Dipstick/Tube			Used on Type No(s).			279127ZH
		Assembly			0013, 0014, 0015,	1095	593113	Manual- Operator's
863A	593733	Bracket- Muffler	968A	591803	Cover- Air Cleaner			Gasket Set- Valve
868	797854	Seal- Valve	968B	593087	Cover- Air Cleaner	1119	799845	Screw
		(Intake)	972	593095	Tank- Fuel			(Alternator)
875	799776	Base- Air Cleaner	972A	593720	Tank- Fuel	1177	590965	Nut
		(Plastic)	990	590996	Key Set			(Muffler)
875A	591804	Base- Air Cleaner	994	790153	Arrestor- Spark	1210	591788	Pulley/Spring
		(Plastic)	994A	594233	Arrestor- Spark			Assembly
875C	593088	Base- Air Cleaner	994B	796399	Arrestor- Spark			(Pulley)
		(Plastic)	994C	595454	Arrestor- Spark	1211	591788	Pulley/Spring
883	797770	Gasket- Exhaust	1005	591789	Fan- Flywheel			Assembly
883A	799797	Gasket- Exhaust	1009	593136	Screw			(Spring)
899	799642	Washer			(Starter Motor)	1302	590457	Washer
		(Starter Solenoid)	1012	590378	Retainer- Link			(Muffler Guard)
914	797848	Screw	1022	797846	Gasket- Rocker Cover	1302A	593727	Washer
		(Rocker Cover)	1023	799778	Cover- Rocker Arm			(Muffler Guard)
		----- Note -----			----- Note -----	1305	798618	Screw
		590988 Screw			590989 Cover-			(Oil Sensor Module)
		(Rocker Cover)			Rocker Arm	1319	794467	Label- Warning
		Used on Type No(s).			Used on Type No(s).	1319A	797669	Label- Warning
		0002, 0003, 0004,			0002, 0003, 0004,	1345	792917	Filter- Filler Neck
		0006, 0018, 0020,			0006, 0018, 0020,	1408	690939	Nut
		0021, 0022, 0047,			0021, 0022, 0047,			(Air Cleaner Bracket)
		0048, 0050, 0058,			0048, 0050, 0058,	1453	591807	Seal- Air Cleaner
		0066, 0075, 0082,			0066, 0075, 0082,			Cover
		0089, 0098, 0218,			0089, 0098, 0218,	1469A	22097GS	Washer
		0221, 0222.			0221, 0222.			(Air Cleaner Bracket)
920	799481	Solenoid- Starter	1026	591818	Rod- Push	1509	797346	Outlet- Tank
951	592068	Lever- Choke	1029	591087	Arm- Rocker			(Contains Fuel
		Used on Type No(s).	1034	591819	Guide- Push Rod			Filter/Screen)
		0006.	1036		Label- Emissions			
		----- Note -----			(Available From A			
		797759 Lever- Choke			Briggs & Stratton			
		Used on Type No(s).			Authorized Dealer)			
		0013, 0014, 0015,	1052	797771	Sensor- Oil			
		0045, 0067, 0103,						
		0104.						
951A	593102	Lever- Choke						
957	794641	Cap- Fuel Tank						
957A	799324	Cap- Fuel Tank						
964	799159	Cap- Connector						

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

