

49T800

Illustrated Parts List

Model Series

49T800

 
 


TYPE NUMBERS
0001 THROUGH 0021.

Not for
Reproduction



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

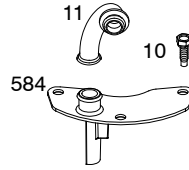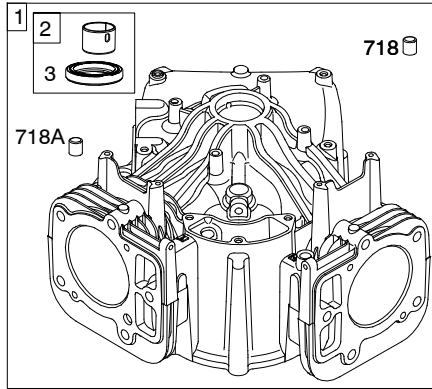

1319 WARNING LABEL







 

 



 


REQUIRED when replacing parts with warning labels affixed.


1319A WARNING LABEL






 

REQUIRED when replacing parts with warning labels affixed.


1036 EMISSIONS LABEL

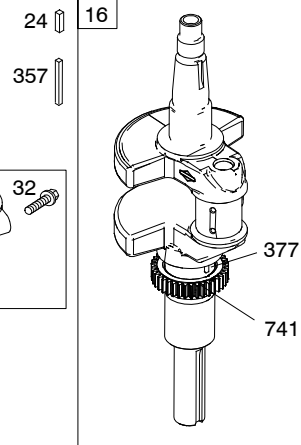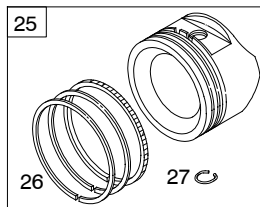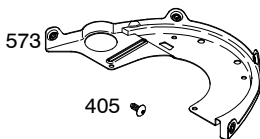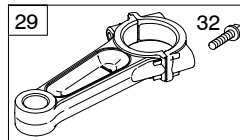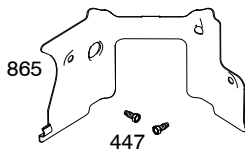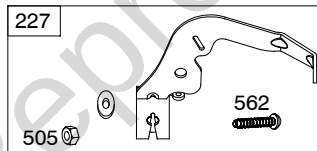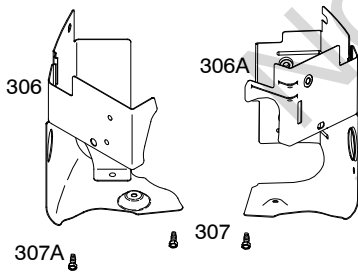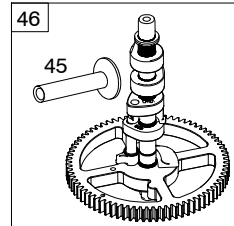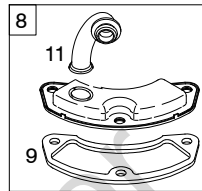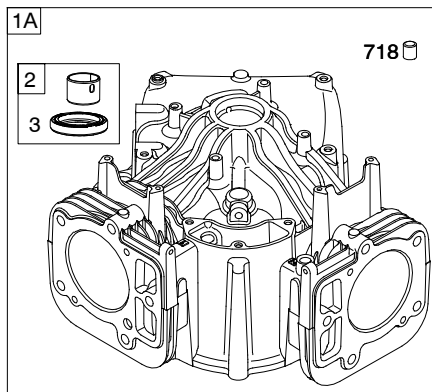




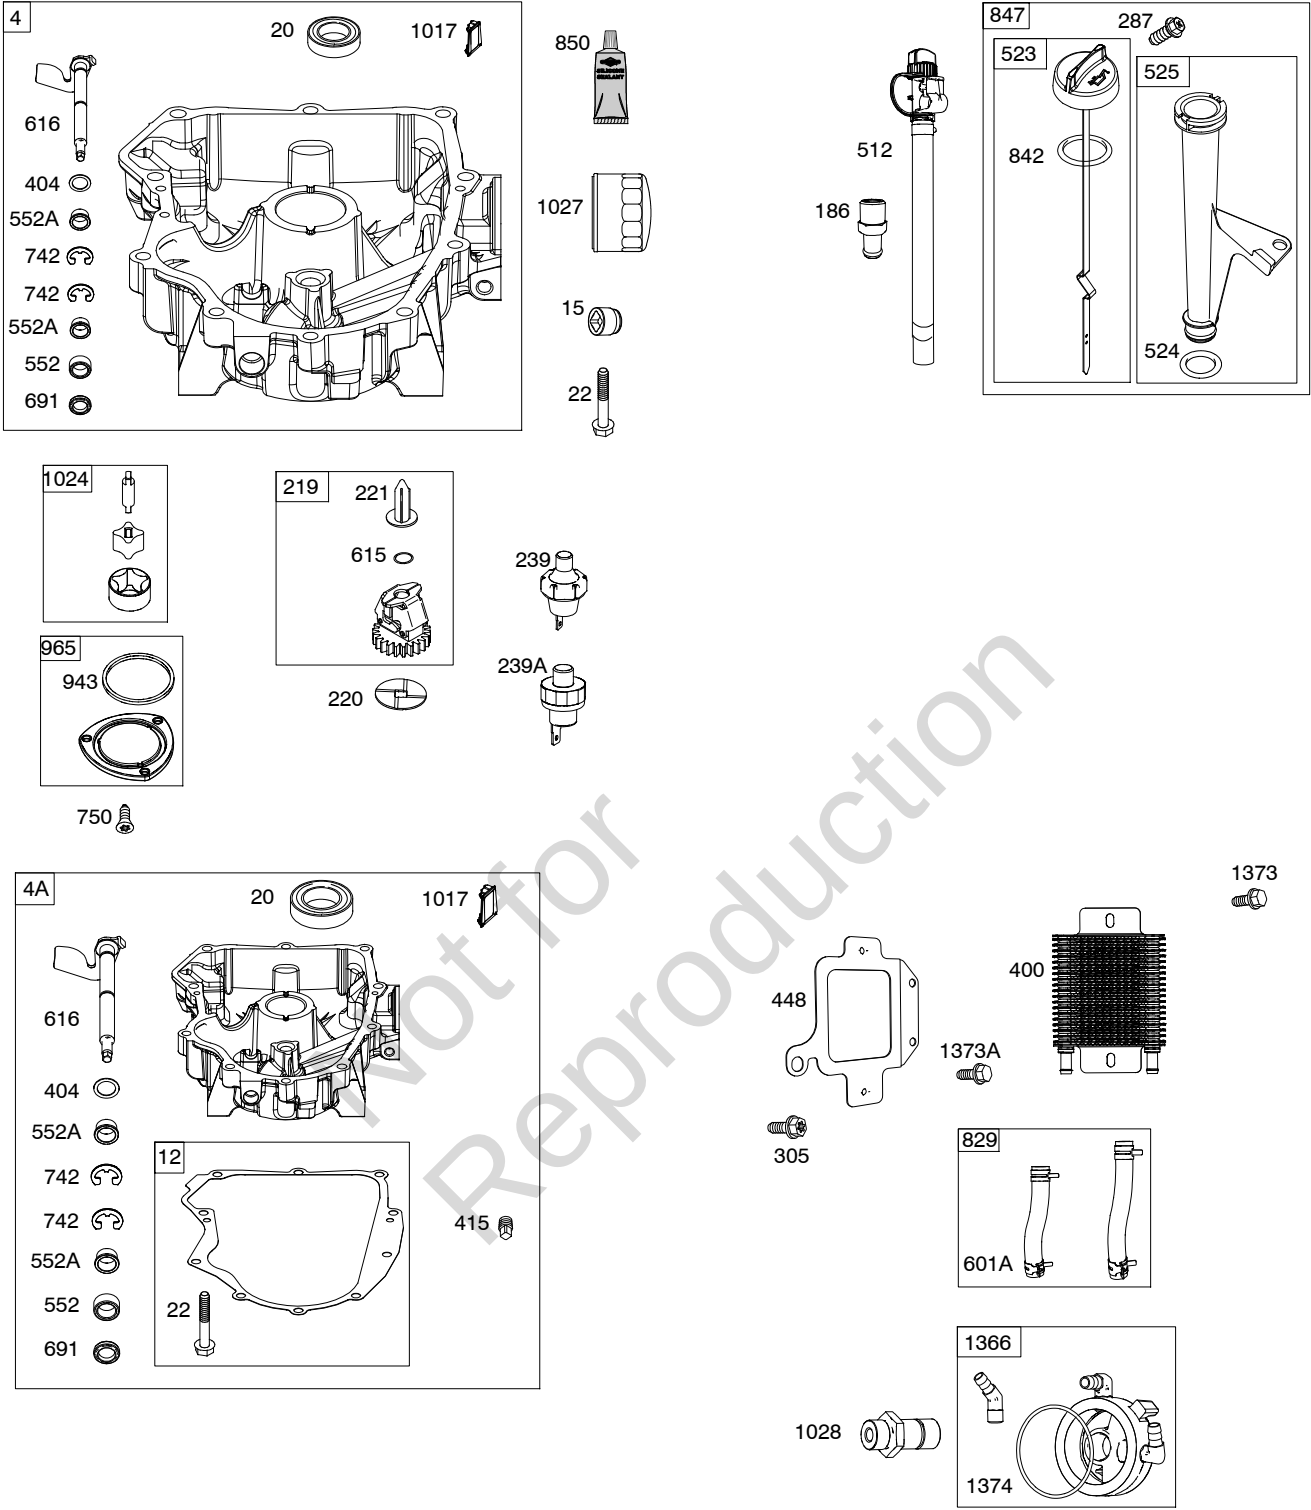


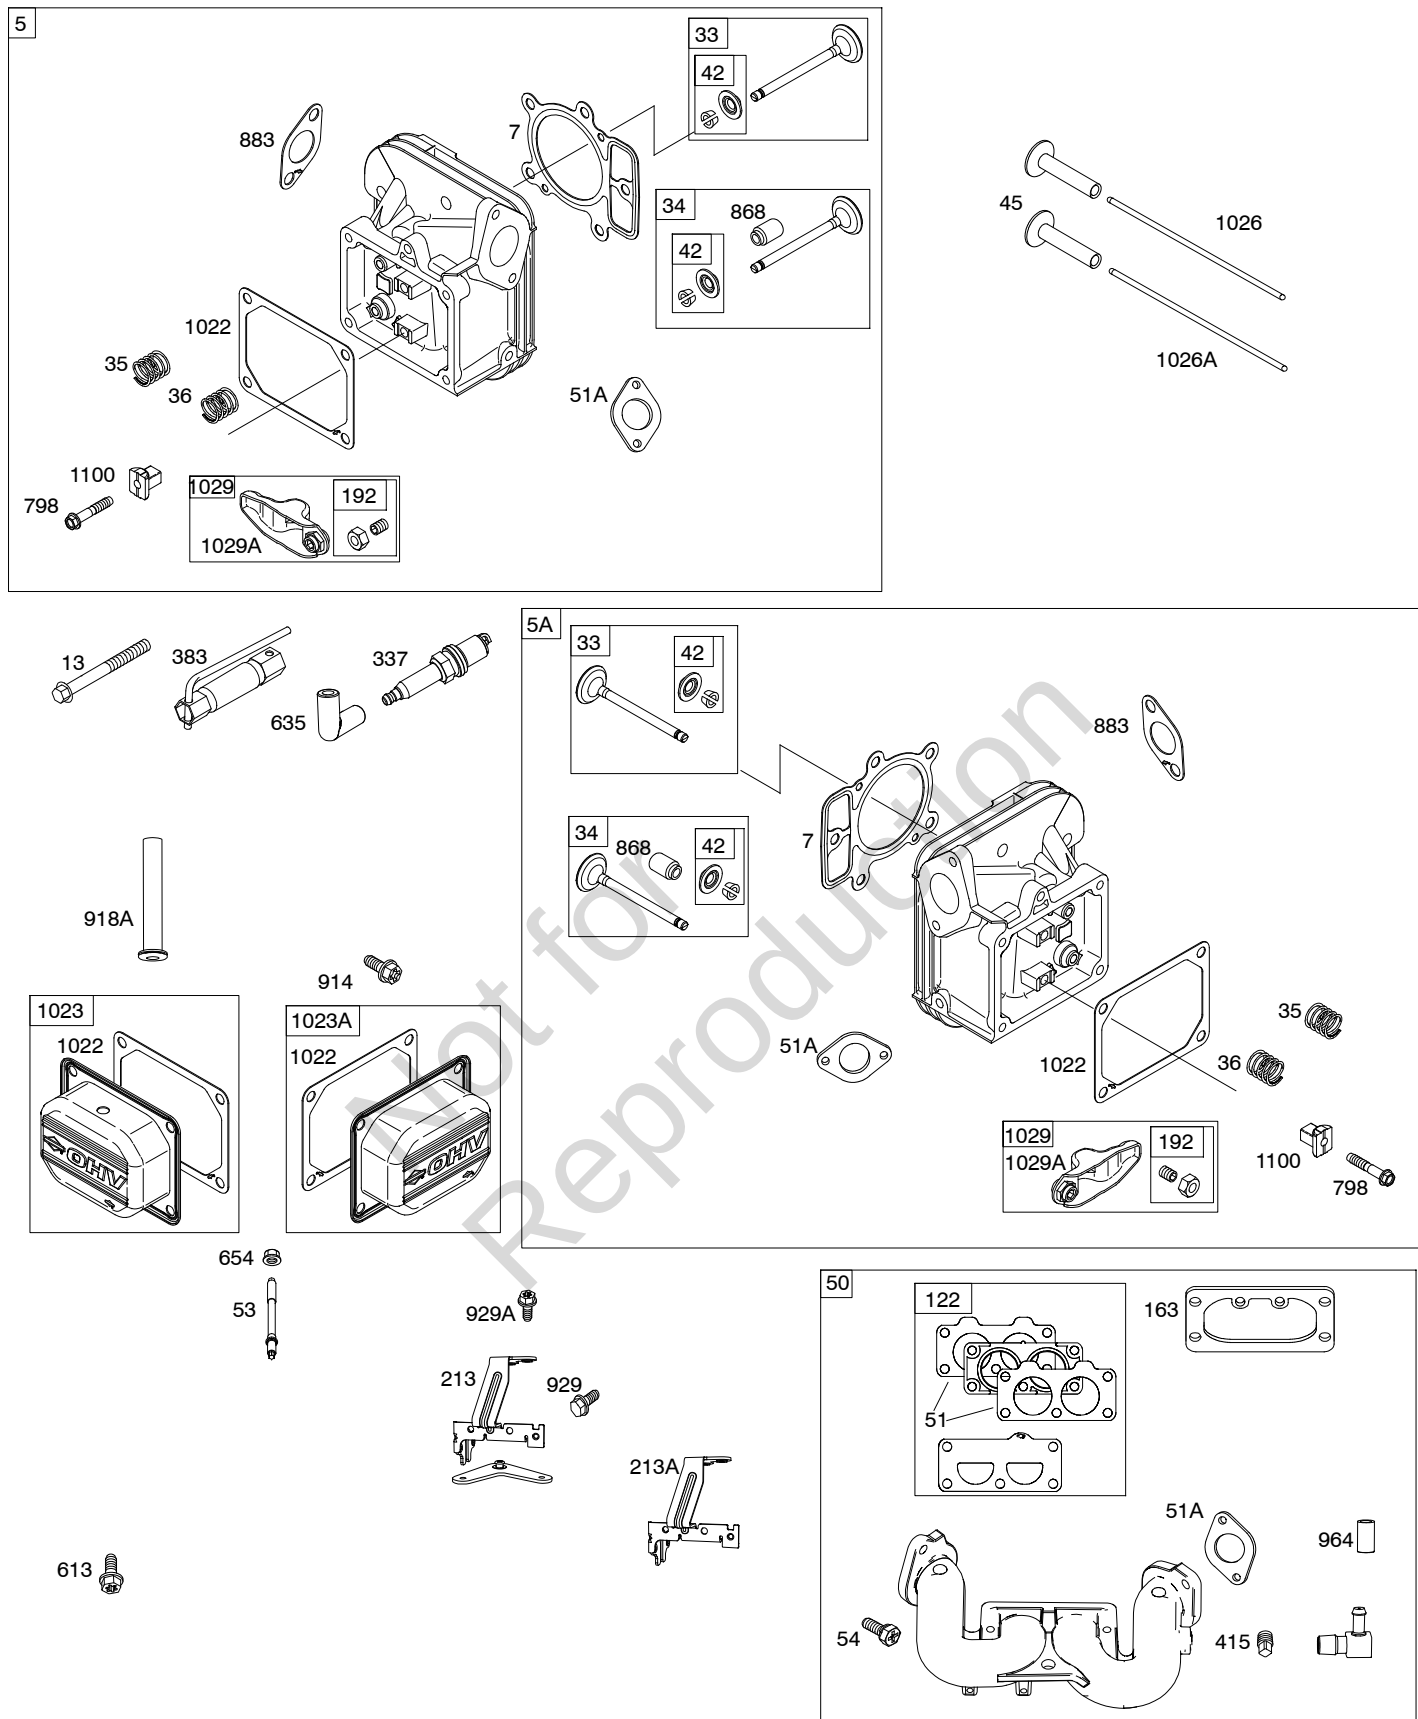

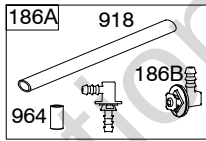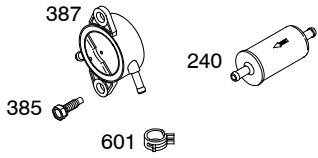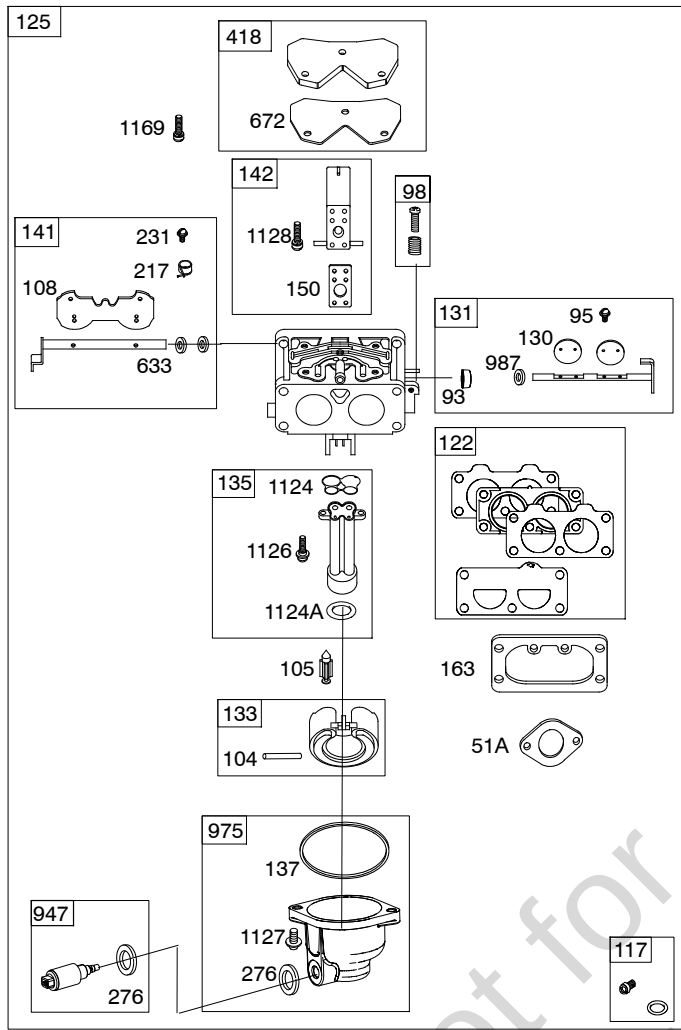

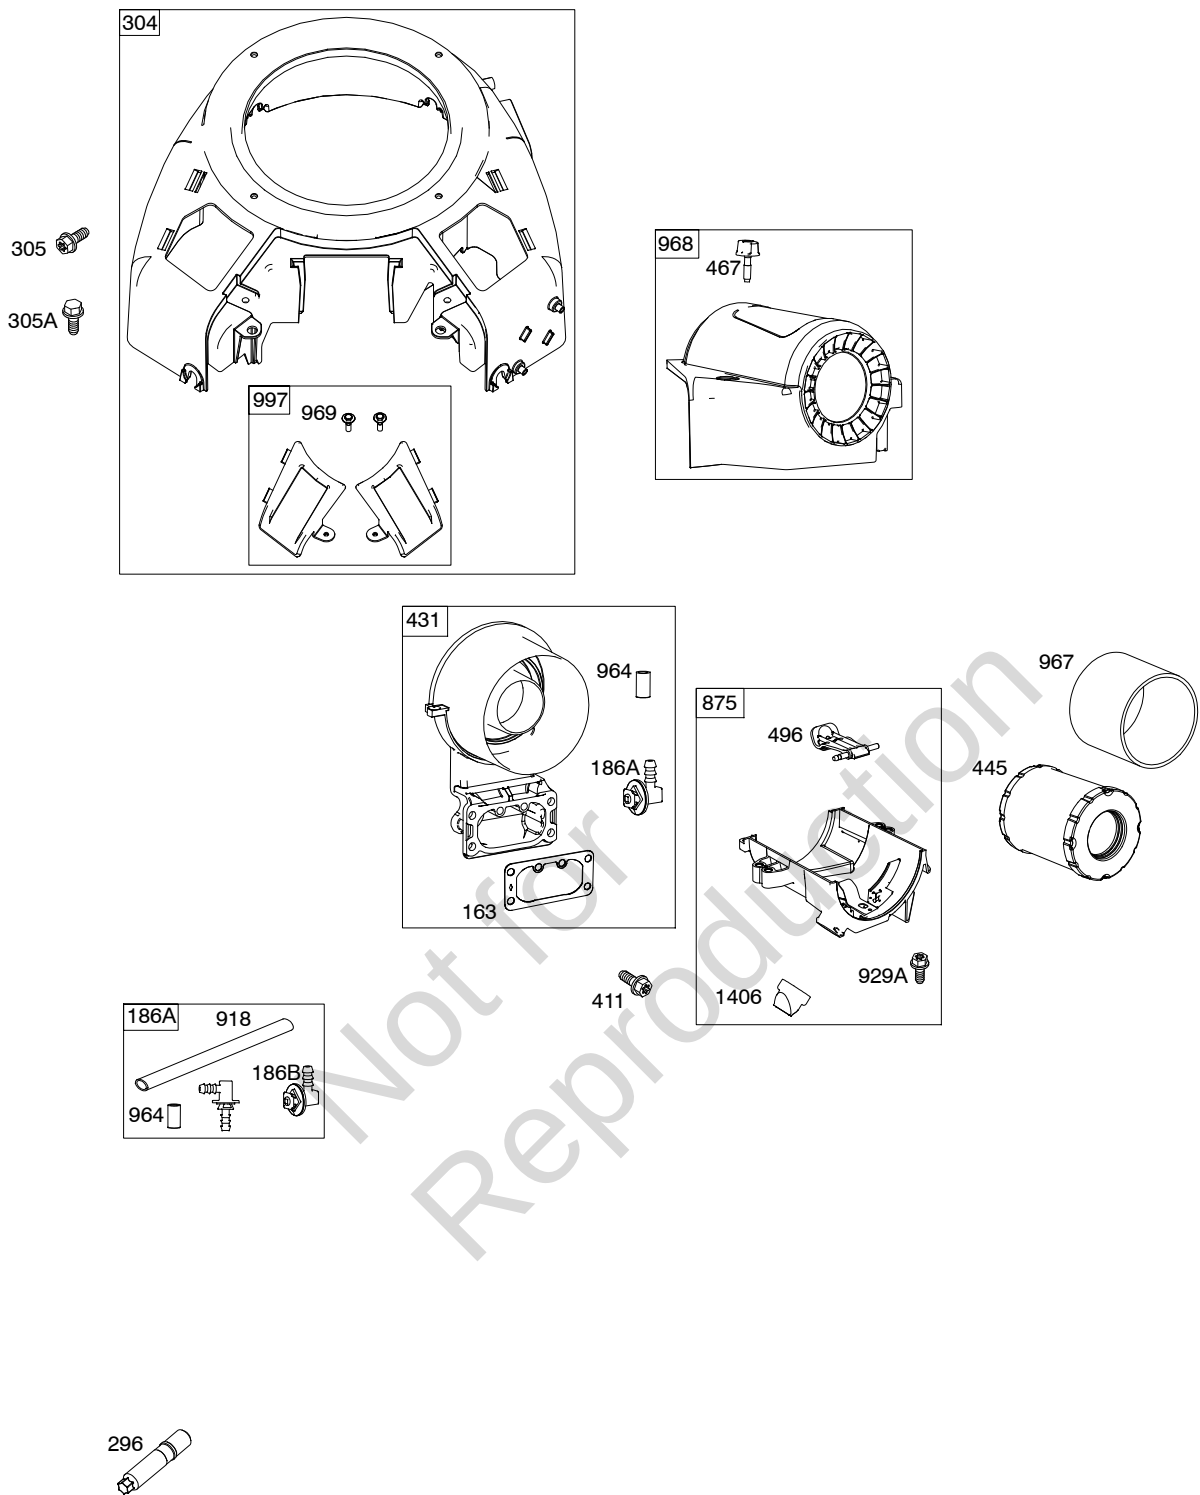

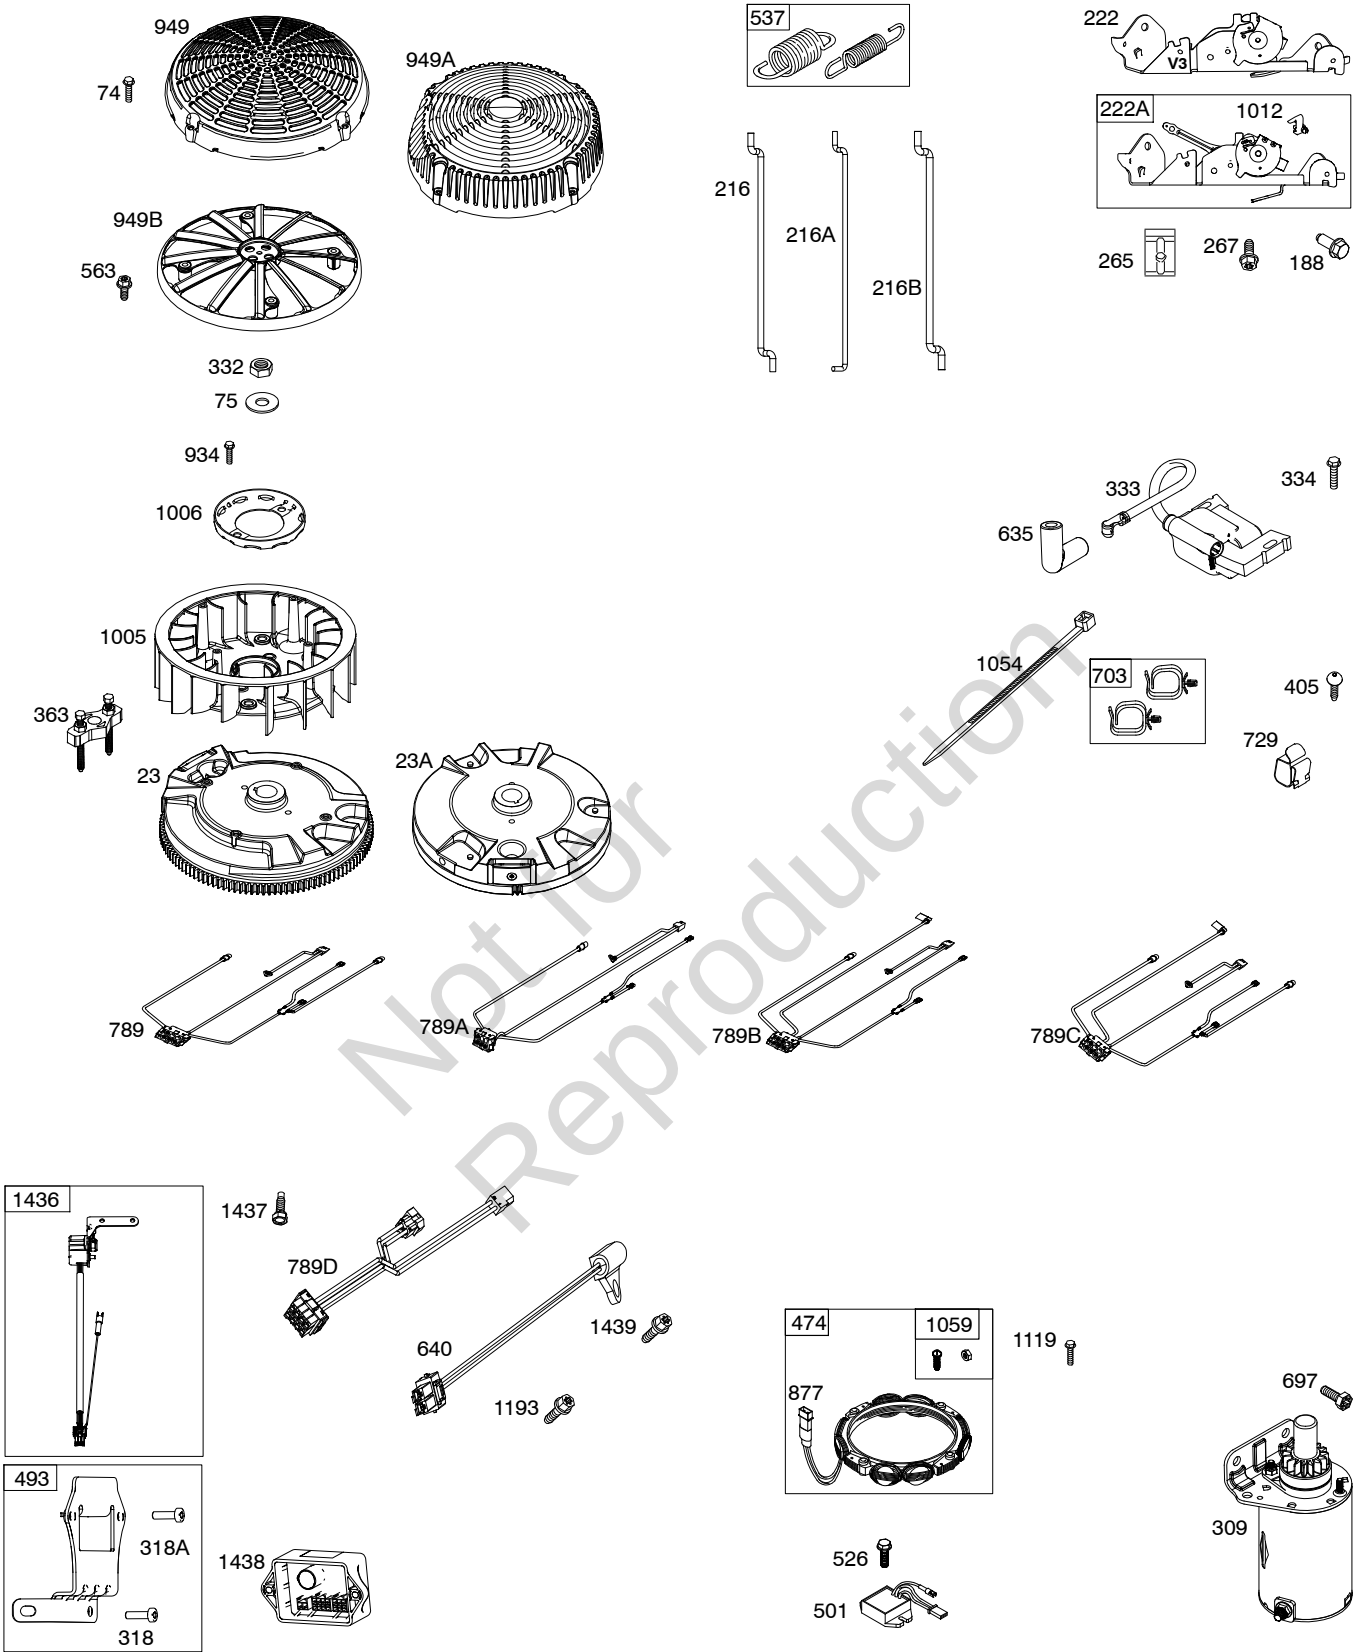

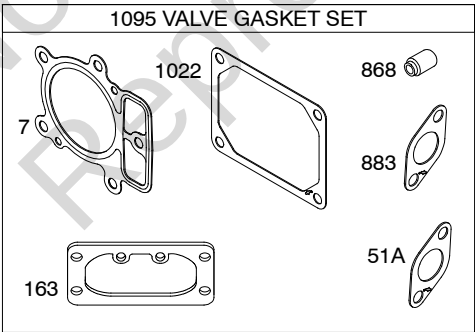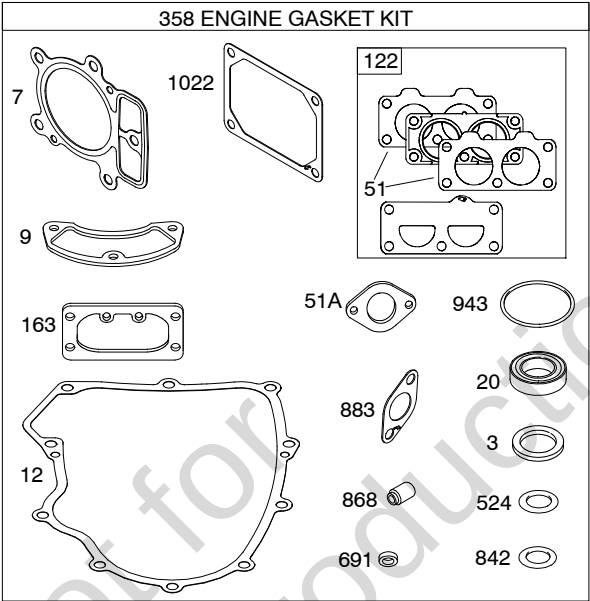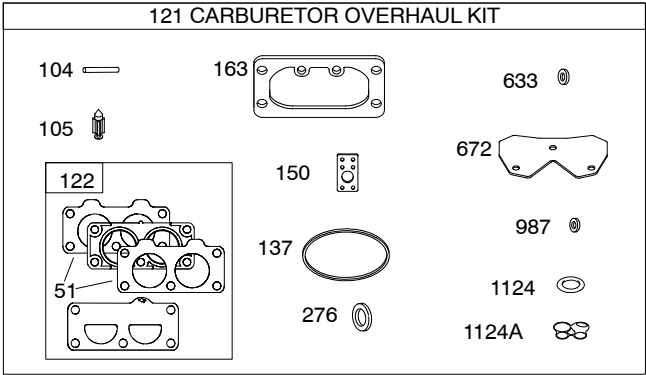

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	594972	Cylinder Assembly (Used After Code Date 15071500)	23A	594169	Flywheel	135	699729	Tube-Fuel Transfer
1A	591696	Cylinder Assembly (Used Before Code Date 15071600)	24	796335	Key-Flywheel	137	690994	Gasket-Float Bowl
2	797673	Kit-Bushing/Seal (Magneto Side)	25	796909	Piston Assembly (Standard)	141	799112	Kit-Choke Shaft
3	391086s	Seal-Oil (Magneto Side)			----- Note -----	142	796871	Nozzle-Carburetor
4	593652	Sump-Engine (Used After Code Date 15071500)			796910 Piston Assembly (.020" Oversize)	150	841649	Gasket-Nozzle
4A	797502	Sump-Engine (Used Before Code Date 15071600)	26	796911	Ring Set (Standard)	163	691001	Gasket-Air Cleaner
5	799088	Head-Cylinder (Cylinder #1)			----- Note -----	186	796532	Connector-Hose (Oil Drain)
5A	799089	Head-Cylinder (Cylinder #2)			796912 Ring Set (.020" Oversize)	186A	799158	Connector-Hose (EVAP)
7	796851	Gasket-Cylinder Head	27	690975	Lock-Piston Pin	186B	845141	Connector-Hose (EVAP)
8	792185	Breather Assembly (Used Before Code Date 14110500)	28	696581	Pin-Piston	187	791766	Line-Fuel (15" Long)(Cut to Required Length)
9	690937	Gasket-Breather (Used Before Code Date 14110500)	29	796209	Rod-Connecting	188	691108	Screw (Control Bracket)
10	691108	Screw (Breather Assembly)	32	690976	Screw (Connecting Rod)	192	690083	Adjuster-Rocker Arm
11	594163	Tube-Breather (Used After Code Date 14110400)	33	793557	Valve-Exhaust	212	695238	Link-Throttle
		----- Note -----	34	793556	Valve-Intake	213	799510	Bracket-Choke (Manual Choke)
		792184 Tube-Breather (Used Before Code Date 14110500)	35	694865	Spring-Valve (Intake)	213A	799153	Bracket-Choke (EFM or Choke-A-Matic) Used on Type No(s). 0009.
12	594195	Gasket-Crankcase (Used Before Code Date 15071600)	36	694865	Spring-Valve (Exhaust)	216	691022	Link-Choke
13	592244	Screw (Cylinder Head)	42	499586	Keeper-Valve	216A	796229	Link-Choke Used on Type No(s). 0009.
15	690946	Plug-Oil Drain	45	690977	Tappet-Valve	216B	796879	Link-Choke Used on Type No(s). 0008, 0011, 0012, 0015, 0016.
16	796855	Crankshaft	46	796853	Camshaft	217	799771	Spring-Choke Return
		----- Note -----	50	797503	Intake Manifold	219	793338	Gear-Governor
		796857 Crankshaft Used on Type No(s). 0011, 0012, 0015, 0017, 0021.	51	796876	Gasket-Intake	220	799772	Washer (Governor Gear)
20	795387	Seal-Oil (PTO Side)	51A	690949	Gasket-Intake	221	841026	Cup-Governor
22	694966	Screw (Crankcase Cover/Sump)	53	690951	Stud (Carburetor)	222	798916	Bracket-Control (V3 Manual Choke)
23	799090	Flywheel Used on Type No(s). 0005.	54	699816	Screw (Intake Manifold)	222A	592555	Bracket-Control Used on Type No(s). 0009.
			74	698425	Screw (Rotating Screen)	227	798856	Lever-Governor Control
			75	691056	Washer (Flywheel)	231	690718	Screw (Choke Valve)
			93	845864	Collar-Throttle	239	697049	Switch-Oil Pressure Used on Type No(s). 0007, 0012.
			95	690718	Screw (Throttle Valve)	239A	792028	Switch-Oil Pressure Used on Type No(s). 0002, 0008, 0009, 0019, 0020, 0021.
			98	699721	Kit-Idle Speed	240	695666	Filter-Fuel
			104	694918	Pin-Float Hinge			
			105	797410	Valve-Float Needle			
			108	699723	Valve-Choke			
			117	842082	Jet-Main (Standard)			
			118	842081	Jet-Main (High Altitude)			
			121	799132	Kit-Carburetor Overhaul			
			122	798759	Gasket-Intake			
			125	799511	Carburetor			
			130	796875	Valve-Throttle			
			131	796872	Kit-Throttle Shaft			
			133	699724	Float-Carburetor			

49T800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
250	690957	Retainer-Breather (Used Before Code Date 14110500)	387	808656	Pump-Fuel	563	799360	Screw (Debris Screen Guard)
252	794389	Collector-Oil (Used Before Code Date 14110500)	400	796862	Cooler-Oil	573	594902	Plate-Back
265	691024	Clamp-Casing	404	690442	Washer (Governor Crank)	584	594164	Cover-Breather
267	792629	Screw (Casing Clamp)	405	594937	Screw (Backplate)	601	691038	Clamp-Hose
276	695410	Washer-Sealing	411	698304	Screw (Air Cleaner Base)	601A	841597	Clamp-Hose
287	697820	Screw (Dipstick Tube)	415	794903	Plug	613	690341	Screw (Muffler)
296	591756	Stud (Muffler)	418	795912	Plate-Carburetor	615	698290	Retainer-Governor Shaft
304	799957	Housing-Blower	431	799097	Elbow-Intake	616	691045	Crank-Governor
305	594618	Screw (Blower Housing)	445	798897	Filter-Air Cleaner Cartridge	618	594326	Screw (Breather Baffle Plate)
305A	557049	Screw (Blower Housing to Air Cleaner Base)	448	799103	Bracket-Oil Cooler	633	690722	Seal-Choke Shaft
306	796852	Shield-Cylinder (Cylinder #1)	467	790697	Knob-Air Cleaner	635	692076	Boot-Spark Plug
306A	591666	Shield-Cylinder (Cylinder #2)	474	592830	Alternator (10-17 Amp. Regulated)	640	796913	Thermostat
307	691003	Screw (Cylinder Shield)	493	797176	Bracket-Electronic Choke Module	654	690958	Nut (Carburetor)
307A	691108	Screw (Cylinder Shield)	496	799095	Lever-Air Cleaner Base	672	690234	Gasket-Carburetor Plate
309	590476	Motor-Starter	501	593490	Regulator	691	690657	Seal-Governor Shaft
318	691127	Screw (Mounting Bracket)	505	691029	Nut (Governor Control Lever)	697	591909	Screw (Drive Cap)
318A	792629	Screw (Electronic Choke Module to Mounting Bracket)	512	594200	Hose-Oil Drain	703	691010	Clip
332	691059	Nut (Flywheel)	523	594528	Dipstick	718	690959	Pin-Locating
333	592846	Armature-Magneto	524	691032	Seal-Dipstick Tube	718A	594988	Pin-Locating
334	691061	Screw (Magneto Armature)	525	691037	Tube-Dipstick	729	593826	Clip-Wire
337	792015	Plug-Spark ----- Note ----- 491055s Plug-Spark Used on Type No(s). 0002, 0004, 0012, 0018, 0021. 696202 Plug-Spark Used on Type No(s). 0008.	526	691108	Screw (Regulator)	741	690980	Gear-Timing
357	691483	Key-Pulley	535	593217	Filter-Foam	742	690328	Retainer-E Ring
358	799117	Gasket Set-Engine	537	594920	Kit- Governor/Idle Spring	750	796208	Screw (Oil Pump Cover)
363	19203	Puller-Flywheel	540	594325	Plate-Breather Baffle	789	796860	Harness-Wiring Used on Type No(s). 0011, 0015, 0016.
377	690979	Key-Woodruff	552	796638	Bushing-Governor Crank	789A	591392	Harness-Wiring Used on Type No(s). 0001, 0003, 0004, 0005, 0006, 0010, 0013, 0014, 0017, 0018.
383	19576s	Wrench-Spark Plug	552A	690553	Bushing-Governor Crank	789B	591393	Harness-Wiring Used on Type No(s). 0002, 0007, 0009, 0019, 0020, 0021.
385	797409	Screw (Fuel Pump)	562	690311	Bolt (Governor Control Lever)	789C	797492	Harness-Wiring Used on Type No(s). 0008, 0012.
						789D	796914	Harness-Wiring Used on Type No(s). 0008, 0011, 0012, 0015, 0016.
						798	697890	Screw (Rocker Arm)
						829	799104	Hose-Oil Cooler
						842	691031	Seal-O Ring (Dipstick)

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
847	594609	Dipstick/Tube Assembly	975	799114	Bowl-Float/Solenoid	1124A	841653	Seal-O Ring (Fuel Transfer Tube)
850	100106	Sealant-Liquid	987	808183	Seal-Throttle Shaft	1126	690991	Screw (Fuel Transfer Tube)
865	591665	Cover-Air Guide (Valley)	997	592782	Shield-Debris	1127	695407	Screw (Float Bowl)
868	690968	Seal-Valve	1005	593640	Fan-Flywheel	1128	690990	Screw (Carburetor Nozzle)
875	799094	Base-Air Cleaner	1006	798750	Retainer-Fan	1169	690990	Screw (Carburetor Cover Plate)
877	399916	Wire/Connector-Alternator	1012	592556	Retainer-Link	1193	592577	Screw (Thermostat)
883	690970	Gasket-Exhaust	1017	796214	Screen-Oil Pump	1263	594166	Reed-Valve Breather
914	691127	Screw (Rocker Cover)	1022	690971	Gasket-Rocker Cover	1264	594165	Screw (Valve Breather Reed)
918	799160	Hose-Vacuum (Length 9.4 Inches)	1023A	499600	Cover-Rocker (Cylinder #2)	1319	794467	Label-Warning
918A	593998	Hose-Vacuum (Length 3.2 Inches)	1024	794644	Pump-Oil	1319A	797669	Label-Warning
929	691003	Screw (Choke Bracket To Manifold)	1026	690981	Rod-Push (Steel)	1366	799131	Diverter-Oil Cooler
929A	794904	Screw (Air Cleaner Base Tab to Choke)	1026A	690982	Rod-Push (Aluminum)	1373	695629	Screw (Oil Cooler Bracket)
934	593638	Screw (Fan Retainer)	1027	696854	Filter-Oil (Black)	1373A	799105	Screw (Oil Cooler Bracket)
943	796222	Seal-O Ring (Oil Pump Cover)	----- Note -----			1374	796863	Seal-O-Ring (Oil Cooler Diverter)
947	798779	Solenoid-Fuel	1028	796864	Adapter-Oil Filter	1406	799096	Valve
949	799357	Cover-Static	1029	690972	Arm-Rocker	1436	799108	Motor-Stepper
949A	593218	Cover-Static Used on Type No(s). 0010.	1029A	807323	Arm-Rocker	1437	695239	Screw (Stepper/Bracket Motor)
949B	593206	Screen-Debris Guard	1036		Label-Emissions (Available From A Briggs And Stratton Authorized Dealer)	1438	796352s	Module-Electronic Choke
964	799159	Cap-Connector	1054	280275	Tie-Cable	1439	794904	Screw (Thermistor Bracket)
965	796221	Cover-Oil Pump	1059	698516	Kit-Screw/Washer			
967	593217	Filter-Foam	1095	796920	Gasket Set-Valve			
968	799102	Cover-Air Cleaner	1100	791959	Pivot-Rocker Arm			
969	799093	Screw (Blower Housing Cover)	1119	691183	Screw (Alternator)			
			1124	690988	Seal-O Ring (Fuel Transfer Tube)			

Not for
Reproduction

