



12T100

Illustrated Parts List

Model Series

12T100

TYPE NUMBERS

0003, 0023, 0035, 0036, 0049, 0060, 0115, 0116, 0120, 0122, 0123, 0124, 0125, 0126, 0140, 0141,
0398, 0401, 0537, 0616, 0617, 0751, 0911, 0937, 1060, 1275, 1289, 2050, 2144, 2194, 2202, 2321,
2322, 2424, 2750, 2776.


Not for
Reproduction












PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without
permission
in writing from Briggs & Stratton Corporation


12T100

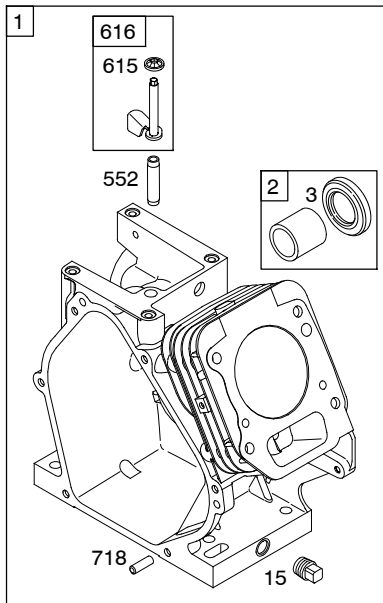


 
 

 


1036 EMISSIONS LABEL
1058 OPERATOR'S MANUAL
1319 WARNING LABEL
1319A WARNING LABEL
1330 REPAIR MANUAL

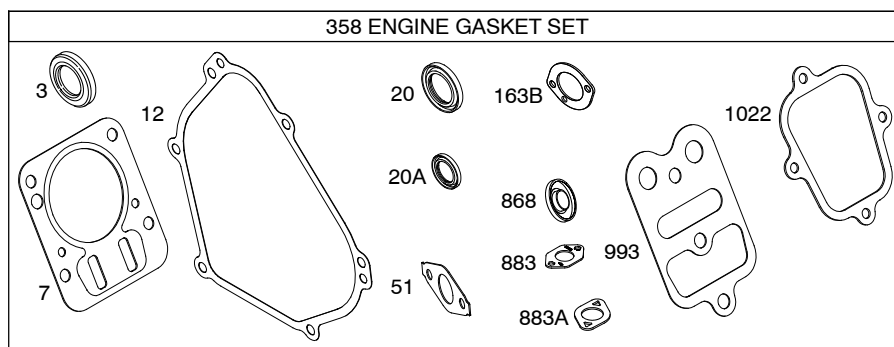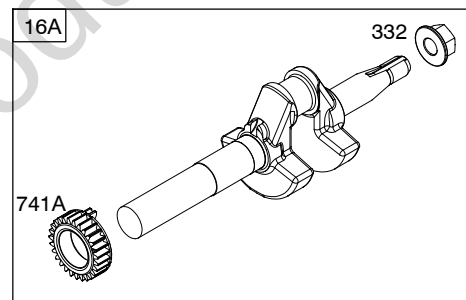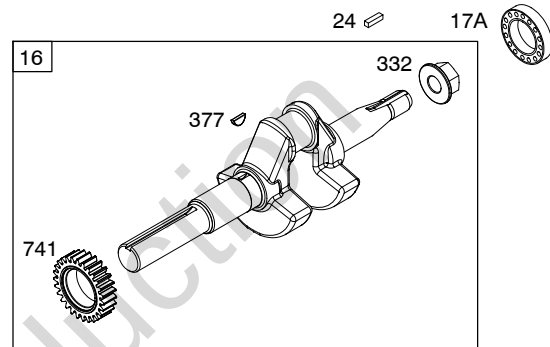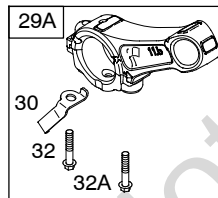
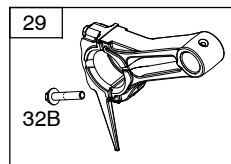
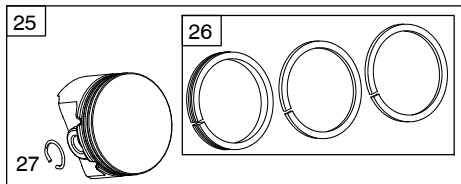







Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3996-2 Assemblies include all parts shown in frames. **10/23/2015**

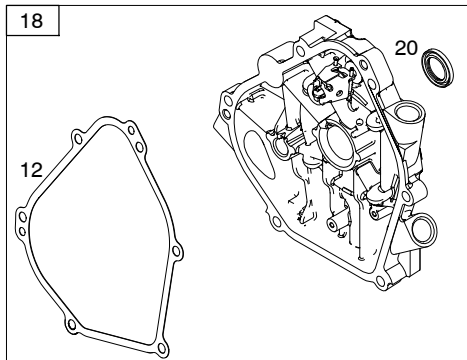




- 21
- 415
- 522
- 170
- 22

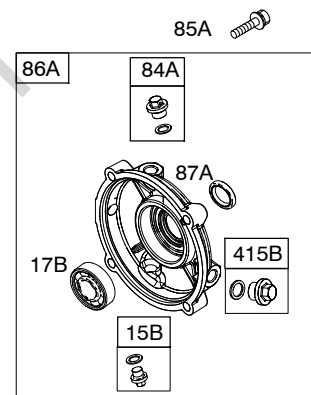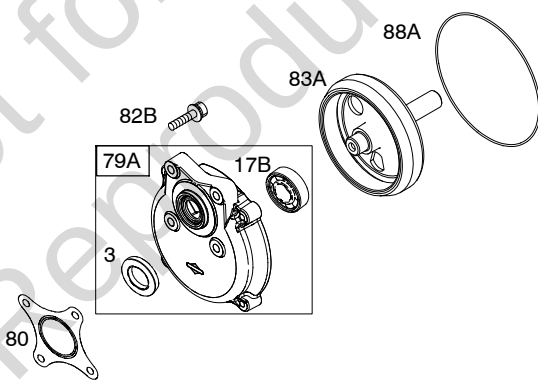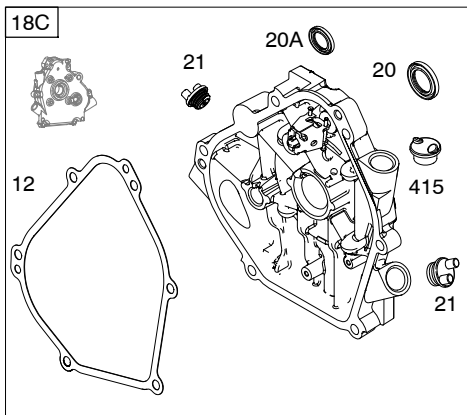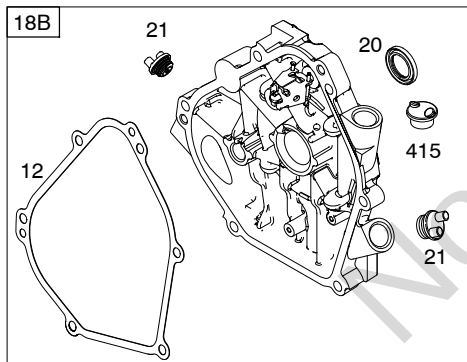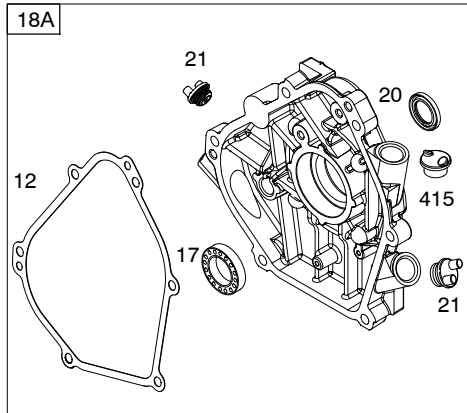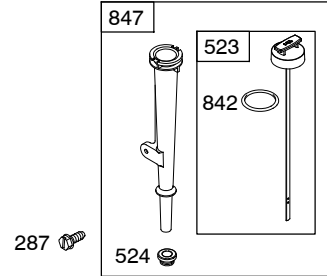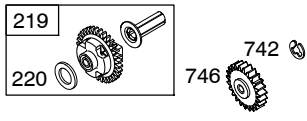


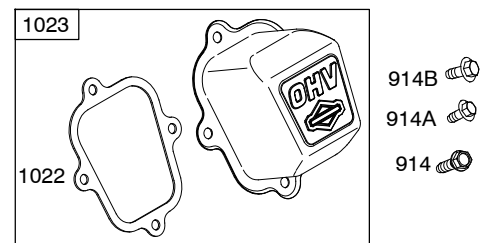
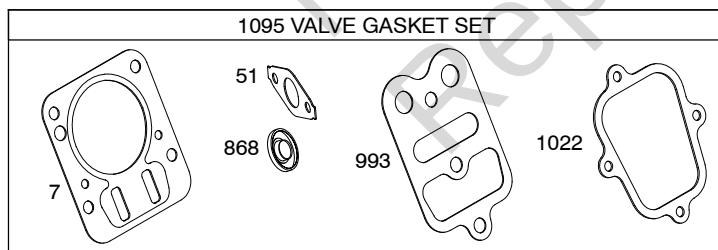
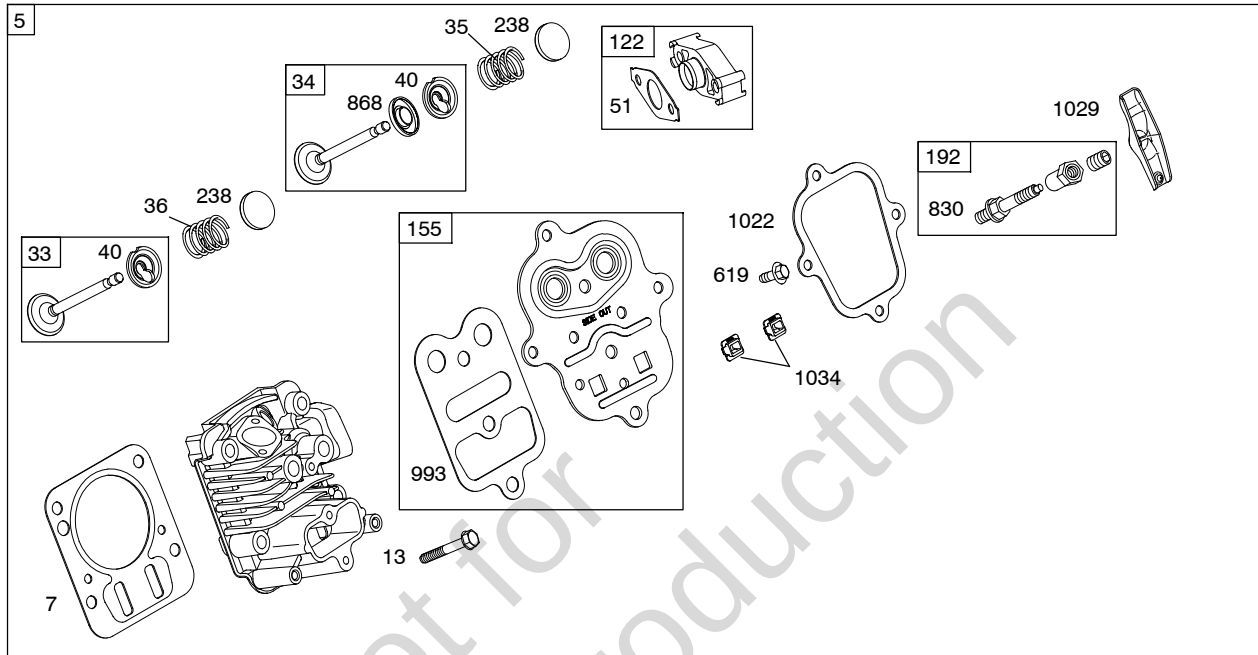


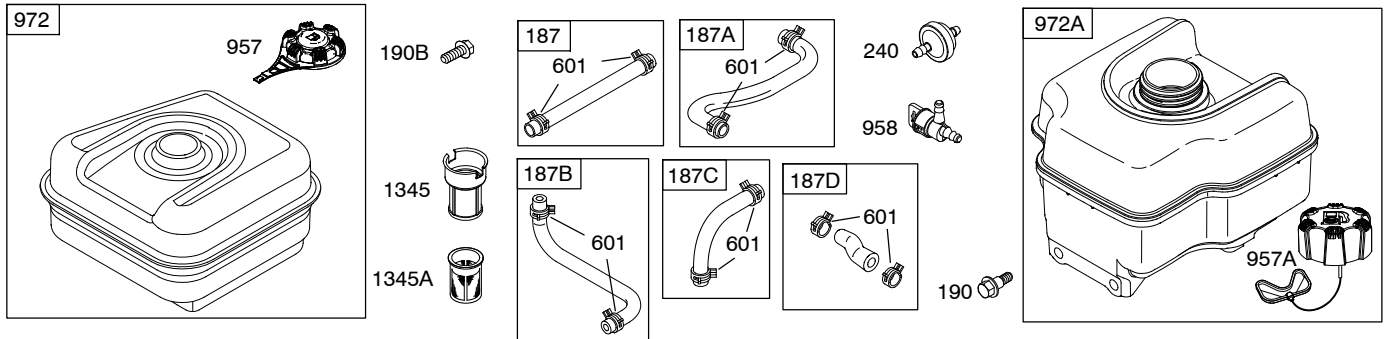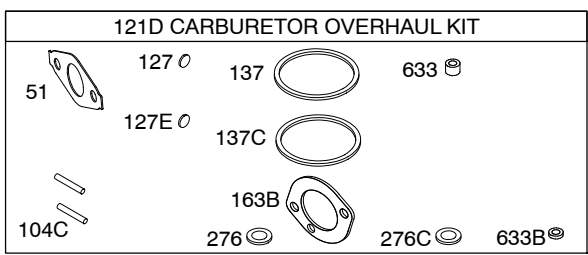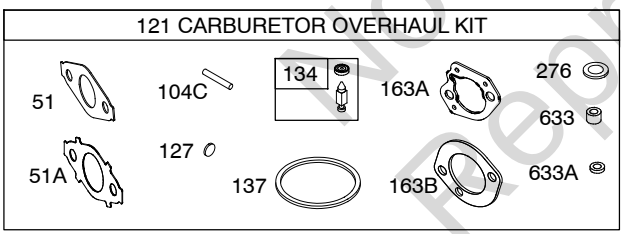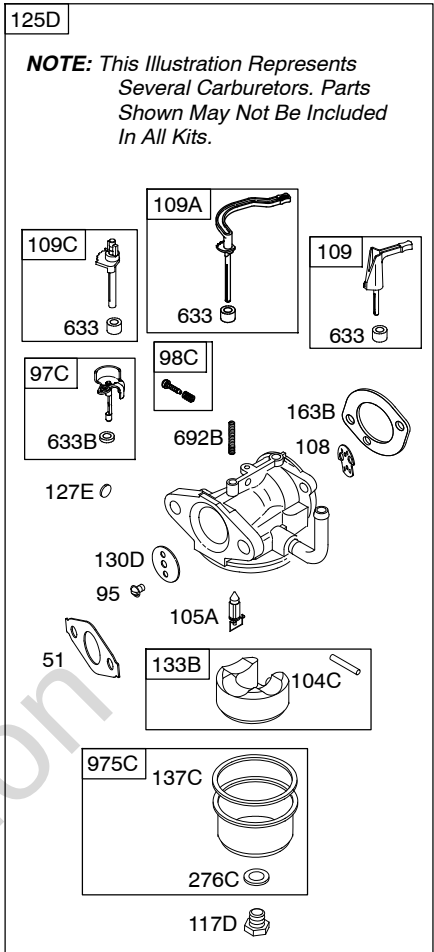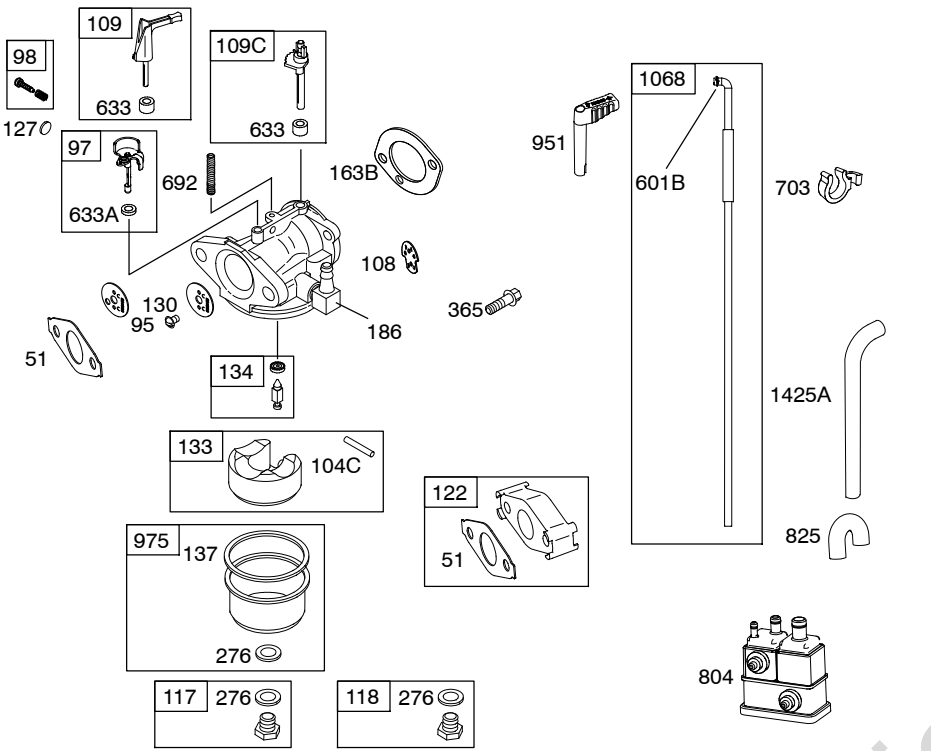

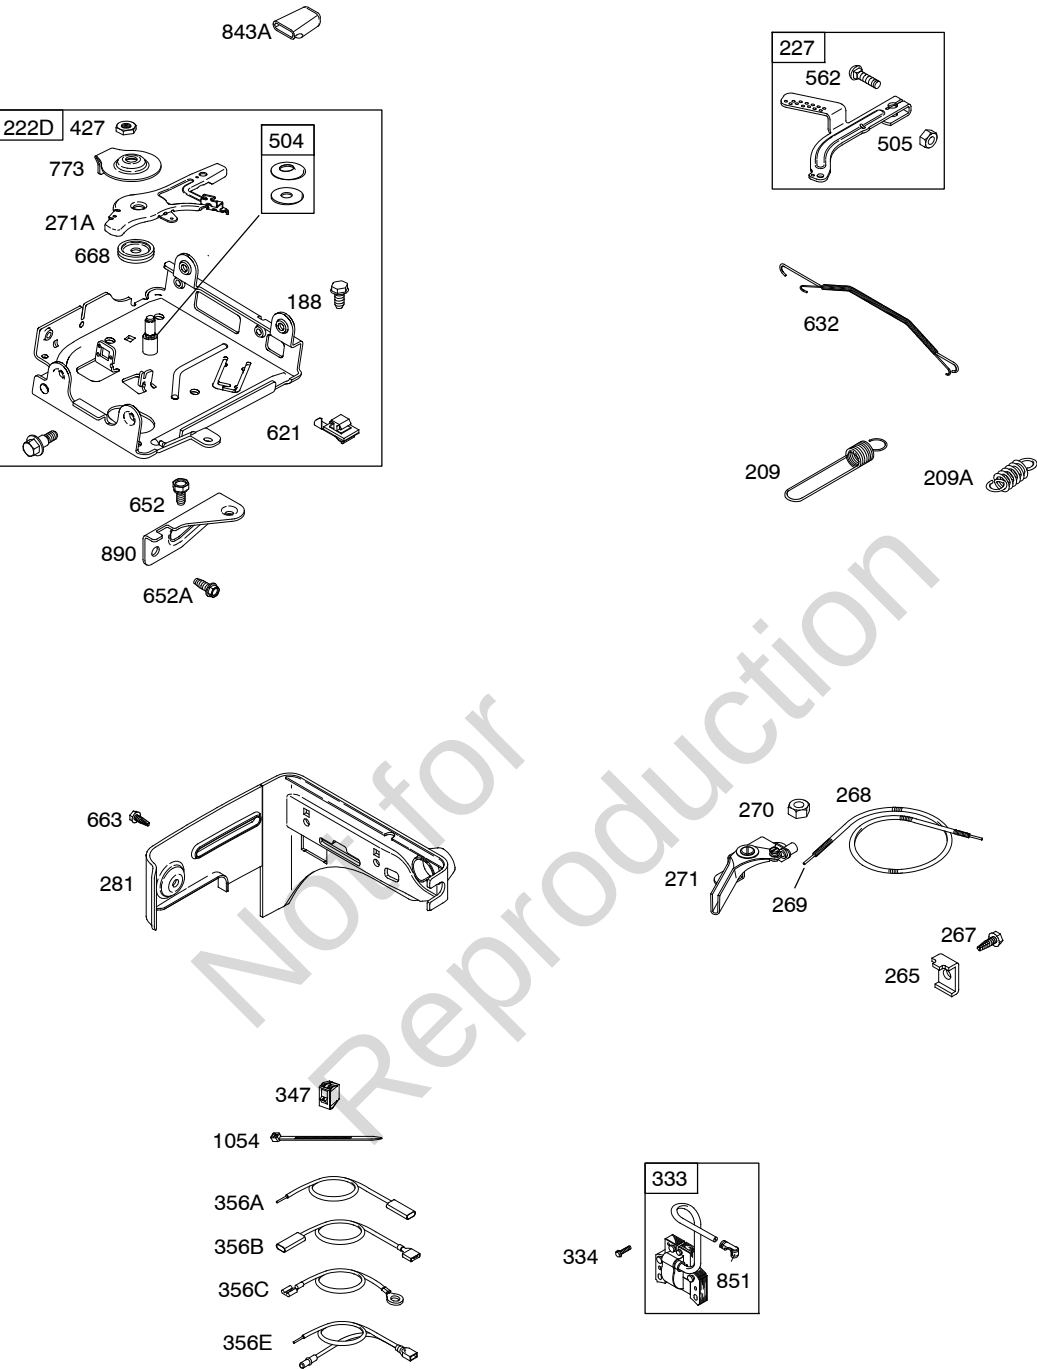

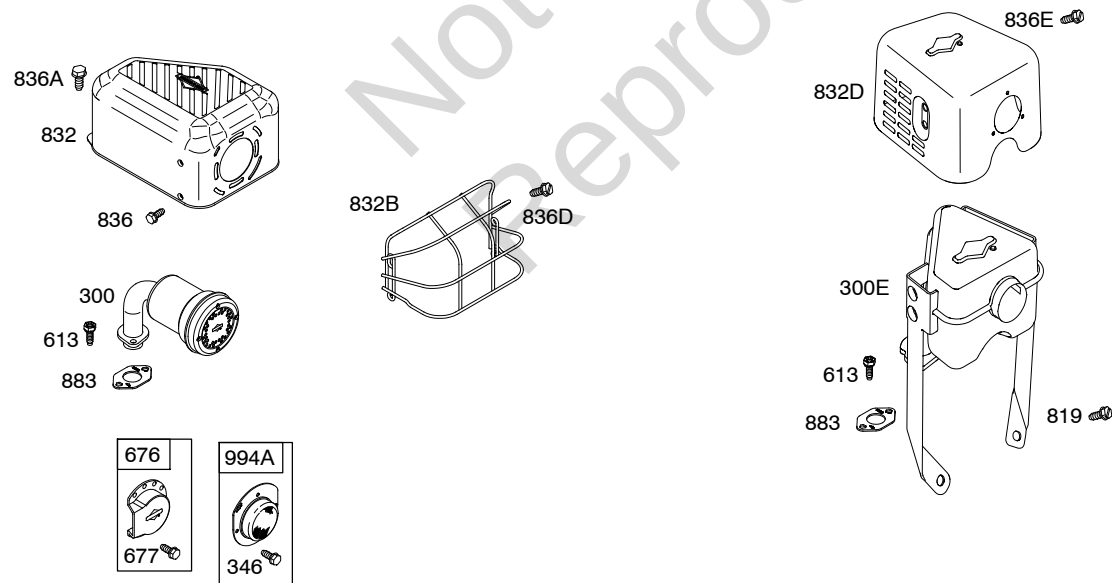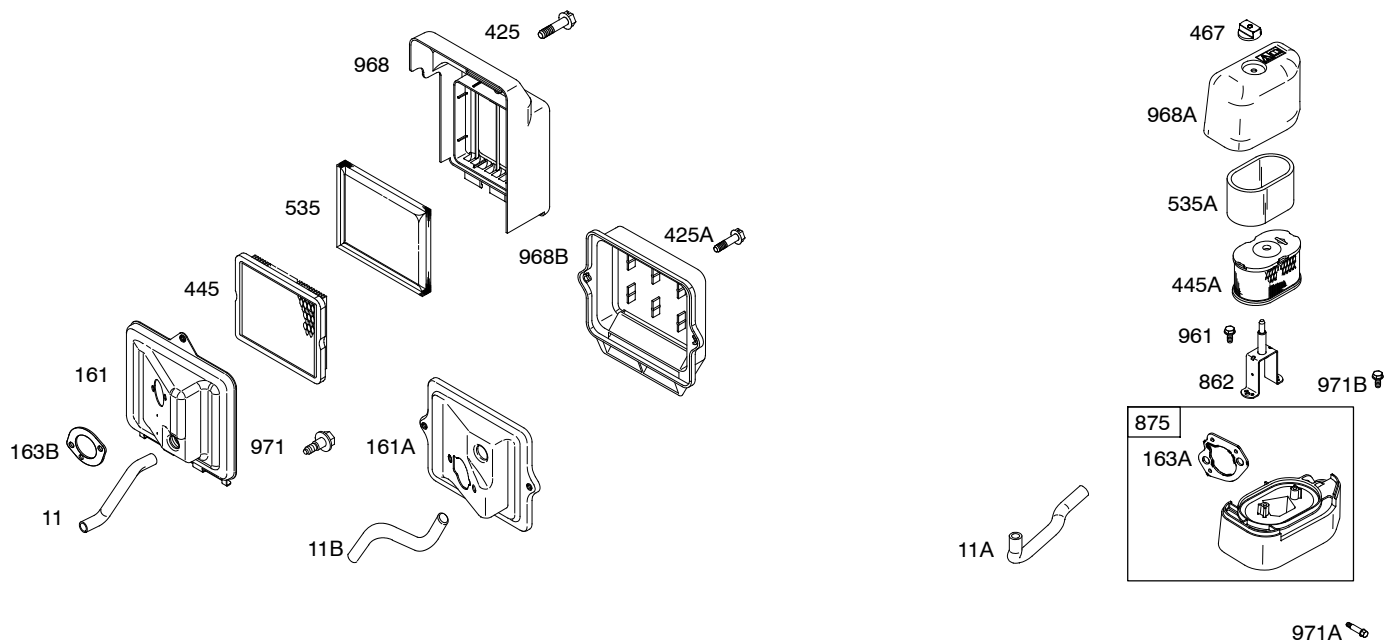

12T100

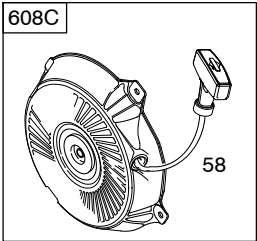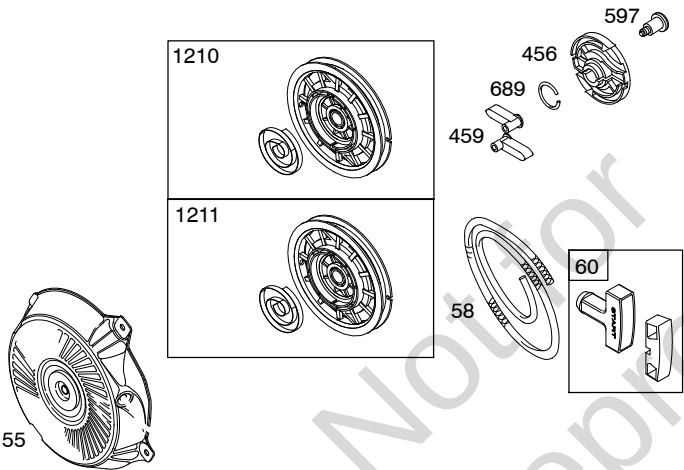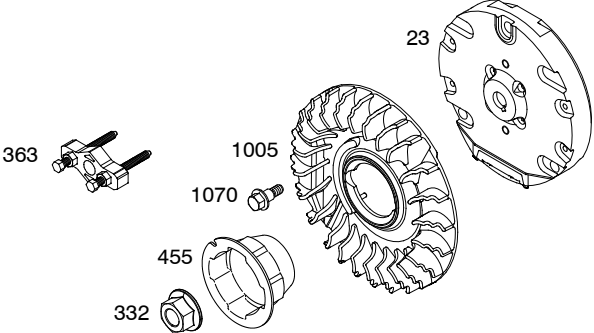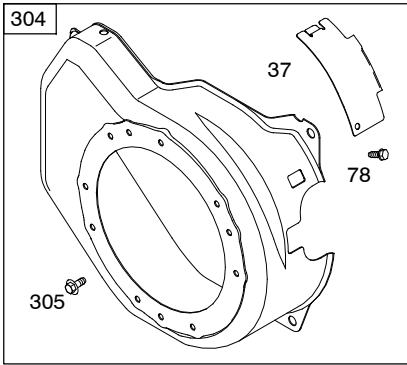

65

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699510	Cylinder Assembly		797070	Crankshaft		593495	Crankshaft
2	796961	Kit-Bushing/Seal (Magneto Side)		(Used with Mating Metal Gear).		(Used with Mating Nylon Gear).		(Used with Mating Nylon Gear).
3	299819s	Seal-Oil (Magneto Side)		(Used Before Code Date 13050600 and After Code Date 15030200).		(Used After Code Date 13050500).		(Used After Code Date 13050500).
5	797439	Head-Cylinder (Metric)		Used on Type No(s). 0124, 2194.		Used on Type No(s). 0023, 0115, 0116, 0123, 0124, 0126, 0140, 0401, 1275, 1289, 2194, 2776.		Used on Type No(s). 0023, 0115, 0116, 0123, 0124, 0126, 0140, 0401, 1275, 1289, 2194, 2776.
7	698210	Gasket-Cylinder Head		797078 Crankshaft (Used with Mating Metal Gear).		593495 Crankshaft (Used with Mating Nylon Gear).		593495 Crankshaft (Used with Mating Nylon Gear).
11	692600	Tube-Breather (Flat Panel Air Cleaner)		(Used Before Code Date 13050600).		(Used After Code Date 13050500).		(Used After Code Date 13050500).
11A	693647	Tube-Breather (High Mount Air Cleaner)		Used on Type No(s). 0035.		Used on Type No(s). 0124, 2194.		Used on Type No(s). 0124, 2194.
11B	790632	Tube-Breather (Ultra Low Air Cleaner)		797072 Crankshaft (Used with Mating Metal Gear).		594993 Crankshaft (Used with Mating Nylon Gear).		594993 Crankshaft (Used with Mating Nylon Gear).
12	699485	Gasket-Crankcase		(Used Before Code Date 13050600).		(Used After Code Date 13050500).		(Used After Code Date 13050500).
13	699482	Screw (Cylinder Head)		Used on Type No(s). 0036, 0122, 2202.		Used on Type No(s). 0035.		Used on Type No(s). 0035.
15	691686	Plug-Oil Drain (Square Head)		797075 Crankshaft (Used with Mating Metal Gear).		593079 Crankshaft (Used with Mating Nylon Gear).		593079 Crankshaft (Used with Mating Nylon Gear).
15A	691682	Plug-Oil Drain (Flush)		(Used Before Code Date 13050600).		(Used After Code Date 13050500).		(Used After Code Date 13050500).
15C	792750	Plug-Oil Drain		Used on Type No(s). 0060, 0125, 0141, 1060.		Used on Type No(s). 0060, 0125, 0141, 1060.		Used on Type No(s). 0060, 0125, 0141, 1060.
16	796076	Crankshaft (Used with Mating Metal Gear).		(Used Before Code Date 13050600).		17 798538 Bearing-Ball		17 798538 Bearing-Ball
		(Used Before Code Date 13050600).		Used on Type No(s). 0060, 0125, 0141, 1060.		17B 99158 Bearing-Ball		17B 99158 Bearing-Ball
		Used on Type No(s). 0003, 0537, 0616, 0617, 0911, 2321.		795927 Crankshaft (Used with Mating Metal Gear).		18 699804 Cover-Crankcase		18 699804 Cover-Crankcase
		----- Note -----		Used on Type No(s). 0049, 0120, 2050, 2144, 2322, 2424.		Used on Type No(s). 0003, 0023, 0049, 0060, 0116, 0120, 0123, 0125, 0126, 0140, 0141, 0401, 0537, 0616, 0617, 0698, 0911, 1060, 2050, 2144, 2322, 2424, 2776.		Used on Type No(s). 0003, 0023, 0049, 0060, 0116, 0120, 0123, 0125, 0126, 0140, 0141, 0401, 0537, 0616, 0617, 0698, 0911, 1060, 2050, 2144, 2322, 2424, 2776.
		797074 Crankshaft (Used with Mating Metal Gear).		(Used Before Code Date 13050600).		18A 699672 Cover-Crankcase		18A 699672 Cover-Crankcase
		(Used Before Code Date 13050600).		Used on Type No(s). 0698, 0751, 0937, 2750.		Used on Type No(s). 0035, 0036, 0122, 2202.		Used on Type No(s). 0035, 0036, 0122, 2202.
		797070 Crankshaft (Used with Mating Metal Gear).		(Used Before Code Date 13050600).				
		(Used Before Code Date 13050600).		Used on Type No(s). 0003, 0537, 0616, 0617, 0911, 2321.				
		----- Note -----		594996 Crankshaft (Used with Mating Nylon Gear).				
		797070 Crankshaft (Used with Mating Metal Gear).		(Used After Code Date 13050500).				
		(Used Before Code Date 13050600).		Used on Type No(s). 0698, 0751, 0937, 2750.				
		Used on Type No(s). 0023, 0115, 0116, 0123, 0124, 0126, 0140, 0401, 1275, 1289, 2194, 2776.						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

12T100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
18B	699696	Cover-Crankcase Used on Type No(s). 0115, 0751, 0937, 1275, 1289, 2321, 2750.	51A 55	791718	Gasket-Intake Housing-Rewind Starter (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.) ----- Note ----- 791848 Housing- Rewind (Used After Code Date 08030200 and Before Code Date 12010100). 691422 Housing- Rewind Starter (Used Before Code Date 08030300).	118D	798660	Jet-Main (High Altitude)
18C	699677	Cover-Crankcase Used on Type No(s). 0124, 2194.				121	792006	Kit-Carburetor Overhaul
20	692550	Seal-Oil (PTO Side)				121D	797634	Kit-Carburetor Overhaul
20A	691952	Seal-Oil (PTO Side)				122	795643	Spacer-Carburetor (Black)
21	281658s	Cap-Oil Fill						----- Note ----- 795208 Spacer- Carburetor (Grey/Coffee)
22	799318	Screw (Crankcase Cover/Sump)				125	791077	Carburetor (Used Before Code Date 10090100).
23	699488	Flywheel				125D	798653	Carburetor (Used After Code Date 10083100).
24	796335	Key-Flywheel						----- Note ----- 591308 Carburetor Used on Type No(s). 0123, 0124, 0140, 2194, 2321.
25	795429	Piston Assembly (Standard) ----- Note ----- 799064 Piston Assembly (.020" Oversize)	58	693389	Rope-Starter (Cut to Required Length)	127	691739	Plug-Welch
			60	490652	Grip-Starter Rope	127E	797633	Plug-Welch
			65	699228	Screw	130	691181	Valve-Throttle
26	791969	Ring Set (Standard) ----- Note ----- 791324 Ring Set (.020" Oversize)	78	699205	Screw (Flywheel Guard)	130D	797630	Valve-Throttle
			79A	792746	Case-Gear Reduction	133	398187	Float-Carburetor
			80	792755	Gasket-Gear Case	133B	797136	Float-Carburetor
			82B	792753	Screw (Gear Reduction Case)	134	398188	Kit-Needle/Seat
27	691866	Lock-Piston Pin	83A	792756	Shaft-Auxiliary Drive	137	693981	Gasket-Float Bowl
28	499423	Pin-Piston	84A	792759	Plug-Breather	137C	797625	Gasket-Float Bowl
29	798813	Rod-Connecting	85A	690711	Screw (Gear Cover)	155	797442	Plate-Cylinder Head (Metric) (Used After Code Date 09061700).
29A	792247	Rod-Connecting (.020" Undersize)	86A	795647	Cover-Gear			----- Note ----- 698214 Plate-Cylinder Head (SAE) (Used Before Code Date 09061800).
30	791584	Dipper-Connecting Rod	87A	792752	Seal-Gear Reduction	161	795567	Base-Air Cleaner (Flat Panel Air Cleaner)
32	691664	Screw (Connecting Rod)	88A	792760	Gasket-Gear Reduction Cover			
32A	695759	Screw (Connecting Rod)	95	691636	Screw (Throttle Valve)			
32B	791784	Screw (Connecting Rod)	97	690024	Shaft-Throttle			
33	499642	Valve-Exhaust	97C	797628	Shaft-Throttle			
34	795443	Valve-Intake	98	398185	Kit-Idle Speed			
35	691304	Spring-Valve (Intake)	98C	797156	Kit-Idle Speed			
36	691304	Spring-Valve (Exhaust)	104C	797622	Pin-Float Hinge			
37	699661	Guard-Flywheel	105A	797139	Valve-Float Needle			
40	692194	Retainer-Valve	109	690023	Shaft-Choke			
45	690977	Tappet-Valve	108	692567	Valve-Choke			
46	693404	Camshaft	109	690023	Shaft-Choke			
46A	695285	Camshaft Used on Type No(s). 0124, 2194.	109A	693628	Shaft-Choke			
			109C	790624	Shaft-Choke			
51	692555	Gasket-Intake	117	498978	Jet-Main (Standard)			
			117D	798661	Jet-Main (Standard)			
			118	498975	Jet-Main (High Altitude)			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		----- Note ----- 699207 Base-Air Cleaner (Metal) (Flat Panel Air Cleaner) Used on Type No(s). 0023, 0035, 0036, 0049, 0060, 0116, 0120, 0122, 0125, 0126, 0141, 0401, 1060, 2050, 2144, 2202, 2322, 2424.			----- Note ----- 694543 Adjuster-Rocker Arm (SAE) (Used Before Code Date 09061800).	271	691028	Lever-Control
161A	795231	Base-Air Cleaner (Ultra Low Air Cleaner)	209	692571	Spring-Governor	271A	694256	Lever-Control
		----- Note ----- 790631 Base-Air Cleaner (Ultra Low Air Cleaner) Used on Type No(s). 0003, 0616, 0911, 0937, 2750, 2776.			----- Note ----- 693206 Spring- Governor Used on Type No(s). 0023, 0035, 0060, 0125, 0126, 1060.	276	271716	Washer-Sealing
163B	696024	Gasket-Air Cleaner (Flat Panel Air Cleaner)	209A	691278	Spring-Governor	276C	797632	Washer-Sealing
163A	792870	Gasket-Air Cleaner (High Mount)	219	693578	Gear-Governor	281	793122	Panel-Control
170	699818	Stud (Crankcase Cover)	220	691724	Washer (Governor Gear)			----- Note ----- 795565 Panel- Control Used on Type No(s). 0115, 1289.
186	692317	Connector-Hose	222D	795669	Bracket-Control (Variable Speed Extruded Holes Tank Mount)			793133 Panel-Control Used on Type No(s). 0537, 0617, 0698, 0751, 1275.
187	791766	Line-Fuel (Cut to Required Length)			----- Note ----- 793107 Bracket- Control (Variable Speed Weld Nuts Tank Mount) Used on Type No(s). 0003, 0023, 0035, 0036, 0049, 0060, 0116, 0120, 0122, 0123, 0124, 0125, 0126, 0140, 0141, 0401, 0616, 0911, 0937, 1060, 2050, 2144, 2194, 2202, 2321, 2322, 2424, 2750, 2776.	287	699234	Screw (Dipstick Tube)
187A	791867	Line-Fuel (Molded)				300	693593	Muffler
187B	791874	Line-Fuel (Molded)				300E	791595	Muffler
187C	791866	Line-Fuel (Molded)				304	699598	Housing-Blower
187D	795046	Line-Fuel (Molded)						----- Note ----- 795658 Housing-Blower Used on Type No(s). 0115, 0537, 0617, 0698, 0751, 1275, 1289.
188	699479	Screw (Control Bracket)	227	794367	Lever-Governor Control	305	699481	Screw (Blower Housing)
190	699220	Screw (Fuel Tank)	238	691300	Valve-Cap	306	795334	Shield-Cylinder
190B	795047	Screw (Fuel Tank)	240	394358s	Filter-Fuel	307	699483	Screw (Cylinder Shield)
192	797440	Adjuster-Rocker Arm (Metric) (Used After Code Date 09061700).	265	691024	Clamp-Casing	332	591988	Nut (Flywheel)
			267	699492	Screw (Casing Clamp)	333	796964	Armature-Magneto
			268	691025	Casing-Control Wire (Cut to Required Length)	334	699477	Screw (Magneto Armature)
			269	691026	Wire-Control (Cut to Required Length)	337	491055s	Plug-Spark (Resistor)
			270	691027	Nut (Control Wire Casing)			----- Note ----- 691043 Plug-Spark (EMS)
						346	699203	Screw (Spark Arrestor) (Metric)
								----- Note ----- 690661 Screw (Spark Arrestor) (SAE)
						347	795333	Switch-Rocker
						356A	692390	Wire-Stop
						356B	692602	Wire-Stop
						356C	695630	Wire-Stop
						356E	695814	Wire-Stop
						358	791797	Gasket Set-Engine
						363	19203	Puller-Flywheel

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

12T100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
365	699484	Screw (Carburetor)	523	693618	Dipstick ----- Note ----- 798469 Dipstick Used on Type No(s). 1060, 2750.	677	699203	Screw (Muffler Deflector) (Metric) ----- Note ----- 690661 Screw (Muffler Deflector) (SAE)
377	690979	Key-Woodruff						
383	19576s	Wrench-Spark Plug						
415	693463	Plug						
415B	792749	Plug	524	281370s	Seal-Dipstick Tube			
425	699208	Screw (Air Cleaner Cover)	535	493537S	Filter-Pre Cleaner (Flat Panel)	689		Spring-Friction (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.) ----- Note ----- 691855 Spring- Friction (Used Before Code Date 12010100).
425A	699492	Screw (Air Cleaner Cover)	535A	273356S	Filter-Pre Cleaner (High Mount)			
427	798458	Nut (Control Bracket) (Metric) ----- Note ----- 694255 Nut (Control Bracket) (SAE)	552	692346	Bushing-Governor Crank			
			562	691119	Bolt (Governor Control Lever)			
			597		Screw (Pawl Friction Plate) (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.) ----- Note ----- 691696 Screw (Pawl Friction Plate) (Used Before Code Date 12010100).	692	690572	Spring-Detent
445	491588s	Filter-Air Cleaner Cartridge (Flat Panel)				692B	797624	Spring-Detent
445A	697029	Filter-Air Cleaner Cartridge (High Mount)				703	795222	Clip
455	591302	Cup-Flywheel				718	690959	Pin-Locating
456		Plate-Pawl Friction (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.) ----- Note ----- 692299 Plate-Pawl Friction (Used Before Code Date 12010100).	601	791850	Clamp-Hose	741	695087	Gear-Timing (Metal) (Used with Mating Crankshaft).
			601B	795230	Clamp-Hose	741A	593499	Gear-Timing (Nylon) (Used with Mating Crankshaft).
			608C	591301	Starter-Rewind			
			613	791972	Screw (Muffler)	742	692564	Retainer-E Ring
			615	692576	Retainer-Governor Shaft	746	790278	Gear-Idler
			616	692547	Crank-Governor	773	694258	Retainer
459		Pawl-Ratchet (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.) ----- Note ----- 281505s Pawl- Ratchet (Used Before Code Date 12010100).	619	699481	Screw (Cylinder Head Plate)	804	795223	Canister-Carbon (EVAP)
			621	692310	Switch-Stop	819	699233	Screw (Muffler Bracket)
			632	693408	Spring/Link- Mechanical Governor	825	795226	Hose-Air
			633	693867	Seal-Choke/Throttle Shaft	830	797441	Stud-Rocker Arm (Metric) (Used After Code Date 09061700). ----- Note ----- 694544 Stud-Rocker Arm (SAE) (Used Before Code Date 09061800).
			633A	691321	Seal-Choke/Throttle Shaft	832	693583	Guard-Muffler
			633B	797629	Seal-Choke/Throttle Shaft	832B	696516	Guard-Muffler
467	691668	Knob-Air Cleaner	635	692076	Boot-Spark Plug	832D	796240	Guard-Muffler
504	695383	Washer Set-Friction	635A	798619	Boot-Spark Plug	836	699203	Screw (Muffler Guard)
505	691251	Nut (Governor Control Lever)	652	699755	Screw (Support Bracket)	836A	699632	Screw (Muffler Guard)
522	697689	Plug-Dipstick/Fill	652A	699230	Screw (Support Bracket)			
			663	699206	Screw (Control Panel)			
			668	694257	Spacer			
			676	796956	Deflector-Muffler			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3996-12 Assemblies include all parts shown in frames. 10/23/2015

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
836D	699204	Screw (Muffler Guard)	971	798649	Screw (Air Cleaner Base) (Metric)	1210		Pulley/Spring Assembly (Pulley) (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.)
836E	699755	Screw (Muffler Guard)			----- Note -----			----- Note -----
842	691031	Seal-O Ring (Dipstick Tube)			690370 Screw (Air Cleaner Base) (SAE)			791849 Pulley/Spring Assembly (Pulley) (Used After Code Date 08030200 and Before Code Date 12010100).
843A	695588	Sleeve-Lever	971A	591307	Screw (Air Cleaner Base)			498144 Pulley/Spring Assembly (Pulley) (Used Before Code Date 08030300).
847	693617	Dipstick/Tube Assembly	971B	699234	Screw (Air Cleaner Base)	1211		Pulley/Spring Assembly (Pulley) (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.)
		----- Note -----	972	795705	Tank-Fuel (Metal)			----- Note -----
		798468 Dipstick/Tube Assembly Used on Type No(s). 1060, 2750.	972A	799863	Tank-Fuel (Metal)			791849 Pulley/Spring Assembly (Pulley) (Used Before Code Date 08030300).
851	493880s	Terminal-Spark Plug	975	796611	Bowl-Float			Pulley/Spring Assembly (Pulley) (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.)
862	693462	Strap/Stud-Air Cleaner Mounting	975C	797631	Bowl-Float			----- Note -----
868	795440	Seal-Valve	993	694088	Gasket-Cylinder Head Plate			791849 Pulley/Spring Assembly (Pulley) (Used After Code Date 08030200 and Before Code Date 12010100).
875	591306	Base-Air Cleaner (High Mount)	994A	399541	Arrester-Spark			498144 Pulley/Spring Assembly (Pulley) (Used Before Code Date 08030300).
883	691893	Gasket-Exhaust	1005	794273	Fan-Flywheel			Pulley/Spring Assembly (Pulley) (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.)
883A	692237	Gasket-Exhaust	1022	691890	Gasket-Rocker Cover			----- Note -----
890	790203	Bracket-Support	1023	499924	Cover-Rocker Arm			791849 Pulley/Spring Assembly (Pulley) (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.)
914	699481	Screw (Rocker Cover) (Bottom)	1026	790287	Rod-Push			----- Note -----
914A	797444	Screw (Rocker Cover) (Quantity 1, Top Or Center) (Metric) (Used After Code Date 09061700).	1029	797443	Arm-Rocker (Metric) (Used After Code Date 09061700).			791849 Pulley/Spring Assembly (Pulley) (Used After Code Date 08030200 and Before Code Date 12010100).
		----- Note -----			691230 Arm-Rocker (SAE) (Used Before Code Date 09061800).			498144 Pulley/Spring Assembly (Pulley) (Used Before Code Date 08030300).
		692557 Screw (Top) (SAE) (Used Before Code Date 09061800).	1034	691343	Guide-Push Rod	1319	794467	Label-Warning
914B	697551	Screw (Rocker Cover) (Center) (SAE) (Used Before Code Date 09061800).	1036		Label-Emissions (Available From An Authorized Briggs & Stratton Service Dealer)	1319A	797669	Label-Warning
951	790630	Lever-Choke	1054	280275	Cable-Tie	1330	272147	Repair Manual
957A	799719	Cap-Fuel Tank	1058	277040	Operator's Manual	1345	699887	Filter-Filler Neck
957C	795221	Cap-Fuel Tank	1068	795229	Hose/Clamp Assembly	1345A	792917	Filter-Filler Neck
958	698180	Valve-Fuel Shut Off	1070	699201	Screw (Flywheel Fan)	1425A	795227	Hose-Purge Line
961	698304	Screw (Air Cleaner Bracket)	1095	791798	Gasket Set-Valve			
968	692584	Cover-Air Cleaner						
968A	693460	Cover-Air Cleaner						
968B	791082	Cover-Air Cleaner						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

