



25T200

Illustrated Parts List

Model Series

25T200

TYPE NUMBERS

0001, 0002, 0004, 0005, 0006, 0007, 0009, 0010, 0011, 0012, 0013, 0014, 0015, 0016, 0017, 0018, 0019, 0020, 0021, 0022, 0023, 0024, 0025, 0026, 0027, 0028, 0029, 0032, 0033, 0035, 0036, 0037, 0039, 0040, 0041, 0042, 0043, 0044, 0045, 0047, 0048, 0051, 0053, 0054, 0056, 0058, 0059, 0060, 0061, 0062, 0063, 0065, 0066, 0067, 0068, 0069, 0070, 0071, 0072, 0073, 0074, 0076, 0077, 0078, 0079, 0081, 0082, 0083, 0084, 0085, 0087, 0088, 0091, 0092, 0093, 0094, 0096, 0108, 0109, 0110, 0111, 0112, 0113, 0114, 0115, 0116, 0118, 0119, 0120, 0121, 0122, 0123, 0124, 0125, 0126, 0127, 0131, 0132, 0134, 0135, 0137, 0138, 0139, 0142, 0143, 0145, 0146, 0147, 0148, 0149, 0150, 0151, 0152, 0153, 0155, 0156, 0158, 0159, 0160, 0161, 0162, 0165, 0166, 0167, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0178, 0179, 0181, 0202, 0222, 0237, 0238, 0248, 0255, 0256, 0259, 0265, 0266, 0267, 0268, 0269, 0273, 0274, 0275, 0276.

Not for
Reproduction



 
 
 
 
 
 
 
 
 
 
 
 
PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


1319 WARNING LABEL

1319A WARNING LABEL


1036 EMISSIONS LABEL

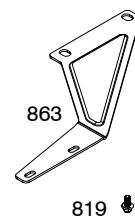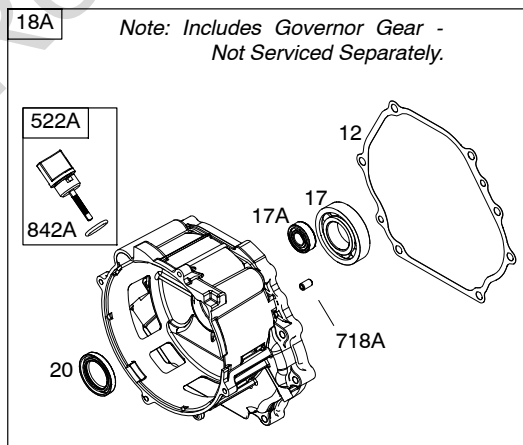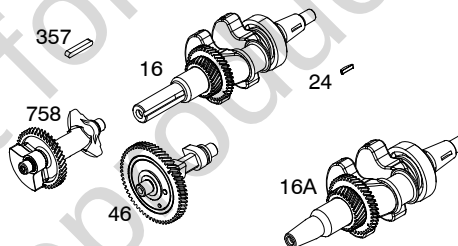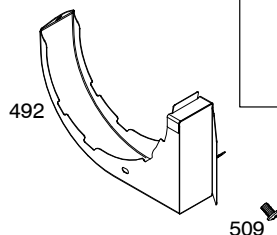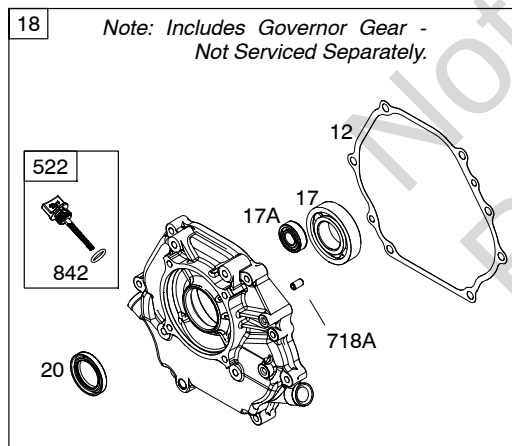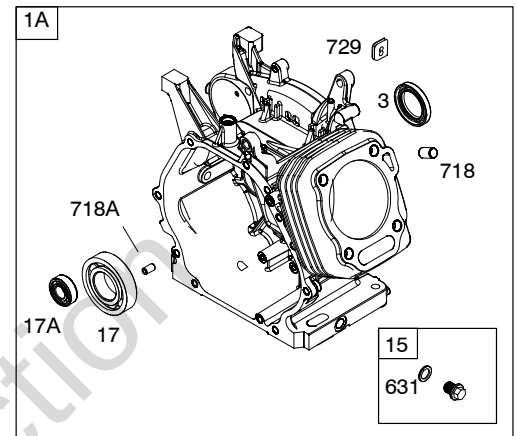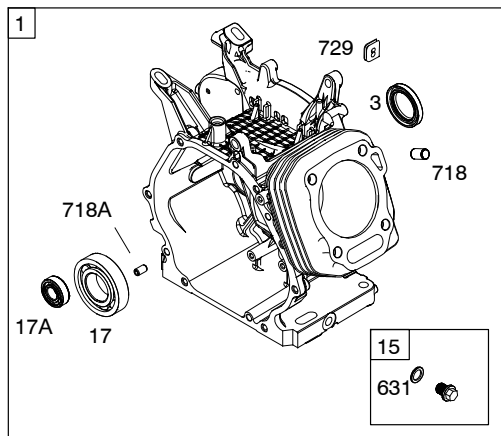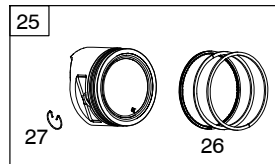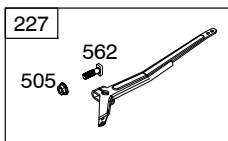









Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

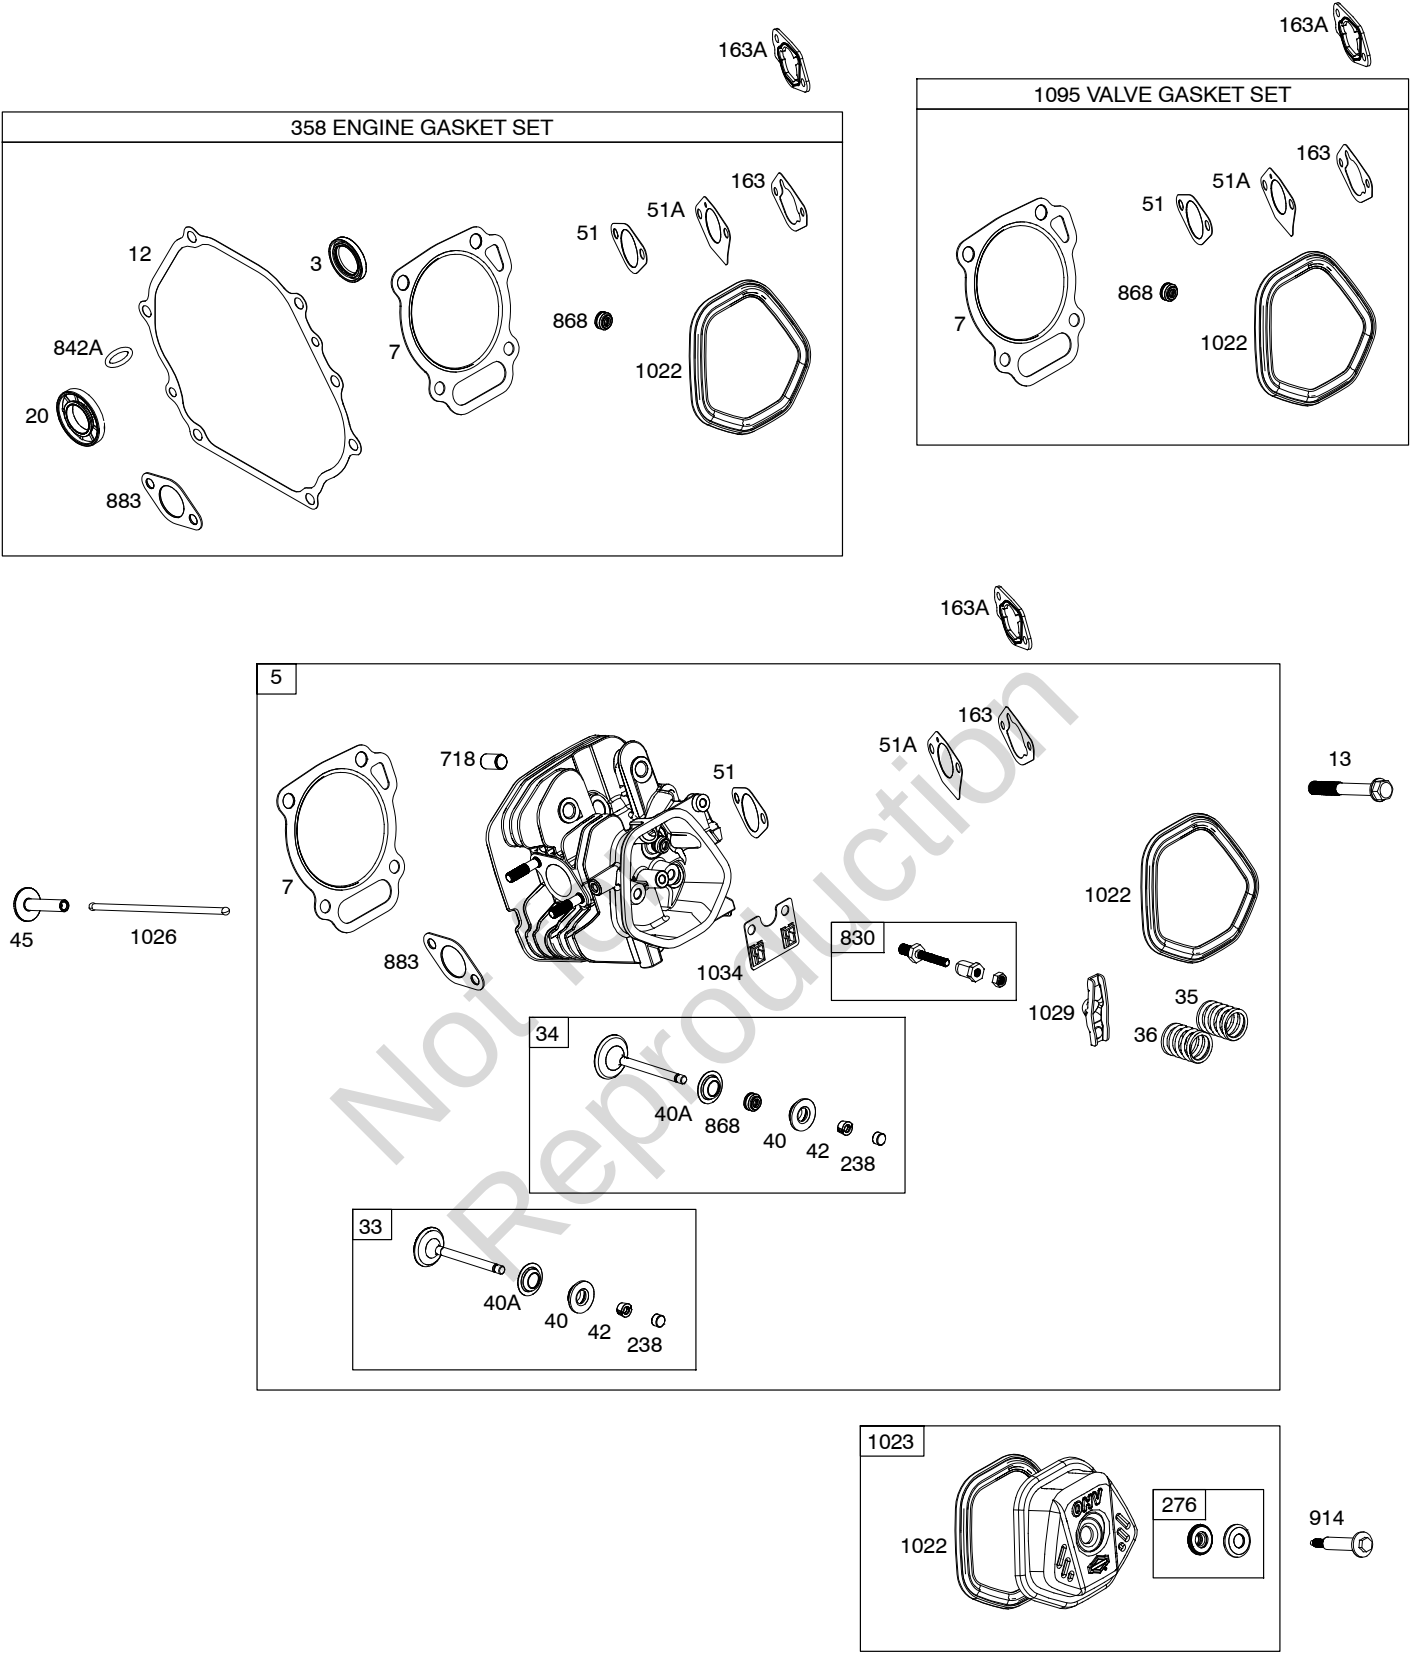 


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

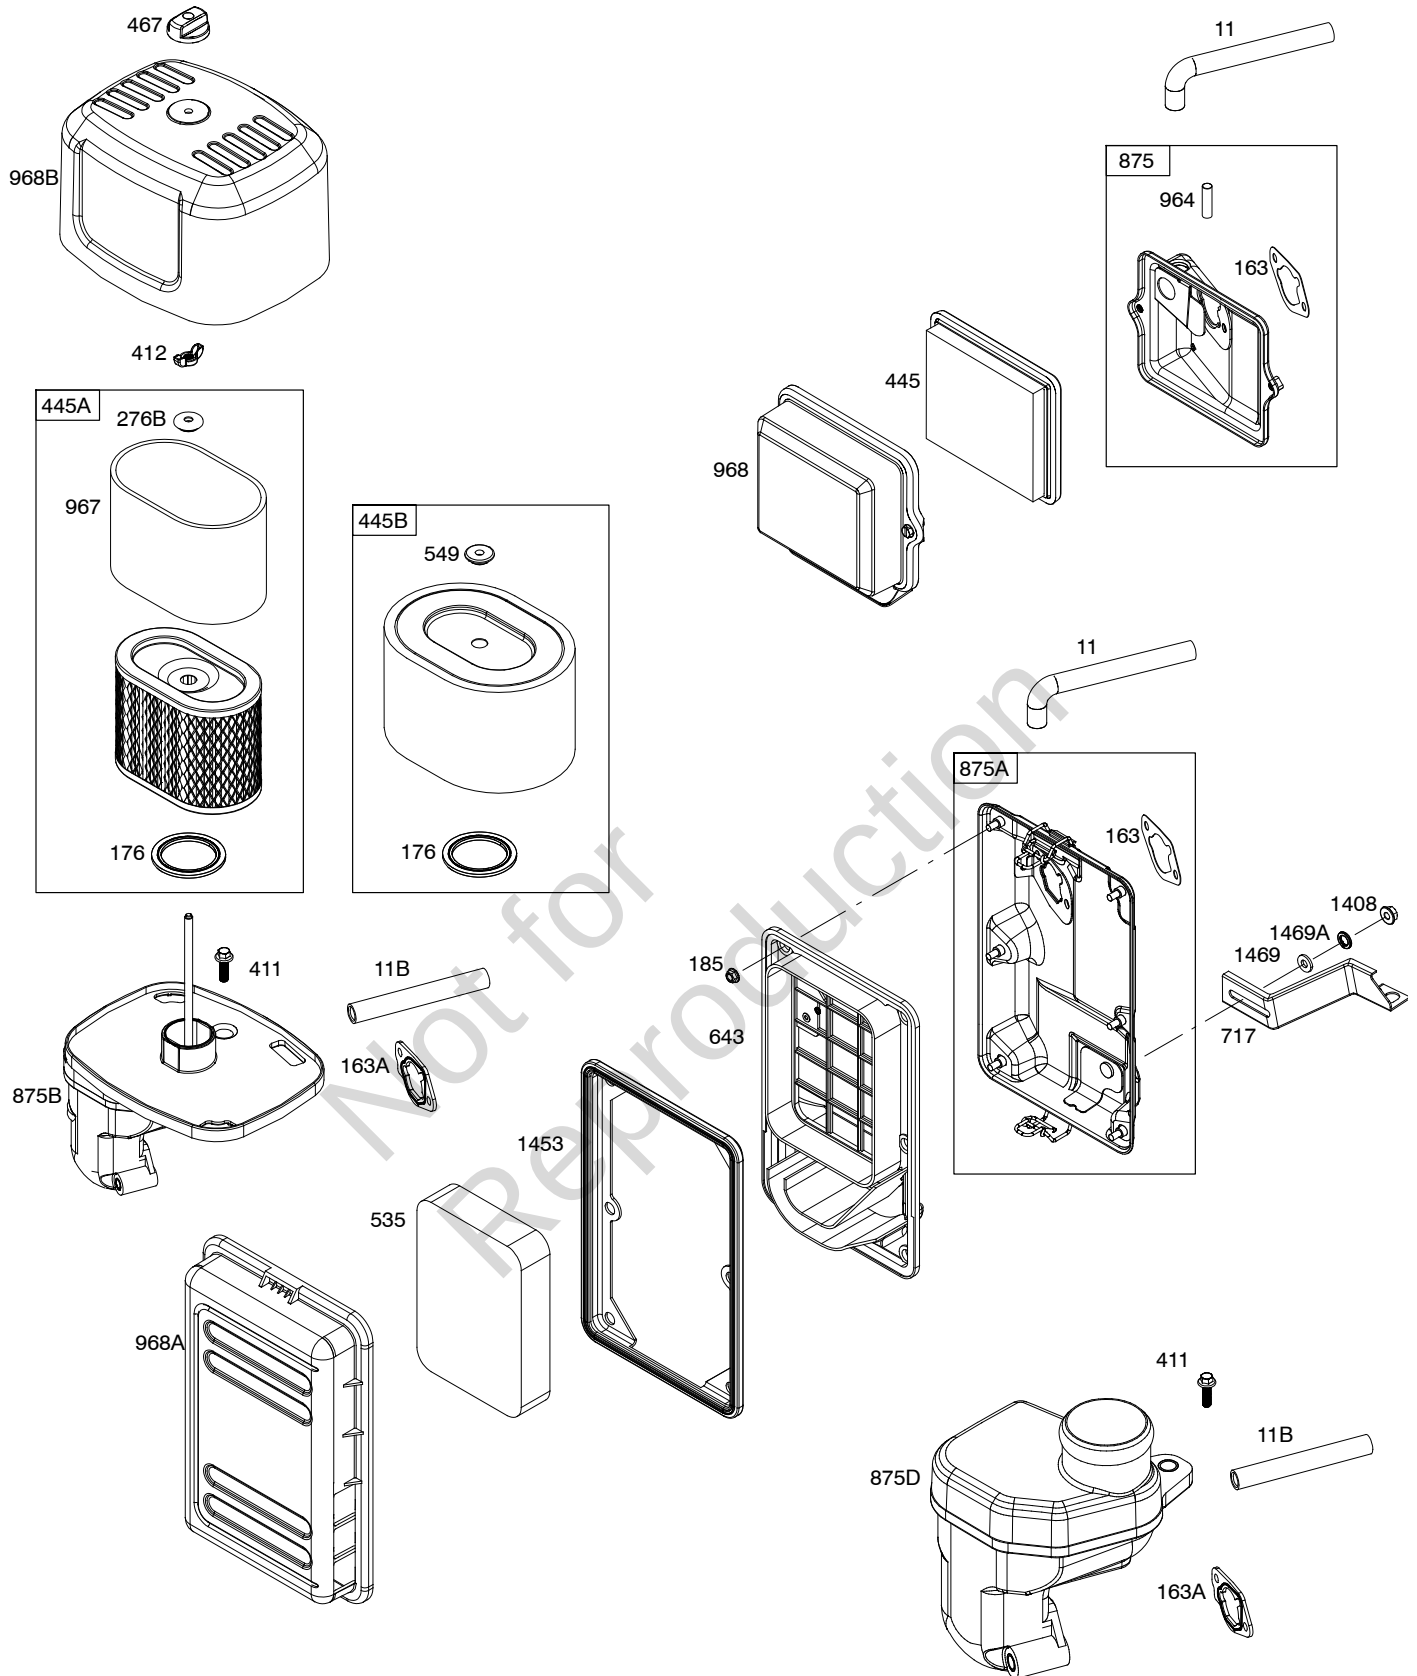 



Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

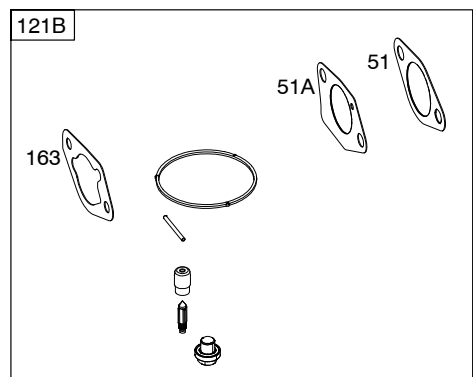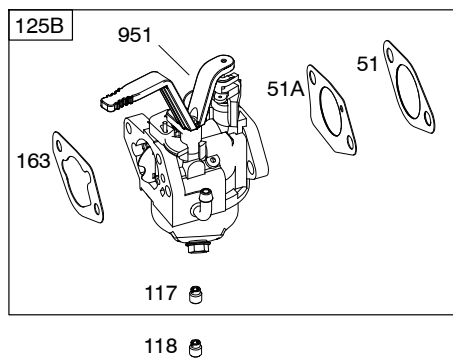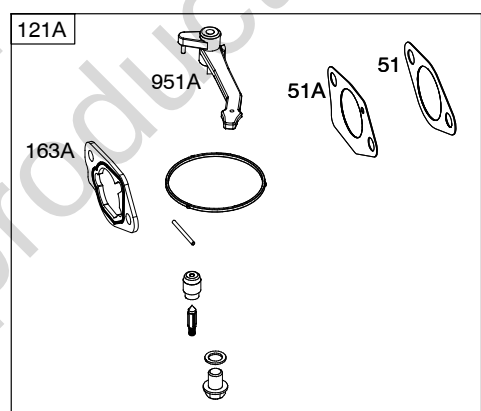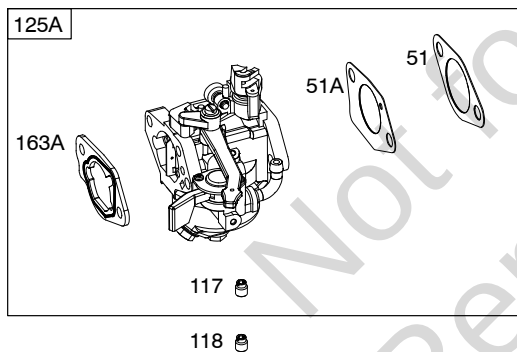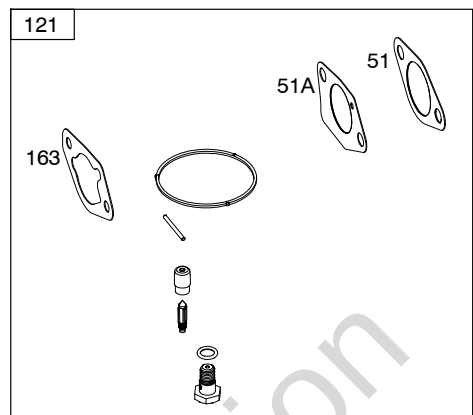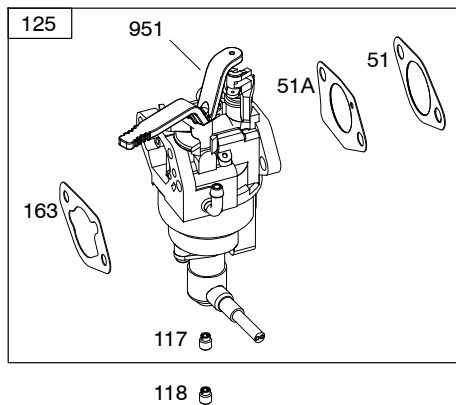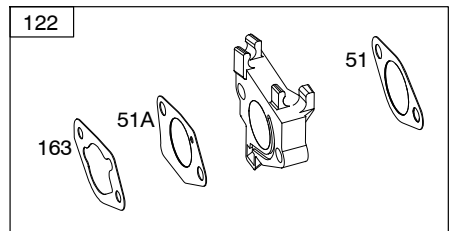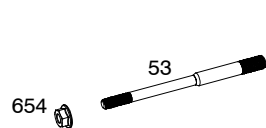        


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

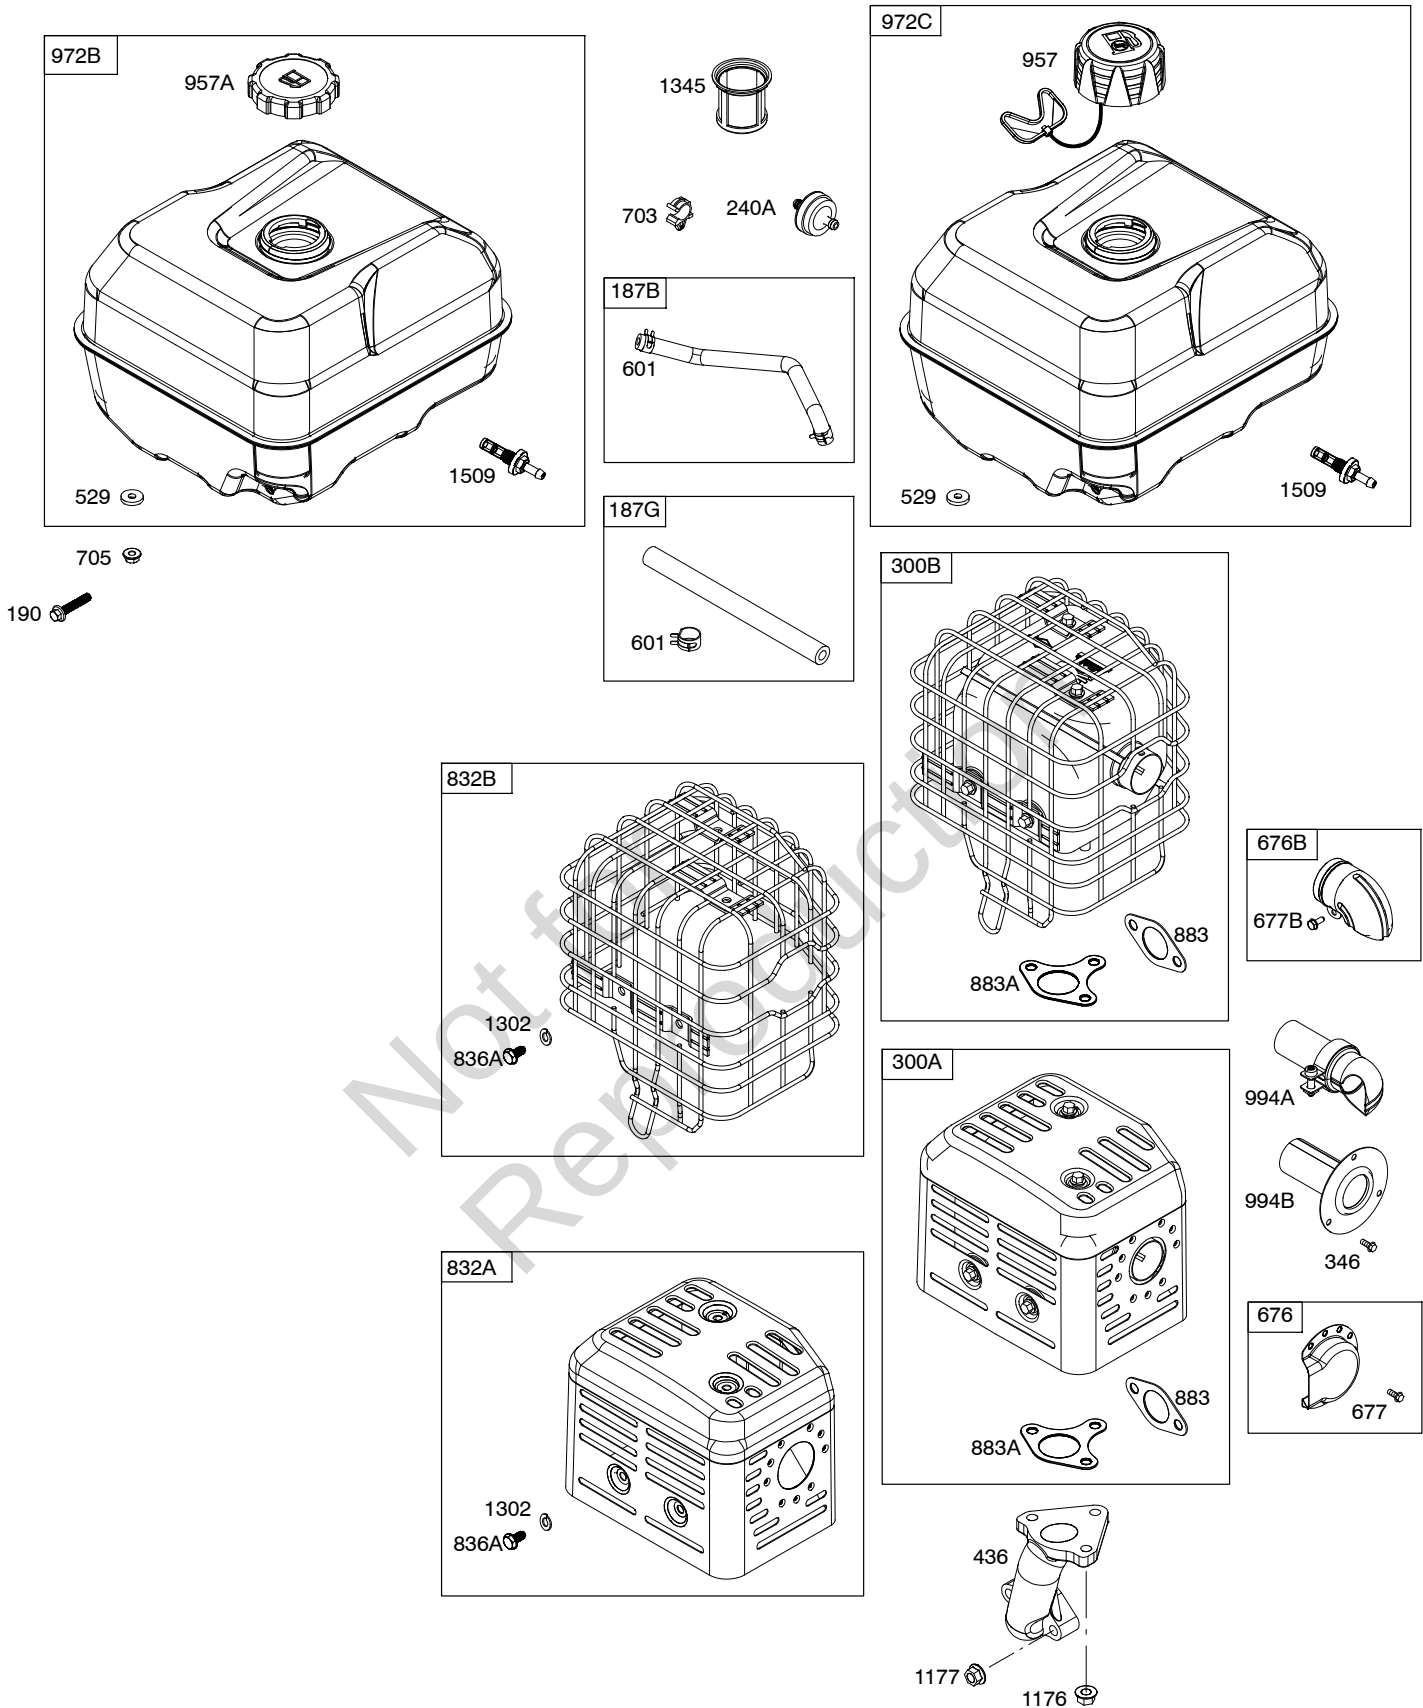 


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

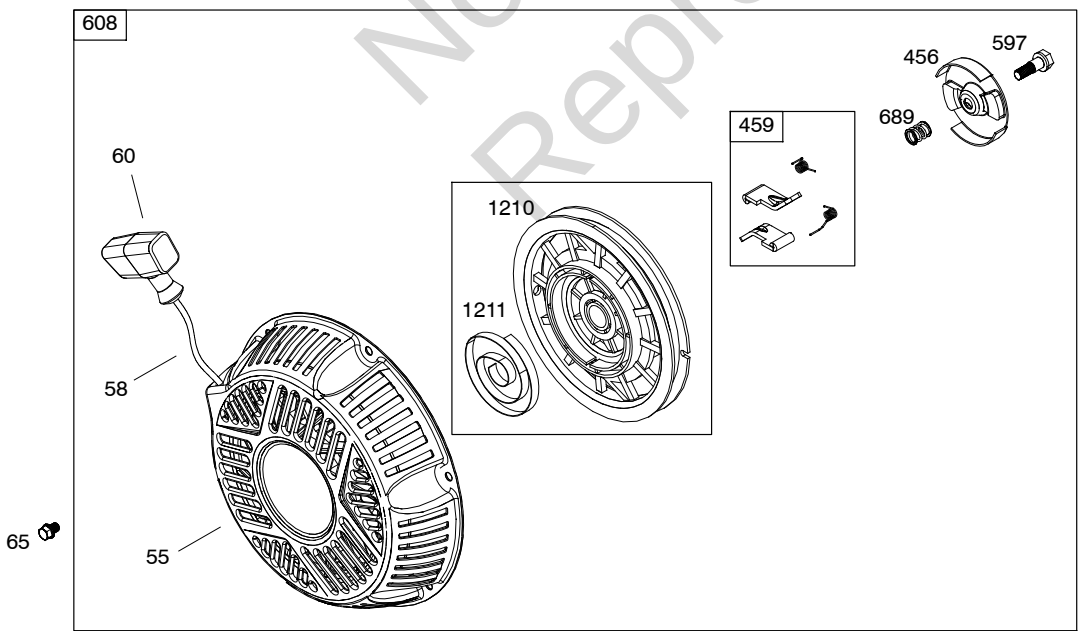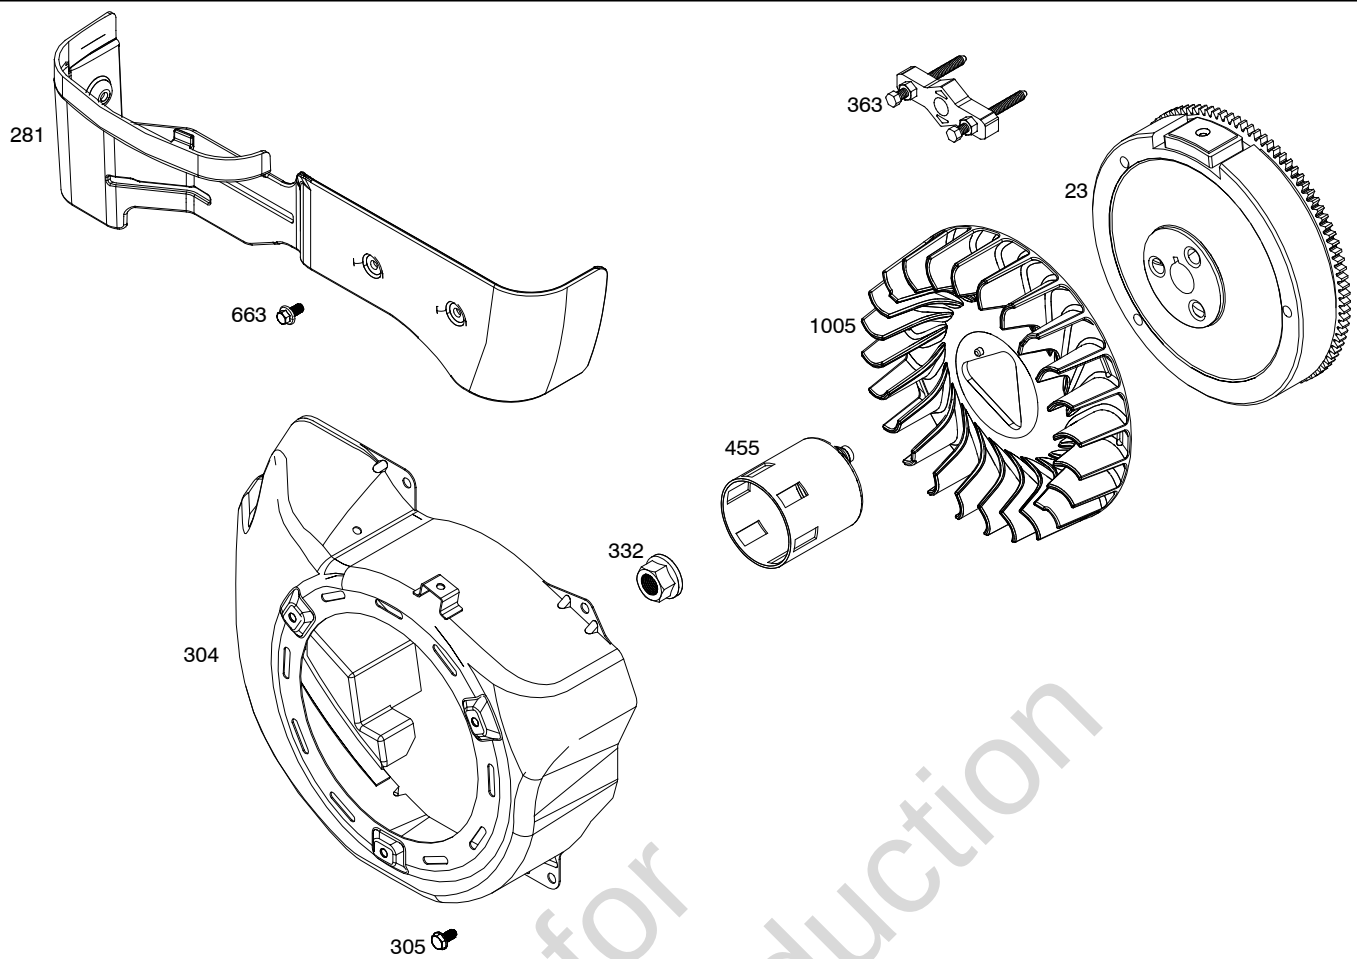  

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

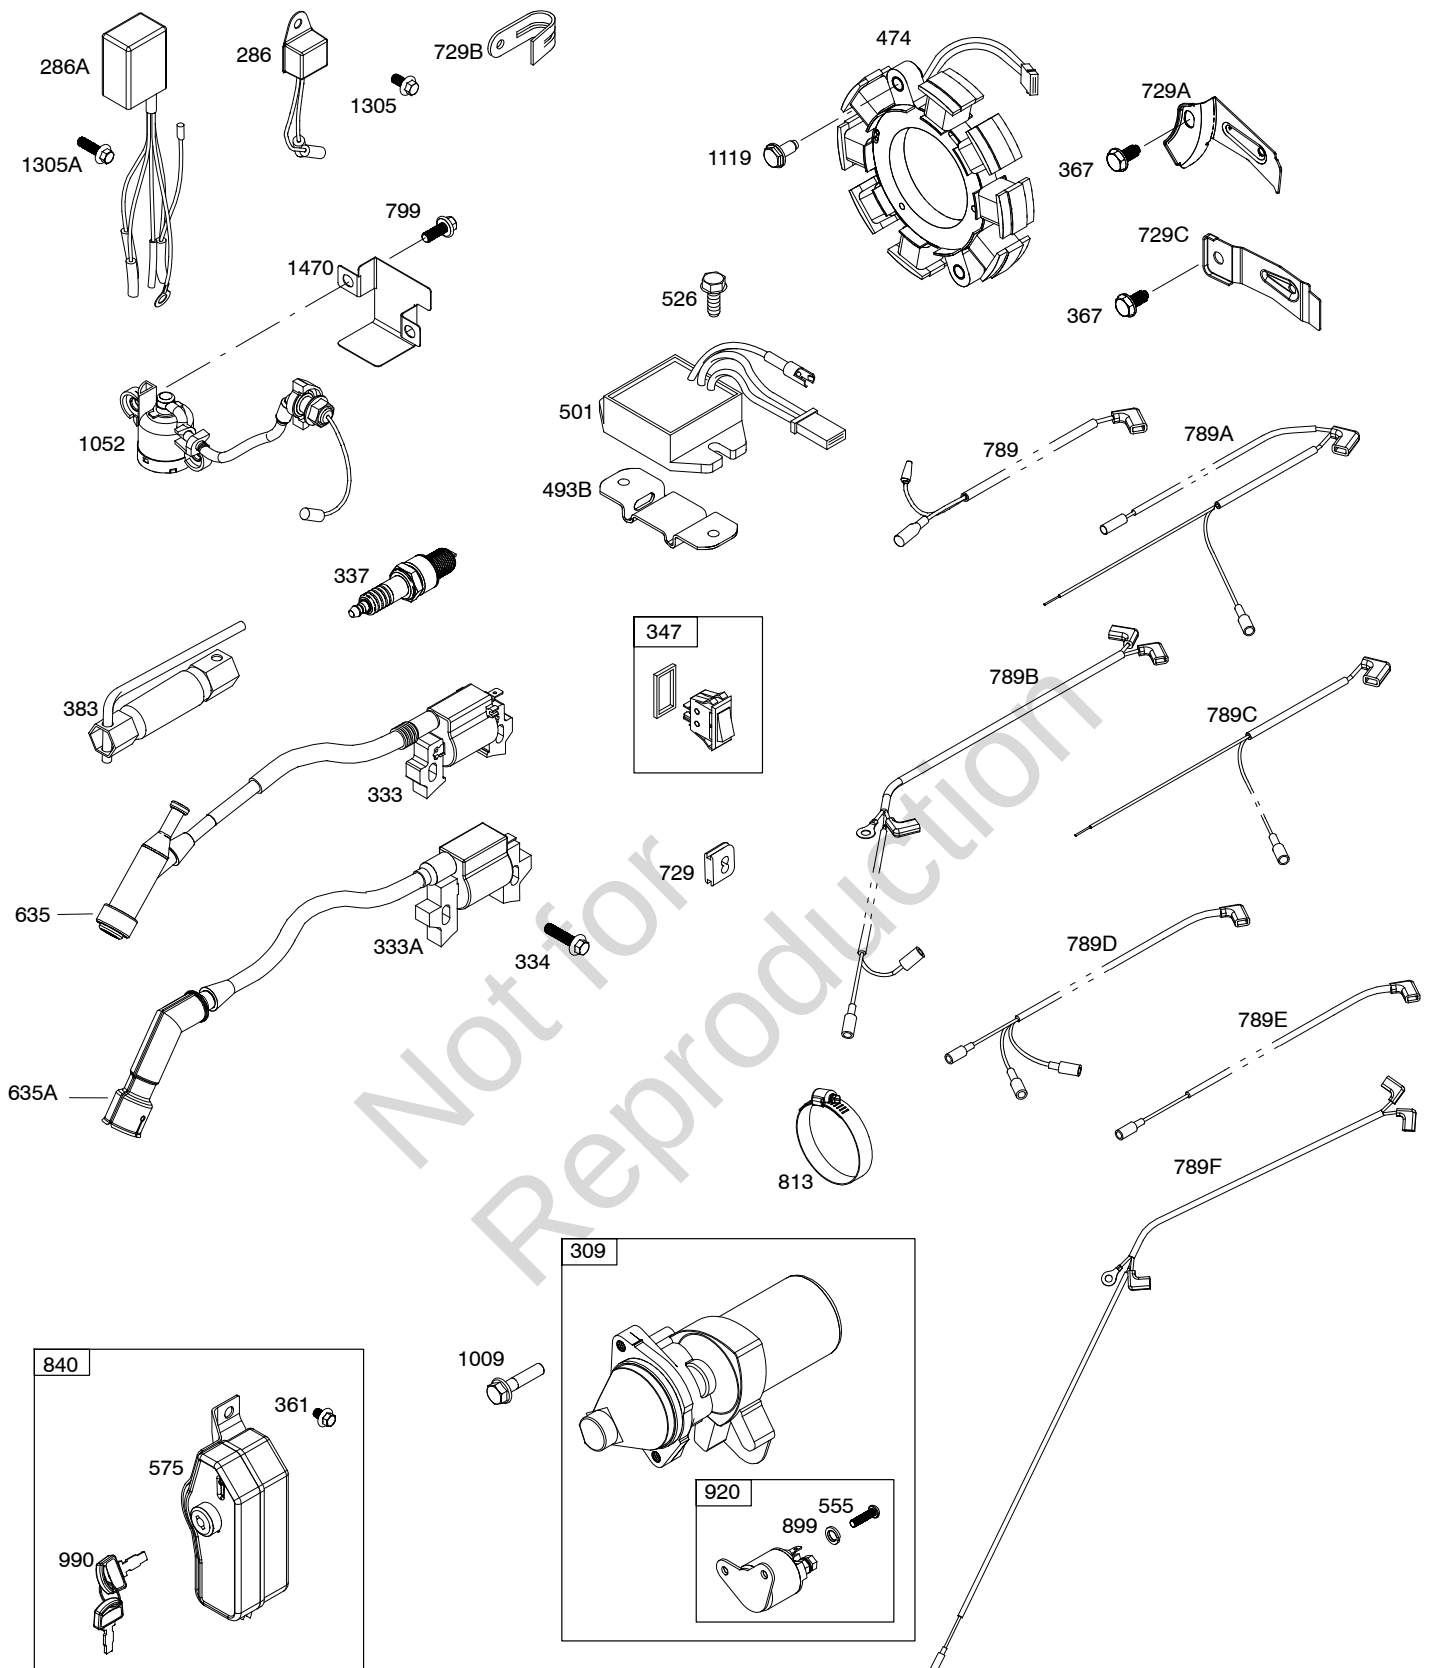 

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

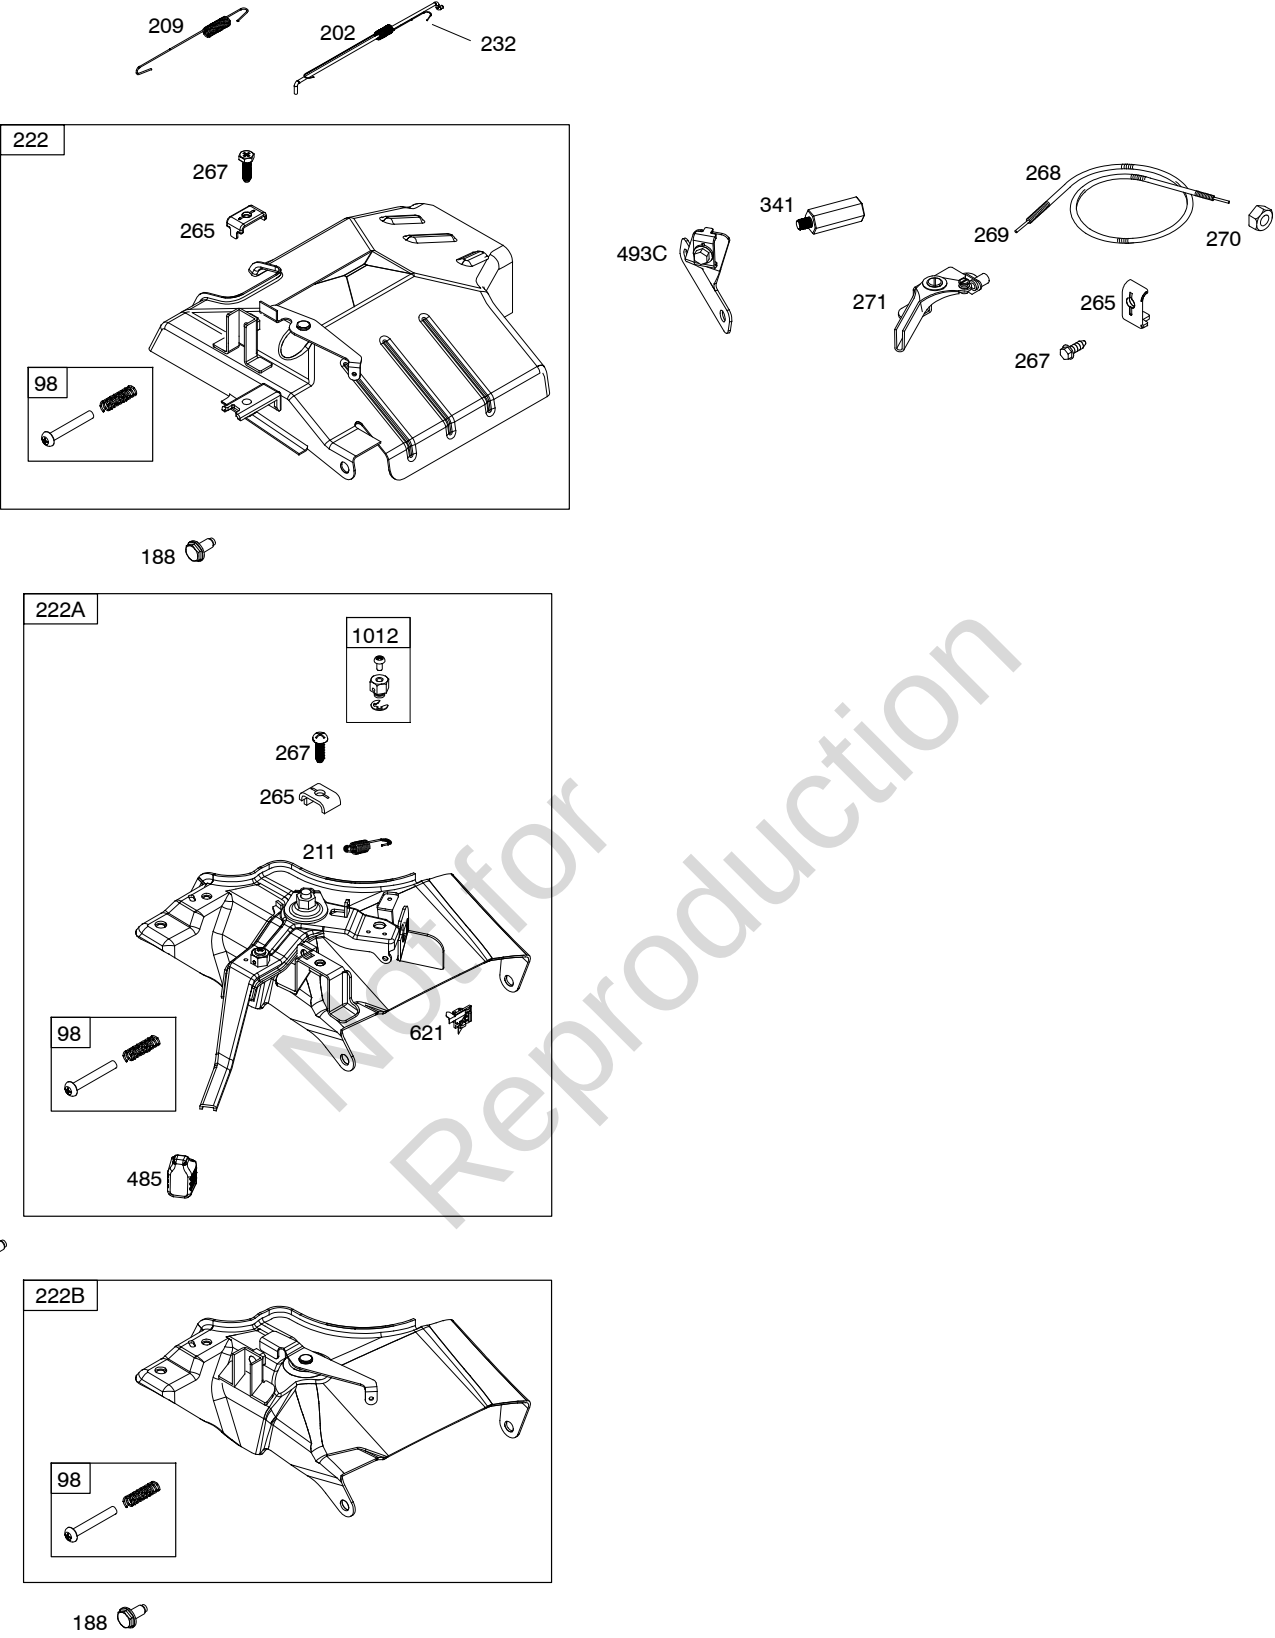 

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

25T200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	590381	Cylinder Assembly (Recoil Start) Used on Type No(s). 0072, 0125, 0126, 0127, 0135, 0174, 0259. ----- Note ----- 799979 Cylinder Assembly (Recoil Start, Low Oil Sensor) Used on Type No(s). 0007, 0013, 0018, 0019, 0021, 0024, 0026, 0027, 0028, 0029, 0032, 0033, 0037, 0043, 0044, 0047, 0051, 0058, 0059, 0061, 0063, 0067, 0068, 0070, 0074, 0076, 0078, 0079, 0081, 0082, 0083, 0088, 0091, 0096, 0108, 0112, 0115, 0116, 0118, 0120, 0122, 0124, 0131, 0138, 0146, 0150, 0158, 0159, 0162, 0173, 0176, 0177, 0178, 0181, 0222, 0232, 0238, 0268, 0273, 0275. 591862 Cylinder Assembly (Electric Start) Used on Type No(s). 0022, 0143.			799967 Cylinder Assembly (Electric Start, Low Oil Sensor) Used on Type No(s). 0001, 0002, 0004, 0005, 0006, 0011, 0014, 0020, 0036, 0041, 0042, 0045, 0048, 0053, 0056, 0060, 0062, 0065, 0071, 0077, 0085, 0087, 0092, 0093, 0094, 0109, 0113, 0134, 0142, 0145, 0147, 0148, 0149, 0151, 0152, 0153, 0155, 0156, 0161, 0166, 0168, 0175, 0179, 0202, 0248, 0269, 0276.	5	799801	Head- Cylinder ----- Note ----- 799533 Head- Cylinder Used on Type No(s). 0005, 0012, 0013, 0015, 0016, 0019, 0024, 0025, 0028, 0035, 0039, 0040, 0044, 0054, 0058, 0060, 0063, 0066, 0067, 0069, 0070, 0082, 0083, 0084, 0110, 0111, 0114, 0132, 0137, 0159, 0165, 0167, 0169, 0170, 0171, 0172, 0175, 0176, 0259, 0267, 0268, 0274, 0275.
			1A	592066	Cylinder Assembly (Recoil Start, Low Oil Sensor) (Tankless, Low Profile) Used on Type No(s). 0170, 0172. ----- Note ----- 592095 Cylinder Assembly (Electric Start, Low oil Sensor) (Tankless, Low Profile) Used on Type No(s). 0169, 0171 797788 Cylinder Assembly (Electric Start, Low oil Sensor) (Tankless, Low Profile) Used on Type No(s). 0012, 0016, 0023, 0025, 0035, 0039, 0040, 0054, 0066, 0069, 0073, 0084, 0110, 0111, 0114, 0132, 0137, 0165, 0167, 0267, 0274.	7	799534	Gasket- Cylinder Head
						11	797768	Tube- Breather
						11B	799832	Tube- Breather
						12	797789	Gasket- Crankcase
						13	797791	Screw (Cylinder Head)
						15	797793	Plug- Oil Drain
						16	590961	Crankshaft Used on Type No(s). 0002, 0004, 0007, 0018, 0021, 0027, 0032, 0033, 0036, 0037, 0042, 0045, 0051, 0061, 0072, 0073, 0074, 0076, 0077, 0078, 0079, 0081, 0085, 0087, 0088, 0092, 0108, 0109, 0112, 0113, 0115, 0116, 0118, 0119, 0123, 0126, 0131, 0135, 0142, 0143, 0146, 0148, 0151, 0153, 0158, 0159, 0166, 0173, 0174, 0178, 0179, 0202, 0232, 0248, 0259, 0269.
			3	797766	Seal- Oil (Magneto Side)			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		----- Note ----- 591043 Crankshaft Used on Type No(s). 0006, 0011, 0014, 0020, 0026, 0041, 0059, 0062, 0067, 0068, 0083, 0091, 0093, 0096, 0122, 0124, 0134, 0150, 0152, 0155, 0161, 0162, 0177, 0181, 0222, 0276. 591098 Crankshaft Used on Type No(s). 0022, 0029, 0056, 0127, 0149, 0156. 799842 Crankshaft Used on Type No(s). 0094.			----- Note ----- 591056 Cover- Crankcase (Includes Governor Gear - Not Serviced Separately) Used on Type No(s). 0006, 0011, 0012, 0013, 0014, 0020, 0023, 0026, 0028, 0041, 0047, 0048, 0053, 0059, 0062, 0065, 0066, 0067, 0068, 0082, 0083, 0091, 0093, 0096, 0122, 0124, 0132, 0134, 0147, 0150, 0152, 0155, 0156, 0161, 0162, 0167, 0177, 0181, 0222, 0276.	23	797813	Flywheel ----- Note ----- 591095 Flywheel Used on Type No(s). 0001, 0002, 0004, 0005, 0006, 0010, 0011, 0012, 0014, 0020, 0022, 0023, 0025, 0036, 0041, 0042, 0045, 0053, 0054, 0056, 0060, 0062, 0065, 0066, 0069, 0071, 0073, 0077, 0084, 0085, 0087, 0092, 0093, 0094, 0109, 0113, 0121, 0137, 0139, 0142, 0143, 0145, 0148, 0149, 0151, 0153, 0155, 0156, 0161, 0165, 0166, 0168, 0175, 0179, 0202, 0248, 0269, 0274, 0276. 799926 Flywheel Used on Type No(s). 0082, 0083.
16A	591099	Crankshaft Used on Type No(s). 0001, 0005, 0012, 0013, 0019, 0024, 0025, 0058, 0060, 0069, 0070, 0071, 0120, 0125, 0138, 0145, 0167, 0168, 0175, 0238, 0273, 0274, 0275.	18A	797760	Cover- Crankcase (Includes Governor Gear - Not Serviced Separately) Used on Type No(s). 0015, 0016, 0035, 0039, 0040, 0043, 0044, 0054, 0063, 0084, 0108, 0109, 0110, 0111, 0114, 0137, 0165, 0169, 0170, 0171, 0172, 0176, 0178, 0179, 0267, 0268, 0269, 0273, 0274, 0275.	24	797812	Key- Flywheel
		----- Note ----- 797844 Crankshaft Used on Type No(s). 0015, 0016, 0023, 0028, 0035, 0039, 0040, 0043, 0044, 0047, 0048, 0053, 0054, 0063, 0065, 0066, 0082, 0084, 0110, 0111, 0114, 0132, 0137, 0147, 0160, 0165, 0169, 0170, 0171, 0172, 0176, 0267, 0268.	20	797766	Seal- Oil (PTO Side)	25	799535	Piston Assembly (Standard) ----- Note ----- 799536 Piston Assembly (.010" Oversize) 799537 Piston Assembly (.020" Oversize)
17	797765	Bearing- Ball (Crankshaft)	22	797795	Screw (Crankcase Cover/Sump)	26	799538	Ring Set (Standard) ----- Note ----- 799539 Ring Set (.010" Oversize) 799540 Ring Set (.020" Oversize)
17A	797764	Bearing- Ball (Counterweight)				27	797803	Lock- Piston Pin
18	590962	Cover- Crankcase (Includes Governor Gear - Not Serviced Separately)				28	797799	Pin- Piston
						29	797804	Rod- Connecting
						33	797778	Valve- Exhaust
						34	797777	Valve- Intake
						35	797780	Spring- Valve (Intake)
						36	797780	Spring- Valve (Exhaust)
						40	797781	Retainer- Valve
						40A	797782	Retainer- Valve
						42	797783	Keeper- Valve

25T200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
45	797786	Tappet- Valve		592069	Jet- Main (Standard)			Jet- Main (High Altitude)
46	797851	Camshaft			Used on Type No(s).			(Currently Not Available)
51	797845	Gasket- Intake			0023, 0024, 0025,			Used on Type No(s).
51A	797755	Gasket- Intake			0028, 0044, 0047,			0173.
53	590390	Stud (Carburetor)			0063, 0066, 0069,	121	799662	Kit- Carburetor Overhaul
		----- Note -----			0070, 0073, 0082,			Used on Type No(s).
	797757	Stud (Carburetor)			0084, 0167, 0168,			0005, 0012, 0013,
		Used on Type No(s).			0169, 0170, 0171,			0019, 0023, 0024,
		0005, 0009, 0012,			0172, 0175, 0176.			0025, 0028, 0044,
		0013, 0015, 0016,			592928 Jet- Main (Standard)			0047, 0054, 0058,
		0019, 0023, 0024,			Used on Type No(s).			0060, 0063, 0066,
		0025, 0028, 0035,			0009, 0015, 0016,			0068, 0069, 0070,
		0039, 0040, 0044,			0017, 0035, 0039,			0073, 0082, 0084,
		0047, 0054, 0058,			0040, 0083, 0274,			0110, 0111, 0114,
		0060, 0063, 0066,			0275.			0132, 0137, 0139,
		0069, 0070, 0073,			595060 Jet- Main (Standard)			0160, 0165, 0167,
		0082, 0083, 0084,			Used on Type No(s).			0168, 0169, 0170,
		0110, 0111, 0114,			0173.			0171, 0172, 0175,
		0132, 0137, 0165,	118	590452	Jet- Main (High Altitude)	121A	590453	Kit- Carburetor Overhaul
		0167, 0168, 0169,			----- Note -----	121B	592332	Kit- Carburetor Overhaul
		0170, 0171, 0172,			593503 Jet- Main (High Altitude)			Used on Type No(s).
		0175, 0176, 0267,			Used on Type No(s).			0009, 0015, 0016,
		0268, 0274, 0275.			0005, 0012, 0013,			0017, 0035, 0039,
55	799974	Housing- Rewind Starter			0019, 0054, 0058,			0040, 0083, 0274,
58	693389	Rope- Starter (Cut to Required Length)			0060, 0110, 0111,			0275.
60	691915	Grip- Starter Rope			0114, 0132, 0137,	122	799961	Spacer- Carburetor
65	797654	Screw (Rewind Starter)			0139, 0160, 0165,	125	799773	Carburetor
98	592978	Kit- Idle Speed (High Speed Adjustment)			0267, 0268.			Used on Type No(s).
117	590451	Jet- Main (Standard)			593493 Jet- Main (High Altitude)			0005, 0012, 0013,
		----- Note -----			Used on Type No(s).			0019, 0054, 0058,
	799774	Jet- Main (Standard)			0023, 0024, 0025,			0060, 0110, 0111,
		Used on Type No(s).			0028, 0044, 0047,			0114, 0132, 0137,
		0005, 0012, 0013,			0063, 0066, 0069,			0139, 0160, 0165,
		0019, 0054, 0058,			0070, 0073, 0082,			0267, 0268.
		0060, 0110, 0111,			0084, 0167, 0168,			----- Note -----
		0114, 0132, 0137,			0169, 0170, 0171,			592067 Carburetor
		0139, 0160, 0165,			0172, 0175, 0176.			Used on Type No(s).
		0267, 0268.			Jet- Main (High Altitude)			0023, 0024, 0025,
					(Not Yet Available)			0028, 0044, 0047,
					Used on Type No(s).			0063, 0066, 0069,
					0009, 0015, 0016,			0070, 0073, 0082,
					0017, 0035, 0039,			0084, 0167, 0168,
					0040, 0083, 0274,			0169, 0170, 0171,
					0275.			0172, 0175, 0176.
						125A	799882	Carburetor

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		----- Note ----- 593746 Carburetor Used on Type No(s). 0002, 0032, 0056, 0062, 0071, 0091, 0138, 0148, 0155, 0156, 0166, 0202, 0222, 0232, 0238, 0248, 0259. 595059 Carburetor Used on Type No(s). 0173.			----- Note ----- 591042 Spring- Governor Used on Type No(s). 0004, 0006, 0007, 0009, 0010, 0011, 0014, 0018, 0020, 0021, 0026, 0027, 0029, 0033, 0036, 0037, 0041, 0043, 0045, 0051, 0053, 0059, 0061, 0065, 0071, 0072, 0074, 0077, 0079, 0081, 0085, 0088, 0092, 0093, 0108, 0109, 0112, 0113, 0118, 0119, 0123, 0126, 0132, 0134, 0135, 0138, 0142, 0143, 0150, 0151, 0152, 0153, 0158, 0160, 0161, 0166, 0173, 0174, 0177, 0179, 0238, 0269, 0276. 797843 Spring- Governor Used on Type No(s). 0001, 0005, 0012, 0013, 0015, 0016, 0017, 0019, 0023, 0024, 0025, 0028, 0035, 0039, 0040, 0044, 0047, 0048, 0054, 0058, 0060, 0063, 0066, 0069, 0070, 0073, 0082, 0083, 0084, 0096, 0110, 0111, 0114, 0120, 0121, 0125, 0137, 0139, 0145, 0165, 0167, 0168, 0169, 0170, 0171, 0172, 0175, 0176, 0267, 0268, 0273, 0274, 0275.			267 699492 Screw (Casing Clamp) 268 691025 Casing- Control Wire (Cut To Required Length) 269 691026 Wire- Control (Cut To Required Length) 270 691027 Nut (Control Wire Casing) 271 691028 Lever- Control 276 797847 Washer- Sealing (Rocker Cover) ----- Note ----- 590987 Washer- Sealing (Rocker Cover) Used on Type No(s). 0002, 0004, 0005, 0006, 0014, 0019, 0023, 0024, 0025, 0028, 0032, 0047, 0048, 0056, 0062, 0063, 0066, 0067, 0069, 0070, 0071, 0073, 0082, 0083, 0084, 0091, 0092, 0093, 0096, 0115, 0122, 0124, 0131, 0132, 0134, 0137, 0138, 0147, 0148, 0151, 0152, 0153, 0155, 0156, 0159, 0161, 0165, 0166, 0167, 0169, 0170, 0171, 0172, 0176, 0178, 0181, 0202, 0222, 0232, 0238, 0248, 0259. 276A 797806 Washer- Sealing (Governor Crank)
125B	592929	Carburetor Used on Type No(s). 0009, 0015, 0016, 0017, 0035, 0039, 0040, 0083, 0274, 0275.						
163	797756	Gasket- Air Cleaner						
163A	799883	Gasket- Air Cleaner						
176	799834	Seal- O Ring (Air Cleaner Base)						
185	591808	Nut (Air Cleaner Base)						
187B	590374	Line- Fuel						
187B	592072	Line- Fuel Used on Type No(s). 0005, 0023, 0047, 0073, 0083, 0167, 0175.						
188	798618	Screw (Control Bracket)						
190	590964	Screw (Fuel Tank)						
202	797810	Link- Mechanical Governor						
209	592073	Spring- Governor Used on Type No(s). 0002, 0022, 0032, 0042, 0056, 0062, 0067, 0068, 0076, 0078, 0087, 0091, 0094, 0115, 0116, 0122, 0124, 0127, 0131, 0146, 0147, 0148, 0149, 0155, 0156, 0159, 0162, 0178, 0181, 0202, 0222, 0232, 0248, 0259.	211	799927	Spring- Governed Idle			
			222	797751	Bracket- Control			
			222A	590375	Bracket- Control			
			222B	591173	Bracket- Control			
			227	799924	Lever- Governor Control			
			232	797809	Spring- Governor Link			
			238	797784	Cap- Valve			
			240A	394358s	Filter- Fuel			
			265	691024	Clamp- Casing			

25T200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
276B	798505	Washer- Sealing (Air Cleaner) Used on Type No(s). 0004, 0006, 0010, 0011, 0014, 0018, 0020, 0026, 0027, 0032, 0033, 0036, 0037, 0041, 0042, 0045, 0051, 0053, 0056, 0059, 0062, 0065, 0067, 0068, 0074, 0076, 0081, 0085, 0087, 0091, 0092, 0094, 0096, 0115, 0116, 0122, 0124, 0134, 0138, 0146, 0148, 0150, 0151, 0152, 0153, 0155, 0156, 0161, 0162, 0166.	305	798618	Screw (Blower Housing)	445A	591338	Filter- Air Cleaner Cartridge Used on Type No(s). 0004, 0006, 0010, 0011, 0014, 0018, 0020, 0026, 0027, 0032, 0033, 0036, 0037, 0041, 0042, 0045, 0051, 0053, 0056, 0059, 0062, 0065, 0067, 0068, 0074, 0076, 0081, 0085, 0087, 0091, 0092, 0094, 0096, 0115, 0116, 0122, 0124, 0134, 0146, 0150, 0151, 0152, 0153, 0155, 0156, 0161, 0162, 0166, 0178, 0179, 0181, 0269, 276.
281	590986	Panel- Control ----- Note ----- 591055 Panel- Control Used on Type No(s). 0021, 0029, 0032, 0042, 0043, 0059, 0067, 0068, 0076, 0078, 0079, 0087, 0088, 0091, 0096, 0108, 0109, 0112, 0113, 0115, 0116, 0120, 0121, 0122, 0124, 0131, 0138, 0146, 0147, 0148, 0150, 0155, 0156, 0159, 0162, 0174, 0177, 0178, 0179, 0181, 0222, 0232, 0238, 0248, 0259, 0273. 591340 Panel- Control Used on Type No(s). 0004, 0006, 0011, 0014, 0018, 0020, 0026, 0036, 0041, 0048, 0053, 0056, 0065, 0092, 0093, 0119, 0134, 0151, 0152, 0161, 0269, 0276.	306	797749	Shield- Cylinder	445B	799818	Filter- Air Cleaner Cartridge
			307	798618	Screw (Cylinder Shield)	455	797746	Cup- Flywheel
			309	797775	Motor- Starter	456	799973	Plate- Pawl Friction
			332	797811	Nut (Flywheel)	459	799976	Pawl- Ratchet
			333	797769	Armature- Magneto	467	691985	Knob- Air Cleaner
			333A	798616	Armature- Magneto	474	591100	Alternator
			334	797655	Screw (Magneto Armature)	----- Note -----		
			337	798615	Plug- Spark	594704	594704	Alternator Used on Type No(s). 0082, 0083.
			341	591341	Stud (Mounting Bracket) (Remote Choke)	485	797339	Knob- Control
			346	699203	Screw (Spark Arrestor)	492	798839	Shield- Crankcase
			347	797340	Switch- Rocker	493B	691177	Bracket- Mounting
			357	590960	Key- Drive Pulley	493C	591342	Bracket- Mounting
					----- Note -----	501	845907	Regulator
					591054 Key- Drive Pulley Used on Type No(s). 0006, 0011, 0014, 0020, 0026, 0041, 0059, 0062, 0067, 0068, 0083, 0091, 0093, 0096, 0122, 0124, 0134, 0150, 0152, 0155, 0161, 0162, 0177, 0181, 0222, 0276.	505	690939	Nut (Governor Control Lever)
			358	799952	Gasket Set- Engine	509	798840	Screw (Crankcase Shield)
			361	798618	Screw (Starting Switch)	522	799941	Plug- Dipstick/Fill
			363	19203	Puller- Flywheel	522A	797762	Plug- Dipstick/Fill Used on Type No(s). 0009, 0015, 0016, 0017, 0035, 0039, 0040, 0043, 0044, 0054, 0063, 0084, 0110, 0111, 0114, 0137, 0160, 0165, 0169, 0170, 0171, 0172, 0176, 0267, 0268.
			367	798618	Screw (Wire Clip)	526	690297	Screw (Regulator)
			383	19576S	Wrench- Spark Plug			
			411	797686	Screw (Air Cleaner Base to Air Cleaner Bracket)			
			412	799830	Nut (Air Cleaner Cover)			
			436	799796	Manifold- Exhaust			
			445	491588s	Filter- Air Cleaner Cartridge			
286	797772	Module- Oil Sensor						
286A	591729	Module- Oil Sensor						
300A	590379	Muffler						
300B	591018	Muffler						
304	799968	Housing- Blower						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
529	799933	Grommet (Fuel Tank)	789B	591041	Harness- Wiring (Used Before Code Date 13050100.)	842A	797763	Seal- O Ring (Dipstick Tube)
535	591778	Filter- Air Cleaner Foam			Used on Type No(s).			Used on Type No(s).
549	799833	Washer (Air Cleaner)			0021, 0112, 0113,			0009, 0015, 0016,
555	799532	Screw (Starter Solenoid)			0115, 0116, 0120,			0017, 0035, 0039,
562	797230	Bolt (Governor- Control Lever)			0121, 0122, 0124,			0040, 0043, 0044,
575	591371	Switch- Starting			0131, 0138, 0146,			0054, 0063, 0084,
597	799972	Screw (Pawl Friction Plate)			0147, 0148, 0150,			0108, 0109, 0110,
601	791850	Clamp- Hose			0155, 0156, 0162.			0111, 0114, 0137,
608	797747	Starter- Rewind			593082 Harness- Wiring			0160, 0165, 0169,
614	797229	Pin- Cotter			(Used After Code Date 13043000.)			0170, 0171, 0172,
616	797805	Crank- Governor			Used on Type No(s).			0176, 0177, 0178,
621	692310	Switch- Stop			0021, 0027, 0029,	863	798297	Bracket- Muffler
631	797794	Washer (Oil Drain Plug)			0032, 0042, 0043,	868	797854	Seal- Valve (Intake)
635	797658	Boot- Spark Plug			0059, 0067, 0068,	875	799776	Base- Air Cleaner
635A	797685	Boot- Spark Plug			0076, 0078, 0079,	875A	591804	Base- Air Cleaner
643	591806	Retainer- Air Filter			0087, 0088, 0091,	875B	799831	Base- Air Cleaner
654	690939	Nut (Carburetor)			0096, 0108, 0112,	875D	595058	Base- Air Cleaner
663	799846	Screw (Control Panel)			0113, 0115, 0116,	883	797770	Gasket- Exhaust
676	590953	Deflector- Muffler			0120, 0121, 0122,	883A	799797	Gasket- Exhaust
676B	697816	Deflector- Muffler			0124, 0131, 0138,	899	799642	Washer (Starter Solenoid)
677	699203	Screw (Muffler Deflector)			0146, 0147, 0148,			
677B	699776	Screw (Muffler Deflector)			0150, 0155, 0156,	914	797848	Screw (Rocker Cover)
689	799669	Spring- Friction			0159, 0162, 0177,			----- Note -----
703	590967	Clip (Fuel Hose)			0178, 0179, 0181,			590988 Screw (Rocker Cover)
705	590965	Nut (Fuel Tank)			0222, 0232, 0238,			Used on Type No(s).
717	591809	Bracket- Air Cleaner			0248, 0273.			0002, 0004, 0005,
718	797792	Pin- Locating (Cylinder Head)	789C	590371	Harness- Wiring			0006, 0014, 0019,
718A	797761	Pin- Locating (Crankcase Cover)	789D	590372	Harness- Wiring			0023, 0024, 0025,
729	797750	Clip- Wire	789E	591390	Harness- Wiring			0028, 0032, 0047,
729A	799844	Clip- Wire	789F	593722	Harness- Wiring			0048, 0056, 0062,
729B	592311	Clip- Wire	799	798975	Screw (Oil Sensor)			0063, 0066, 0067,
729C	593137	Clip- Wire	813	590392	Clamp			0069, 0070, 0071,
758	797852	Counterweight	819	798618	Screw (Muffler Bracket)			0073, 0082, 0083,
789	797856	Harness- Wiring	830	591088	Stud- Rocker Arm (Used After Code Date 11043000)			0084, 0091, 0092,
789A	590985	Harness- Wiring			----- Note -----			0093, 0096, 0115,
					798954 Stud- Rocker Arm			0122, 0124, 0131,
					(Used Before Code Date 11050100)			0132, 0134, 0137,
					832A 590380 Guard- Muffler			0138, 0147, 0148,
					832B 591019 Guard- Muffler			0151, 0152, 0153,
					836A 798976 Screw (Muffler Guard)			0155, 0156, 0159,
					840 594476 Kit- Panel			0161, 0165, 0166,
					842 797327 Seal- O Ring (Dipstick Tube)			0167, 0169, 0170,
								0171, 0172, 0176,
								0181, 0202, 0222,
								0232, 0238, 0248,
								0259.
						920	799481	Solenoid- Starter

25T200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
951	797759	Lever- Choke ----- Note ----- 592068 Lever- Choke Used on Type No(s). 0023, 0024, 0025, 0028, 0044, 0047, 0063, 0066, 0069, 0070, 0073, 0082, 0084, 0167, 0168, 0169, 0170, 0171, 0172, 0175, 0176.	1023	799778	Cover- Rocker ----- Note ----- 590989 Cover- Rocker Used on Type No(s). 0002, 0004, 0005, 0006, 0014, 0019, 0023, 0024, 0025, 0028, 0032, 0047, 0048, 0056, 0062, 0063, 0066, 0067, 0069, 0070, 0071, 0073, 0082, 0083, 0084, 0091, 0092, 0093, 0096, 0115, 0122, 0124, 0131, 0132, 0134, 0137, 0138, 0147, 0148, 0151, 0152, 0153, 0155, 0156, 0159, 0161, 0165, 0166, 0167, 0169, 0170, 0171, 0172, 0176, 0181, 0202, 0222, 0232, 0238, 0248, 0259.	1095	799953	Gasket Set- Valve
951A	593102	Lever- Choke				1119	799845	Screw (Alternator)
957	799324	Cap- Fuel Tank				1176	590965	Nut (Exhaust Manifold)
957A	794641	Cap- Fuel Tank				1177	590965	Nut (Muffler)
964	799159	Cap- Connector				1210	799975	Pulley/Spring Assembly (Pulley)
967	798795	Filter- Pre Cleaner				1211	799975	Pulley/Spring Assembly (Spring)
968	791082	Cover- Air Cleaner ----- Note ----- 590958 Cover- Air Cleaner Used on Type No(s). 0009, 0015, 0016, 0035, 0110, 0111, 0139, 0160.				1302	590457	Washer (Muffler Guard)
968A	591803	Cover- Air Cleaner				1305	798618	Screw (Oil Sensor Module)
968B	799829	Cover- Air Cleaner				1305A	797686	Screw (Oil Sensor Module)
972B	590966	Tank- Fuel				1319	794467	Label- Warning
972C	591339	Tank- Fuel				1319A	797669	Label- Warning
990	590996	Key Set				1345	792917	Filter- Filler Neck
994A	594233	Arrestor- Spark				1408	690939	Nut (Air Cleaner Bracket)
994B	796399	Arrestor- Spark				1453	591807	Seal- Air Cleaner Cover
1005	797748	Fan- Flywheel ----- Note ----- 593491 Fan- Flywheel Used on Type No(s). 0002, 0032, 0056, 0062, 0091, 0122, 0138, 0148, 0159, 0202, 0222, 0232, 0238, 0248, 0259.	1026	799966	Rod- Push (Used After Code Date 11043000) ----- Note ----- 797785 Rod- Push (Used Before Code Date 11050100)	1469	70007GS	Washer (Air Cleaner Bracket)
						1469A	22097GS	Washer (Air Cleaner Bracket)
			1029	591087	Arm- Rocker (Used After Code Date 11043000) ----- Note ----- 797779 Arm- Rocker (Used Before Code Date 11050100)	1470	592071	Shield- Oil Sensor
						1509	797346	Outlet- Tank
1009	797776	Screw (Starter Motor)	1034	797787	Guide- Push Rod			
1012	590378	Retainer- Link	1036		Label- Emissions (Available From A Briggs & Stratton Authorized Dealer)			
1022	797846	Gasket- Rocker Cover	1052	797771	Sensor- Oil			

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

