

19N100

Illustrated Parts List

Model Series

19N100

TYPE NUMBERS

0001, 0002, 0003, 0004, 0005, 0008, 0009, 0010, 0013, 0014, 0018, 0019, 0020, 0021, 0022, 0024, 0025, 0027, 0028, 0029, 0030, 0031, 0032, 0033, 0034, 0035, 0036, 0037, 0039, 0042, 0044, 0045, 0047, 0048, 0049, 0050, 0051, 0052, 0053, 0055, 0058, 0059, 0060, 0062, 0063, 0064, 0065, 0066, 0067, 0068, 0070, 0071, 0072, 0075, 0076, 0077, 0079, 0080, 0082, 0083, 0084, 0085, 0087, 0088, 0089, 0090, 0092, 0094, 0095, 0097, 0098, 0218, 0221, 0222.

Not for
Reproduction



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



 
 
19N100

1036 EMISSIONS LABEL












1058 OPERATOR'S MANUAL





1319 WARNING LABEL

1319A WARNING LABEL

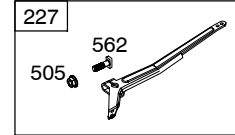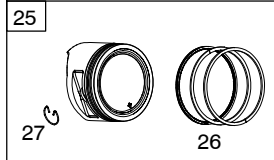







614

   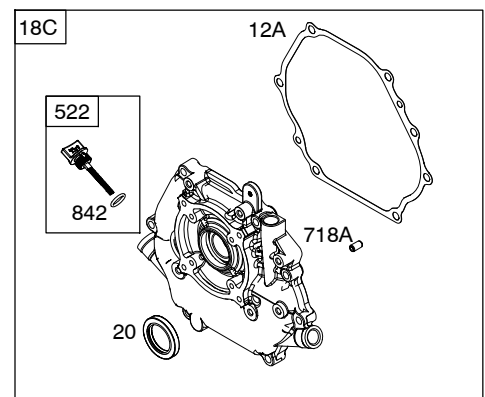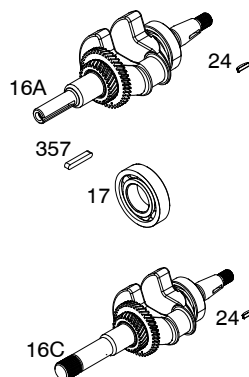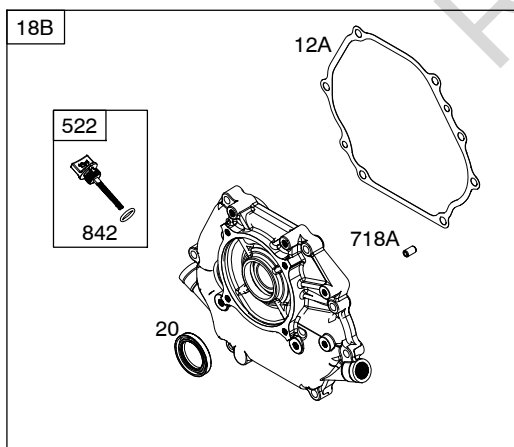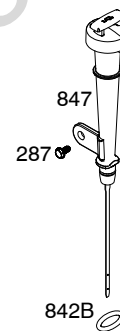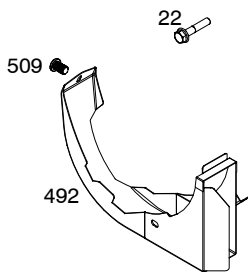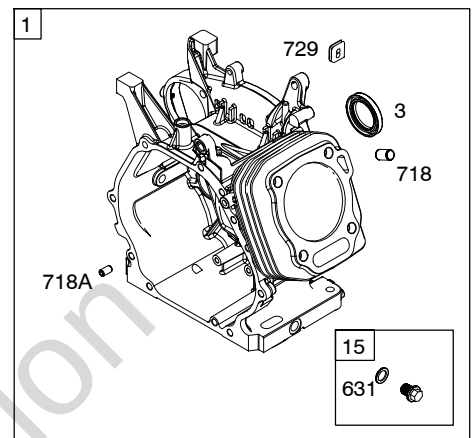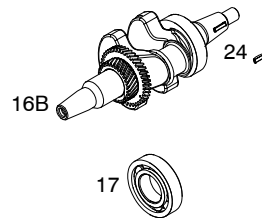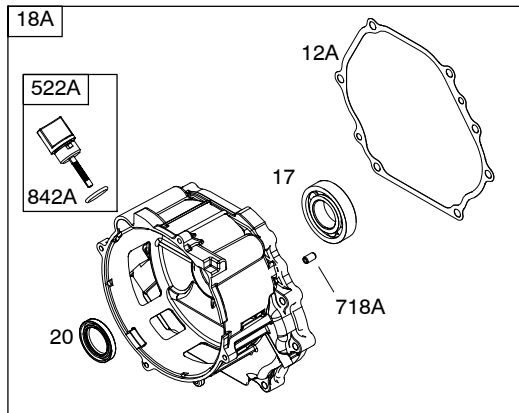

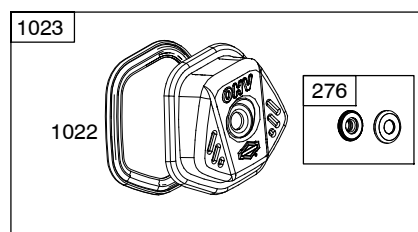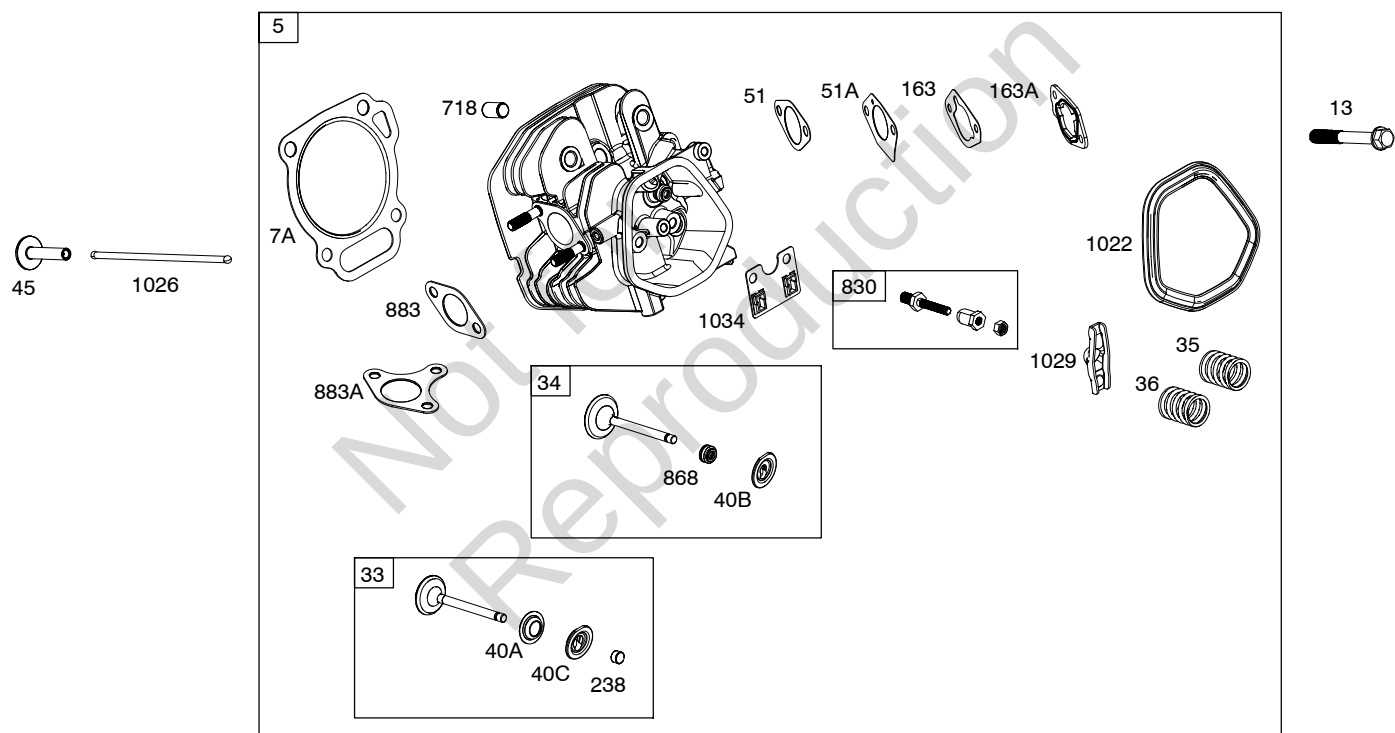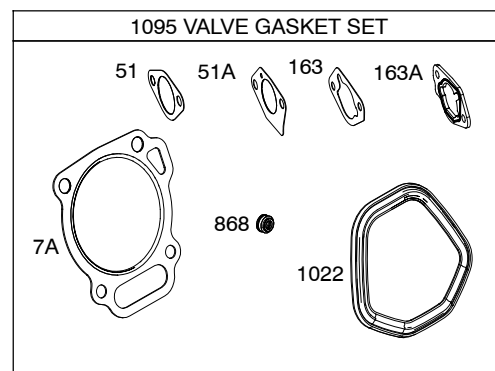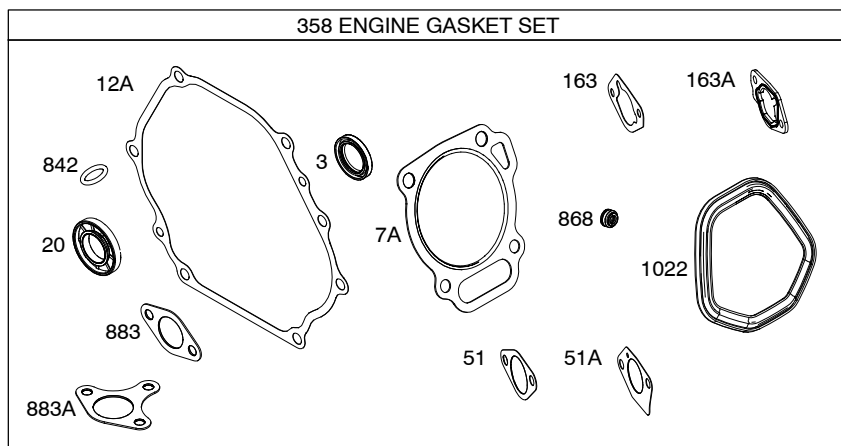




Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

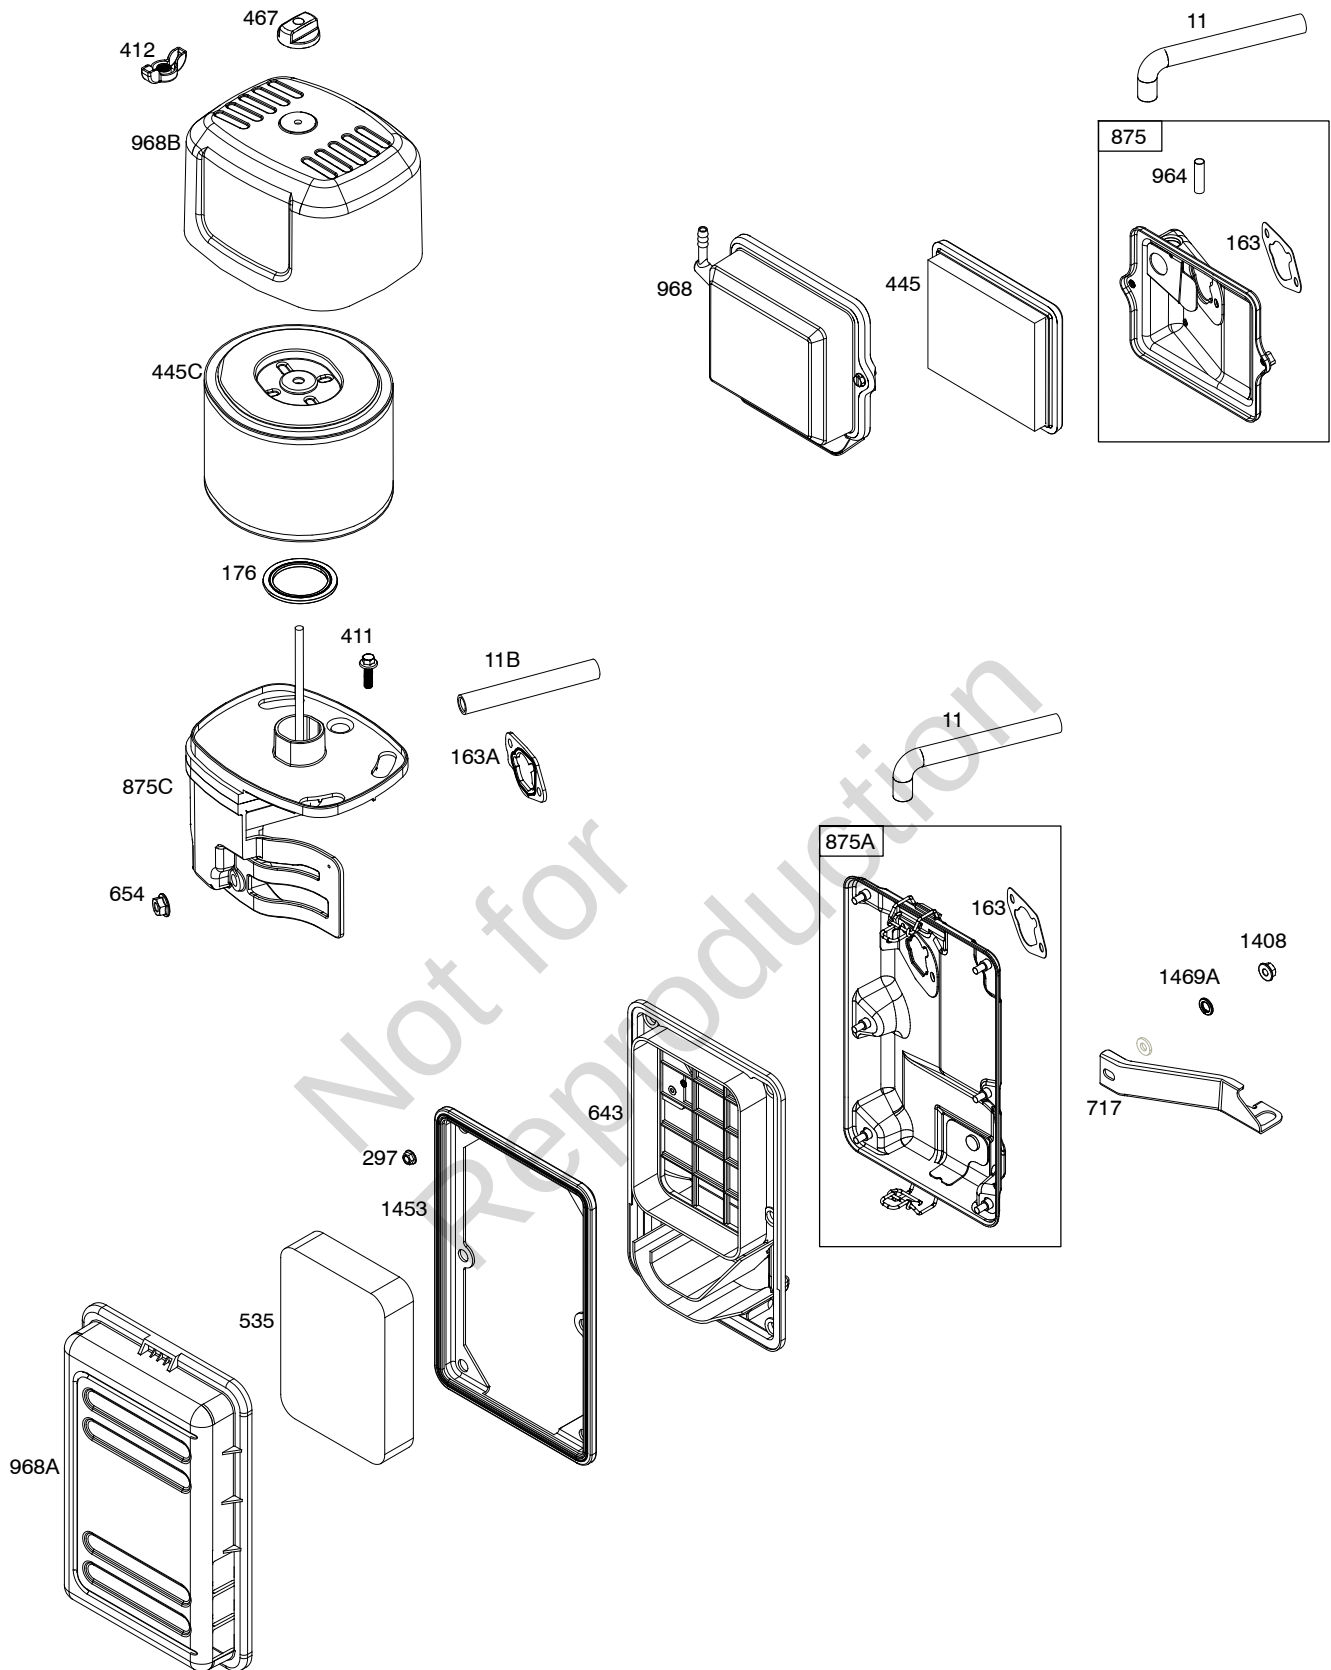

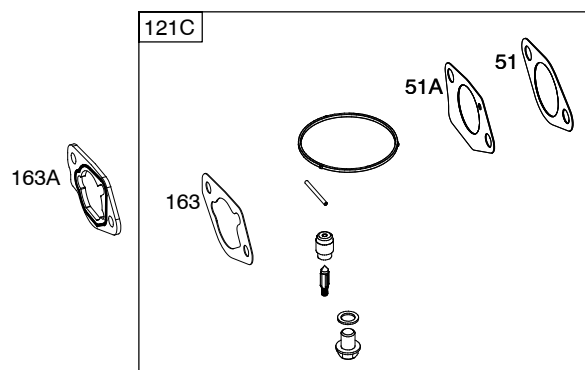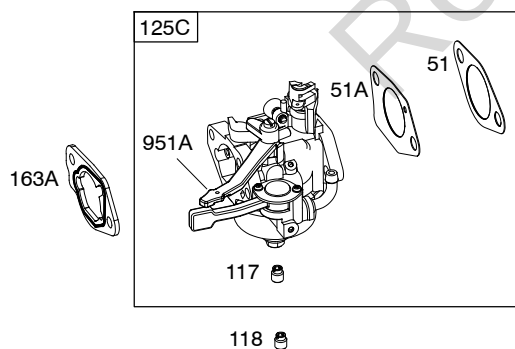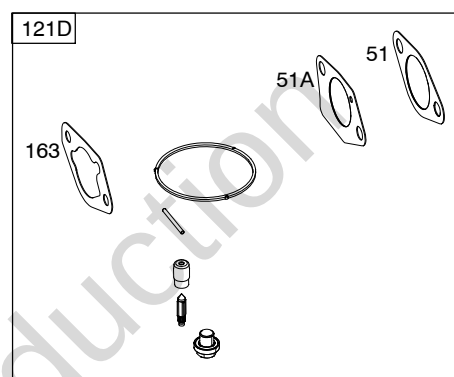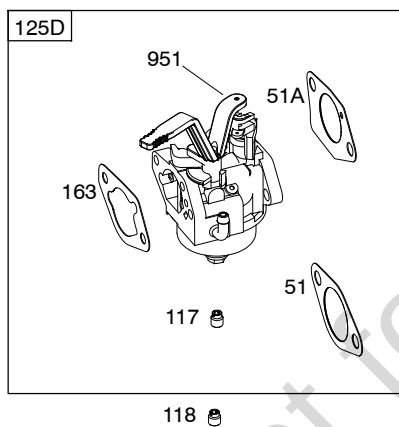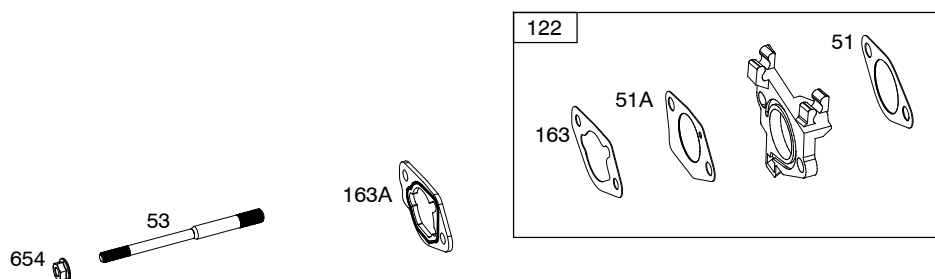







Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

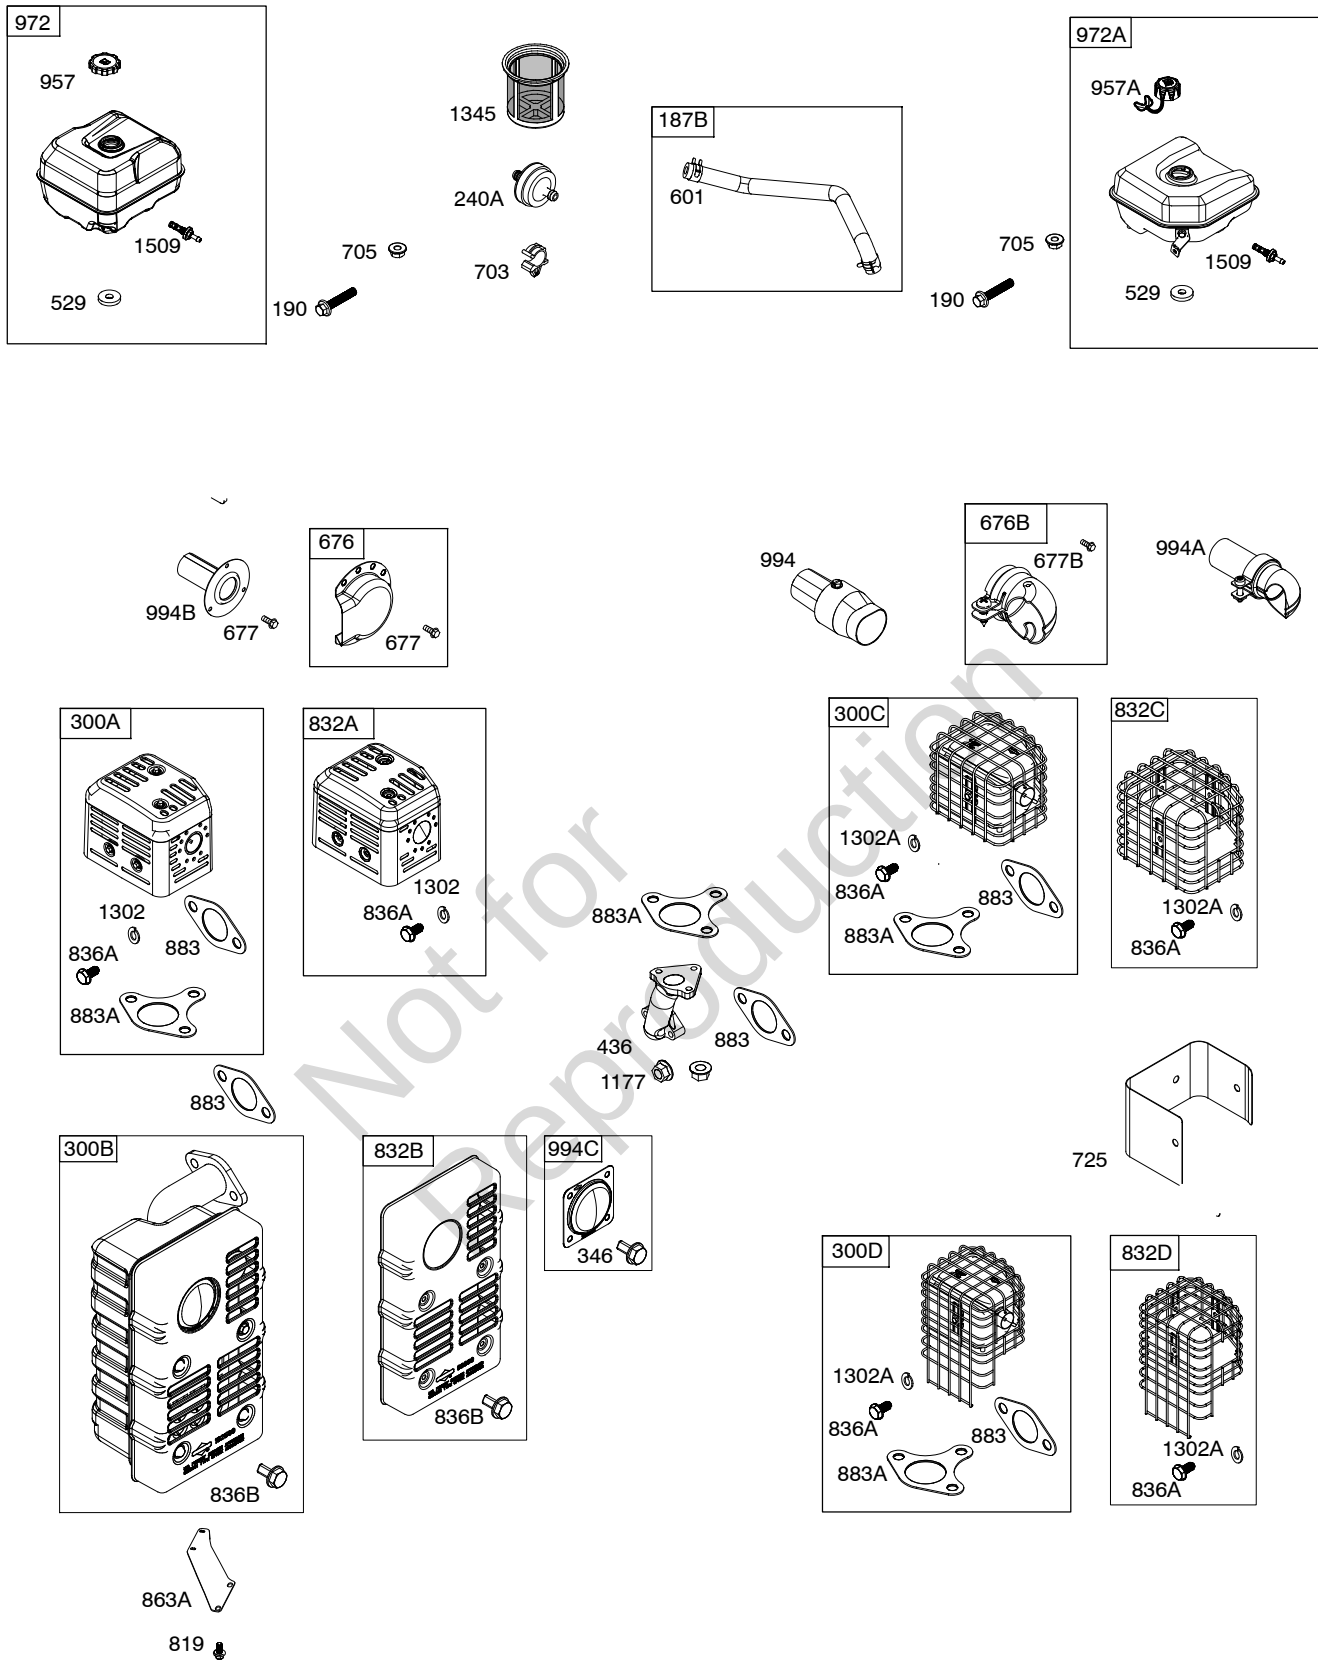

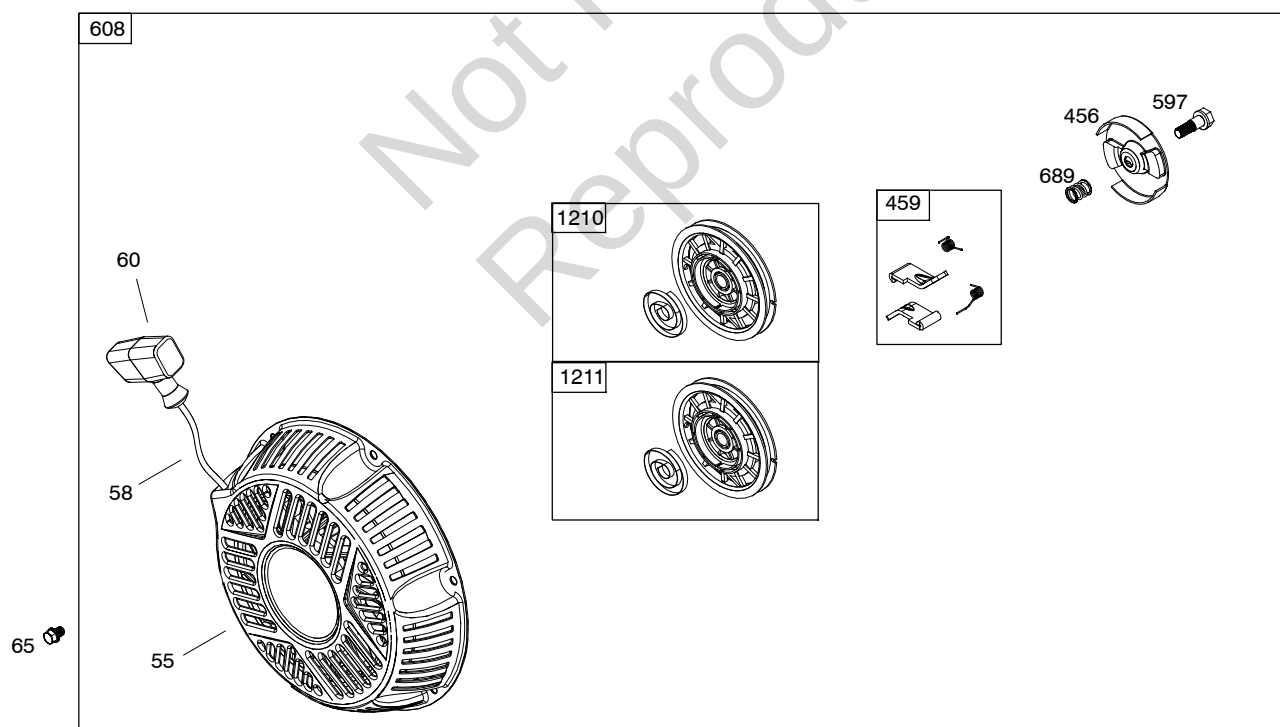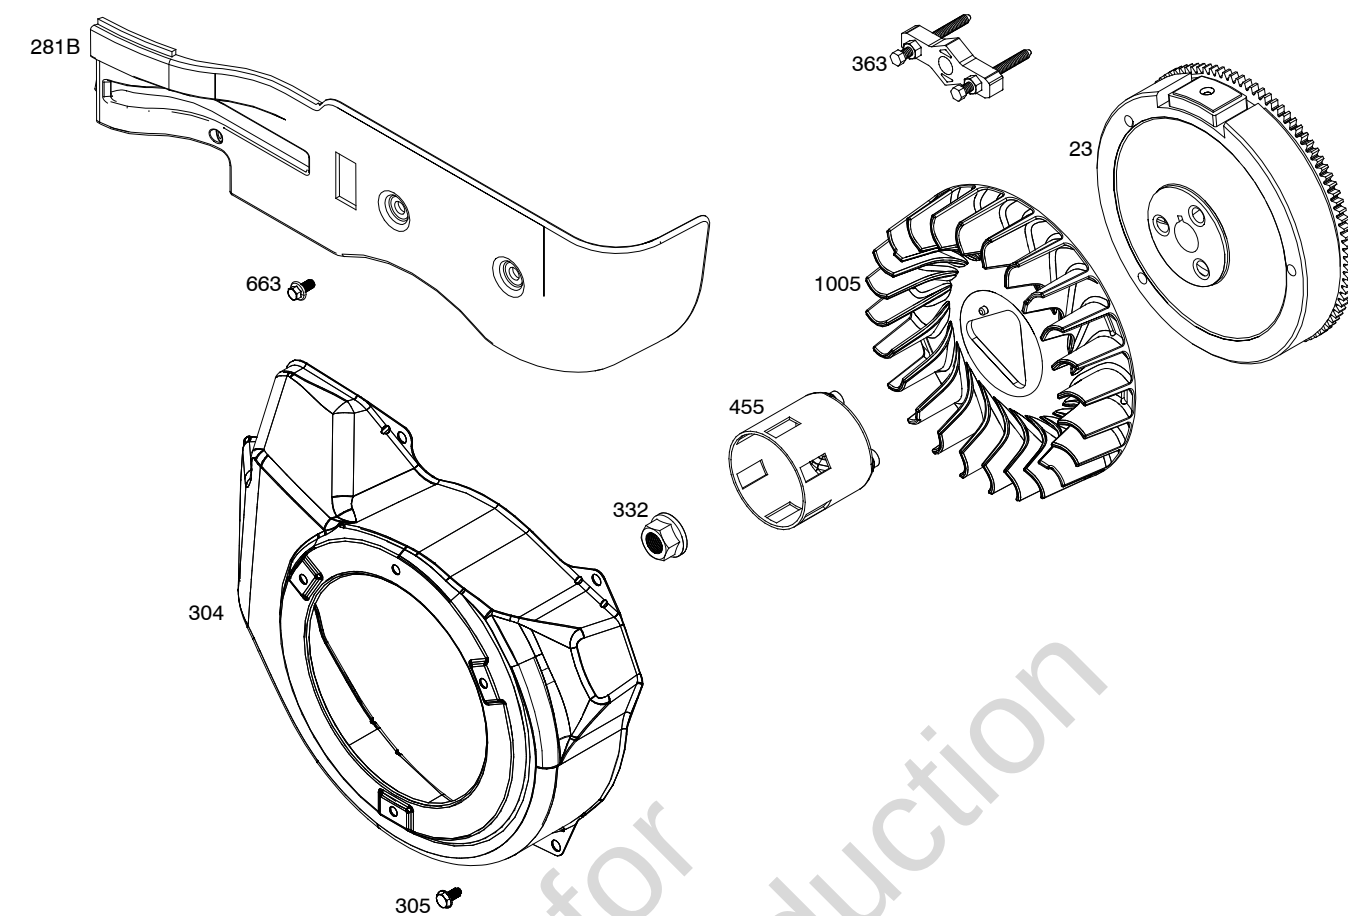

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

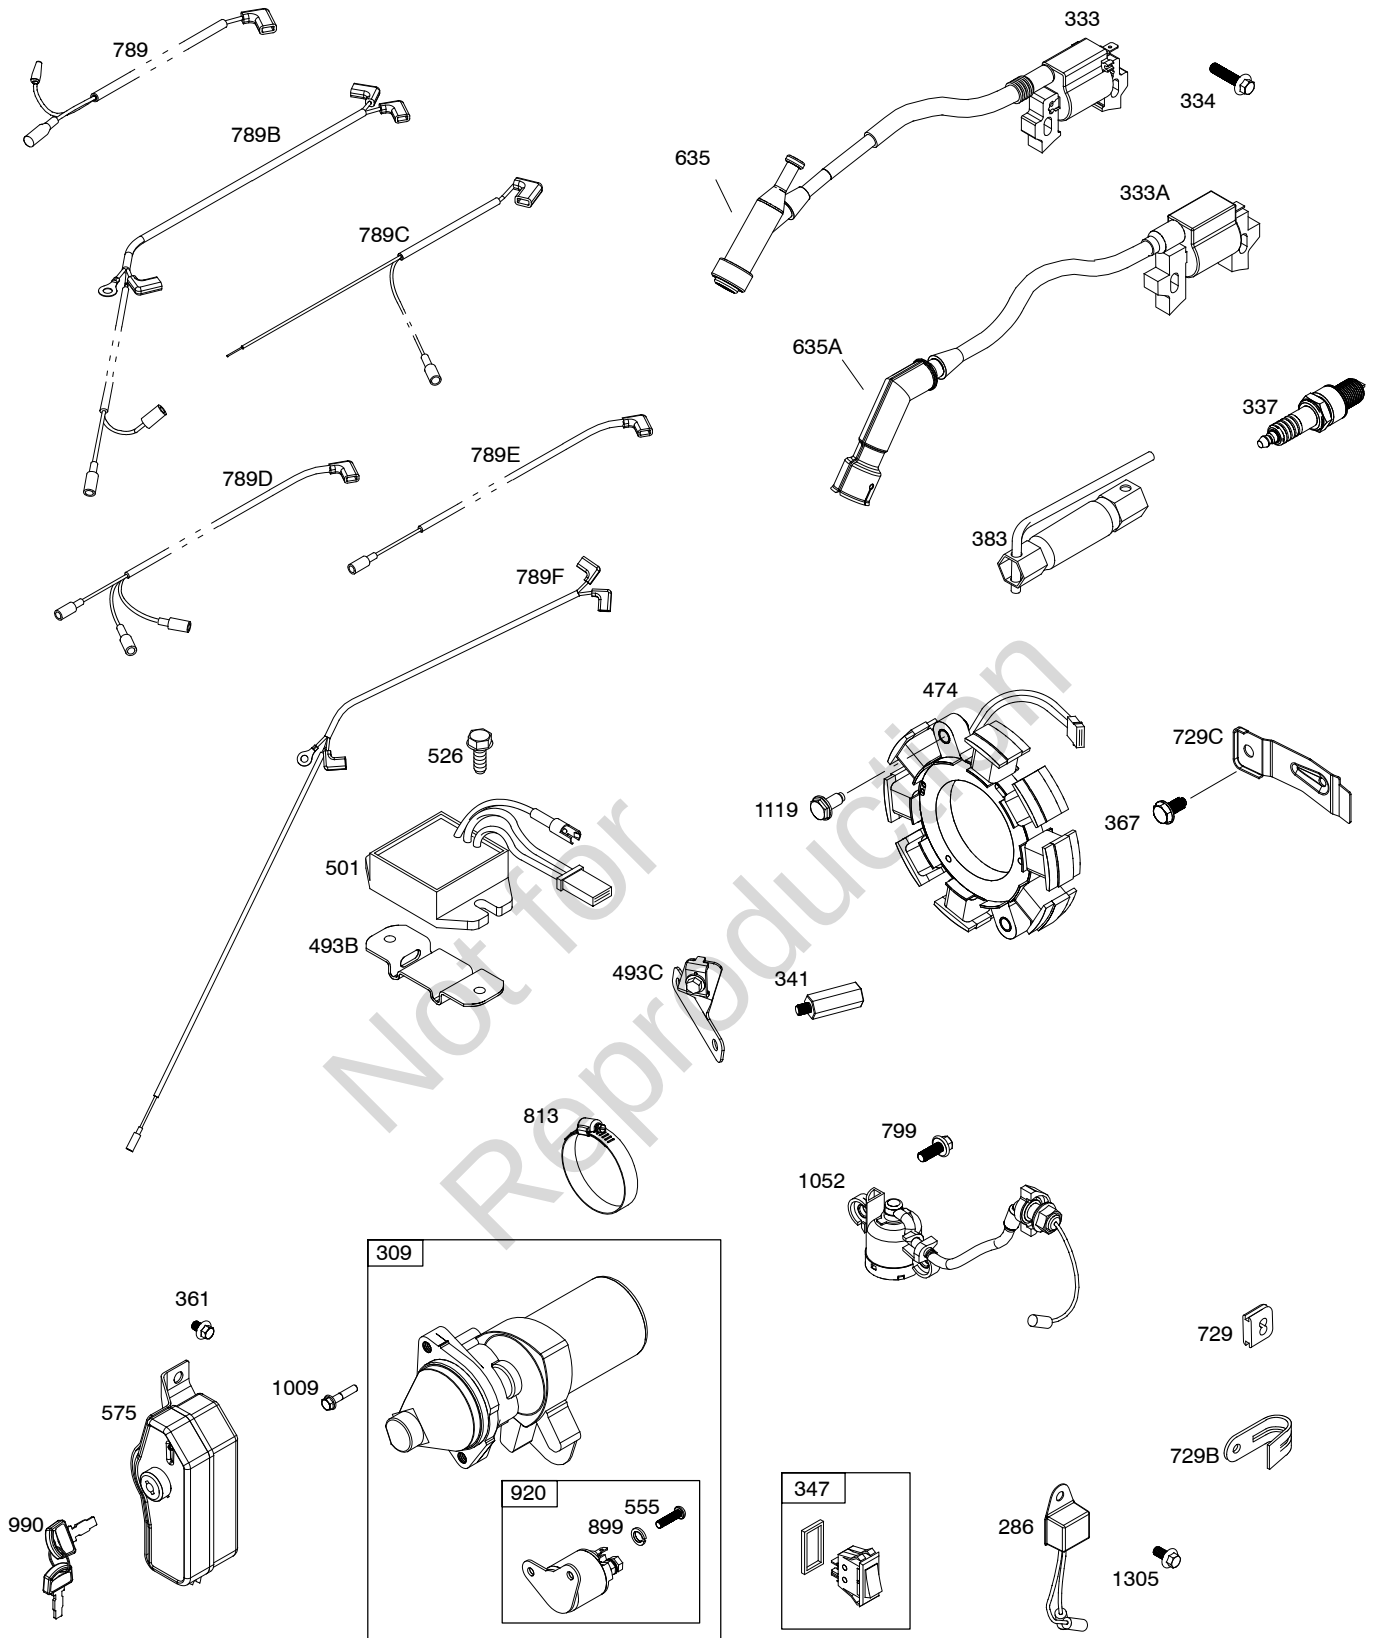

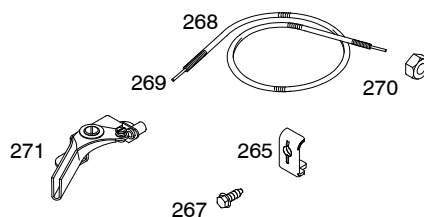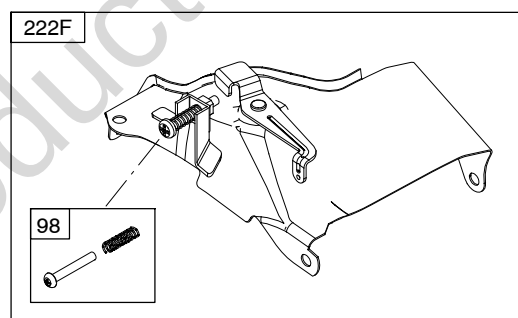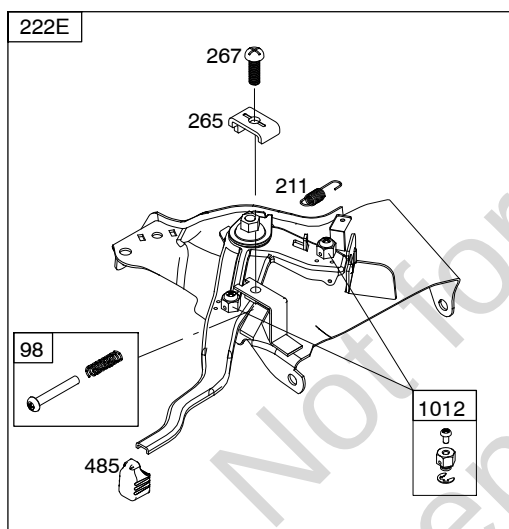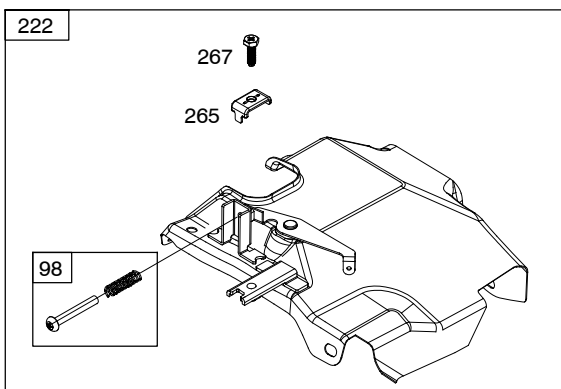 

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

19N100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
1	593106	Cylinder Assembly ----- Note ----- 593140 Cylinder Assembly Used on Type No(s). 0009, 0027, 0030, 0036, 0042, 0044, 0049, 0050, 0052, 0058, 0066, 0070, 0075, 0076, 0077, 0082. 593726 Cylinder Assembly Used on Type No(s). 0020, 0021, 0034, 0037, 0048, 0051, 0071, 0079, 0080, 0085, 0221. 593736 Cylinder Assembly Used on Type No(s). 0032, 0053, 0060, 0062, 0065, 0072, 0084, 0094.			593691 Crankshaft Used on Type No(s). 0055, 0065. 595298 Crankshaft Used on Type No(s). 0090, 0097.	22A	593107	Screw (Crankcase Cover/Sump)		
			16B	591835	Crankshaft Used on Type No(s). 0006, 0009, 0027, 0028, 0036, 0045, 0049. ----- Note ----- 591836 Crankshaft Used on Type No(s). 0013, 0014, 0015.	23	593100	Flywheel ----- Note ----- 593139 Flywheel Used on Type No(s). 0009, 0027, 0030, 0032, 0036, 0044, 0050, 0052, 0053, 0058, 0060, 0062, 0065, 0066, 0070, 0072, 0075, 0076, 0077, 0082, 0087, 0094, 0095. 593735 Flywheel Used on Type No(s). 0042, 0049. 593690 Flywheel Used on Type No(s). 0084.		
3	591794	Seal-Oil (Magneto Side)			16C	593135	Crankshaft Used on Type No(s). 0008, 0050, 0067, 0083.	24	797812	Key-Flywheel
5	593093	Head-Cylinder ----- Note ----- 593132 Head-Cylinder Used on Type No(s). 0006, 0013, 0014, 0015, 0045, 0067, 0080.			17	591792	Bearing-Ball (Crankshaft)	25	592613	Piston Assembly (Standard) ----- Note ----- 593108 Piston Assembly (.010" Oversize) 593109 Piston Assembly (.020" Oversize)
7A	592834	Gasket-Cylinder Head			18A	592038	Cover-Crankcase Used on Type No(s). 0013, 0014, 0015, 0037, 0044, 0050, 0065, 0066, 0067, 0071, 0072, 0079, 0082, 0097.	26	592614	Ring Set (Standard) ----- Note ----- 593110 Ring Set (.010" Oversize) 593111 Ring Set (.020" Oversize)
11	592353	Tube-Breather			18B	593083	Cover-Crankcase ----- Note ----- 593114 Cover-Crankcase Used on Type No(s). 0003, 0021, 0022, 0034, 0047, 0058, 0062, 0063, 0064, 0068, 0070, 0075, 0080, 0087, 0094, 0098, 0221, 0222.	27	592044	Lock-Piston Pin
11B	799832	Tube-Breather (Cut To Required Length)						28	592045	Pin-Piston
12A	592597	Gasket-Crankcase			18C	593661	Cover-Crankcase Used on Type No(s). 0019, 0031, 0032, 0035, 0039, 0051, 0052, 0053, 0055, 0059, 0060, 0076, 0077, 0083. ----- Note ----- 593747 Cover-Crankcase Used on Type No(s). 0033.	29	592046	Rod-Connecting
13	797791	Screw (Cylinder Head)			20	591793	Seal-Oil (PTO Side)	33	592612	Valve-Exhaust
15	797793	Plug-Oil Drain			22	797776	Screw (Crankcase Cover/Sump)	34	592611	Valve-Intake
16A	593084	Crankshaft ----- Note ----- 593115 Crankshaft Used on Type No(s). 0003, 0021, 0022, 0033, 0034, 0047, 0058, 0062, 0063, 0064, 0068, 0070, 0075, 0080, 0221, 0222. 593662 Crankshaft Used on Type No(s). 0051, 0053, 0077, 0084, 0085.						35	591814	Spring-Valve (Intake)
								36	591814	Spring-Valve (Exhaust)
								40A	797782	Retainer-Valve
								40B	591815	Retainer-Valve
								40C	591816	Retainer-Valve
								45	797786	Tappet-Valve
								46	592617	Camshaft
								51	591779	Gasket-Intake
								51A	591798	Gasket-Intake

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
53	590390	Stud (Carburetor) ----- Note ----- 591801 Stud (Carburetor) Used on Type No(s). 0006, 0013, 0014, 0015, 0045, 0067, 0088.	125C	592594	Carburetor ----- Note ----- 593745 Carburetor Used on Type No(s). 0047, 0048, 0050, 0075, 0218, 0221, 0222.	222	591810	Bracket-Control
55	591787	Housing-Rewind Starter	125D	592596	Carburetor Used on Type No(s). 0006, 0095. ----- Note ----- 592595 Carburetor Used on Type No(s). 0013, 0014, 0015, 0045, 0067, 0088.	222E	593105	Bracket-Control
58	691921	Rope-Starter (Cut to Required Length)	163	797756	Gasket-Air Cleaner	222F	593315	Bracket-Control Used on Type No(s). 0009, 0027, 0028, 0036, 0049.
60	691915	Grip-Starter Rope	163A	799883	Gasket-Air Cleaner	227	592616	Lever-Governor Control
65	797654	Screw (Rewind Starter)	176	799834	Seal-O Ring (Air Cleaner Base)	232	797809	Spring-Governor Link
98	592978	Kit-Idle Speed	187B	593092	Line-Fuel ----- Note ----- 592072 Line-Fuel Used on Type No(s). 0045, 0067. 593721 Line-Fuel Used on Type No(s). 0019, 0031, 0032, 0033, 0034, 0035, 0037, 0039, 0051, 0052, 0053, 0055, 0060, 0062, 0063, 0065, 0071, 0072, 0076, 0077, 0079, 0080, 0083. 595442 Line-Fuel (Used After Code Date 14060800). Used on Type No(s). 0002, 0003, 0004, 0008, 0009, 0010, 0018, 0020, 0021, 0022, 0024, 0025, 0027, 0028, 0029, 0030, 0036, 0042, 0044, 0049, 0058, 0064, 0068, 0070, 0082, 0087, 0089, 0092, 0094, 0098.	238	591817	Cap-Valve
117	592598	Jet-Main (Standard) ----- Note ----- 592928 Jet-Main (Standard) Used on Type No(s). 0006. 593503 Jet-Main (Standard) Used on Type No(s). 0013, 0014, 0015, 0045, 0067, 0088.				240A	394358s	Filter-Fuel
118	594713	Jet-Main (High Altitude) 799774 Jet-Main (High Altitude) Used on Type No(s). 0006. 594712 Jet-Main (High Altitude) Used on Type No(s). 0013, 0014, 0015, 0045, 0067, 0088.				265	691024	Clamp-Casing
121C	592229	Kit-Carburetor Overhaul				267	699492	Screw (Casing Clamp)
121D	593133	Kit-Carburetor Overhaul				268	691025	Casing-Control Wire (Cut To Required Length)
122	591797	Spacer-Carburetor				269	691026	Wire-Control (Cut To Required Length)
						270	691027	Nut (Control Wire Casing)
						271	691028	Lever-Control
						276	797847	Washer-Sealing (Rocker Cover) ----- Note ----- 590987 Washer- Sealing (Rocker Cover) Used on Type No(s). 0002, 0003, 0004, 0006, 0018, 0020, 0021, 0022, 0047, 0048, 0050, 0058, 0066, 0075, 0082, 0089, 0098, 0218, 0221, 0222.
			188	798618	Screw (Control Bracket)	281B	593099	Panel-Control ----- Note ----- 593314 Panel-Control Used on Type No(s). 0009, 0027, 0028, 0036, 0049. 593732 Panel-Control Used on Type No(s). 0030, 0032, 0034, 0042, 0044, 0050, 0052, 0053, 0060, 0062, 0066, 0071, 0072, 0075, 0080, 0087, 0094.
			190	590964	Screw (Fuel Tank)	286	797772	Module-Oil Sensor
			202	591834	Link-Mechanical Governor	287	798618	Screw (Dipstick Tube)
			209	591786	Spring-Governor	297	591808	Nut (Air Filter Retainer)
			211	799927	Spring-Governed Idle			

19N100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300A	593090	Muffler	505	690939	Nut (Governor Control Lever)	789	797856	Harness-Wiring Used on Type No(s). 0006, 0013, 0014, 0015, 0032, 0045, 0053, 0060, 0062, 0067.
300B	192569GS	Muffler	509	798840	Screw (Crankcase Shield)	789B	593082	Harness-Wiring Used on Type No(s). 0002, 0003, 0004, 0008, 0009, 0010, 0018, 0019, 0022, 0024, 0025, 0028, 0029, 0031, 0033, 0035, 0039, 0047, 0055, 0058, 0063, 0064, 0068, 0070, 0082, 0083, 0089, 0218, 0222.
300D	593128	Muffler	522	799941	Plug-Dipstick/Fill	789C	590371	Harness-Wiring Used on Type No(s). 0034, 0080.
304	591785	Housing-Blower	522A	797762	Plug-Dipstick/Fill	789D	590372	Harness-Wiring Used on Type No(s). 0027, 0030, 0036, 0042, 0044, 0049, 0050, 0052, 0066, 0075, 0076, 0077, 0087, 0095.
305	798618	Screw (Blower Housing)	526	690297	Screw (Regulator)	789E	591390	Harness-Wiring Used on Type No(s). 0071, 0072, 0094.
306	591790	Shield-Cylinder	529	799933	Grommet (Fuel Tank)	789F	593722	Harness-Wiring Used on Type No(s). 0020, 0021, 0037, 0048, 0051, 0059, 0065, 0079, 0092, 0221.
307	798618	Screw (Cylinder Shield)	535	591778	Filter-Air Cleaner Foam	799	798975	Screw (Oil Sensor)
309	591780	Motor-Starter	555	799532	Screw (Starter Solenoid)	813	590392	Clamp
332	797811	Nut (Flywheel)	562	797230	Bolt (Governor-Control Lever)	819	798618	Screw (Muffler Bracket)
333	797769	Armature-Magneto	575	593734	Switch-Starting	830	591088	Stud-Rocker Arm
333A	798616	Armature-Magneto	597	799972	Screw (Pawl Friction Plate)	832A	593091	Guard-Muffler
334	797655	Screw (Magneto Armature)	601	791850	Clamp-Hose	832B	595453	Guard-Muffler
337	798615	Plug-Spark	608	591781	Starter-Rewind	832C	595433	Guard-Muffler
341	591341	Stud-Mounting	614	797229	Pin-Cotter	832D	595434	Guard-Muffler
346	B5763GS	Screw	616	592615	Crank-Governor	836A	798976	Screw (Muffler Guard)
347	797340	Switch-Rocker	621	692310	Switch-Stop	836B	595455	Screw (Muffler Guard)
357	590960	Key-Drive Pulley	631	797794	Washer (Oil Drain Plug)	842	797327	Seal-O Ring (Dipstick Tube)
		----- Note -----	635	797658	Boot-Spark Plug	842A	797763	Seal-O Ring (Dipstick Tube)
		591054 Key-Drive Pulley	635A	797685	Boot-Spark Plug			
		Used on Type No(s). 0003, 0021, 0022, 0033, 0047, 0058, 0064, 0070, 0075, 0094, 0221, 0222.	643	591806	Retainer-Air Filter			
358	593112	Gasket Set-Engine	654	690939	Nut (Carburetor)			
361	798618	Screw (Starting Switch)	663	799846	Screw (Control Panel)			
363	19203	Puller-Flywheel	676	590953	Deflector-Muffler			
367	798618	Screw (Wire Clip)	676B	697816	Deflector-Muffler			
383	19576S	Wrench-Spark Plug	677	699203	Screw (Muffler Deflector)			
411	797686	Screw (Air Cleaner Base to Carburetor)	677B	699776	Screw (Muffler Deflector)			
412	799830	Nut (Air Cleaner Cover)	689	799669	Spring-Friction			
436	593089	Manifold-Exhaust	703	590967	Clip (Fuel Hose)			
445	491588s	Filter-Air Cleaner Cartridge	705	590965	Nut (Fuel Tank)			
445C	592605	Filter-Air Cleaner Cartridge	717	593134	Bracket-Air Cleaner			
455	591820	Cup-Flywheel	718	797792	Pin-Locating (Cylinder Head)			
456	799973	Plate-Pawl Friction	718A	797761	Pin-Locating (Crankcase Cover)			
459	799976	Pawl-Ratchet	725	595432	Shield-Heat			
467	691985	Knob-Air Cleaner	729	797750	Clip-Wire			
474	591100	Alternator	729B	592311	Clip-Wire			
485	797339	Knob-Control	729C	593137	Clip-Wire			
492	592037	Shield-Crankcase						
493B	691177	Bracket-Mounting						
493C	591342	Bracket-Mounting						
501	845907	Regulator						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
842B	691031	Seal-O Ring (Dipstick Tube)	968A	591803	Cover-Air Cleaner	1058	279127TRI	Manual-Operator's
847	593174	Dipstick/Tube Assembly	968B	593087	Cover-Air Cleaner			----- Note -----
863A	593733	Bracket-Muffler	972	593095	Tank-Fuel			279127EST
868	797854	Seal-Valve (Intake)	972A	593720	Tank-Fuel			Manual-Operator's
875	799776	Base-Air Cleaner (Plastic)	990	590996	Key Set			279127WST
875A	591804	Base-Air Cleaner (Plastic)	994	790153	Arrestor-Spark			Manual-Operator's
875C	593088	Base-Air Cleaner (Plastic)	994A	594233	Arrestor-Spark			279127ZH
883	797770	Gasket-Exhaust	994B	796399	Arrestor-Spark	1095	593113	Gasket Set-Valve
883A	799797	Gasket-Exhaust	994C	595454	Arrestor-Spark	1119	799845	Screw (Alternator)
899	799642	Washer (Starter Solenoid)	1005	591789	Fan-Flywheel	1177	590965	Nut (Muffler)
914	797848	Screw (Rocker Cover)	1009	593136	Screw (Starter Motor)	1210	591788	Pulley/Spring Assembly (Pulley)
		----- Note -----	1012	590378	Retainer-Link	1211	591788	Pulley/Spring Assembly (Spring)
		590988 Screw (Rocker Cover)	1022	797846	Gasket-Rocker Cover	1302	590457	Washer (Muffler Guard)
		Used on Type No(s).	1023	799778	Cover-Rocker Arm	1302A	593727	Washer (Muffler Guard)
		0002, 0003, 0004,			----- Note -----	1305	798618	Screw (Oil Sensor Module)
		0006, 0018, 0020,			590989 Cover-	1319	794467	Label-Warning
		0021, 0022, 0047,			Rocker Arm	1319A	797669	Label-Warning
		0048, 0050, 0058,	1026	591818	Used on Type No(s).	1345	792917	Filter-Filler Neck
		0066, 0075, 0082,	1029	591087	0002, 0003, 0004,	1408	690939	Nut (Air Cleaner Bracket)
		0089, 0098, 0218,	1034	591819	0006, 0018, 0020,	1453	591807	Seal-Air Cleaner Cover
		0221, 0222.	1036		0021, 0022, 0047,	1469A	22097GS	Washer (Air Cleaner Bracket)
920	799481	Solenoid-Starter			0048, 0050, 0058,	1509	797346	Outlet-Tank (Contains Fuel Filter/Screen)
951	592068	Lever-Choke Used on Type No(s).			0066, 0075, 0082,			
		0006.			0089, 0098, 0218,			
		----- Note -----			0221, 0222.			
		797759 Lever-Choke						
		Used on Type No(s).						
		0013, 0014, 0015,						
		0045, 0067.						
951A	593102	Lever-Choke						
957	794641	Cap-Fuel Tank						
957A	799324	Cap-Fuel Tank						
964	799159	Cap-Connector						
968	590958	Cover-Air Cleaner Used on Type No(s).						
		0013, 0014.						
		----- Note -----						
		791082 Cover-Air Cleaner						
		Used on Type No(s).						
		0013, 0014, 0015,						
		0045, 0067, 0088.						

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

