



15T200

Illustrated Parts List

Model Series

15T200




TYPE NUMBERS
0001 through 1130.

Not for
Reproduction



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.





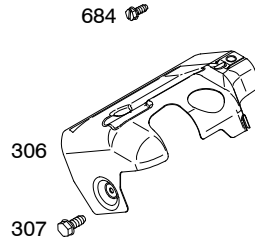
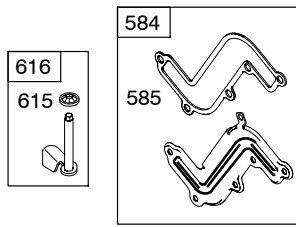
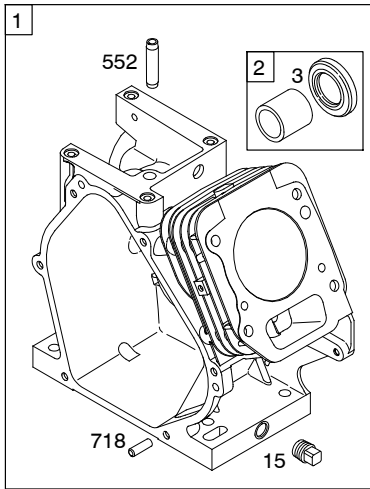



15A



1330 REPAIR MANUAL

   


1036 EMISSIONS LABEL

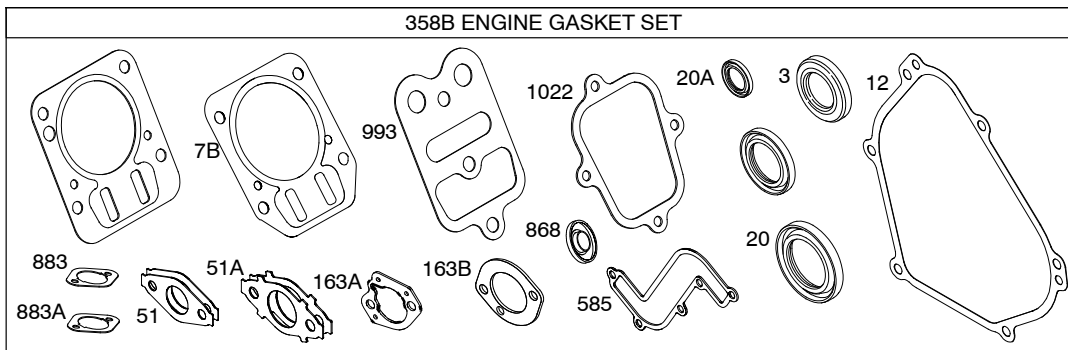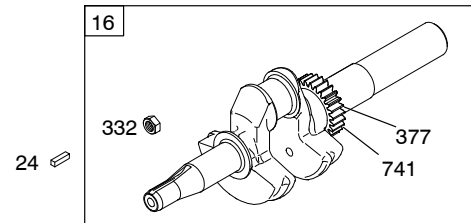

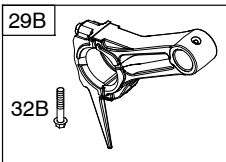
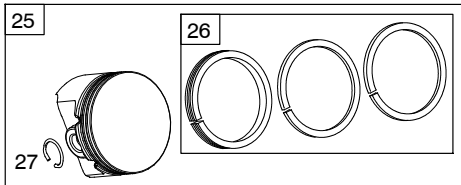


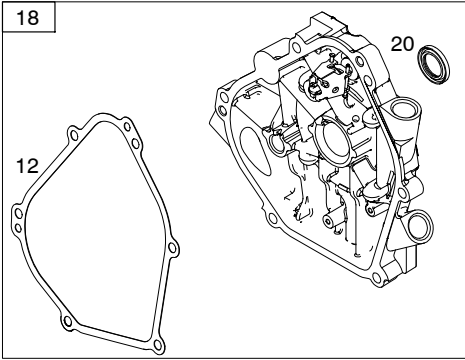



- 21
- 415
- 22
- 522

 


 


 



- 219
- 220
- 746
- 742
- 286
- 1305
- 364
- 1052
- 799

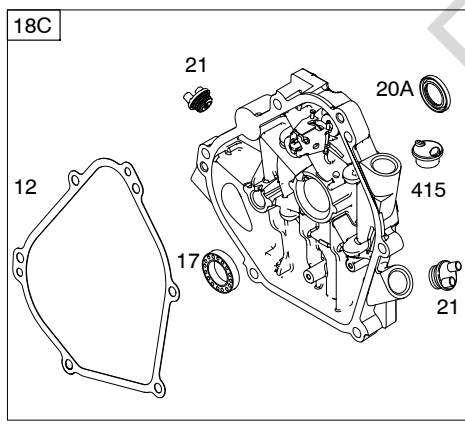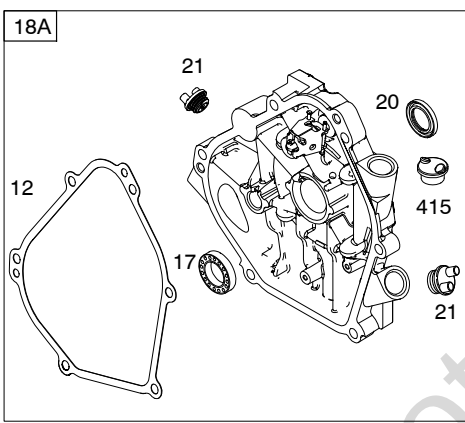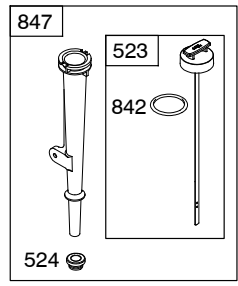






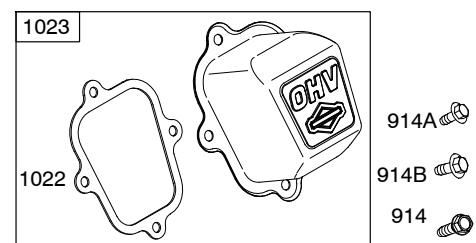
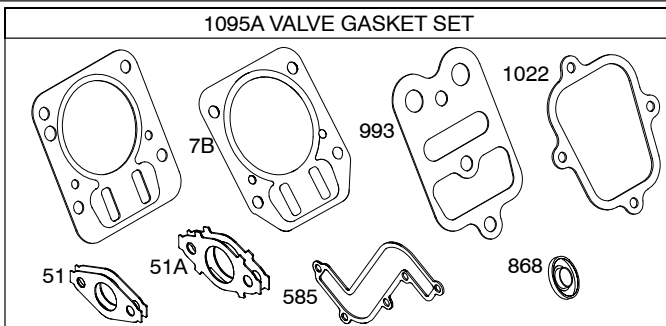
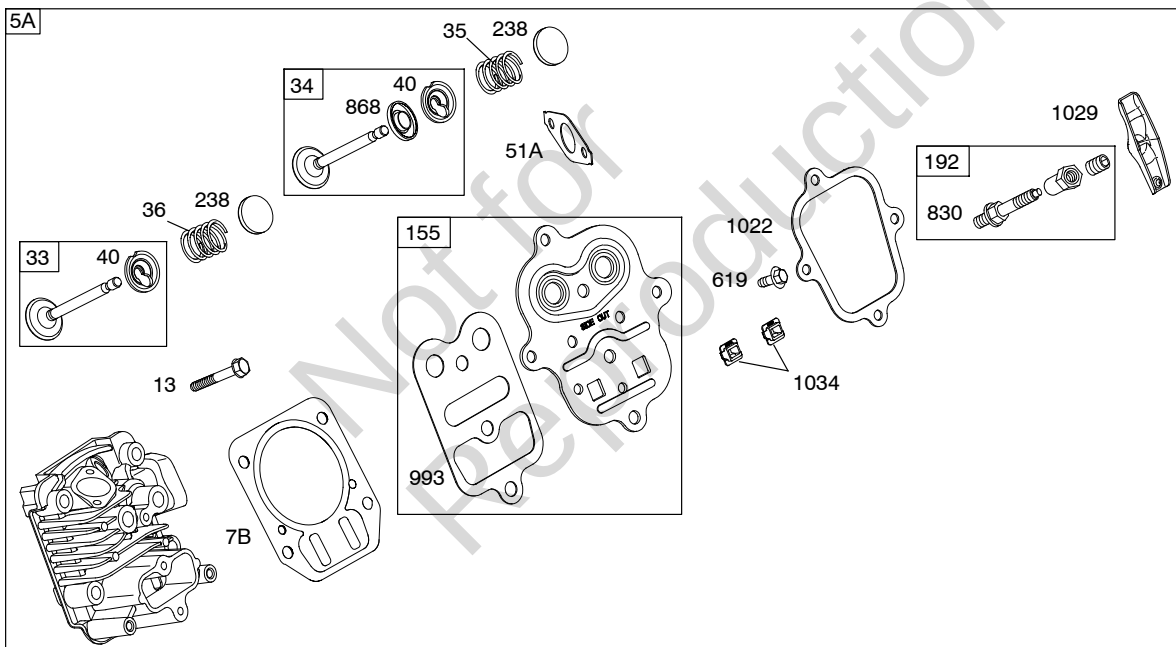
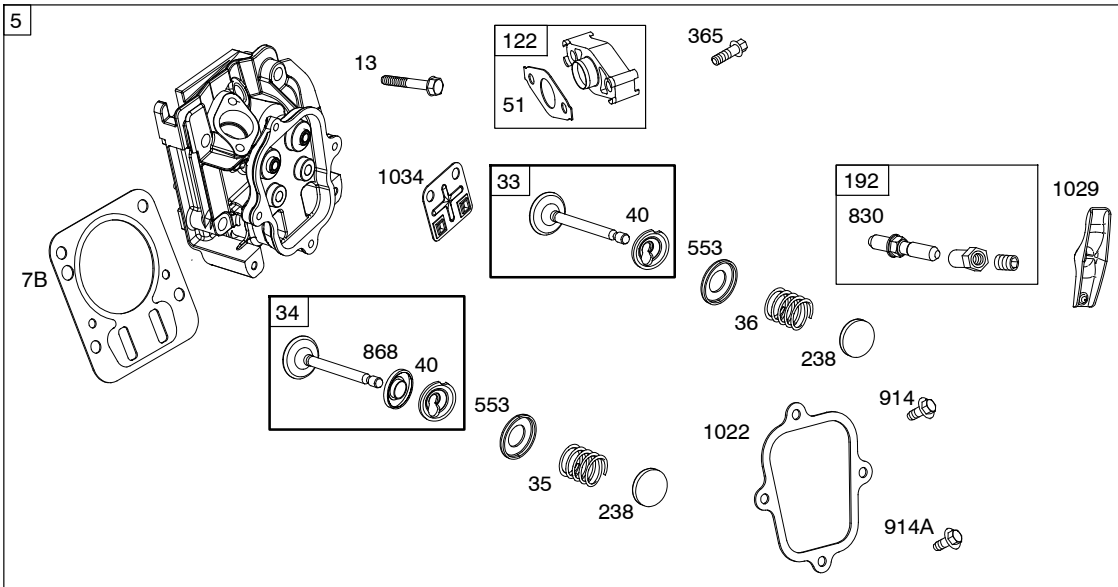




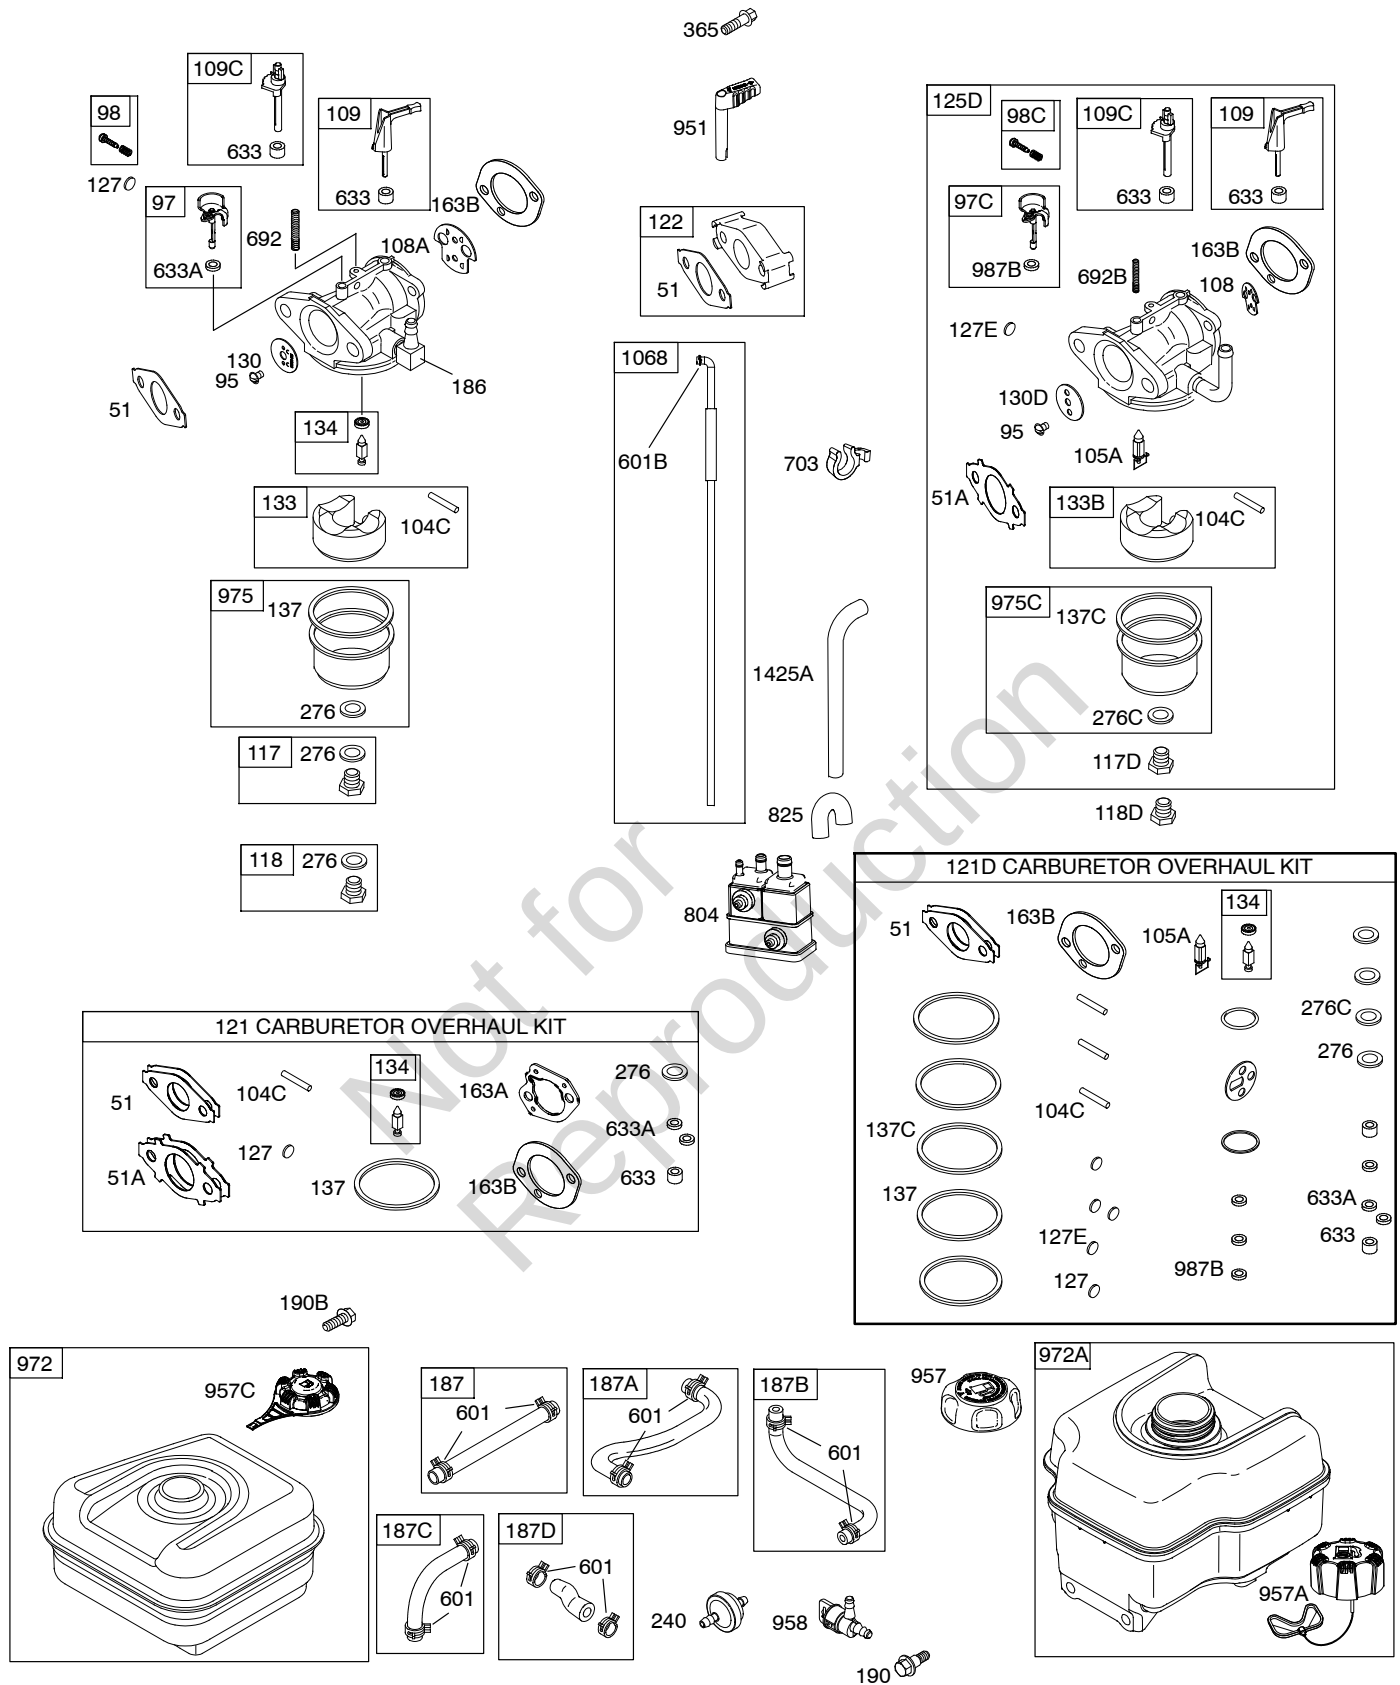


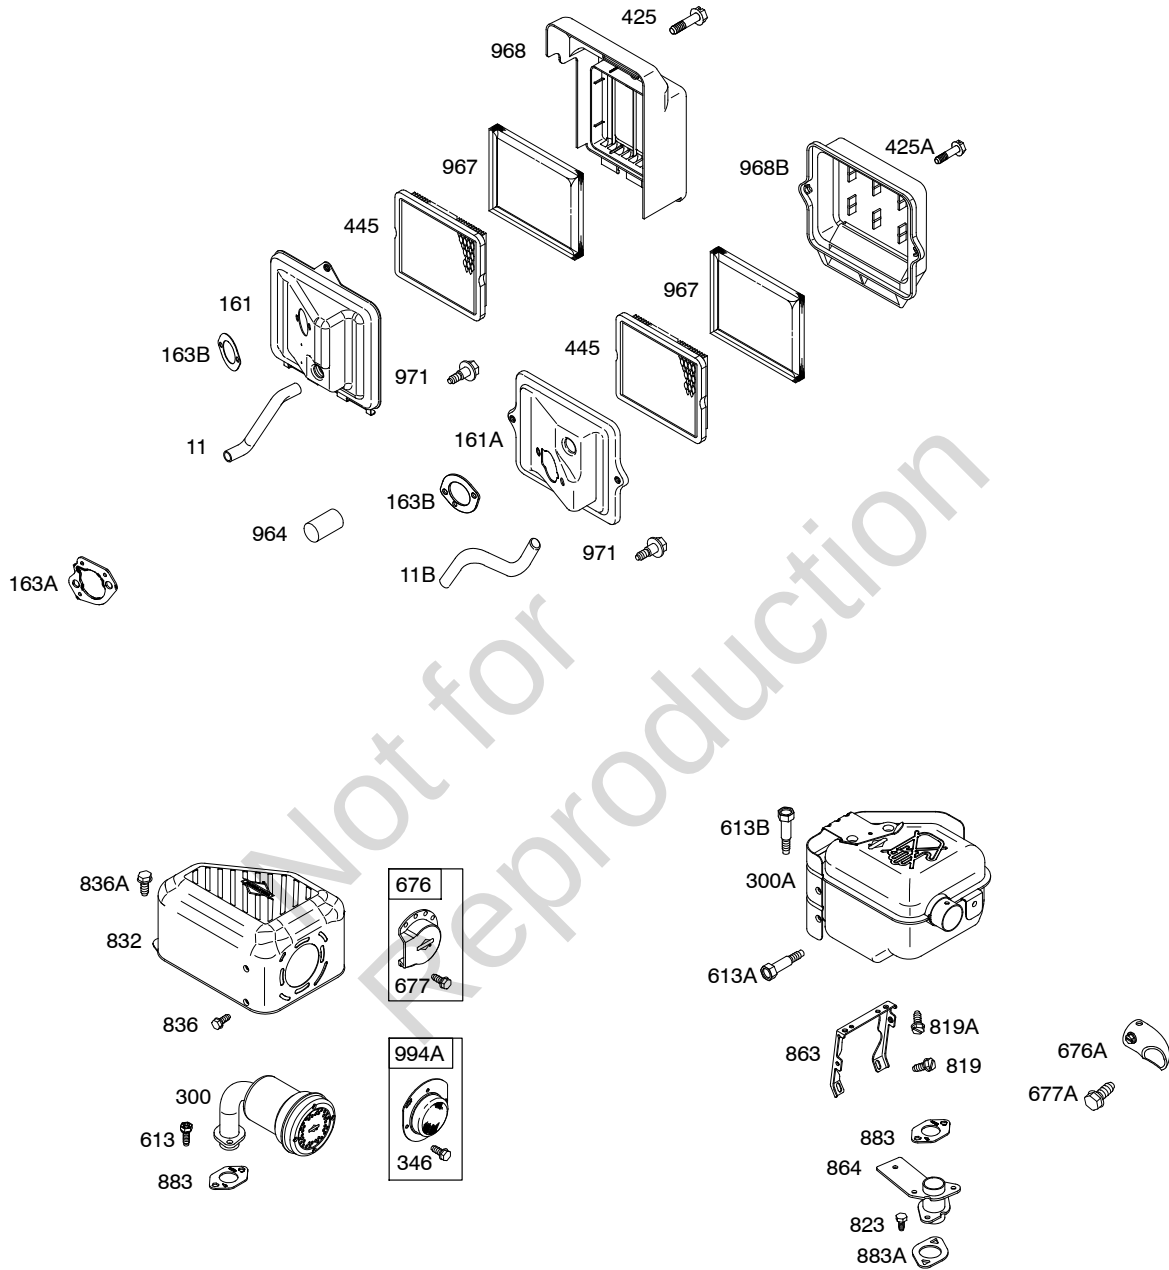

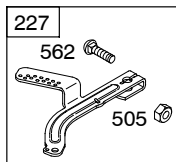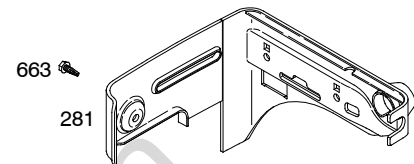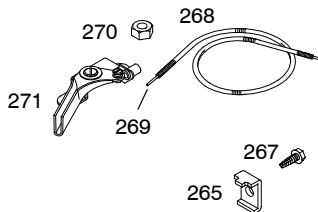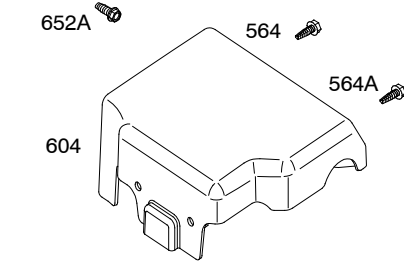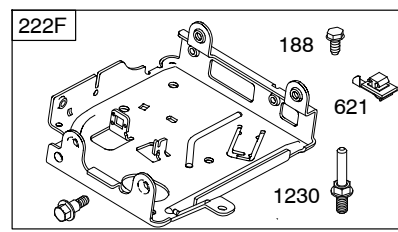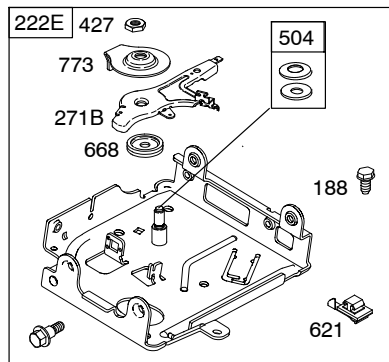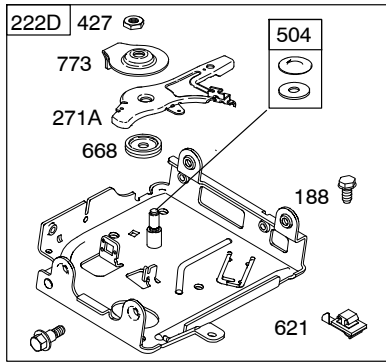

334

   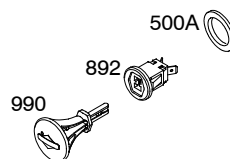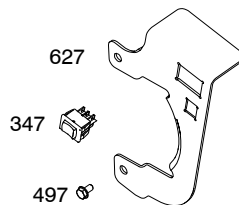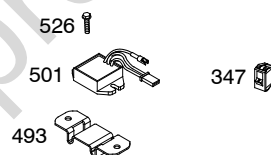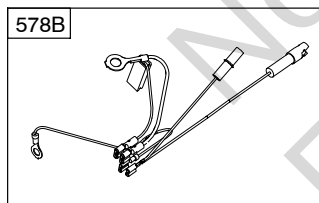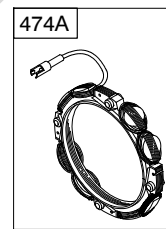 

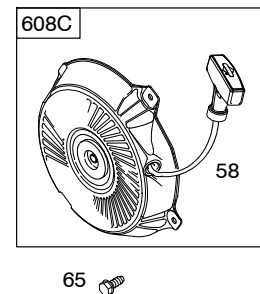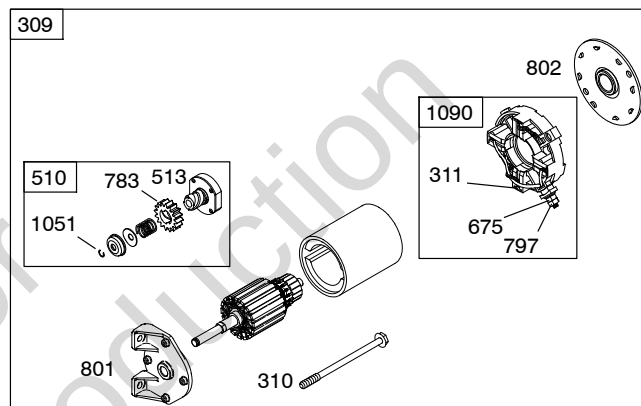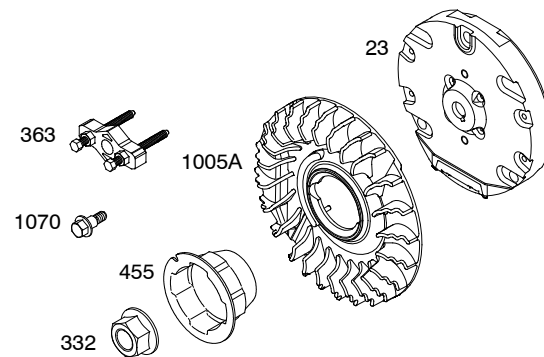

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	794188	Cylinder Assembly		593079	Crankshaft (Used After Code Date 15040800) Used on Type No(s). 0036, 0050, 0166.			797070 Crankshaft Used on Type No(s). 0023, 0111, 0119
2	796961	Kit-Bushing/Seal (Magneto Side)						797074 Crankshaft Used on Type No(s). 0748, 0857.
3	299819s	Seal-Oil (Magneto Side)		594991	Crankshaft (Used After Code Date 15041900) Used on Type No(s). 0008, 0915.			797076 Crankshaft Used on Type No(s). 0838.
5	594701	Head-Cylinder (Used After Code Date 14090300)		593495	Crankshaft (Used After Code Date 16031000) Used on Type No(s). 0010.			797253 Crankshaft Used on Type No(s). 32-0001-F8.
5A	791720	Head-Cylinder (Used Before Code Date 14090400)		797070	Crankshaft (Used Before Code Date 15040900)	17	798538	Bearing-Ball
7B	791716	Gasket-Cylinder Head		797075	Crankshaft (Used Before Code Date 15042000) Used on Type No(s). 0128, 0160, 0162, 1124, 1128, 1130.	18	699804	Cover-Crankcase
11	692600	Tube-Breather (Flat Panel Air Cleaner)		797071	Crankshaft (Used Before Code Date 15042000) Used on Type No(s). 0026, 0163, 1111, 1115.	18A	699672	Cover-Crankcase Used on Type No(s). 32-0001-F8, 0036, 0050, 0166.
11B	790632	Tube-Breather (Ultra Low Air Cleaner)		797074	Crankshaft (Used Before Code Date 15042000) Used on Type No(s). 0009, 0165, 0920, 0934.			----- Note ----- 699696 Cover- Crankcase Used on Type No(s). 0009, 0165.
12	699485	Gasket-Crankcase		797072	Crankshaft (Used Before Code Date 15040900) Used on Type No(s). 0036, 0050, 0166.	18C	699677	Cover-Crankcase Used on Type No(s). 0071, 0112, 0113, 0122, 0123.
13	594518	Screw (Cylinder Head) (Used After Code Date 14083100)		797076	Crankshaft (Used Before Code Date 15042000) Used on Type No(s). 0008, 0915.	20	692550	Seal-Oil (PTO Side)
		699482 Screw (Cylinder Head) (Used Before Code Date 14090100)		593497	Crankshaft (Used Before Code Date 16031100) Used on Type No(s). 0010.	20A	691952	Seal-Oil (PTO Side)
15	691686	Plug-Oil Drain (Square Head)		797075	Crankshaft Used on Type No(s). 0009, 0165, 0920, 0934.	21	281658s	Cap-Oil Fill
15A	691682	Plug-Oil Drain (Flush)				22	594519	Screw (Crankcase Cover/Sump)
16	593495	Crankshaft (Used After Code Date 15040800)				23	798821	Flywheel
		----- Note ----- 593497 Crankshaft (Used After Code Date 15041900) Used on Type No(s). 0128, 0160, 0162, 1124, 1128, 1130.						----- Note ----- 594000 Flywheel Used on Type No(s). 0050, 0112, 0123, 0126, 0130, 0162, 0857, 0920, 1130.
		594994 Crankshaft (Used After Code Date 15041900) Used on Type No(s). 0026, 0163, 1111, 1115.						699488 Flywheel Used on Type No(s). 0010, 0026, 0163, 0166, 0915, 1111, 1115, 1120.
		594996 Crankshaft (Used After Code Date 15041900) Used on Type No(s). 0009, 0165, 0920, 0934.						798882 Flywheel Used on Type No(s). 0165.
						24	796335	Key-Flywheel

15T200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
25	791786	Piston Assembly (Standard) ----- Note ----- 791791 Piston Assembly (.020" Oversize)	97C	797628	Shaft-Throttle	137	693981	Gasket-Float Bowl
26	791787	Ring Set (Standard) ----- Note ----- 791792 Ring Set (.020" Oversize)	98	398185	Kit-Idle Speed	137C	797625	Gasket-Float Bowl
27	690975	Lock-Piston Pin	98C	797156	Kit-Idle Speed	155	797442	Plate-Cylinder Head (Metric) (Used After Code Date 09061700). ----- Note ----- 698214 Plate-Cylinder Head (SAE) (Used Before Code Date 09061800).
28	690229	Pin-Piston	104C	797622	Pin-Float Hinge	161	699207	Base-Air Cleaner (Flat Panel Air Cleaner) ----- Note ----- 795567 Base-Air Cleaner (Flat Panel Air Cleaner) Used on Type No(s). 0023, 0060, 0111, 0112, 0113, 0119.
29B	791783	Rod-Connecting	105A	797139	Valve-Float Needle	161A	790631	Base-Air Cleaner (Ultra Low Air Cleaner) ----- Note ----- 799855 Base-Air Cleaner (Ultra Low Air Cleaner) Used on Type No(s). 0126, 0130, 0163, 1111, 1115. 795231 Base-Air Cleaner (Ultra Low Air Cleaner) Used on Type No(s). 0748, 0838, 0857.
32B	791784	Screw (Connecting Rod)	108	692567	Valve-Choke	163A	792870	Gasket-Air Cleaner (High Mount)
33	499642	Valve-Exhaust	108A	796993	Valve-Choke	163B	696024	Gasket-Air Cleaner (Flat Panel Air Cleaner)
34	795443	Valve-Intake	109	690023	Shaft-Choke	186	692317	Connector-Hose
35	691304	Spring-Valve (Intake)	109C	790624	Shaft-Choke	187	791766	Line-Fuel (Cut to Required Length)
36	691304	Spring-Valve (Exhaust)	117	690048	Jet-Main (Standard)	187A	791867	Line-Fuel (Molded)
37	699661	Guard-Flywheel	117D	798652	Jet-Main (Standard) ----- Note ----- 591298 Jet-Main (Standard) Used on Type No(s). 0163, 1111, 1115.	187B	791874	Line-Fuel (Molded)
40	692194	Retainer-Valve	118	497315	Jet-Main (High Altitude)	187C	791866	Line-Fuel (Molded)
45	690977	Tappet-Valve	118D	799178	Jet-Main (High Altitude) ----- Note ----- 797574 Jet-Main (High Altitude) Used on Type No(s). 0163, 1111, 1115.	187D	795046	Line-Fuel (Molded)
46	693404	Camshaft	121	792006	Kit-Carburetor Overhaul	188	699479	Screw (Control Bracket)
46A	695285	Camshaft	121D	797634	Kit-Carburetor Overhaul			
51	692555	Gasket-Intake	122	795643	Spacer-Carburetor (Black) ----- Note ----- 791717 Spacer-Carburetor (Natural) Used on Type No(s). 0001, 0008, 0036, 0050, 0071, 1111, 1115, 1120, 1124, 1125, 1126, 1128, 1130, 1658, 1747, 1749.			
51A	791718	Gasket-Intake	125D	798654	Carburetor ----- Note ----- 595145 Carburetor Used on Type No(s). 0163, 1111, 1115.			
55		Housing-Rewind Starter (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.) ----- Note ----- 791848 Housing-Rewind (Used After Code Date 08030200 and Before Code Date 12010100). 691422 Housing-Rewind Starter (Used Before Code Date 08030300).	127	691739	Plug-Welch			
58	693389	Rope-Starter	127E	797633	Plug-Welch			
60	490652	Grip-Starter Rope	130	691181	Valve-Throttle			
65	699228	Screw (Rewind Starter) (Metric)	130D	797630	Valve-Throttle			
78	699205	Screw (Flywheel Guard)	133	398187	Float-Carburetor			
95	691636	Screw (Throttle Valve)	133B	797136	Float-Carburetor			
97	690024	Shaft-Throttle	134	398188	Kit-Needle/Seat			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
190	699220	Screw (Fuel Tank)	222F	793100	Bracket-Control Used on Type No(s). 0026, 0163, 1111, 1115.	306	594516	Shield-Cylinder (Used After Code Date 14091100) ----- Note -----
190B	795047	Screw (Fuel Tank)						795334 Shield-Cylinder (Used Before Code Date 14091200)
192	594382	Adjuster-Rocker Arm (Used After Code Date 14083100) ----- Note ----- 797440 (Metric) (Used Before Code Date 14090100 and After Code Date 09061700). (Used After Code Date 09061700). 694543 Adjuster-Rocker Arm (SAE) (Used Before Code Date 09061800).	227	794376	Lever-Governor Control	307	794822	Screw (Cylinder Shield)
			238	691300	Valve-Cap	309	798790	Motor-Starter
			240	394358s	Filter-Fuel	309B	798884	Motor-Starter Used on Type No(s). 0165.
			265	691024	Clamp-Casing			
			267	699492	Screw (Casing Clamp)	310	690323	Screw (Starter Motor)
			268	691025	Casing-Control Wire (Cut to Required Length)	311	497608	Brush Set
			269	691026	Wire-Control (Cut to Required Length)	332	591988	Nut (Flywheel)
			270	691027	Nut (Control Wire Casing)	333	591101	Armature-Magneto ----- Note -----
			271	691028	Lever-Control			796964 Armature-Magneto Used on Type No(s). 0010, 0026, 0163, 0165, 0166, 0915, 1111, 1115, 1120.
209	692571	Spring-Governor ----- Note ----- 693206 Spring-Governor (Yellow) Used on Type No(s). 0010, 0023, 0026, 0060, 0071, 0115, 0125, 0126, 0128, 0130, 0160, 0162, 0163, 0223, 1111, 1115, 1124, 1128, 1130.	271A	694256	Lever-Control	334	699477	Screw (Magneto Armature)
			271B	695743	Lever-Control	337	491055s	Plug-Spark (Resistor) ----- Note -----
			276	271716	Washer-Sealing			691043 Plug-Spark (EMS) Used on Type No(s). 0010, 0026, 0036, 0050, 0071, 0119, 0130, 0160, 0163, 0166, 0223, 1111, 1115,
			276C	797632	Washer-Sealing			
			281	793122	Panel-Control ----- Note ----- 795565 Panel-Control Used on Type No(s). 0023, 0060, 0111, 0115, 0119.	346	699203	Screw (Spark Arrestor) (Metric) ----- Note -----
								690661 Screw (Spark Arrestor) (SAE)
			286	794185	Module-Oil Sensor			
			287	699234	Screw (Dipstick Tube)			
			300	693593	Muffler			
209A	691278	Spring-Governor (Platinum)	300A	797433	Muffler			
219	693578	Gear-Governor	304	699598	Housing-Blower ----- Note -----			
220	691724	Washer (Governor Gear)			795658 Blower-Housing Used on Type No(s). 0112, 0857.			
222D	793107	Bracket-Control ----- Note ----- 795669 Bracket-Control Used on Type No(s). 0023, 0060, 0112, 0113, 0115, 0748, 0838, 0857.			795219 Blower-Housing Used on Type No(s). 0023, 0060, 0111, 0113, 0115, 0119, 0748, 0838.			
222E	793108	Bracket-Control ----- Note ----- 795754 Bracket-Control Used on Type No(s). 0111, 0119.	305	699481	Screw (Blower Housing)			

15T200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
347	795333	Switch-Rocker ----- Note ----- 790949 Switch-Rocker Used on Type No(s). 0112, 0123, 0162, 1130. 697854 Switch-Rocker Used on Type No(s). 32-0001-F8, 0036, 0050.	459		Pawl-Ratchet (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.) ----- Note ----- 281505s Pawl- Ratchet (Used Before Code Date 12010100).	585	791760	Gasket-Breather Passage
356	693651	Wire-Stop				597		Screw (Pawl Friction Plate) (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.) ----- Note ----- 691696 Screw (Pawl Friction Plate) (Used Before Code Date 12010100).
356A	692390	Wire-Stop	474	695730	Alternator (3 Amp)	601	791850	Clamp-Hose
356B	692602	Wire-Stop	474A	793640	Alternator (1.5 Amp)	601B	795230	Clamp-Hose
356C	695630	Wire-Stop ----- Note ----- 693650 Wire-Stop Used on Type No(s). 32-0001-F8, 0036, 0050.	493	691177	Bracket-Mounting	604	697326	Cover-Control
			497	691693	Screw (Stop Switch Bracket)	608C	591301	Starter-Rewind
356D	694372	Wire-Stop	500A	792613	Washer (Key Switch)	613	791972	Screw (Muffler)
356E	695814	Wire-Stop	501	794360	Regulator	613A	699481	Screw (Muffler)
356F	697397	Wire-Stop	503	691532	Strap-Starter	613B	799081	Screw (Muffler)
356M	792609	Wire-Stop	504	695383	Washer Set-Friction	615	692576	Retainer-Governor Shaft
358B	791797	Gasket Set-Engine	505	691251	Nut (Governor Control Lever)	616	692547	Crank-Governor
363	19203	Puller-Flywheel	510	499308	Drive-Starter	619	699481	Screw (Cylinder Head Plate)
364	695693	Terminal-Oil Plug	513	692024	Drive-Clutch	621	692310	Switch-Stop
365	699484	Screw (Carburetor)	522	798503	Plug-Dipstick/Fill	627	792608	Bracket-Stop switch
377	690979	Key-Woodruff	523	693618	Dipstick ----- Note ----- 798469 Dipstick Used on Type No(s). 0160, 0223.	632	693408	Spring/Link- Mechanical Governor
383	19576S	Wrench-Spark Plug				633	693867	Seal-Choke/Throttle Shaft
415	693463	Plug	524	281370s	Seal-Dipstick Tube	633A	691321	Seal-Choke/Throttle Shaft
425	699208	Screw (Air Cleaner Cover)	526	690326	Screw (Regulator)	635	692076	Boot-Spark Plug
425A	699492	Screw (Air Cleaner Cover)	552	692346	Bushing-Governor Crank	635A	798619	Boot-Spark Plug
427	798458	Nut (Control Bracket) (Metric) ----- Note ----- 694255 Nut (Control Bracket) (SAE)	553	594515	Cup-Valve Spring	652	699755	Screw (Support Bracket)
445	595030	Filter-Air Cleaner Cartridge	562	691119	Bolt (Governor Control Lever)	652A	699230	Screw (Support Bracket)
455	591302	Cup-Flywheel	564	699491	Screw (Control Cover)	663	699206	Screw (Control Panel)
456		Plate-Pawl Friction (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.) ----- Note ----- 692299 Plate-Pawl Friction (Used Before Code Date 12010100).	564A	699206	Screw (Control Cover)	668	694257	Spacer
			577	690795	Cable-Starter	675	691261	Washer (Brush Retainer)
			578	692306	Wire Assembly	676	796956	Deflector-Muffler
			578B	790948	Wire Assembly	676A	697816	Deflector-Muffler
			579	691029	Nut (Starter Cable)			
			584	791759	Cover-Breather Passage			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
677	699203	Screw (Muffler Deflector) (Metric) ----- Note ----- 690661 Screw (Muffler Deflector) (SAE)	819	699233	Screw (Muffler Bracket)	914A	594517	Screw (Rocker Cover) (Quantity 1 Top Or Center) (Metric) (Used After Code Date 14083100) ----- Note ----- 797444 Screw (Rocker Cover) (Quantity 1 Top Or Center) (Metric) (Used Before Code Date 14090100 and After Code Date 09061700). 692557 Screw (Rocker Cover) (Top)(SAE) (Used Before Code Date 09061800).
677A	699776	Screw (Muffler Deflector)	819A	699481	Screw (Muffler Bracket)			
684	793369	Screw (Breather Passage Cover)	823	791972	Screw (Muffler Adapter)			
689		Spring-Friction (Used After Code Date 11123100). (Not Serviced Separate. Service With Rewind Assembly.) ----- Note ----- 691855 Spring- Friction (Used Before Code Date 12010100).	825	795226	Hose-Air			
			830	594230	Stud-Rocker Arm (Used After Code Date 14090300) ----- Note ----- 797441 Stud- Rocker Arm (Metric) (Used Before Code Date 14090400 and After Code Date 09061700). 694544 Stud-Rocker Arm (SAE) (Used Before Code Date 09061800).	914B	691108	Screw (Rocker Cover) (Center)(SAE) (Used Before Code Date 09061800).
692	590931	Spring-Detent	832	593953	Guard-Muffler			
692B	797624	Spring-Detent	836	699203	Screw (Muffler Guard)	920	846820	Solenoid-Starter
697	793567	Screw (Drive Cap)	836A	594002	Screw (Muffler Guard)	951	790630	Lever-Choke
703	795222	Clip	842	795015	Seal-O Ring (Dipstick Tube)	957	792647	Cap-Fuel Tank
718	592860	Pin-Locating				957A	799719	Cap-Fuel Tank
725	792874	Shield-Heat	843A	695588	Sleeve-Lever	957C	795221	Cap-Fuel Tank
727	698039	Cover-Starter Drive	847	693617	Dipstick/Tube Assembly ----- Note ----- 798468 Dipstick/Tube Assembly Used on Type No(s). 0160, 0223.	958	698180	Valve-Fuel Shut Off
728	699491	Screw (Heat Shield)				964	799159	Cap-Connector
732	699200	Screw (Starter Drive Cover)	851	493880s	Terminal-Spark Plug	967	493537s	Filter-Pre Cleaner (Flat Panel)
735	795901	Cord Starter	863	699229	Bracket-Muffler	968	692584	Cover-Air Cleaner (Flat Panel Air Cleaner)
741	593499	Gear-Timing (Plastic) ----- Note ----- 695087 Gear-Timing (Steel)	864	699232	Adapter-Muffler	968B	791082	Cover-Air Cleaner (Ultra Low Air Cleaner)
			868	795440	Seal-Valve	971	798649	Screw (Air Cleaner Base) (Metric) ----- Note ----- 690370 Screw (Air Cleaner Base) (SAE)
742	692564	Retainer-E Ring	883	691893	Gasket-Exhaust			
746	790278	Gear-Idler	883A	692237	Gasket-Exhaust	972	795705	Tank-Fuel
773	694258	Retainer	890	790203	Bracket-Support	972A	799863	Tank-Fuel
783	692353	Gear-Pinion	892	791944	Switch-Key	975	796611	Bowl-Float
797	691029	Nut (Brush Retainer)	914	699481	Screw (Rocker Cover) (Bottom)	975C	797631	Bowl-Float
799	699202	Screw (Oil Sensor)				977	792007	Gasket Set-Carburetor
801	694482	Cap-Drive				987B	797629	Seal-Throttle Shaft
802	691286	Cap-End				990	794696	Key Set
803	693757	Housing-Starter				993	694088	Gasket-Cylinder Head Plate
804	795223	Canister-Carbon (EVAP)				994A	399541	Arrestor-Spark
813	690635	Clamp						

15T200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1005A	794273	Fan-Flywheel	1051	691265	Ring-Retaining	1211		Pulley/Spring Assembly
1022	691890	Gasket-Rocker Cover	1052	790141	Sensor-Oil			(Pulley)
1023	499924	Cover-Rocker Arm	1054	280275	Cable-Tie			(Used After Code Date 11123100).
1026	790287	Rod-Push	1059	793567	Screw (Starter Motor)			(Not Serviced Separate. Service With Rewind Assembly.)
1029	797443	Arm-Rocker (Metric) (Used After Code Date 09061700).	1068	795229	Hose-/Clamp Assembly			----- Note -----
		----- Note -----	1070	699201	Screw (Flywheel Fan)			791849 Pulley/Spring Assembly
		691230 Arm-Rocker (SAE) (Used Before Code Date 09061800).	1090	691293	Retainer-Brush			(Pulley)
		----- Note -----	1095A	791798	Gasket Set-Valve			(Used After Code Date 08030200 and Before Code Date 12010100).
1034	594229	Guide-Push Rod (Used After Code Date 14090300)	1119	699772	Screw (Alternator)			498144 Pulley/Spring Assembly
		----- Note -----	1210		Pulley/Spring Assembly (Pulley) (Used After Code Date 11123100).			(Pulley)
		691343 Guide-Push Rod (Used Before Code Date 14090400)			(Not Serviced Separate. Service With Rewind Assembly.)			(Used Before Code Date 08030300).
1036		Label-Emissions (Available From An Authorized Briggs & Stratton Service Dealer)			----- Note -----	1230	699847	Stud (Control Bracket)
					791849 Pulley/Spring Assembly (Pulley) (Used After Code Date 08030200 and Before Code Date 12010100).	1305	699691	Screw (Oil Sensor Module)
					498144 Pulley/Spring Assembly (Pulley) (Used Before Code Date 08030300).	1319	794467	Label-Warning
						1319A	797669	Label-Warning
						1330	272147	Repair Manual
						1425A	795227	Hose-Purge Line

Not for
Reproduction

Not for
Reproduction

