

Contents of Carton

- One Pressure Washer
- One Pressure Washer Operator's Manual
- One Engine Operator's Manual
- One Handle
- One High Pressure Hose
- One Quick-Connect Spray Wand
- One Spray Gun
- Five Quick-Connect Nozzles
- One Bottle of Oil

Assembly

NOTICE: This unit is shipped without gasoline or oil in the engine. Fill up with gasoline and oil as instructed in the accompanying engine manual BEFORE operating your mower.

NOTICE: The high-pressure pump was filled with oil at the factory. Always check oil level before using (refer to Maintenance & Adjustments for more information).

Handle

1. Slide the handle assembly onto the frame and secure with saddle bolts and knobs.

NOTICE: Risk of personal injury. Avoid placing hands between handle and frame when assembling to prevent pinching.

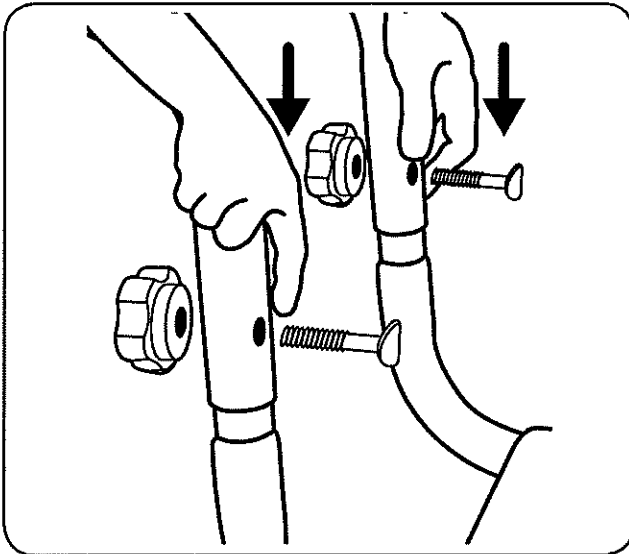


Figure 3-1

Nozzles

1. Remove the colored quick-connect nozzles from the plastic bag and insert them into correct grommet on the nozzle holder. Nozzles are color coded to match colored nozzles on label.

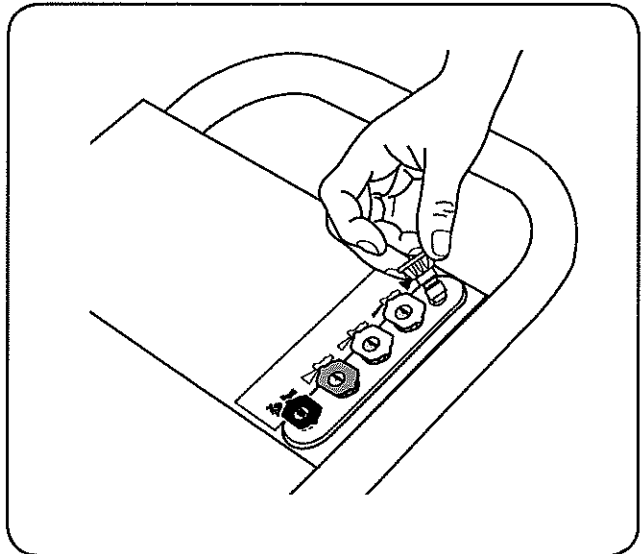


Figure 3-2

Wand to Gun

2. Connect wand to gun. Tighten securely.

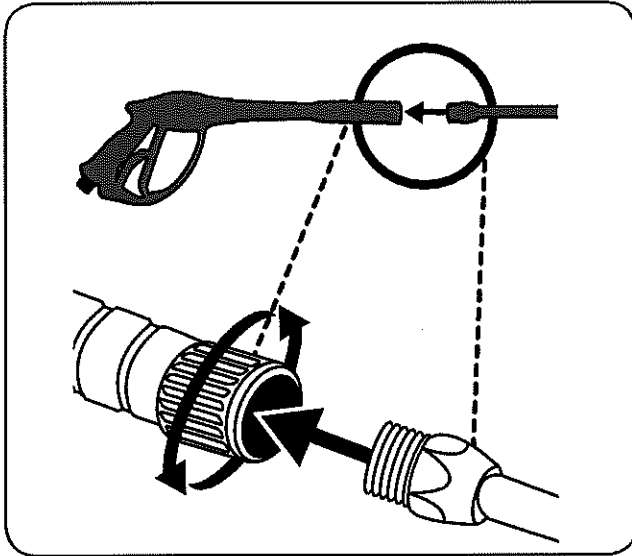


Figure 3-3

Hose to Gun

1. Attach high pressure hose to gun. Tighten securely.

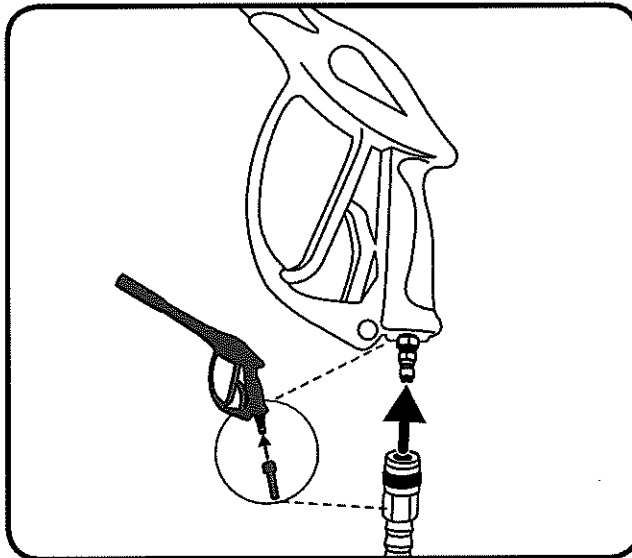


Figure 3-4

Set-Up

Gas and Oil Fill-Up

Refer to the separate engine owner's manual for additional engine information.

1. Add oil provided before starting unit for the first time out of the box.
2. Service the engine with gasoline as instructed in the separate engine owner's manual.



WARNING: Use extreme care when handling gasoline. Gasoline is extremely flammable and the vapors are explosive. Never fuel the machine indoors or while the engine is hot or running. Extinguish cigarettes, cigars, pipes and other sources of ignition.