

## Specifications

Model	X20 MAX	X20 MAXSP
Engine	See Engine Owners Manual	See Engine Owners Manual
CFM	2000	2000
MPH	200	200
Horizontal Rotation	90° left to 90° right	90° left to 90° right
Vertical Rotation	50	50
Nozzle Control	Remote	Remote
Drive	Push	Self Propelled, Variable Speed
Wheel Size	12" x 4.5", 10" x 3.5"	12" x 4.5", 10" x 3.5"
Frame	12 GA Steel	12 GA Steel
Machine Weight	165	175
Machine Dimensions	43"H x 57"L x 27"W	43"H x 57"L x 27"W

## Assembling the DR WALK BEHIND BLOWER

The machine is shipped with the Handlebar disconnected. You will need to install the Handlebar to the machine before use.

### Parts Supplied in Product Package (Figure 3 and list below):

Item #	Part #	Description	Qty
1	333321	Nut, Nylon Lock, Flanged, 5/16-18.....	4
2	385991	Bolt, Hex, Flange, 5/16-18 X 1-3/4", GR5, ZP .....	4

### Tools Needed:

- Two 1/2" Wrenches

1. Pull the Upper Handlebar Assembly from its shipped location and position the Upper Handlebar Assembly onto the Lower Handlebar (Figure 4).
2. Secure the Handlebar with the Bolts and Locknuts from the product package using two 1/2" Wrenches.
3. Refer to the "Adding Engine Oil and Gasoline" section on the next page to continue setting up the machine.

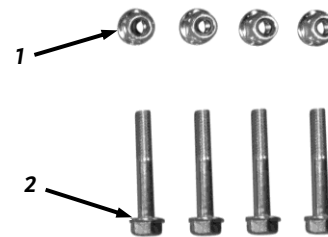


Figure 3

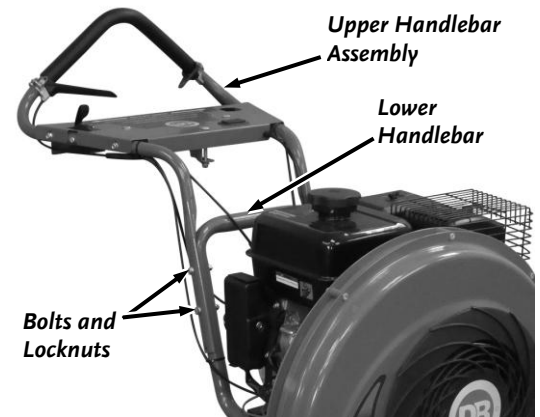


Figure 4