


SELECTING GASOLINE

If you want to start your generator using gasoline, follow steps 1-3, then continue with the remaining steps 4-8 below.

Step 1: Turn the gas type knob to PROPANE or GASOLINE.

Step 2: Check the generator for gasoline. Add as needed.

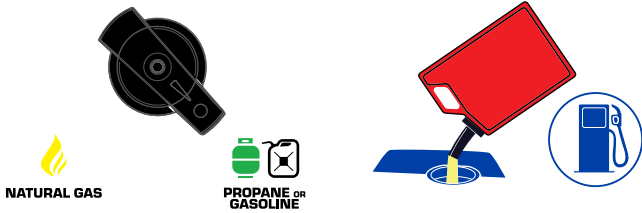


OR

SELECTING PROPANE

If you want to start your generator using propane, follow steps 1-3, then continue with the remaining steps 4-8 below.

Step 1: Turn the gas type knob to PROPANE or GASOLINE.

Step 2: Connect the propane line to the quick connect on the front of the generator.

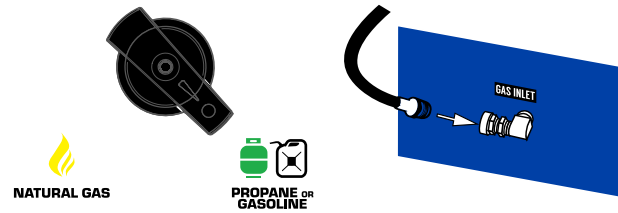


OR

SELECTING NATURAL GAS


If you want to start your generator using natural gas, follow steps 1-3, then continue with the remaining steps 4-8 below.

Step 1: Turn the gas type knob to NATURAL GAS.


Step 2: Connect the gray gas line to the quick connect on the front of the generator.

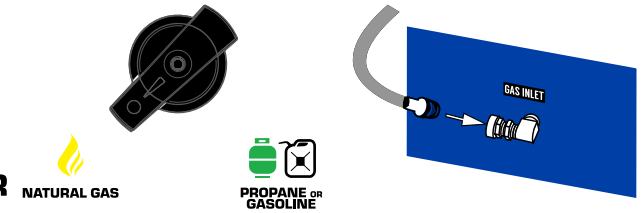


Step 3: Turn fuel valve on by rotating valve clockwise.

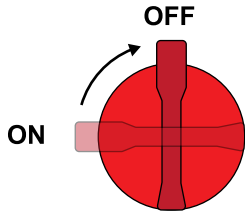

Step 3: Connect the propane line to the propane tank.

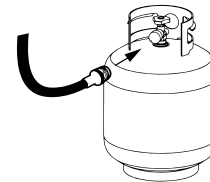


Step 3: Connect the gray gas line to the house quick connect and turn the gas on.

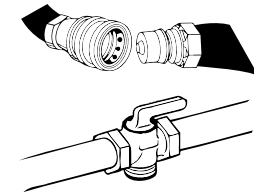


CONTINUE STARTUP STEPS WITH EITHER FUEL


Step 4: Switch the main breaker to OFF.

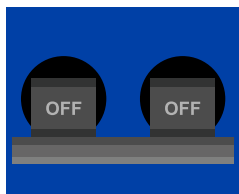


Step 5: Switch the battery switch to ON.

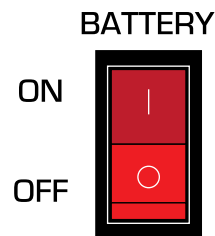


Step 6: Switch the idle control switch to OFF.

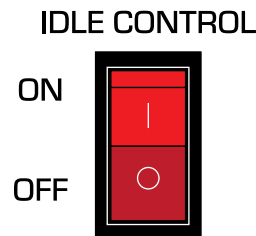

Step 7: Press the start button or use the remote control to start the generator.

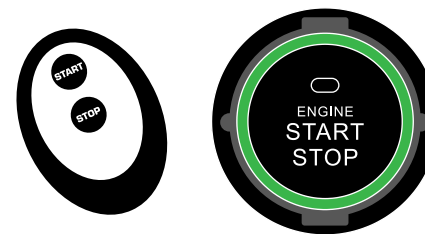

Step 8: Once the generator is running, turn the main breaker to ON and plug devices in.

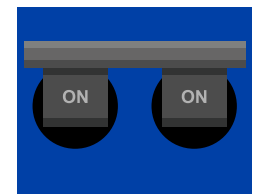

ASSEMBLING YOUR GENERATOR

Step 1: Slide the top of the box off the generator, and continue with the following steps before taking the generator off the pallet.




Step 2: Insert the axle bolts through frame.



Step 3: Secure axles to frame with retaining pins.



Step 4: Place one of the washers onto each axle.

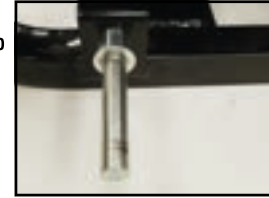


Step 5: Place the wheels onto the axles.



Step 6: Place the outside washers onto each of the axles.



Step 7: Place the cotter pin through the hole at the end of each axle to secure the wheels.

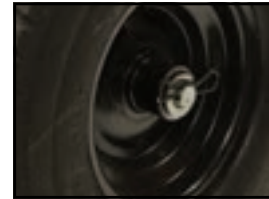

Step 8: Secure the support legs to the frame with the provided bolts.



Step 9: Attach the handles to the brackets on the frame using the provided bolts and nuts.



Step 10: Roll the generator off the pallet and onto a solid, flat surface.



Step 11: Remove the battery cover plate using the wrench from the toolkit.




Step 12: Locate the free end of the negative battery cable above and behind the battery. Connect end to the battery.



Step 13: Replace the battery cover.



Step 14: Add 57.5 fl. oz of 10W-30 oil to the generator.

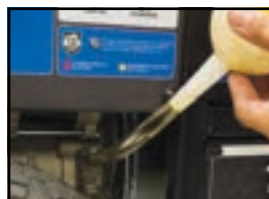

Note: The following set of instructions are a list of simplified steps to operate your generator. These steps are covered in greater detail within the product manual along with safety warnings, guidelines for maintaining your generator, and details about your generator's warranty.

We strongly recommend reading the entire product manual after assembling your generator to ensure you understand how to operate your generator properly and safely.