



15C100

Illustrated Parts List

Model Series

15C100

TYPE NUMBERS
0002 through 8939.














TABLE OF CONTENTS

Blower Housing/Shrouds	7
Camshaft	2
Carburetor	5
Controls	6
Crankcase Cover	3
Crankshaft	2
Cylinder	2
Cylinder Head	4
Electric Starter	8
Exhaust System	7
Flywheel	7
Fuel Supply	5
Governor Spring	6
Ignition	8
Kits/Gaskets - Carburetor	5
Kits/Gaskets - Engine	2
Kits/Gaskets - Valves	4
Lubrication	3
Piston Group	2
Rewind Starter	6



PRINTED IN U.S.A.

    COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

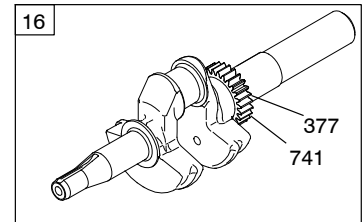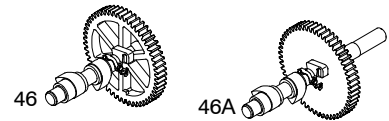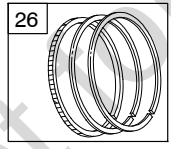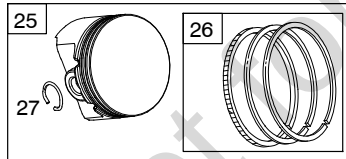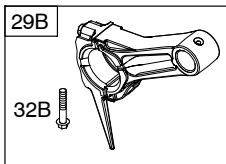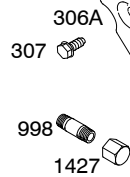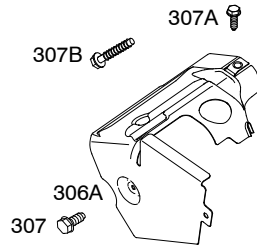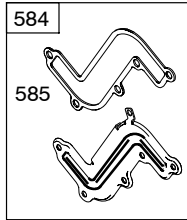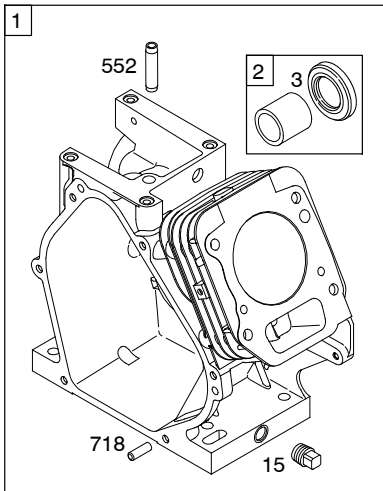

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.


1330 REPAIR MANUAL




1036 EMISSIONS LABEL

1019 LABEL KIT

358B ENGINE GASKET SET


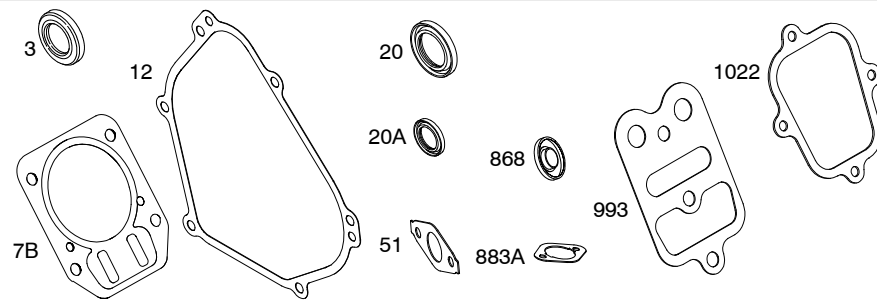


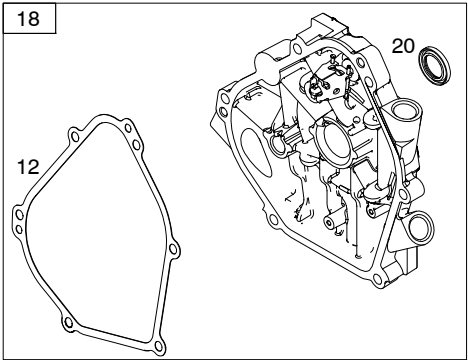

21

415

 22

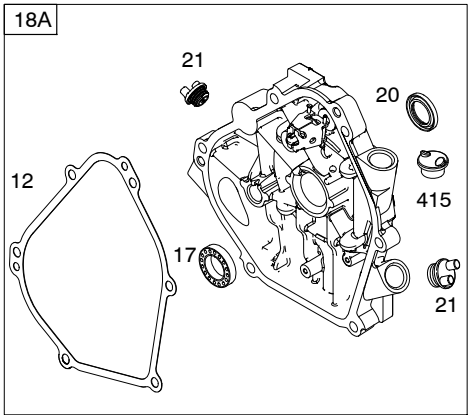


21

20


415

21

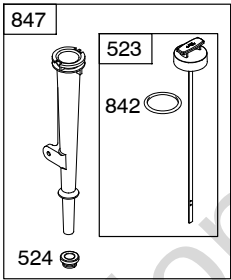

287

524




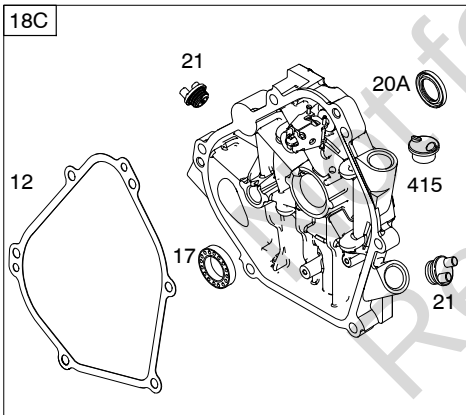


21



20A


415


21






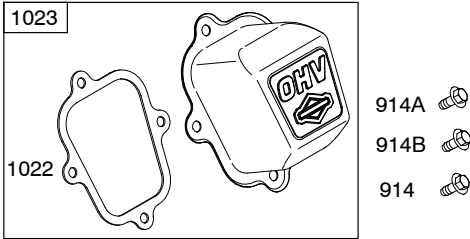
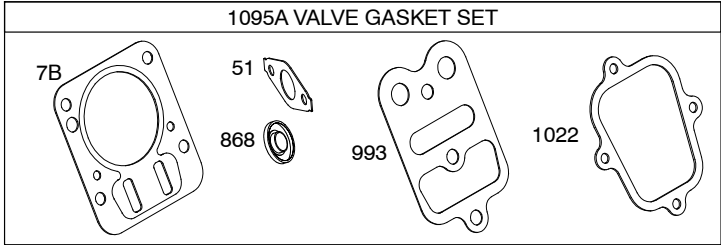
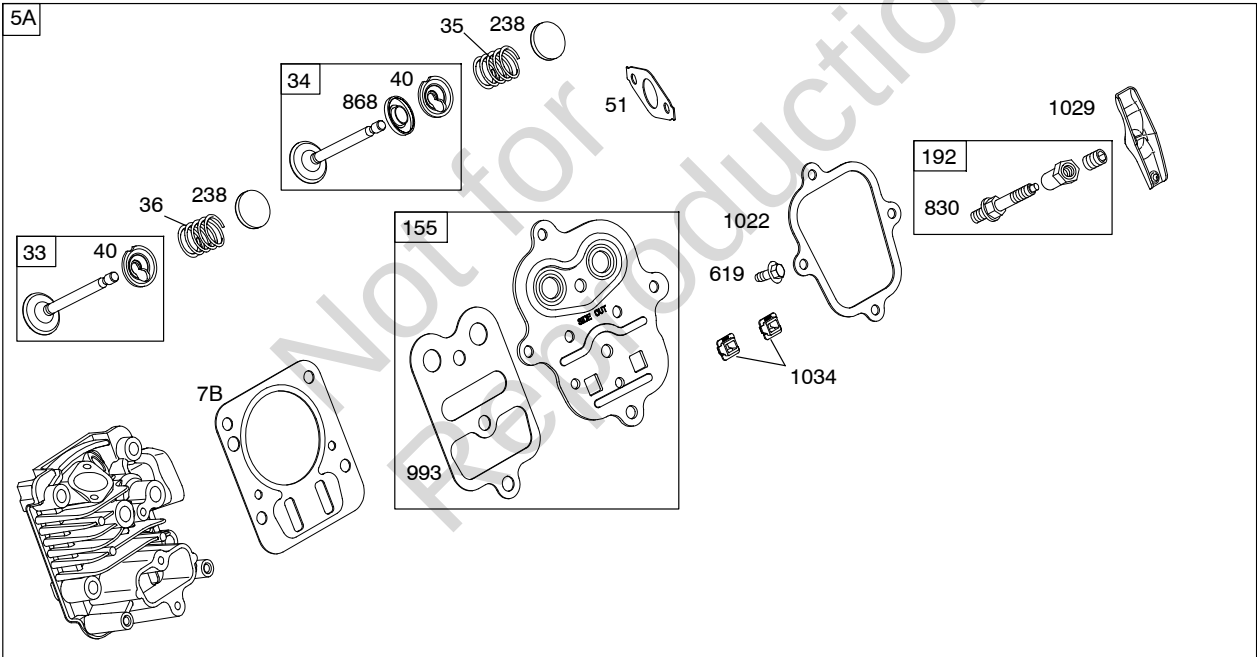
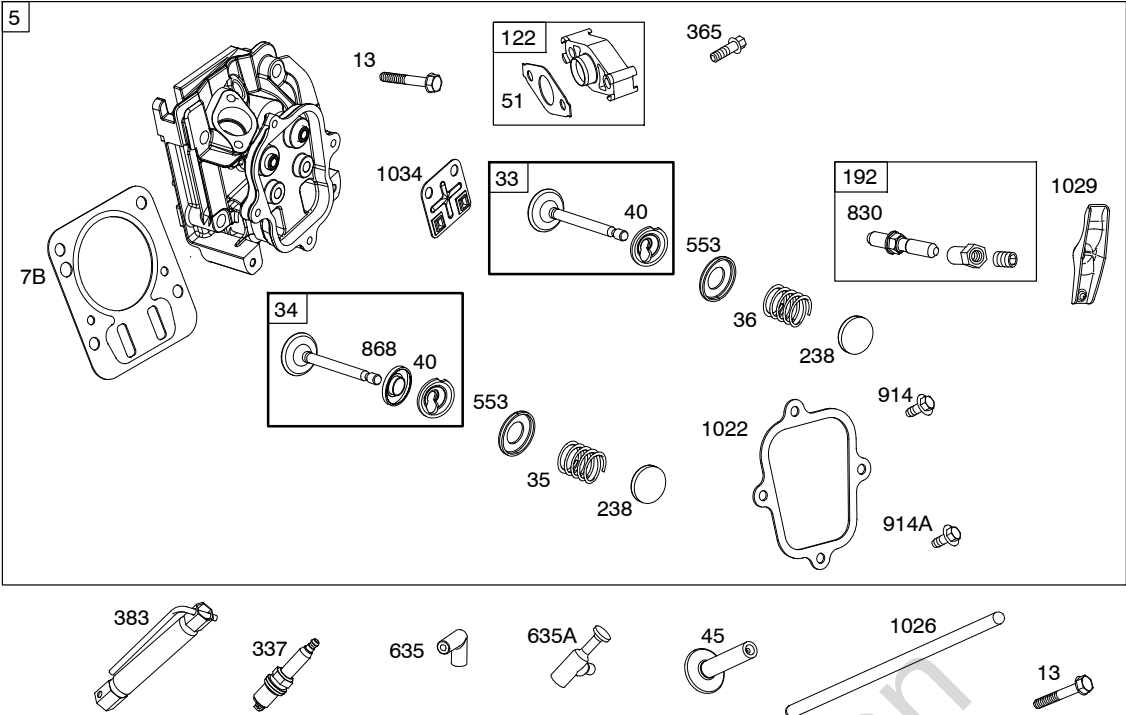


- 914A
- 914B
- 914

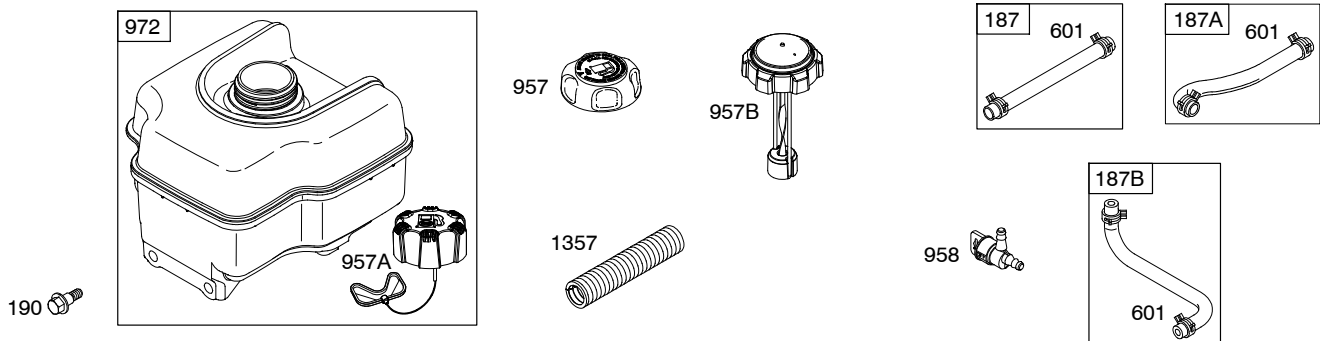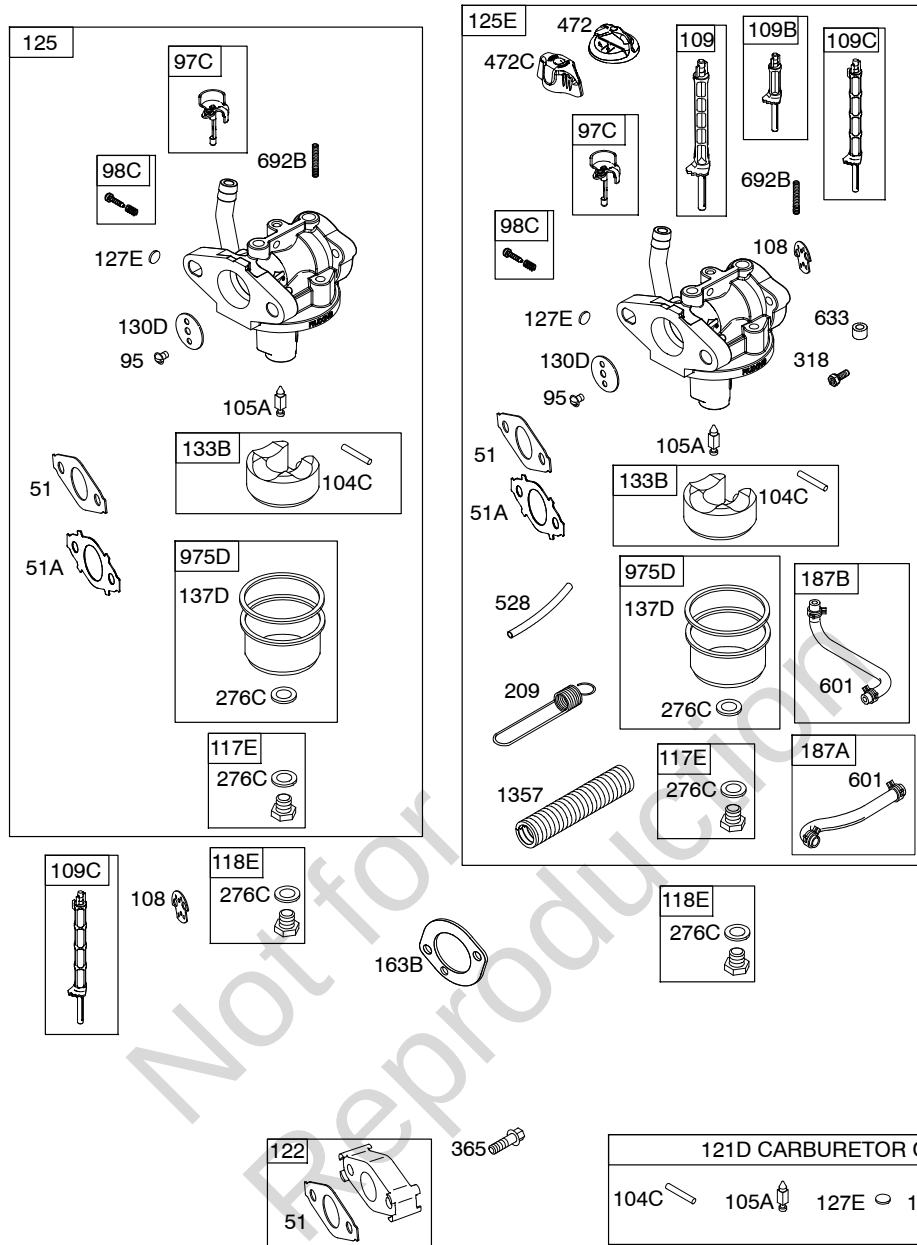

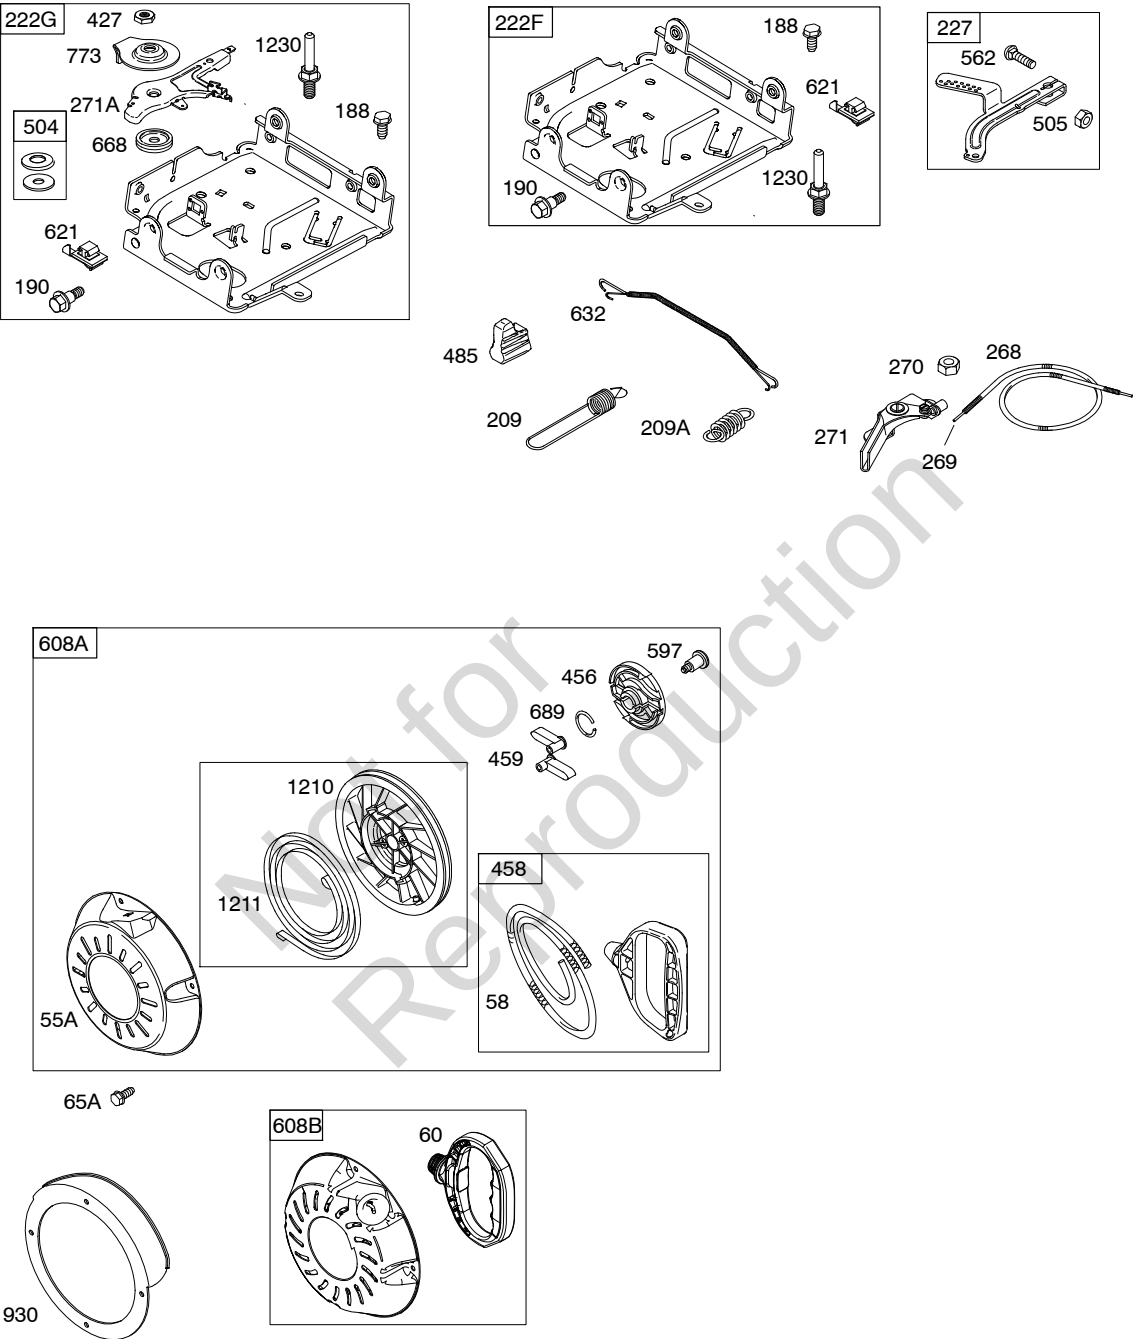

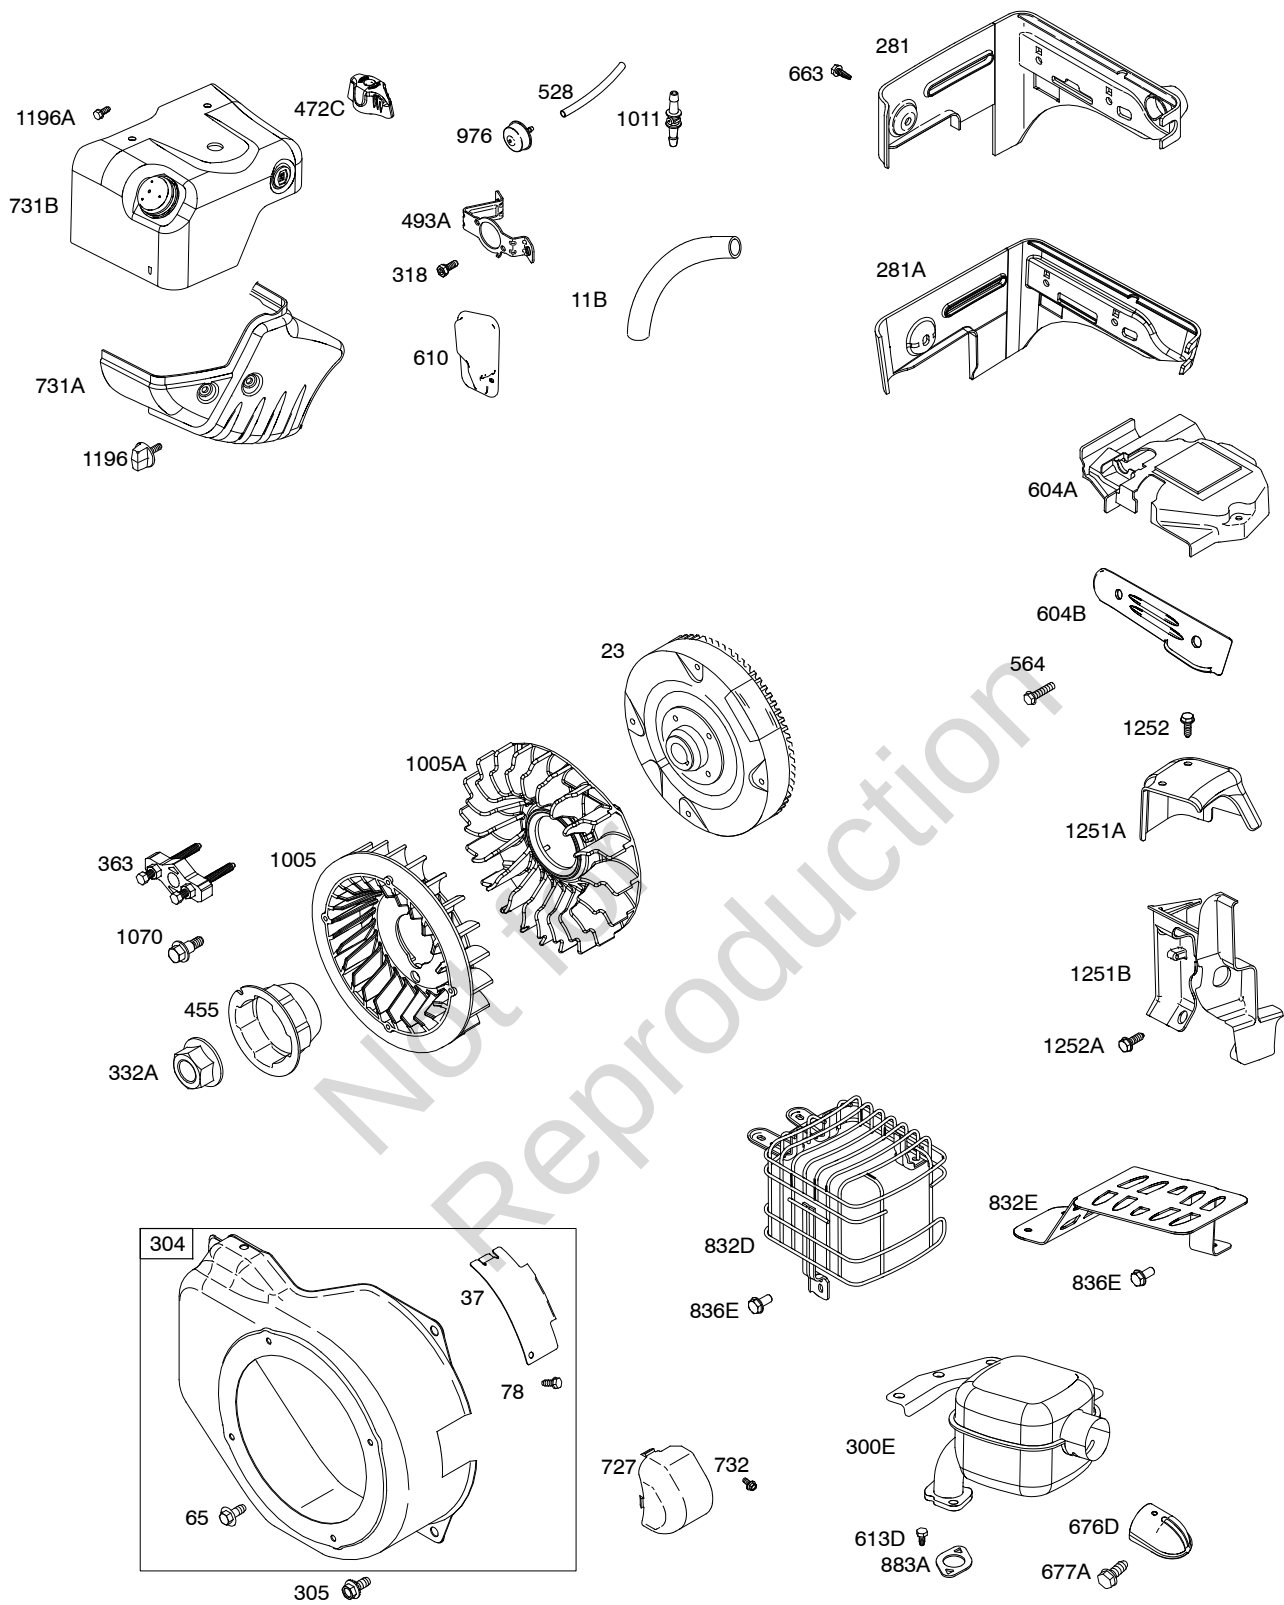

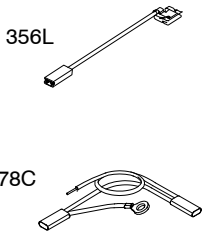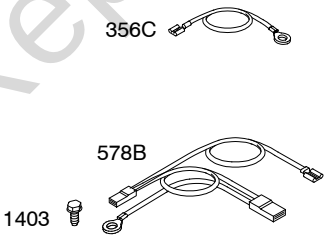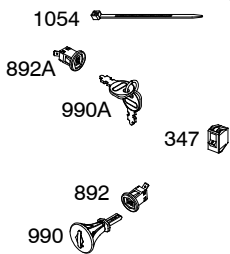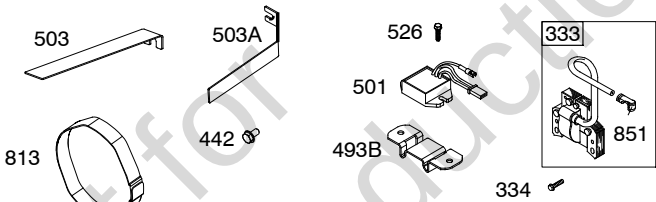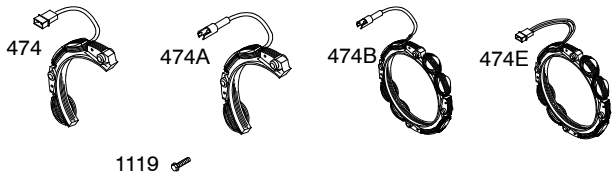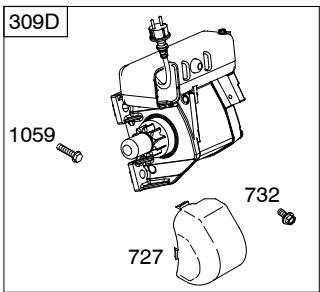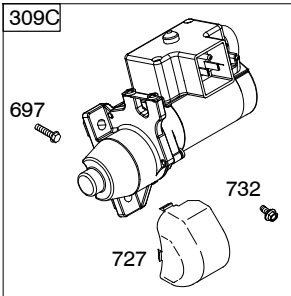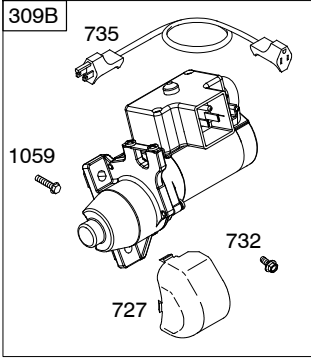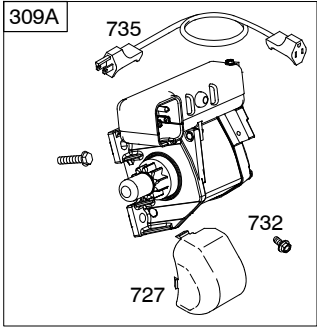

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	794188	Cylinder Assembly ----- Note ----- 595023 Cylinder Assembly Used on Type No(s). 0040.		797079	Crankshaft Used on Type No(s). 0022, 0161, 0165, 0612, 0613, 0614, 0661, 0662, 0682, 0683, 0828, 3022.	18	699804	Cover-Crankcase Used on Type No(s). 0002, 0007, 0013, 0017, 0019, 0020, 0024, 0025, 0028, 0029, 0030, 0032, 0034, 0035, 0037, 0100, 0110, 0111, 0112, 0113, 0114, 0116, 0117, 0118, 0120, 0121, 0122, 0123, 0131, 0137, 0142, 0150, 0151, 0152, 0153, 0154, 0158, 0159, 0162, 0167, 0170, 0171, 0172, 0173, 0175, 0176, 0179, 0182, 0417, 0939, 1212, 1235, 1240, 1365, 1463, 1464, 1465, 1468, 1598, 2463, 2464, 2465, 3006, 3007, 3017, 3020, 3212, 8212, 8240, 8365, 8939.
2	796961	Kit-Bushing/Seal (Magneto Side)		797072	Crankshaft Used on Type No(s). 0145-E8, 0146.			
3	299819s	Seal-Oil (Magneto Side)		792208	Crankshaft Used on Type No(s). 0111-E1, 0112-E1, 0114, 0116.			
5	594701	Head-Cylinder (Used After Code Date 14090400)		593079	Crankshaft Used on Type No(s). 0145-H8.			
5A	791720	Head-Cylinder (Used Before Code Date 14090500)		593494	Crankshaft Used on Type No(s). 0002, 0004, 0007, 0019, 0020, 0024, 0025, 0031, 0038, 0136, 0138, 0139, 0144-E8, 0147, 0155, 0156, 0160, 0162, 0174, 0175, 0176, 0177, 0178, 0180, 0181, 0182, 1212-E8, 1468, 1531, 2463, 2464, 2465, 3007, 3020.	18A	699672	Cover-Crankcase Used on Type No(s). 0023, 0127, 0128, 0129, 0130, 0132, 0140, 0141, 0143, 0145, 0146, 0168, 0169, 0200, 2143, 3023.
7B	791716	Gasket-Cylinder Head		593495	Crankshaft Used on Type No(s). 0013, 0017, 0019, 0032, 0034, 0035, 0037, 0110, 0116, 0117, 0118, 0122, 0123, 0124, 0125, 0126, 0150, 0151, 0152, 0153, 0154, 0167, 0170, 0171, 0173, 0417, 1235, 3006.			----- Note ----- 699696 Cover- Crankcase Used on Type No(s). 0003, 0004, 0014, 0022, 0026, 0027, 0031, 0038, 0040, 0124, 0125, 0126, 0134, 0135, 0136, 0138, 0139, 0144, 0147, 0155, 0156, 0157, 0160, 0161, 0165, 0174, 0177, 0178, 0180, 0181, 0612, 0613, 0614, 0661, 0662, 0682, 0683, 0828, 1531, 3022.
11B	695745	Tube-Breather		593496	Crankshaft Used on Type No(s). 0003, 0014, 0026.			
12	699485	Gasket-Crankcase		593497	Crankshaft Used on Type No(s). 0027.			
13	594518	Screw (Cylinder Head) (Used After Code Date 14090400) ----- Note ----- 699482 Screw (Cylinder Head) (Used Before Code Date 14090500)		594196	Crankshaft Used on Type No(s). 0028, 0029, 0030.			
15	691686	Plug-Oil Drain		594808	Crankshaft Used on Type No(s). 0040.	18C	699677	Cover-Crankcase Used on Type No(s). 0018, 3018.
16	797070	Crankshaft ----- Note ----- 791721 Crankshaft Used on Type No(s). 0939-E1, 1212-E1. 797253 Crankshaft Used on Type No(s). 0023, 0100, 0127, 0128, 0129, 0130, 0132, 0143, 0169, 0200, 2143, 3023. 797077 Crankshaft Used on Type No(s). 0113, 0134, 0135, 0144-H8, 0157, 1240, 1365, 1463, 1464, 1465, 1468, 1598, 0939-E8, 3212, 8212, 8240, 8365, 8939. 797075 Crankshaft Used on Type No(s). 0179.	17	798538	Bearing-Ball			

15C100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
20	692550	Seal-Oil (PTO Side)	55A	696710	Housing-Rewind Starter			798930 Jet-Main (Standard)
20A	691952	Seal-Oil (PTO Side) (Auxiliary Drive)	58	693389	Rope-Starter (Cut To Required Length)			(Used After Code Date 11080800 and Before Code Date 10071200).
21	281658s	Cap-Oil Fill	60	591519	Grip-Starter Rope Used on Type No(s). 0002, 0024, 0025, 0027, 0167, 0182,			Used on Type No(s). 0131, 0136.
22	594519	Screw (Crankcase Cover/Sump)	65	699228	Screw (Rewind Starter)			798930 Jet-Main (Standard)
23	798882	Flywheel ----- Note ----- 699516 Flywheel Used on Type No(s). 0100, 0111, 0112, 0113, 0114, 0116, 0120, 0121, 0123, 0127, 0128, 0129, 0130, 0131, 0134, 0135, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0614, 0661, 0682, 0683, 0939, 1240, 1365, 1463, 1465, 3017, 8212, 8240, 8365, 8939.	65A	699851	Screw (Rewind Starter)			(Used Before Code Date 11080800).
24	796335	Key-Flywheel	78	699205	Screw (Flywheel Guard)			Used on Type No(s). 1365.
25	791786	Piston Assembly (Standard) ----- Note ----- 791791 Piston Assembly (.020" Oversize)	82	690369	Screw (Gear Reduction Case)			798930 Jet-Main (Standard)
26	791787	Ring Set (Standard) ----- Note ----- 791792 Ring Set (.020" Oversize)	95	691636	Screw (Throttle Valve)			(Used Before Code Date 11061300).
27	690975	Lock-Piston Pin	97C	797628	Shaft-Throttle			Used on Type No(s). 0129, 0140, 0141, 0143, 0145, 0146, 2143.
28	690229	Pin-Piston	98C	797156	Kit-Idle Speed	118E	590440	Jet-Main (High Altitude)
29B	791783	Rod-Connecting	104C	797622	Pin-Float Hinge			(Used After Code Date 11080700).
32B	791784	Screw (Connecting Rod)	105A	797139	Valve-Choke			----- Note ----- 590440 Jet-Main (High Altitude)
33	499642	Valve-Exhaust	108	796993	Valve-Choke			(Used After Code Date 11080700).
34	795443	Valve-Intake	109	791957	Shaft-Choke			Used on Type No(s). 0131, 0136, 1365.
35	691304	Spring-Valve (Intake)	109B	695729	Shaft-Choke			590440 Jet-Main (High Altitude)
36	691304	Spring-Valve (Exhaust)	109C	791954	Shaft-Choke			(Used After Code Date 11061200).
37	699661	Guard-Flywheel	117E	590906	Jet-Main (Standard) (Used After Code Date 11080700).			Used on Type No(s). 0129, 0140, 0141, 0143, 0145, 0146, 0168, 0169, 2143.
40	692194	Retainer-Valve			----- Note ----- 590906 Jet-Main (Standard) (Used After Code Date 11080700).			Used on Type No(s). 0129, 0140, 0141, 0143, 0145, 0146, 0168, 0169, 2143.
45	690977	Tappet-Valve			590906 Jet-Main (Standard) (Used After Code Date 11061200).			798661 Jet-Main (High Altitude)
46	693404	Camshaft			Used on Type No(s). 0129, 0140, 0141, 0143, 0145, 0146, 0168, 0169, 2143.			(Used Before Code Date 11080800).
46A	695285	Camshaft			590906 Jet-Main (Standard) (Used After Code Date 11061200).			798661 Jet-Main (High Altitude)
51	692555	Gasket-Intake			Used on Type No(s). 0129, 0140, 0141, 0143, 0145, 0146, 0168, 0169, 2143.			(Used After Code Date 10080800 and Before Code Date 11071200).
51A	791718	Gasket-Intake			798930 Jet-Main (Standard) (Used Before Code Date 11080800).			Used on Type No(s). 0131, 0136.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		798661 Jet-Main (High Altitude) (Used Before Code Date 11080800). Used on Type No(s). 1365.	187A	798908	Line-Fuel (2.6" Molded) (Used After Code Date 10070900). ----- Note ----- 791867 Line-Fuel (5" Molded) (Used Before Code Date 10071000). 798908 Line-Fuel (2.6" Molded) (Used After Code Date 10071200). Used on Type No(s). 0136.	192	797440	Adjuster-Rocker Arm (Metric) (Used After Code Date 09061700). ----- Note ----- 694543 Adjuster-Rocker Arm (SAE) (Used Before Code Date 09061800).
		798661 Jet-Main (High Altitude) (Used Before Code Date 11061300). Used on Type No(s). 0129, 0140, 0141, 0143, 0145, 0146, 2143.			791867 Line-Fuel (5" Molded) (Used Before Code Date 10071300). Used on Type No(s). 0136.	209	692571	Spring-Governor (No Color) ----- Note ----- 692571 Spring- Governor (No Color) (Used Before Code Date 10071300). Used on Type No(s). 0131, 0136.
121D	797634	Kit-Carburetor Overhaul						692571 Spring- Governor (No Color) (Used Before Code Date 10071300). Used on Type No(s). 0131, 0136.
122	791717	Spacer-Carburetor						692571 Spring- Governor (No Color) (Used Before Code Date 10071000). Used on Type No(s). 0100, 0116, 0117, 0118, 0120, 0121, 0122, 0123, 0134, 0135, 0138, 0139, 0612, 0613, 0614, 0661, 0662, 0682, 0683, 0828, 0939, 1212, 1235, 1240, 1465, 8212, 8240, 8365, 8939.
125	594015	Carburetor (Used After Code Date 12123100) ----- Note ----- 593358 Carburetor (Used Before Code Date 13010100 and After Code Date 11080700).	187B	798907	Line-Fuel (2.9" Molded) (Used After Code Date 10070900). ----- Note ----- 791874 Line-Fuel (5.4" Molded) (Used Before Code Date 10071000). 798907 Line-Fuel (2.9" Molded) Used on Type No(s). 1365.			693206 Spring- Governor (Yellow) Used on Type No(s). 0003, 0014, 0026, 0028, 0029, 0151, 0152, 0153, 0154, 0182, 1365, 2465, 3212.
125E	594014	Carburetor (Used Before Code Date 11080800).			791874 Line-Fuel (5.4" Molded) (Used Before Code Date 10071300). Used on Type No(s). 0131.			693206 Spring- Governor (Yellow) (Used After Code Date 10071200). Used on Type No(s). 0131.
127E	797633	Plug-Welch						
130D	797630	Valve-Throttle						
133B	797136	Float-Carburetor						
137D	798932	Gasket-Float Bowl						
155	797442	Plate-Cylinder Head (Metric) (Used After Code Date 09061700). ----- Note ----- 698214 Plate-Cylinder Head (SAE) (Used Before Code Date 09061800).						
163B	696024	Gasket-Air Cleaner (Flat Panel Air Cleaner)	188	699479	Screw (Control Bracket)			
187	791766	Line-Fuel (15" Cut to Required Length)	190	699220	Screw (Fuel Tank)			

15C100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		693206 Spring-Governor (Yellow) (Used After Code Date 10070900). Used on Type No(s). 0100, 0116, 0117, 0118, 0120, 0121, 0122, 0123, 0158, 0159, 0165, 0170, 0171, 0172, 0173, 0176, 0612, 0613, 0662, 0683, 0828, 0939, 1212, 1235, 1240, 1465, 8212, 8240, 8365, 8939.	270	691027	Nut (Control Wire Casing)			798173 Muffler Used on Type No(s). 0120, 0121, 0123, 0127, 0128, 0129, 0131, 0137, 0140, 0141, 0143, 0145, 0146, 0158, 0159, 0168, 0172, 0179, 0682, 0683, 0939-E8, 1240, 1365, 1463, 1465, 3212, 8212, 8240, 8365, 8939.
			271	691028	Lever-Control			799525 Muffler Used on Type No(s). 0134, 0135, 0142, 0144, 0157, 0161, 0165, 1464, 1468, 1598, 3017.
			271A	698038	Lever-Control	304	699598	Housing-Blower
			276C	797632	Washer-Sealing	305	699481	Screw (Blower Housing)
			281	793122	Panel-Control	306A	594227	Shield-Cylinder
			281A	793133	Panel-Control Used on Type No(s). 0017, 0018, 0020, 0022, 0023, 0124, 0125, 0126, 0127, 0128, 0129, 0130, 0132, 0135, 0136, 0139, 0140, 0141, 0143, 0145, 0146, 0144, 0157, 0161, 0162, 0168, 0169, 0174, 0175, 0179, 0200, 0417, 1468, 1531, 1598, 2143, 3017, 3018, 3020, 3022, 3023.	307	794822	Screw (Cylinder Shield)
209A	691278	Spring-Governor (Platinum) ----- Note ----- 693710 Spring-Governor (Black) (Used on Type No(s). 0155, 0156, 0157, 0160, 0174. 693710 Spring-Governor (Black) (Used After Code Date 10071200). Used on Type No(s). 0136. 693710 Spring-Governor (Black) (Used After Code Date 10070900). Used on Type No(s). 0134, 0135, 0138, 0139, 0614, 0661, 0682.	281B	699885	Panel-Control	307A	699234	Screw (Cylinder Shield)
			287	699234	Screw (Dipstick Tube)	307B	790557	Screw (Cylinder Shield)
			300E	594222	Muffler ----- Note ----- 594225 Muffler Used on Type No(s). 0003, 0014, 0026. 594226 Muffler Used on Type No(s). 0002, 0004, 0007, 0017, 0018, 0019, 0020, 0022, 0023, 0024, 0025, 0027, 0031, 0038, 0110, 0134, 0135, 0136, 0138, 0139, 0142, 0144, 0147, 0155, 0156, 0157, 0160, 0161, 0162, 0165, 0167, 0174, 0175, 0177, 0178, 0180, 0181, 0182, 0828, 1464, 1468, 1531, 1598, 2464, 3006, 3007, 3017, 3018, 3020, 3022, 3023. 796422 Muffler Used on Type No(s). 0111, 0112, 0114, 0116.	309A	796238	Motor-Starter Used on Type No(s). 0017, 0018, 0020, 0022, 0023, 0100, 0112, 0114, 0116, 0117, 0120, 0122, 0124, 0126, 0127, 0128, 0132, 0135, 0137, 0139, 0140, 0143, 0146, 0612, 0613, 0614, 0661, 0662, 0682, 0683, 0939, 1235, 1240, 1365, 1463, 1464, 1465, 3017, 8240, 8365, 8939.
219	693578	Gear-Governor						
220	691724	Washer (Governor Gear)						
222F	793100	Bracket-Control						
222G	793109	Bracket-Control						
227	794367	Lever-Governor Control						
238	691300	Cap-Valve						
268	691025	Control Wire Casing (Cut to Required Length)						
269	691026	Control Wire (Cut to Required Length)						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309B	798884	Motor-Starter Used on Type No(s). 0019, 0030, 0032, 0034, 0035, 0037, 0040, 0110, 0150, 0151, 0153, 0156, 0167, 0178, 0200, 1598, 2143, 2463, 2464, 2465, 3018, 3020, 3022, 3023. ----- Note ----- 799038 Motor-Starter Used on Type No(s). 0003, 0014.	337	691043	Plug-Spark (EMS) ----- Note ----- 491055s Plug-Spark (Resistor) Used on Type No(s). 0007, 0017, 0018, 0020, 0022, 0023, 0100, 0161, 0167, 0612, 0613, 0614, 0661, 0662, 0682, 0683, 1463, 2463, 3006, 3007, 3017, 3018, 3020, 3022, 3023. 793541 Plug-Spark Used on Type No(s). 0002, 0024, 0162, 0175, 1464, 1468, 1531, 1598.	442	790282	Screw (Starter Strap) ----- Note ----- 795012 Screw (Starter Strap) Used on Type No(s). 0002, 0003, 0013, 0014, 0019, 0024, 0026, 0027, 0029, 0030, 0031, 0032, 0034, 0035, 0037, 0038, 0039, 0040, 0110, 0129, 0144, 0145, 0150, 0151, 0153, 0156, 0157, 0158, 0159, 0161, 0162, 0165, 0167, 0168, 0169, 0170, 0171, 0172, 0174, 0175, 0176, 0178, 0179, 0180, 0200, 0417, 1468, 1598, 2143, 2463, 2464, 2465, 3018, 3020, 3022, 3023, 3212.
309C	593445	Motor-Starter Used on Type No(s). 0002, 0013, 0024, 0027, 0029, 0031, 0038, 0039, 0129, 0144, 0145, 0157, 0158, 0159, 0161, 0162, 0165, 0168, 0169, 0170, 0171, 0172, 0174, 0175, 0176, 0179, 0180, 0417-H8, 1468, 3212. ----- Note ----- 593446 Motor-Starter Used on Type No(s). 0026.	347	795333	Switch-Rocker ----- Note ----- 691995 Switch-Rocker Used on Type No(s). 0612.	455	797431	Cup-Flywheel (Used After Code Date 10071900). ----- Note ----- 591302 Cup-Flywheel (Used Before Code Date 10072000).
309D	699786	Motor-Starter Used on Type No(s). 0111, 0113, 0118, 0121, 0123, 0125, 0129, 0130, 0136, 0141, 0144, 0145, 0152, 0154, 0417-E8, 0828, 1212, 1468, 1531, 8212.	356C	695630	Wire-Stop	456	692299	Plate-Pawl Friction
318	798649	Screw (Mounting Bracket) (Metric) ----- Note ----- 690370 Screw (Mounting Bracket) (SAE)	356L	790552	Wire-Stop	458	699334	Kit-Starter Rope
332A	591988	Nut (Flywheel)	357	692191	Key-Pulley	459	281505s	Pawl-Ratchet
333	796964	Armature-Magneto	358B	791797	Set-Engine Gasket	472	791958	Knob-Choke Shaft
334	699477	Screw (Magneto Armature)	363	19203	Puller-Flywheel	472C	791948	Knob-Choke Shaft
			365	699484	Screw (Carburetor)	474	797090	Alternator
			377	690979	Key-Timing	474A	793640	Alternator Used on Type No(s). 0004, 0017, 0019, 0020, 0111, 0112, 0113, 0114, 0116, 0117, 0118, 0126, 0127, 0135, 0136, 0139, 0147, 0156, 0157, 0167, 0174, 0181, 0612, 0939, 1235, 1240, 3017, 3020, 8240, 8939.
			383	19576s	Wrench-Spark Plug			
			415	693463	Plug			
			427	798458	Nut (Control Bracket) (Metric) ----- Note ----- 694255 Nut (Control Bracket) (SAE)			

15C100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
474B	698314	Alternator Used on Type No(s). 0003, 0018, 0026, 0035, 0110, 0123, 0131, 0142, 0152, 0153, 0158, 0170, 0172, 0173, 0417, 3018.		693618	Dipstick Used on Type No(s). 0002, 0003, 0004, 0007, 0014, 0017, 0018, 0019, 0020, 0022, 0023, 0024, 0025, 0026, 0027, 0031, 0038, 0110, 0134, 0135, 0136, 0138, 0139, 0142, 0144, 0147, 0155, 0156, 0157, 0160, 0161, 0162, 0167, 0174, 0175, 0177, 0178, 0180, 0181, 1464, 1468, 1531, 1598, 2464, 3006, 3007, 3017, 3018, 3020, 3022, 3023.	613D	798517	Screw (Muffler) ----- Note ----- 791972 Screw Used on Type No(s). 0111, 0112, 0114, 0116, 0120, 0121, 0123, 0127, 0128, 0129, 0131, 0134, 0135, 0137, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0157, 0158, 0159, 0161, 0165, 0168, 0172, 0179, 0682, 0683, 0939, 1240, 1365, 1463, 1464, 1465, 1468, 1598, 3017, 3212, 8212, 8240, 8365, 8939.
474E	793118	Alternator Used on Type No(s). 0022, 0161, 0165, 0613, 0614, 0661, 0662, 0682, 0683, 0828, 3022.						
485	695755	Knob-Control						
493A	695744	Bracket-Mounting						
493B	691177	Bracket-Mounting						
501	698315	Regulator						
503	698318	Strap-Starter Used on Type No(s). 0018, 0123, 0152, 0417-E8.	524	281370s	Seal-Dipstick Tube	615	692576	Retainer-Governor Shaft
			526	690297	Screw (Regulator)	616	692547	Crank-Governor
503A	699889	Strap-Starter ----- Note ----- 594086 Strap-Starter Used on Type No(s). 0003, 0026, 0110, 0153, 0158, 0170, 0172, 0417-H8, 3018.	528	793006	Hose-Primer	619	699481	Screw (Cylinder Head Plate)
			552	692346	Bushing-Governor Crank	621	692310	Switch-Stop
			553	594515	Cup-Valve Spring	632	692653	Spring/Link- Mechanical Governor
			562	691119	Bolt (Governor Control Lever)	633	693867	Seal-Choke/Throttle Shaft
504	695383	Washer Set-Friction	564	699854	Screw (Control Cover)	635	692076	Boot-Spark Plug
505	691251	Nut (Governor Control Lever)	578B	791956	Wire-Stop	635A	798619	Boot-Spark Plug
			578C	794819	Wire-Stop			
523	798469	Dipstick (Used After Code Date 10022100). ----- Note ----- Dipstick (Used Before Code Date 10022200). (Not Serviced Separate. Service With Dipstick/Tube Assembly).	584	791759	Cover-Breather Passage			
			585	791760	Gasket-Breather Passage			
			597	691696	Screw (Pawl Friction Plate)			
			598	220624	Shim-End Play			
			601	791850	Clamp-Hose			
			604A	793134	Cover-Control			
			604B	790473	Cover-Control			
			608A	699335	Starter-Rewind (Used Before Code Date 10072000).			
			608B	797430	Starter-Rewind (Used After Code Date 10071900).			
			610	794614	Shield-Carburetor			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION											
663	699854	Screw (Control Panel) ----- Note ----- 699206 Screw Used on Type No(s). 0002, 0004, 0007, 0013, 0017, 0018, 0019, 0020, 0022, 0023, 0024, 0025, 0027, 0030, 0031, 0032, 0034, 0035, 0037, 0038, 0040, 0110, 0124, 0125, 0126, 0127, 0128, 0129, 0130, 0132, 0134, 0135, 0136, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0147, 0155, 0156, 0157, 0160, 0161, 0162, 0167, 0168, 0169, 0174, 0175, 0180, 0177, 0178, 0179, 0181, 0200, 0417, 1464, 1468, 1531, 1598, 2143, 2464, 3006, 3007, 3017, 3018, 3020, 3022, 3023.	697	795012	Screw (Starter Motor) ----- Note ----- 795026 Screw (Starter Motor) Used on Type No(s). 0017, 0018, 0020, 0022, 0023, 0100, 0111, 0112, 0113, 0114, 0116, 0117, 0118, 0120, 0121, 0122, 0123, 0124, 0125, 0126, 0127, 0128, 0129, 0130, 0132, 0135, 0136, 0137, 0139, 0140, 0141, 0143, 0144, 0145, 0146, 0152, 0154, 0417, 0612, 0613, 0614, 0661, 0662, 0682, 0683, 0828, 0939, 1212, 1235, 1240, 1365, 1463, 1464, 1465, 1468, 1531, 3017, 8212, 8240, 8365, 8939.	694544	Stud-Rocker Arm (SAE) (Used Before Code Date 09061800).	832D	793193	Guard-Muffler	832E	797003	Guard-Muffler ----- Note ----- 799028 Guard-Muffler Used on Type No(s). 0026.	836E	699854	Screw (Muffler Guard)	842	795015	Seal-O Ring (Dipstick Tube) ----- Note ----- 691031 Seal-O Ring (Dipstick Tube) Used on Type No(s). 0002, 0003, 0004, 0007, 0014, 0017, 0018, 0019, 0020, 0022, 0023, 0024, 0025, 0026, 0027, 0031, 0038, 0110, 0134, 0135, 0136, 0138, 0139, 0142, 0144, 0147, 0155, 0156, 0157, 0160, 0161, 0162, 0167, 0174, 0175, 0177, 0178, 0180, 0181, 1464, 1468, 1531, 1598, 2464, 3006, 3007, 3017, 3018, 3020, 3022, 3023.
668	694257	Spacer	718	592860	Pin-Locating														
676D	794213	Deflector-Muffler	727	698039	Cover-Starter Drive														
677A	699776	Screw (Muffler Deflector)	731A	794589	Hood-Snow														
684	793369	Screw (Breather Passage Cover)	731B	798456	Hood-Snow														
689	691855	Spring-Friction	732	699200	Screw (Starter Drive Cover)														
692B	797624	Spring-Detent	735	795901	Cord-Starter														
			741	695087	Gear-Timing (Metal) ----- Note ----- 593499 Gear-Timing (Plastic)														
			742	692564	Retainer-E Ring														
			746	790278	Gear-Idler														
			773	694258	Retainer														
			813	690635	Clamp														
			830	594230	Stud-Rocker Arm (Used After Code Date 14090300) ----- Note ----- 797441 (Metric) (Used Before Code Date 14090400 and After Code Date 09061700).														

15C100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
847	798468	Dipstick/Tube Assembly ----- Note ----- 693617 Dipstick/Tube Assembly Used on Type No(s). 0002, 0003, 0004, 0007, 0014, 0017, 0018, 0019, 0020, 0022, 0023, 0024, 0025, 0026, 0027, 0031, 0038, 0110, 0134, 0135, 0136, 0138, 0139, 0142, 0144, 0147, 0155, 0156, 0157, 0160, 0161, 0162, 0167, 0174, 0175, 0177, 0178, 0180, 0181, 1464, 1468, 1531, 1598, 2464, 3006, 3007, 3017, 3018, 3020, 3022, 3023.	914B	691108	Screw (Rocker Cover) (Center)(SAE) (Used Before Code Date 09061800).	1029	797443	Arm-Rocker (Metric) (Used After Code Date 09061700). ----- Note ----- 691230 Arm-Rocker (SAE) (Used Before Code Date 09061800).
851	493880s	Terminal-Spark Plug	930	696709	Guard-Rewind	1034	594229	Guide-Push Rod (Used After Code Date 14090300) ----- Note ----- 691343 Guide-Push Rod (Used Before Code Date 14090400)
868	795440	Seal-Valve	957	792647	Cap-Fuel Tank (Fresh Start) ----- Note ----- 795027 Cap-Fuel Tank (Text Free)	1036		Label-Emissions (Available From An Authorized Briggs & Stratton Service Dealer)
883A	691893	Gasket-Exhaust	958	698180	Valve-Fuel Shut Off (Plastic)	1054	280275	Tie-Cable
892	791944	Switch-Key	972	799863	Tank-Fuel (Plastic)	1059	793567	Screw (Starter Motor)
892A	798182	Switch-Key	975D	798931	Bowl-Float	1070	699201	Screw (Flywheel Fan)
914	699481	Screw (Rocker Cover) (Bottom)	976	793382	Primer-Carburetor	1095A	791798	Gasket Set-Valve
914A	594517	Screw (Rocker Cover) (Quantity 1 Top Or Center) (Metric) (Used After Code Date 14090400) ----- Note ----- 797444 Screw (Rocker Cover) (Quantity 1 Top Or Center) (Metric) (Used Before Code Date 14090500 and After Code Date 09061700). (Used After Code Date 09061700). 692557 Screw (Rocker Cover) (Top)(SAE) (Used Before Code Date 09061800).	990	794696	Key-Set	1119	699772	Screw (Alternator)
			990A	798177	Key-Set	1196	798785	Screw (Snow Hood)
			993	694088	Gasket-Cylinder Head Plate	1196A	699854	Screw (Snow Hood)
			998	696683	Pipe-Oil (4" Long) ----- Note ----- 792928 Pipe-Oil (2 1/2" Long) 794701 Pipe-Oil (5" Long)	1210	498144	Pulley/Spring Assembly (Pulley)
			1005	555778	Fan-Flywheel Used on Type No(s). 0111, 0112, 0113, 0114, 0116, 0120, 0121, 0123, 0127, 0128, 0129, 0131, 0134, 0135, 0137, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0157, 0158, 0159, 0161, 0165, 0168, 0172, 0179, 0682, 0683, 0939, 1240, 1365, 1463, 1464, 1465, 1468, 1598, 3017, 3212, 8212, 8240, 8365, 8939.	1211	498144	Pulley/Spring Assembly (Spring)
			1005A	794273	Fan-Flywheel	1230	699847	Stud (Control Bracket)
			1011	794544	Tube-Vent	1251A	594231	Shield-Snow
			1019	792211	Kit-Label	1251B	594228	Shield-Snow
			1022	691890	Gasket-Rocker Cover	1252	699234	Screw (Snow Shield)
			1023	499924	Cover-Rocker Arm	1252A	699491	Screw (Snow Shield)
			1026	790287	Rod-Push	1319	794467	Label-Warning
						1319A	797669	Label-Warning
						1330	272147	Repair Manual
						1357	794700	Sleeve-Fuel Line
						1403	699481	Screw (Wire Assembly)
						1427	695757	Cap-Pipe

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

