


1. The remote control is applied to the above Kubota generators

2. How to set up


Remote Control: R/C

Precaution: Stop the engine and disconnect the battery's negative cable for added safety. Tightly close the fuel filter cock.

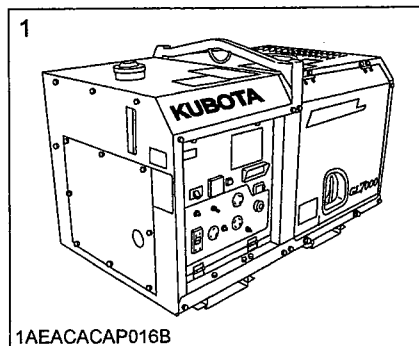


1AEACACAP016B

Replace the existing rear cover with the accompanying one and fit the cable clamp in position.

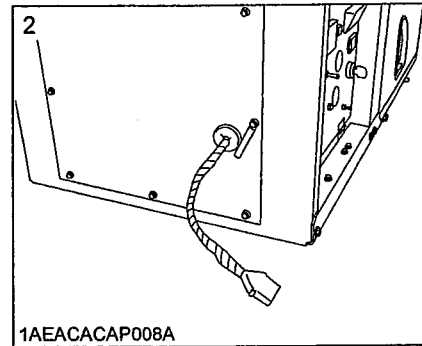


1AEACACAP008A

Attach the grommet on the cover and insert the R/C harness through the grommet.

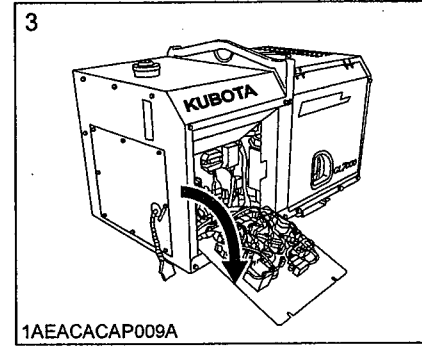


1AEACACAP009A

Fix the rear cover securely and open the control panel.

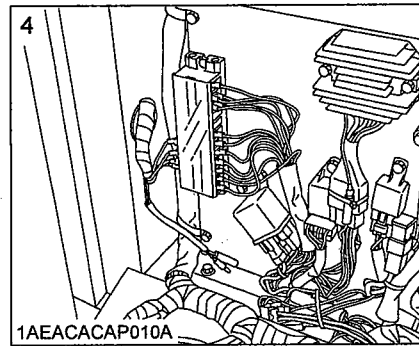

1AEACACAP010A

Remove the AMF terminal cover. Make the R/C connections with the AMF terminals, matching the R/C harness numbers.

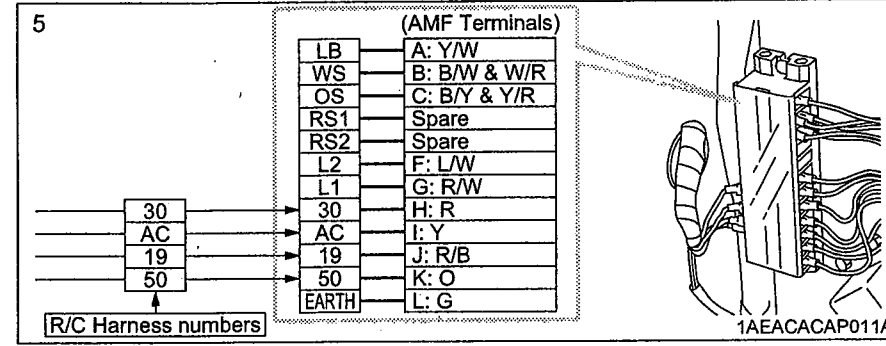


1AEACACAP011A

NOTE:


- Be careful not to confuse the connections because the wiring colors of the R/C are not the same as those of the generator set's AMF terminals. Finally fit the AMF terminal cover back in place.

See wiring diagram-Remote control.

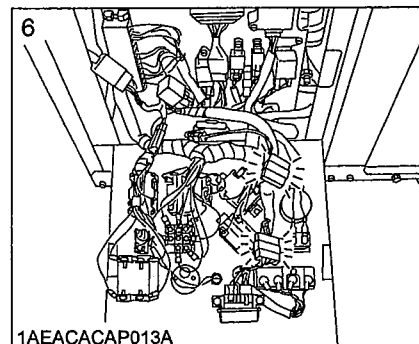


1AEACACAP013A

Disconnect the generator pilot box's 8P coupler. Connect the R/C harness' 8P coupler instead.

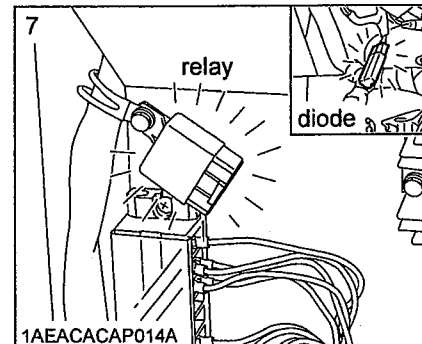


1AEACACAP014A

Connect the accompanying relay and diode.

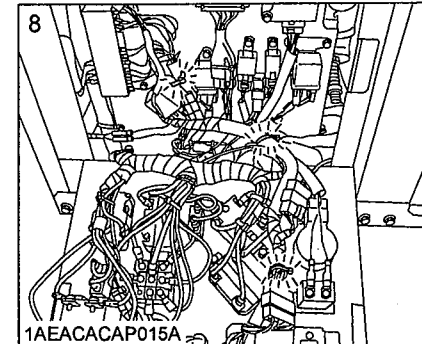


1AEACACAP015A

Clamp the remote control harness out of contact with sharp edges.

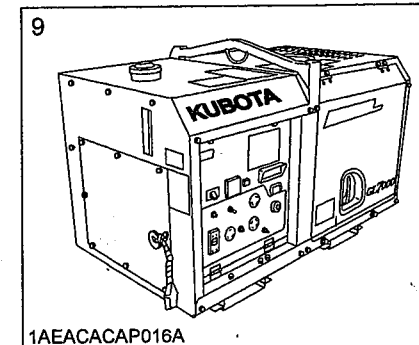

1AEACACAP016A


Attach the cable clamp and control panel back into place.

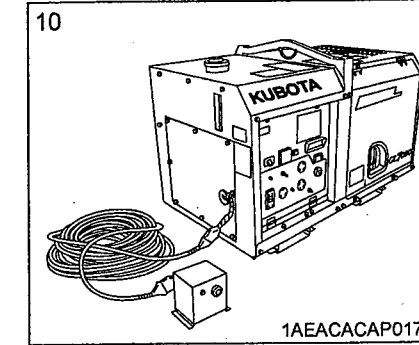

1AEACACAP017A


Connect the R/C extension cable to the R/C harness and switch box.

3. Preparing the remote control

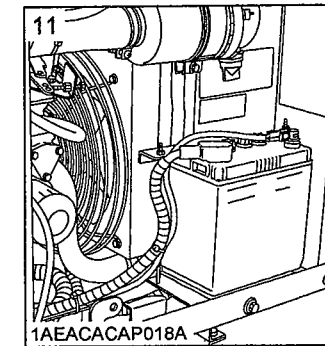


1AEACACAP018A

Reconnect the battery's negative cable.

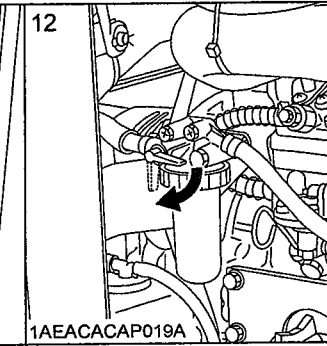


1AEACACAP019A

Open the fuel filter cock.

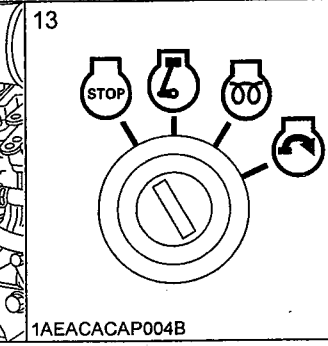

1AEACACAP004B

Draw out the generator's key.

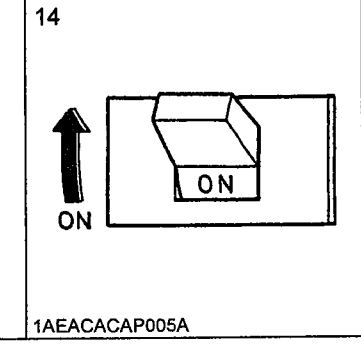


1AEACACAP005A

Turn on the generator's circuit breaker.

IMPORTANT:

- Do not connect any load until the engine gets started. Before connecting the load, ensure safety.

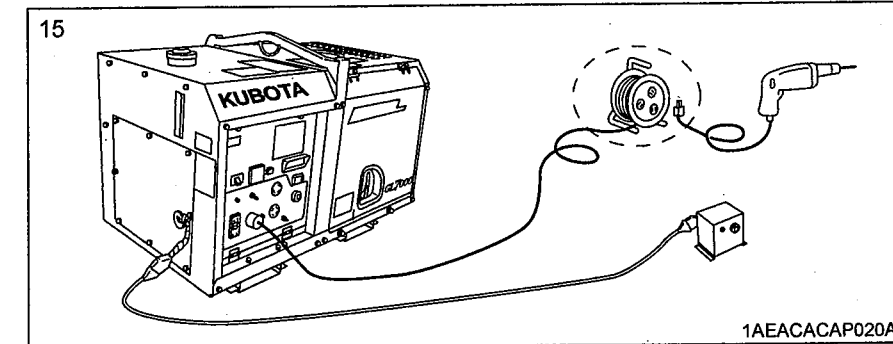


15

1AEACACAP020A

CAUTION

- To avoid personal injury:
 - When starting the engine, keep everybody away from the generator.
 - The engine startup procedure is the same as that with the generator key. Refer to the Operator's Manual.

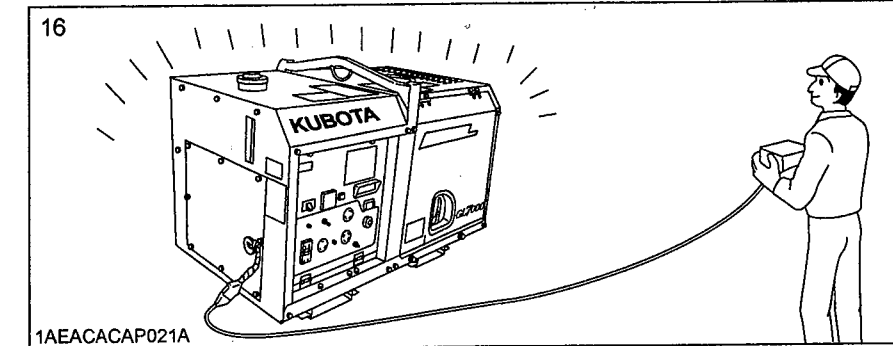


16


1AEACACAP021A

4. Remote control operation: Starting


■ Starting the engine

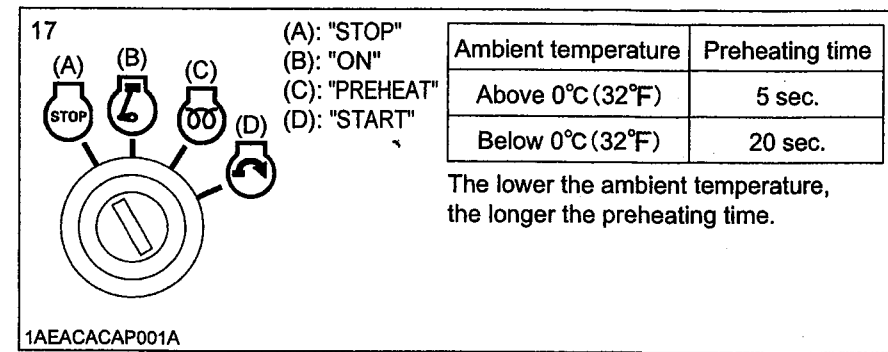


Hold the key at "PREHEAT" for 5-20 seconds.

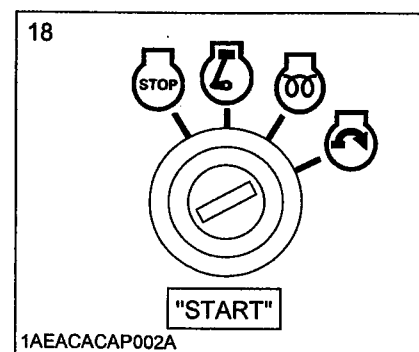


Turn the key to "START".

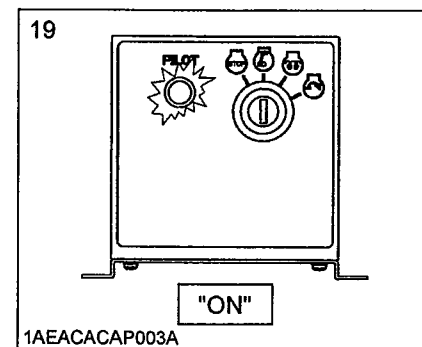

When the pilot lamp lights up, release the key.

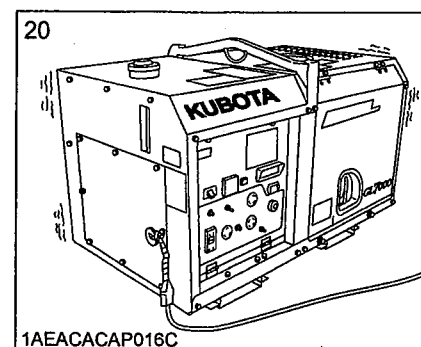


For 10-30 seconds before connecting the load, warm up the generator.

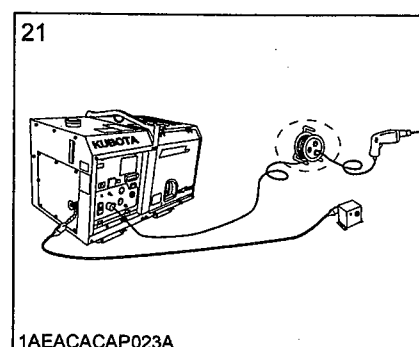


Finally connect the load.

5. Remote control operation: Stopping

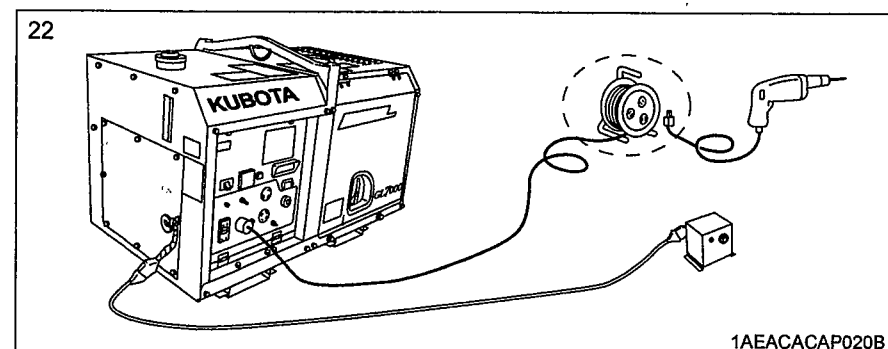

Disconnect the load.

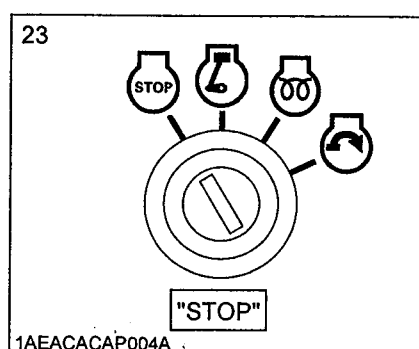

Set the key back to "STOP".

NOTE:

- After use, draw out both the remote control key and the generator key, and close the fuel filter cock. When operating with the generator key, keep out the remote control key. When using the remote control key, keep out the generator key.

6. Wiring diagram-Remote control

