Job Name/Location:

Date:
PO No.:
For: File Resubmit
Approval Other

GC:
Engr:
Mech:
Rep:
(Company)
(Project Manager)



PWLSSB21H

Max Number of Indoor Units (Group Control) Temperature Value Dimensions 6-3/16" L x 2-3/16" W x 1- 3/16" H Weight 6.35 oz

Temperature Value depends on equipment.

Wireless Remote Controller

Electrical:

Unit Data:

Power Supply	2 AAA Batteries Included

Temperature Setting Range:

Cooling (°F)	64-86
Heating (°F)	60-86
Auto (°F)	64-86


Standard Features:

- •Unit Operation On/Off
- •Temperature Setting
- Display Current Temperature
- Mode Selection Cool/Heat/Dry/Fan/Auto
- Fan Speed Selection
- Air Flow Direction
- Jet Cool
- Auxiliary Heat
- •Timer
- Clock
- •Sleep Mode
- Master/slave Configuration
- •On/Off LED Display
- LCD Luminosity
- Plasma Purification
- Auto Smart Clean
- Main/Sub Indoor Unit Setting
- •Temperature Difference Setting
- Function Lock

Notes:

Available functions/features may differ based on connected system.

Must follow installation instructions in the applicable LG installation manual.

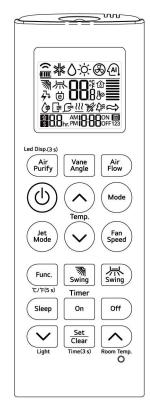

Part	Description
高本○次級@ 為你BBB みゅ BBB 少ほび世後な会 1888	LCD
Air Purify	Used to start or stop the air purification function. Smart indicator(Air quality) always on setting (If it press for 3 s)
Vane Angle	Used to set each vane angle.
Air Flow	Used to set airflow.
(1)	Used to turn on/off the unit.
Temp.	Used to select the room temperature.
Mode	Used to select the operation mode.
Jet Mode	Speed cooling(heating) operates super high fan speed.
(Fan Speed)	Used to set fan speed.
Func.	Used to set or clear additional function. Celsius/Fahrenheit Switching (If it press for 5 s)
Swing	Used to stop or start louver movement and set the desired up/down airflow direction.
Swing	Used to set the desired left/right(horizontal) airflow direction.
Sleep	Used to set the time of sleeping operation.
On	Used to set the time of starting operation.
Off	Used to set the time of stopping operation.
	Used to set the timer. (If it is timer mode) Used to adjust the brightness. (If it is not timer mode) Used to check the room temperature. (If it is not timer mode)
Set Clear	Used to set/clear the timer. Used to set the current time (If it press for 3 s)
0	Used to reset the remote controller.