



Instructions

1. **Disconnect spark plug wire.** If needed, cut new rope to same length as the old. Feed the rope through the end of the handle **A**, and tie a knot in the end of the rope and heat-seal end to prevent loosening. For best results, use a figure eight knot shown above.
2. Remove the recoil housing from engine. Rewind starter spring counterclockwise until tight. Install rope through the eyelet **B** and center pulley, tie a knot, and pull tight. (Consult your owner's manual) **Reconnect spark plug wire.**

Rope - Lifetime Replacement

If Rope breaks during intended use we will replace it, or at our option, refund the purchase price. Offer applies while you own the piece of equipment Rope was used on, if you **register at www.gvpower.com/rope within 30 days of Rope purchase.** You must be able to provide the broken Rope and its sales receipt if requested.

If you do not have internet access, please mail your name, address & phone # to: Get-A-Grip Rope Registration, 115 E. Waldo Blvd., #300, Manitowoc, WI 54220 USA (**proof of delivery is responsibility of Registrant**)