

90PX040G Compatibility Guide

Brand	Compatible Models
Black & Decker	LCS1020 20-Volt & LCS1020B
Chicago	Lynxx 63286
Craftsman	315.341300, 315.34131, 79240 Pole Saw, 79245 Pole Saw
Earthwise	CVP41810
Echo	CS-271T, CS-271, PPT-265H, PPF 225, PPT-266, PPT-266H, PPT-266S, PPT-265S, PPF-280, PPT-265, PPT-280, PPT-2620, PPT-2620H, PPF-2620
Hitachi	CGPS Pole Saw Attachment
Homelite	Expand-It, UT15520A
Husqvarna	128LDX, 325P4, 325P5X, 326P4, 326P5X, 327P4, 327P4X, 327P5X, 436 LI, 536 LiXP and T536 LiXP
John Deere	200CS, 230CS, 25EV, 28, 28V, 30, 30V, 35 & 35EV, CS36LE, CS40, CS40LE, Quik-Tatch, Quik-Tatch PS2393, Quik-Tatch PS2683, Quik-Tatch PSA10, CS40V, J3816, 40V, CS36
Kawasaki	KMP01A Multi Task Pole Pruner
Maruyama	MCV31T
Poulan	1220, 1420, 1425, 1625, 1630, 180, 1800, 190, 1900, 1900 LE, 1950, 1950 LE, 1975, 1975 LE, 200, 2000, 2025, 205, 2050, 2055, 2055 LE, 2075, 2075C, 210, 2100, 2150, 2155, 2160, 2175, 220, 221, 225, 2250 LE, 230, 2300, 235, 2350, 236, 2375, 2375 LE, 240, 2400, 2450, 250, 2500, 255, 2550, 2550 LE, 2555, 25A, 260, 2600, 262, 3314, 3316 LE, 3416, 3516, 3516AVX, 3816, 3816 AV, 3818, 400E, 4018, 4218, 4218A, 4218AV, 4218AVX, 967607201, E14E, E16E, Electric Models, ES 300 (Electric), ES 350, ES400, Micro 25(XX Series and XXV Series), P3314, P3816, PATRIOT 1900, PP 445, PP 5000P, PP446T, PPB1634, PPB1838, PPR4218A, S23, S25, S25AV, S25CVA, S25D, S25DA, S35, WILDTHING, Woodshark, 222, 2250, PR4218
Ryobi	CS1800 18 Volt Cordless, P540, P540A, P540B, P542, P543, P545, P546, P547, RY52003, RY52003A, RY52604, RY52907, TP30, ZR15520 Expand-it Pruner, RYPRN33
Tanaka	TPS-200 Pole Saw Attachment, TPS-210 Pole Saw, TPS-250, TPS-2501, TPS-250PF, TPS-2510, TPS-260PF, TPS-270, TPS-270PF, TPS-270S
Troy-Bilt	PS720r, TBPS-8DL, Troy-Bilt Dura-Lite Pole Saw