


2-4. Wireless remote controller [PAR-FL32MA / PAR-FA32MA]

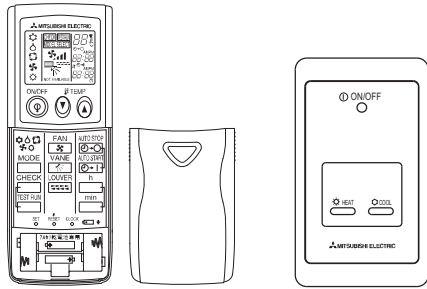

PAR-FL32MA

PAR-FA32MA
(Signal receiving unit)

- It can operate in a group system without requiring address settings.
 - When operating, it displays LED lamps. When errors occur, the error code can be shown by the LED flash count.
 - *: If an indoor unit with different functionality is operating inside the same group, please note there may be cases when functionality is partially disabled for batch control.
 - *: Wireless remote controllers can only be used for a single refrigerant system.
 - *: If you use a system controller to centrally control a group, you will need cross-wiring between indoor units when using a wireless remote controller.
- Also ensure there is no difference between the group setting of the main system controller and the cross wiring across indoor units when wiring and setting cross wires.


■ Functions

■ : Each unit ○ : Each group ● : Each block
 △ : Each floor ⊙ : Collective × : Not available

Item	Description	Operations	Display
ON/OFF	Run and stop operation for a single group	○	○
Operation mode switching	Switches between Cool / Dry / Fan / Heat / Auto. Operation modes vary depending on the air conditioner unit. Auto mode is only for the CITY MULTI® R2- and WR2-Series.	○	○
Temperature setting	Sets the temperature for a single group Range of temperature setting Cool/Dry : 67°F - 87°F / 19°C - 30°C Heat : 63°F - 83°F / 17°C - 28°C Auto : 67°F - 83°F / 19°C - 28°C	○	○
Fan speed setting	Models with 4 air flow speed settings: Hi/Mid-2/Mid-1/Low Models with 2 air flow speed settings: Hi/Low	* *	* *
Air flow direction setting	Air flow direction angles 100% - 80% - 60% - 40%, Swing. Air flow direction settings vary depending on the model.	* *	* *
Timer operation	One ON/OFF setting can be set for one day.	○	○
Permit / Prohibit local operation	Individually prohibit operation of each local remote control function (Start/Stop, Change operation mode, Set temperature, Reset filter). ■*1: If operation is performed when the local remote controller inactivation command is received from the main system controller, a buzzer will ring and an LED will flash.	×	*1 ○
Indoor unit intake temperature	Measures the intake temperature of the indoor unit when the indoor unit is operating.	×	×
Error	When an error occurs on the air conditioner unit, the operation lamp on the signal receiving unit will flash.	×	○
Test run	This operates air conditioner units in test run mode.	○	○
Ventilation equipment	Up to 16 indoor units can be connected to an interlocked system that has one LOSSNAY.	×	×

* Some models will have different display for the air flow direction and fan speed. Set the air flow direction and fan speed when performing initial setting.

■ System example

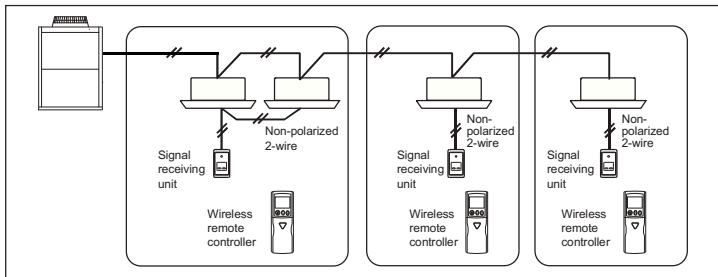

■ External dimension

