

PROFESSIONAL SURFACE CLEANER

INSTRUCTION MANUAL

MANUAL DE INSTRUCCIONES

MANUEL D'UTILISATION

Model	Diameter	Max Pressure	Max Water Temp
80181	18 in	4500 PSI	212° F
80182	20 in	4500 PSI	212° F

IMPORTANT: Please make certain that the person who is to use this equipment carefully reads and understands these instructions before operating.

IMPORTANT : Assurez-vous que toute personne qui utilisera cet équipement lise attentivement ces instructions avant de l'utiliser.

IMPORTANTE: Asígurese por favor de que la persona que vaya a utilizar este equipo lea con cuidado y comprenda estas instrucciones antes de operar.

VEA EL ESPAÑOL EN LA CONTRAPORTADA. INSTRUCTIVO DE OPERACIÓN, CENTROS DE SERVICIO Y PÓLIZA DE GARANTÍA. **ADVERTENCIA:** LÉASE ESTE INSTRUCTIVO ANTES DE USAR EL PRODUCTO.

Contact our Customer Service Department at **1-877-362-4271**

Contacter notre département de service clients à **1-877-362-4271**

Contáctese con nuestro Departamento de Servicio al Cliente llamando al **1-877-362-4271**


FNA Group, Inc.
Pleasant Prairie, WI 53158


Made in P.R.C.
Fabriqué en P.R.C.
Hecho en P.R.C.

SAVE THIS MANUAL FOR FUTURE REFERENCE
LISEZ ET CONSERVEZ CES INSTRUCTIONS
CONSERVE ESTAS INSTRUCCIONES PARA FUTURAS CONSULTAS

GENERAL SAFETY INFORMATION


Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.


 **WARNING:** To reduce the risk of injury, user must read and understand the operator's manual for their pressure washer before using this accessory.


 **WARNING:** To reduce the risk of injury or property damage, spray the pressure stream in a safe direction to ensure proper connection of all accessories before starting any cleaning project.

 **WARNING:** Fits most pressure washers. Ensure compatibility and proper fit before using this accessory.

 **WARNING:** Wear eye protection with side shields marked to comply with ANSI Z87.1.

 **DANGER:** Risk of fluid injections; do not point at people, pets, electrical devices or the unit itself. Turn off the pressure washer before changing or adjusting accessories.

 **WARNING:** Save these instructions. Refer to them frequently and use them to instruct other users. If you loan someone this tool, loan them these instructions also.

 **WARNING:** This product and substances that may become airborne from its use may contain chemicals, including lead, known to the State of California to cause cancer, birth defects, or other reproductive harm. **Wash hands after handling.**

WARNING: RISK OF BURSTING

- Make sure that pressure does not exceed 4500 PSI maximum working pressure rated for the accessory.
- Never make adjustments on this accessory while in operation.
- Before connecting hoses, make sure that this accessory is installed properly.
- Be certain all connections are secure and inspect for leaking before using pressure washer.


DANGER: RISK OF INJURY FROM SPRAY

- Always wear safety glasses or goggles and appropriate clothing.
- Never point the high-pressure discharge at a person, any part of the body or animals.
- Keep operating area clear of all persons.
- Do not allow children to operate this product. Do not use around children. This product must be attended during operation.

WARNING: RISK OF HOT SURFACES

- Maximum water temp is 212°F. Water must be clean fresh water.
- Do not operate gasoline engines in a confined area; always have adequate ventilation.

ASSEMBLY AND USE

 **WARNING:** To reduce the risk of injection or injury, only use the surface cleaner on flat, horizontal surfaces. Never lift the surface cleaner from the cleaning surface while operating the pressure washer.


1. Bolt the two halves of the handle together with the two bolts, nuts and four washers.
2. Connect the handle to the brackets on the deck with the two long pins and rings.
3. Connect the hose to the swivel on the deck. Ensure sealant tape is applied to the hose fitting and connection is secure.
4. Attach the brass in-line filter body to the inlet of the gun. The filter is located inside this brass body. Ensure sealant tape is applied to the fitting and connection is secure. The filter must always be installed when using this product. Operating without a filter may cause damage to product.
5. Connect your pressure washer hose to the in-line filter. Use the provided QC plug if needed.
6. Prior to starting pressure washer, turn water on and squeeze gun trigger. Ensure nozzles have flowing spray. If not, nozzles may need to be cleaned. See Nozzle Maintenance section below.
7. Start your pressure washer as described in your pressure washer manual.
8. Walk slowly behind the cleaning deck, cleaning as you go.

NOTE: If striping or swirling occurs, slow your pace. If striping or swirling continues, the surface cleaner nozzle, may be clogged. See Nozzle Maintenance section below.

NOTE: Periodically check weep hole on bottom of swivel.

Water will seep slowly; if water shoots out, stop and replace seals.

Swivel assembly can be rebuilt/replaced.

 **WARNING:** Striking any raised obstacle while using the surface cleaner will damage the unit. If contact does occur and causes vibration when operating the pressure washer, stop and discontinue use. Continuing to operate the unit could result in serious injury or damage to the unit.

MAINTENANCE

When shipped, two nozzles are pre-assembled to the surface cleaner.

Excessive pump pressure (a pulsing sensation felt while squeezing the trigger and/or a higher vibration in the surface cleaner) may be the result of a clogged or dirty nozzle.

- Turn off the pressure washer and shut off the water supply. With the surface cleaner on the ground, pull trigger to release water pressure.
- Disconnect surface cleaner from pressure washer.
- Using a straightened paper clip or nozzle cleaning tool, free any foreign materials clogging or restricting the nozzle.
- Using a garden hose, flush debris out of nozzle by back flushing (running the water through the nozzle backwards or from the outside to the inside).
- **NOTE:** Never point the spray bar at your face.
- Reconnect the surface cleaner to the pressure washer.
- Turn on the water supply and start the pressure washer.

In-line filter must be kept clean.

- Turn off the pressure washer and shut off the water supply. With the surface cleaner on the ground, pull trigger to release water pressure.
- Disconnect surface cleaner from pressure washer.
- Remove filter body and filter from surface cleaner inlet.
- Use a brush to free debris and then backflush with water until clean.
- Reinstall the inline filter and filter body to surface cleaner inlet prior to use. Do not use without inline filter installed.