



# TIRE INFLATOR

CORDLESS AND RECHARGEABLE FOR TIRES



**⚠ ATTENTION! READ ALL INSTRUCTIONS CAREFULLY**  
FAILURE TO FOLLOW WARNING INSTRUCTIONS CAN RESULT IN FIRE,  
PERSONAL INJURY OR PROPERTY DAMAGE.



**CAUTION: HOT • DO NOT HOLD IN HAND WHILE OPERATING • PLACE INFLATOR ON A HARD, CLEAN SURFACE.**

1. **DO NOT** run vehicle while inflator is operating. Engine must be turned OFF.
2. **DO NOT** use inflator continuously for more than 10 minutes. Allow unit to cool approximately 25 minutes between uses. Do not leave inflator unattended.
3. **ALWAYS** use a pressure gauge to check tire pressure. **DO NOT** overinflate.
4. Keep inflator out of reach of children.
5. For use with 12 volt DC power outlets rated 15 amps or higher. Do not use with older 8 amp cigarette lighter receptacles.

## **TECH SPECS**

<b>IDEAL USES</b>	<i>Tires, Mattresses, Rafts, Inflatables</i>
<b>TIRE INFLATION TIME</b>	<i>6 min*</i>
<b>CFM</b>	<i>0.80 (22.6 LPM)</i>
<b>AIR HOSE LENGTH</b>	<i>2' (0.6m)</i>
<b>POWER CORD LENGTH</b>	<i>6'3" (1.9m)</i>
<b>POWER SOURCE 1</b>	<i>12 volt accessory power outlet</i>
<b>POWER SOURCE 2</b>	<i>120 volt wall outlet (recharge only)</i>
<b>POWER SOURCE 3</b>	<i>12 volt rechargeable battery (operate only)</i>
<b>GAUGE</b>	<i>In-line dial gauge</i>

\* (0-35 PSI, Standard Tire: P195/65 R15)

**EASY-GRAB HANDLE**

**BATTERY LEVEL INDICATOR**

- Color-coded for quick reference

**STORAGE COMPARTMENT**

- Keep power cord and air adapters in place

**ON/OFF BUTTON**

**DIAL GAUGE**

- Integrated in air hose
- 0-120 PSI range
- 0-8.2 BAR range



**FLOATY BALL**

**INFLATOR**

- Long-lasting, rechargeable battery
- Air up 4 tires\* on a single charge
- Air-cooled motor

**AIR HOSE**

- Wraps around inflator for convenient storage

**POWER OUTPUT**

- Charge your 12V electronic devices

**POWER SOURCE**

- Plug any extension cord into any 120V power source
- Use to recharge only

**POWER SOURCE**

- Plugs into 12V power outlet
- Use to operate and recharge



\* (0-35 PSI, Standard Tire: P195/65 R15)


## **INFLATE TIRES**



1. Screw air hose connector onto tire's valve stem.
2. Plug power cord into 12 volt accessory power outlet, or leave unplugged to run from battery.
3. Press on/off button to turn on inflator. Inflate tire to manufacturer's recommended air pressure.\* When proper pressure is reached, press on/off button again to turn off inflator. Unplug power cord (if necessary) and remove air hose connector.

**\*NOTE:** Correct tire pressure can be found in vehicle owner's manual or on driver's side door jamb. If tire is completely deflated, it is possible that the tire could separate from the rim allowing air to leak out when trying to inflate. In the event this occurs, it may be necessary to jack up the tire prior to inflation.

## RECHARGING THE BATTERY

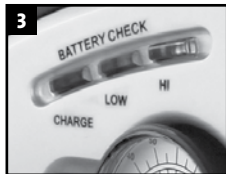

Your unit has been initially charged. However, it is always good to top it off prior to use for full performance.

1. It takes 16 hours to fully charge the battery using a wall outlet (AC outlet).
2. It takes 6 hours to fully charge the battery using a car power outlet (DC outlet).
3. The unit should be charged every 4 months to keep the battery at peak performance.

**BATTERY DISPOSAL NOTE:** This product contains a rechargeable sealed lead-acid battery. The environmental laws in some counties require retailers to accept returns of rechargeable batteries for proper disposal. Check the county laws before disposing this product.

## **TROUBLESHOOTING**

### **Inflator does not turn on:**

1. The fuse, located in the plug adapter, may have blown. Unscrew the tip of the plug adapter, remove fuse and inspect. If necessary, replace fuse with one of the same size and amperage.
2. Check vehicle's power outlet fuse; it should be a minimum of 15 amps.
3. Check receptacle and plug terminals for dirt (particularly tobacco). Use a non-conductive probe (not fingers or metal) to dislodge and remove debris.
4. Push the power plug firmly into the receptacle and twist it back and forth.



### **Inflator runs but does not inflate:**

1. Be sure the air hose connector is tightly screwed onto the valve stem.
2. Check tire for leaks. Check hose for breaks and leaks at fittings.

### **Inflator runs slowly:**

1. The inflator may have overheated from excessive use. Shut it off and allow it to cool for 25 minutes.
2. The battery charge may be low. Recharge the battery before operating.

Limited Warranty: Manufacturer's liability is limited to product replacement or cash refund with proof of purchase.

QUESTIONS OR COMMENTS: Call +1-805-489-0490 or visit [www.slime.com](http://www.slime.com)

Accessories Marketing, Inc, a division of Illinois Tool Works, Inc. 125 Venture Drive, Suite 210, San Luis Obispo, CA 93401 USA  
Slime® is a trademark of Illinois Tool Works, Inc., registered in the U.S. and other countries.