## INSTALLATION INSTRUCTIONS

- 1. We recommend a chainsaw having a factory 16" bar. Select a chain one size up from your present chainsaw (eg. a 16" bar length will require a chain to fit an 18" bar).
- 2. Ensure the correct drive sprocket is installed on the Log Wizard by wrapping the chain around the sprocket to check for the proper engagement. (A 3/8" and .325 sprocket are supplied. By clamping the cutting head carefully in a vice and removing the drive stud the alternate sprocket can be installed. Be careful to center the lock washer when re-assembling.)
- 3. Install the new chain and retract the bar with the chain tension adjuster to its minimum length. Make sure the nose sprocket still meshes.
- 4. Locate the Log Wizard on the bar as shown in diagram [A] while placing the chain on the drive sprocket. With a small c-clamp or other clamping device, clamp the Log Wizard in place.
- 5. Drill two mounting holes 5/16" diameter through the chainsaw bar using the Log Wizard as a template. Do not drill the mounting holes so as to interfere with the rotation of the nose wheel. Install using the hardware supplied. CAUTION: Do not overtighten the mounting bolts. DO NOT CRUSH the bolting area of the Log Wizard.
- Adjust the chain tension and check the operation of the assembly by carefully turning the cutting head on the Log Wizard. It should move freely.
- 7. Ensure that the bolts securing the blades are tight before operation and after approximately ten minutes of operation.
- 8. The blades are factory set at 1/32" depth, any attempt to set the blades out further may cause shavings to become lodged under the blades and may cause chain stretch and excessive wear on the chainsaw.
- 9. THINK SAFETY Do Not attempt to rout straight in. All safety rules, regulations and personal protective equipment recommended while operating a chainsaw also apply when using the Log Wizard. (Eye and hearing protection, gloves, leg and foot protection must be worn while the Log Wizard is in operation.)




## INSTALLATION AND PARTS MANUAL

Manufactured and Marketed by

## GOLDEC INTERNATIONAL EQUIPMENT INC.

SPRUCE GROVE, ALBERTA, CANADA 1-877-640-2240

www.logwizard.com

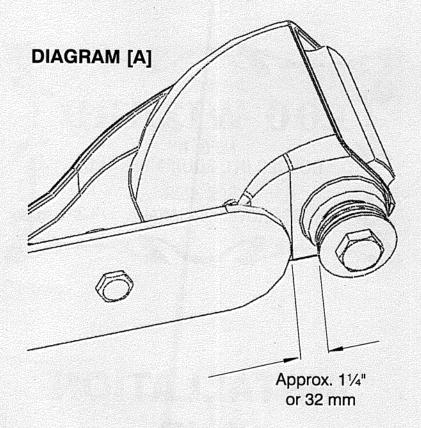

|    | PARTS LIST |                      |      |
|----|------------|----------------------|------|
|    | PART #     | DESCRIPTION          | QTY. |
| 1  | Log-0400P  | FRAME                | 1    |
| 2  | Log-0401   | DRUM                 |      |
| 3  | Log-4030   | BLADE                | 2    |
| 4  | Log-0403   | 3/8" .325 SPROCKET   | 1    |
| 5  | Log-0408   | SPLINE ADAPTOR       | 1    |
| 6  | Log-0409   | 1/2" LOCK WASHER     | 1    |
| 7  | Log-0411   | 1/2" SAE FLAT WASHER |      |
| 8  | Log-0406   | SHORT STUD           |      |
| 9  | Log-0407   | 6201-2RS BEARING     | 2    |
| 10 | Log-0410   | 1/4" BOLT            | 6    |
| 11 | Log-0412   | 5/16" BOLT           | 2    |
| 12 | Log-0416   | 5/16" FLAT WASHER    | 2    |
| 13 | Log-0414   | 5/16" LOCK WASHER    | 2    |
| 14 | Log-0415   | 5/16" NUT            | 2    |
| 15 | Log-4000   | LOG WIZARD COMPLETE  |      |

## DIAGRAM [B]

