



Dual Rotating Rear Tine Tiller


Operator's Manual

MODEL NUMBER
YT4565

SERIAL NUMBER

PURCHASE DATE

Both model number and serial number may be found on the main label (see **Page 2, Figure 1**). You should record both of them in a safe place for future use.

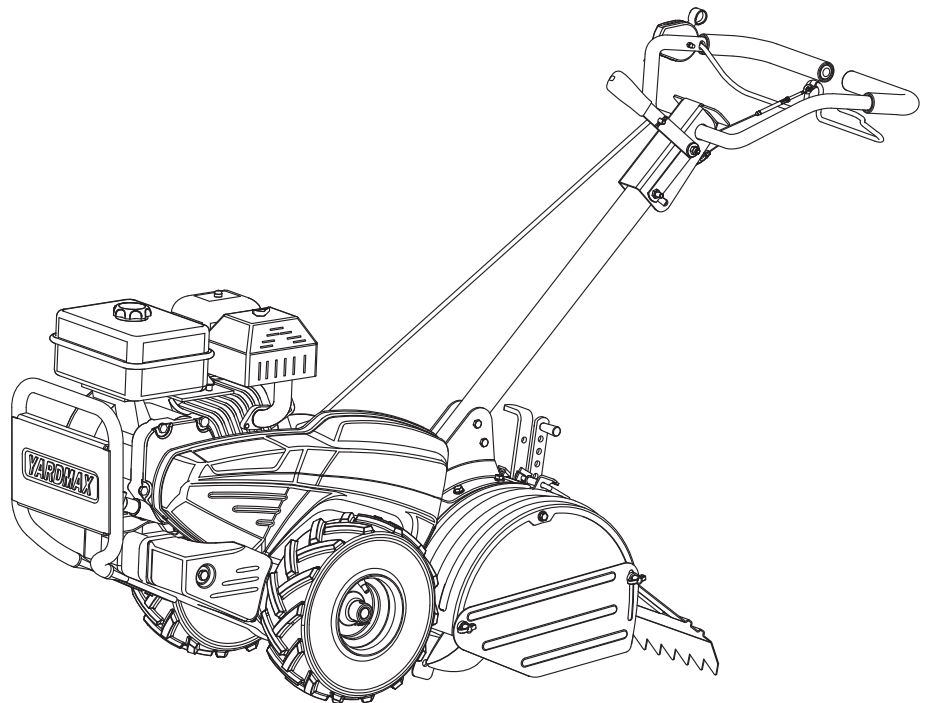

FOR YOUR SAFETY

READ AND UNDERSTAND THE ENTIRE MANUAL BEFORE OPERATING MACHINE

Your new YARDMAX™ dual rotating rear tine tiller offers quality construction, and is easy and safe to operate. With proper use and care, it is designed to give you many years of dependable service.

Take on any job with ease, portability, and convenience while experiencing the durability of your new rear tine tiller!

Discover the YARDMAX Advantage

At YARDMAX, we understand that land ownership definitely has its privileges, but it also comes with a great deal of responsibility. When duty calls and you need to respond, will you have what it takes to tame the great outdoors?

When looking for outdoor power equipment (OPE) to get the job done right, at the right price, YARDMAX delivers the perfect combination of performance and practicality. YARDMAX has a solution that’s right for you.

MAX Performance, MAX Value, MAX Support – that’s YARDMAX

- ✓ Backed by decades of proven manufacturing expertise
- ✓ Enhanced design features come standard
- ✓ Engineered for the best user experience
- ✓ Quality metal parts are used instead of plastic
- ✓ A robust warranty supports all products
- ✓ Budget-friendly prices make it practical



Up for the job? YARDMAX is.

TABLE OF CONTENTS

| | |
|-------------------------|---|
| Introduction | 1 |
| Specifications | 3 |
| Symbols | 4 |
| Safety | 5 |
| Unpacking the Container | 6 |
| Contents Supplied | 7 |
| Assembly | 8 |

| | |
|-------------------|----|
| Know Your Machine | 10 |
| Operation | 12 |
| Maintenance | 15 |
| Storage | 17 |
| Troubleshooting | 17 |
| Parts Diagram | 19 |
| Parts List | 21 |



Carefully read through this entire operator's manual before using your new unit. Pay attention to all cautions and warnings.

This machine is a gasoline engine driven rear tine tiller. It is a durable, versatile and efficient machine, and it is both easy and safe to operate. With proper use and care, it should give you many years of dependable service.

ENGINE MANUAL

The **Engine Manufacturer** is responsible for all engine-related issues regarding performance, power rating, specifications, warranty and service. Please refer to the **Engine Manufacturer's** owner/operator's manual, packed separately with your unit, for more information.

EMISSION CONTROL SYSTEM

This equipment or its engine may include exhaust and evaporative emission control system components required to meet U.S. Environmental Protection Agency (EPA) and/or California Air Resources Board (CARB) regulations. Tampering with emission controls and components by unauthorized personnel may result in severe fines or penalties. Emission controls and components can only be adjusted by an authorized engine manufacturer's service center.

CALIFORNIA PROPOSITION 65 WARNING

Engine exhaust, some of its constituents, and certain product components contain or emit chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.

ENVIRONMENTAL



Recycle unwanted materials instead of disposing of them as waste. All tools, hoses, and packaging should be taken to the local recycling center and disposed of in an environmentally safe way.

MODEL AND SERIAL NUMBERS

For future reference, record both the model number (see **Figure 1, Illustration a**) and the serial number (see **Figure 1, Illustration b**), as well as date and place of purchase. Have this information available when ordering parts, optional accessories and when making technical or warranty inquiries.

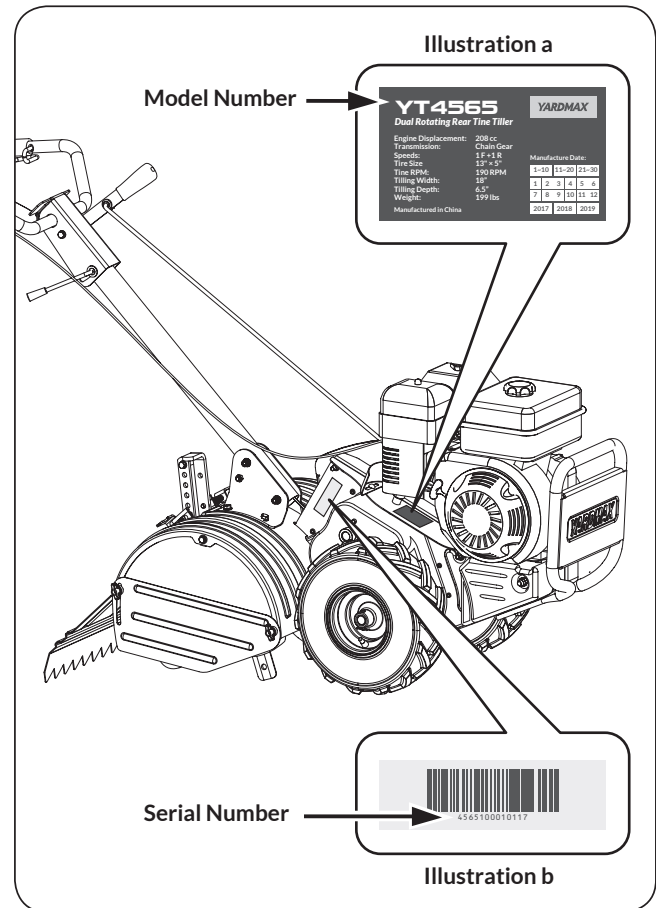



Figure 1

DISCLAIMER

YARDMAX reserves the right to discontinue, change, and improve its products at any time without notice or obligation to the purchaser. The descriptions and specifications contained in this manual were in effect at printing. Equipment described within this manual may be optional. Some illustrations may not be applicable to your unit.

SUPPORT

Have questions about your YARDMAX equipment?
Call us at 844-YARDMAX, email us at
support@yardmax.com, or contact us via your
favorite social media site.

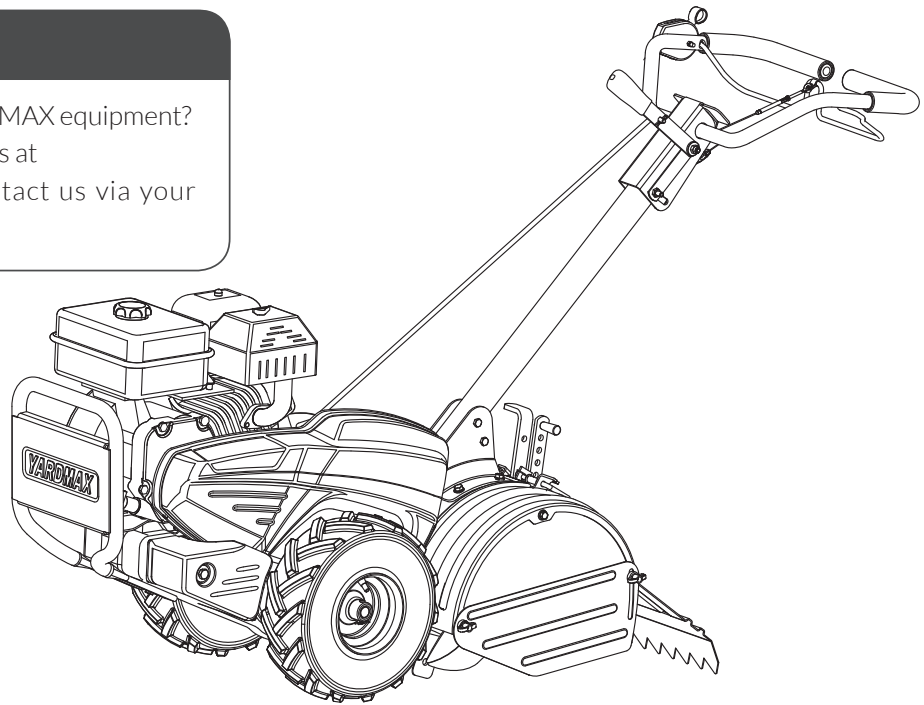

SPECIFICATIONS

| | |
|-------------------|-----------------------|
| Model Number | YT4565 |
| Engine | Briggs & Stratton |
| Displacement | 208 cc |
| Start Type | Recoil |
| Fuel Tank Size | .75 gal |
| Transmission | Chain Gear |
| Speeds | 1 Forward / 1 Reverse |
| Tire Size | 13" x 5" |
| Tines | 10 Tiller, 2 Hammer |
| Tine Direction | Dual Rotation |
| Tine Diameter | 13" |
| Depth Adjustments | 7 Positions |
| Tine RPM | 190 RPM |
| Tilling Width | 18" |
| Tilling Depth | 6.5" |
| Product Weight | 205 lbs |

SYMBOLS

The rating plate on your machine may show symbols. These represent important information about the product or instructions on its use.



Read these instructions carefully.



Wear eye protection.



Wear hearing protection.



Wear protective gloves.



Wear safety footwear.



Do not remove or tamper with the protection and safety devices.



No smoking, sparks, or flames.



Do not touch parts that are hot from operation. Serious burns may result.



Keep your feet clear from all rotating parts.



Be aware, objects may be thrown while in use.



Keep children and bystanders off and away.

SAFETY

GENERAL SAFETY RULES

UNDERSTAND YOUR MACHINE

Read this manual and labels affixed to the machine to understand its limitations and potential hazards.

Be thoroughly familiar with the controls and their proper operation. Know how to stop the machine and disengage the controls quickly.

Make sure to read and understand all the instructions and safety precautions as outlined in the **Engine Manufacturer's** manual packed separately with your unit. Do not attempt to operate the machine until you fully understand how to properly operate and maintain the engine and know how to avoid accidental injuries and/or property damage.

If the unit is to be used by someone other than original purchaser, or is to be loaned, rented, or sold, always provide this manual and any needed safety training before operation. The user can prevent and is responsible for accidents or injuries that may occur to themselves, to other people, or to property.

Do not force the machine beyond its limits. Use the correct machine for your application.

PERSONAL SAFETY

Do not permit children to operate this machine at any time.

Keep children, pets, and other people not using the unit away from the work area. Be alert and shut off the unit if anyone enters work area. Keep children under the watchful care of a responsible adult.

Do not operate the machine while under the influence of drugs, alcohol, or any medication that could affect your ability to use it properly.

Dress properly: Wear long, heavy pants, work boots, and work gloves. Do not wear loose clothing, short pants, or jewelry of any kind. Secure long hair so it is above shoulder level. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts.

Protect eyes, face, and head from objects that may be thrown from the unit. Always wear safety goggles or safety glasses with side shields when operating.

Wear appropriate hearing protection.

Always keep hands and feet away from all moving parts during operation. Moving parts can cut or crush body parts.

Always keep hands and feet away from all pinch points.

Do not touch parts that might be hot from operation. Allow parts to cool before attempting to maintain, adjust, or service.

Stay alert, watch what you are doing, and use common sense when operating the machine.

Do not overreach. Do not operate the machine while barefoot or when wearing sandals or similar lightweight footwear. Wear protective footwear that will protect your feet and improve your footing on slippery surfaces. Keep proper footing and balance at all times. This enables better control of the machine in unexpected situations.

INSPECT YOUR MACHINE

Check your machine before starting it. Keep guards in place and in working order. Make sure all nuts, bolts, etc., are securely tightened.

Never operate the machine when it is in need of repair or is in poor mechanical condition. Replace damaged, missing, or failed parts before using it. Check for fuel leaks. Keep the machine in safe working condition.

Do not use the machine if the engine's switch does not turn off the engine when running. Any gasoline powered machine that can't be controlled with the engine switch is dangerous and must be replaced.

Regularly check to see that keys and adjusting wrenches are removed from the machine area before starting it. A wrench or a key that is left attached to a rotating part of the machine may result in personal injury.

Avoid accidental starting. Be sure the engine's switch is off before transporting the machine or performing any maintenance or service on the unit. Transporting or performing maintenance or service on a machine with its switch on invites accidents.

If the machine should start to vibrate abnormally, stop the engine (motor) and check immediately for the cause. Vibration is generally a warning sign of trouble.

ENGINE SAFETY

This machine is equipped with an internal combustion engine. Do not use on, or near, forest-covered or brush-covered land unless the exhaust system is equipped with a spark arrester meeting applicable local, state, or federal laws.

In the state of California, a spark arrester is required by law. Other states have similar laws. A spark arrester, if used, must be maintained in effective working order by the operator.

Never start or run the engine inside a closed area. The exhaust

fumes are dangerous, containing carbon monoxide, an odorless and deadly gas. Operate this unit only in a well-ventilated outdoor area.

Do not tamper with the engine in an effort to get it to run at higher speeds. The maximum engine speed is preset by the manufacturer and is within safety limits. See engine manual.

Keep a Class B fire extinguisher on hand when operating this machine in dry areas as a precautionary measure.

FUEL SAFETY

Fuel is highly flammable, and its vapors can explode if ignited. Take precautions when using to reduce the chance of serious personal injury.

When refilling or draining the fuel tank, use an approved fuel storage container while in a clean, well-ventilated outdoor area. While adding fuel or operating the unit, do not smoke, and stay away from sparks, open flames, or other sources of ignition near the area of operation. Never fill the fuel tank indoors.

To avoid sparking or arcing, keep grounded conductive objects – such as tools – away from exposed, live electrical parts and connections. These events could ignite fumes or vapors.

Always stop the engine and allow it to cool before filling the fuel tank. Never remove the cap of the fuel tank or add fuel while the engine is running or when the engine is hot. Do not operate the machine with known leaks in the fuel system.

Loosen the fuel tank cap slowly to relieve any pressure in the tank.

Never overfill the fuel tank. Because engine heat can cause fuel to expand, never fill the tank to more than 1/2" below the bottom of the filler neck. This will provide space for fuel expansion.

Replace all fuel tank and container caps securely and wipe up spilled fuel. Never operate the unit without the fuel cap securely in place.

Avoid creating a source of ignition for spilled fuel. If fuel is spilled, do not attempt to start the engine. Instead, move the machine away from the area of spillage and avoid creating any source of ignition until fuel vapors have dissipated.

When fuel is spilled on yourself or your clothes, wash your skin and change clothes immediately.

Store fuel in containers specifically designed and approved for fuel storage.

Store fuel in a cool, well-ventilated area, safely away from sparks, open flames, or other sources of ignition.

Never store fuel – or a machine with fuel in the tank – inside a building where fumes may reach a spark, open flame, or any other source of ignition (such as a water heater, furnace, or clothes dryer). Allow the engine to cool before storing in any enclosure.

SPECIFIC SAFETY RULES

Thoroughly inspect the area to be tilled, and remove all debris and hard or sharp objects such as stones, sticks, glass, wire, bones, etc. Do not operate tiller in soil with large rocks and foreign objects which can damage the machine.

Do not till above underground electric cables, telephone lines, water lines, gas lines, pipes, or hoses. If in doubt, contact your utility or telephone company to locate underground services.

Keep all bystanders, children, and pets at least 75 feet (23m) away. If you are approached, stop the unit immediately.

This unit has a clutch. Squeeze the drive control handle lever and check that it returns automatically to the neutral position. If it does not, have unit adjusted by a qualified repair personnel.

Disengage drive control handle lever before starting the engine.

Start the engine carefully according to instructions and with feet well away from the tines.

The tines remain stationary when the clutch is disengaged. If it does not, have unit adjusted by a qualified repair personnel.

Always operate the machine from behind, never pass or stand in front of the machine when the engine is running.

Always hold the unit with both hands when operating. Keep a firm grip on the grips. Be aware that the machine may unexpectedly bounce upward or jump forward if the tines strike buried obstacles such as large stones, roots, or stumps.

If the unit strikes a foreign object, stop the engine, disconnect the spark plug, thoroughly inspect the machine for any damage, and repair the damage before restarting and operating the machine.

Use extreme caution when in reverse or pulling the machine towards you.

Do not overload the machine capacity by tilling too deep in a single pass or at too fast a rate.

Never operate the tiller at high transport speeds on hard or slippery surfaces.

Be careful when tilling in hard ground. The tines may catch in the ground and propel the tiller forward. If this occurs, let go of the handlebars and do not restrain the machine.

Use caution when tilling near fences, buildings and underground utilities. Rotating tines can cause property damage or personal injury.

Exercise extreme caution when operating on or crossing gravel drives, walks, or roads. Stay alert for hidden hazards or traffic. Do not carry passengers.

Never leave the operating position when the engine is running.


Always stop the engine when tilling is delayed or when walking from one tilling location to another.

Keep unit clean of vegetation and other materials. They may become lodged between the tines. Stop the engine and disconnect the spark plug before unclogging the tines.

To reduce exposure to vibration, limit the hours of operation and take periodic breaks to minimize repetition and rest your hands. Reduce the speed and force in which you do the repetitive movement. Try to fill each day with jobs where operating hand-held power equipment is not required.


UNPACKING THE CONTAINER

Use scissors or a knife to cut all the straps. Lift off the carton and dispose of properly. (See **Figure 1**)

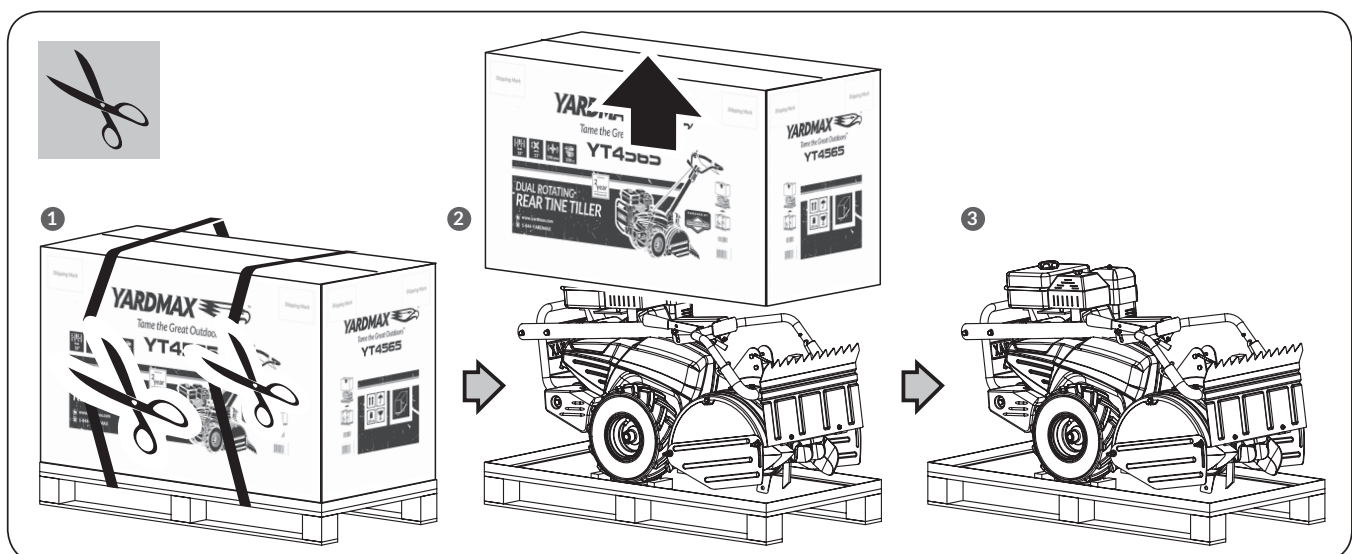




CONTENTS SUPPLIED

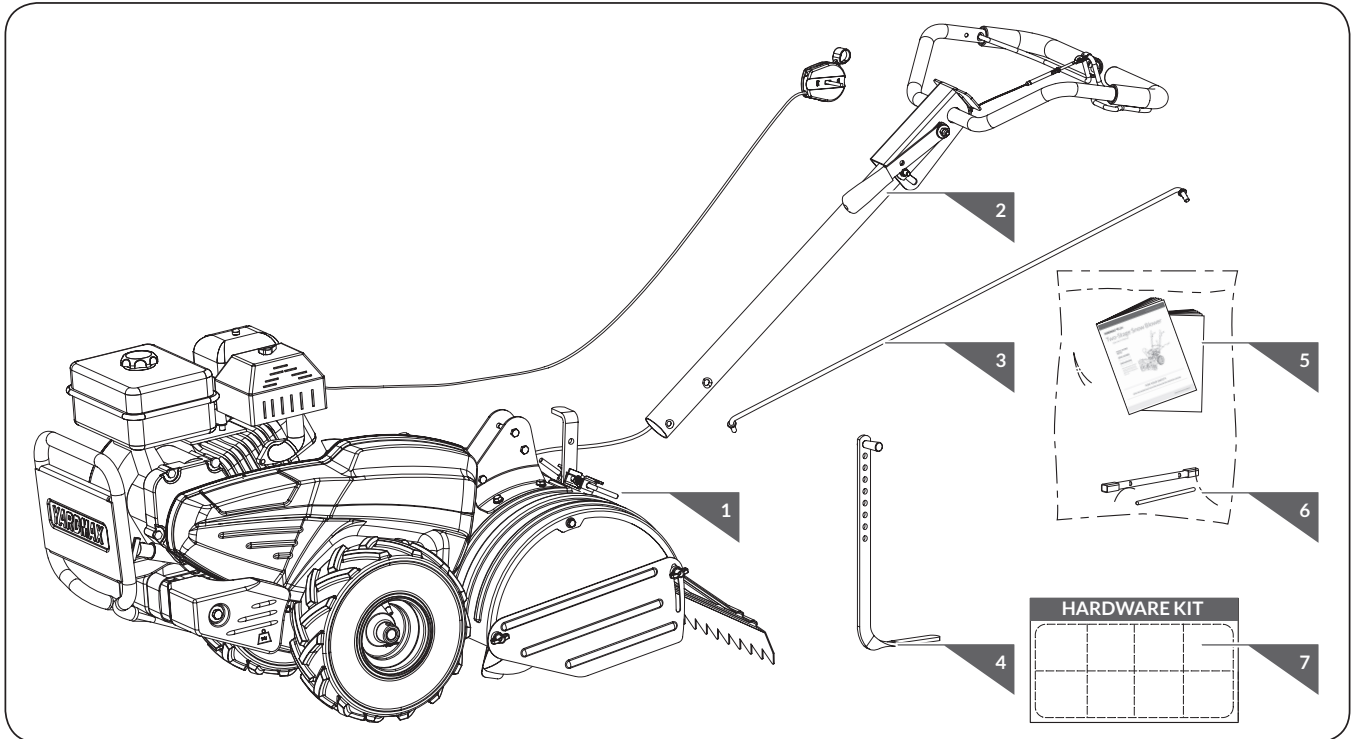Your YARDMAX rear tine tiller comes partially assembled and contains the following:





1. Main Machine
2. Operation Handle
3. Shift Rod
4. Depth Stake
5. Operator's Manual & Engine Manual
6. Tools for Spark Plug Assembly

7. Hardware Kit, Including:

| | | | |
|--|---------|-----|----------|
|  | | × 2 | 1 |
|  | M8 × 25 | × 1 | 2 |
|  | | × 1 | 3 |

TOUCH-UP PAINT
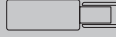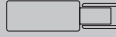
| | | | |
|---|------------|-----|----------|
|  | Orange | × 1 | 4 |
|  | Light Gray | × 1 | |

ASSEMBLY

This rear tine tiller was partially assembled at the factory. To assemble your machine follow the below instructions.

OPERATION HANDLE

The M8×75 bolts and nuts have been fixed in the guide bracket for shipping. First, remove the M8×75 bolts and nuts from the guide bracket.

Then, align the holes in the operation handle shaft with the holes in the guide bracket and re-insert the M8×75 bolts and screw nuts to tighten. (See **Figure 2**)

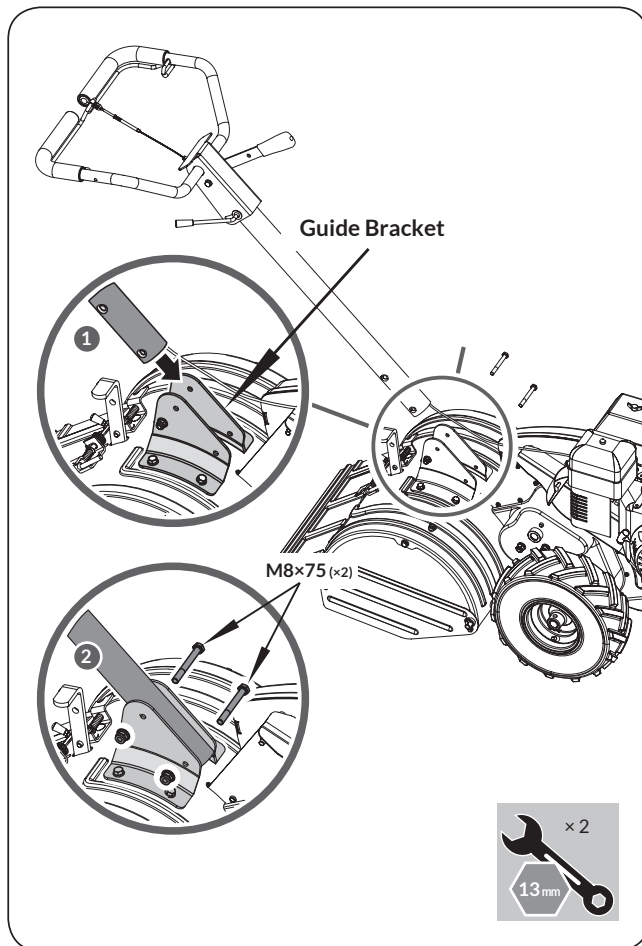


Figure 2

SHIFT LEVER

1. Insert Lower end of shift rod into hole of shift lever indicator. Fasten with bridge clip and washer. (see **Figure 3, Illustration 1**)
2. Insert the upper end of shift rod into hole of shift lever. Fasten with bridge clip and washer. (see **Figure 3, Illustration 2**)


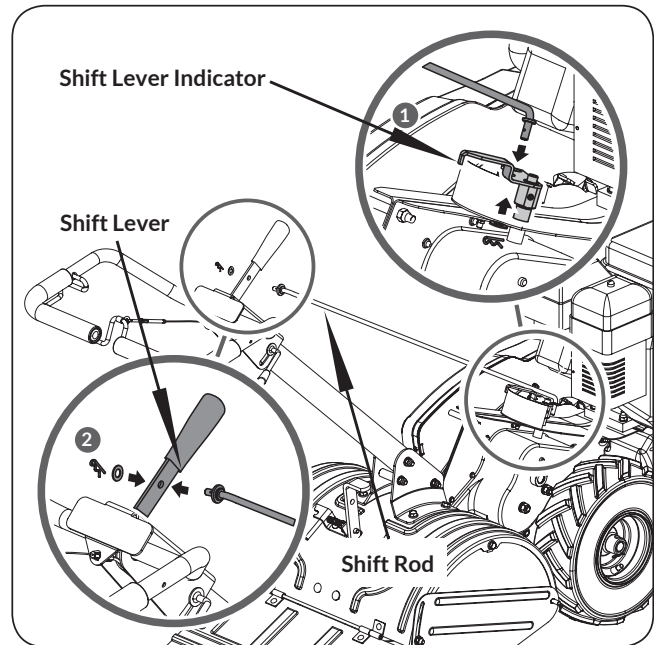


Figure 3

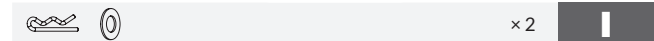

THROTTLE CONTROL

The M6×60 bolt and nut have been fixed in the throttle for shipping. First, remove the M6×60 bolt and nut from the throttle.

Then, align the hole in throttle control and the hole in the upper handle. (See **Figure 4**) Insert the M6×60 bolt and screw the nut to tighten. Pay attention to the degree of tightness, and make sure the throttle lever can be moved normally.

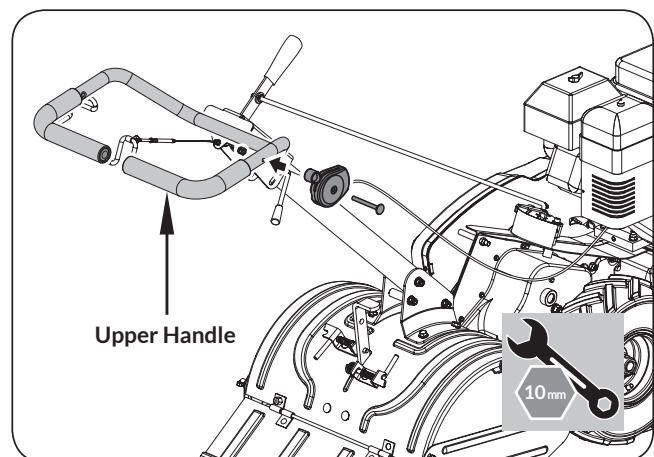


Figure 4

DEPTH STAKE

1. Hold the machine leaning forward. (see **Figure 5a, Illustration 1**)
2. Pull the pin lever to unlock position. (see **Figure 5a, Illustration 2**)
3. Insert the depth stake into the slot in the blade cover. (see **Figure 5a, Illustration 3**)
4. Release the pin into the fourth hole of depth stake. At the same time, switch the pin lever to the lock position. (see **Figure 5a, Illustration 4**)
5. Fasten the M8×25 bolt, washer and plastic screw head into the first hole of depth stake. Hold the plastic screw head in place with pliers while screwing the bolt in. (see **Figure 5a, Illustration 5**)

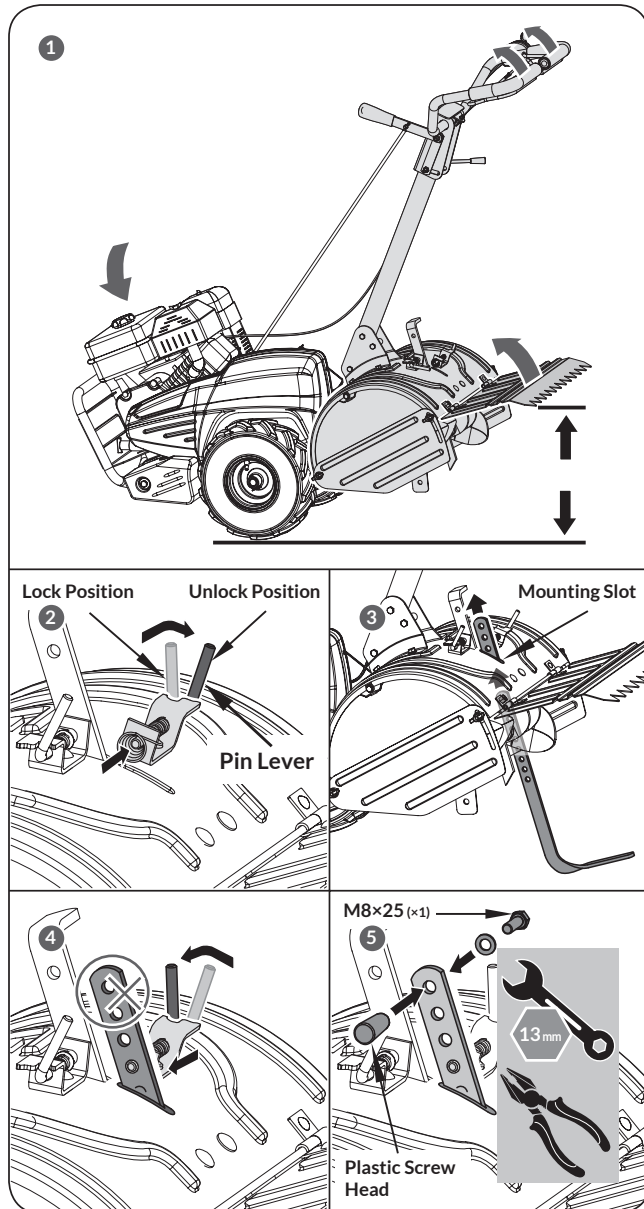


Figure 5a



M8 × 25

× 1

2

6. Adjust the depth stake to the desired depth of tilling. (See **Figure 5b**)

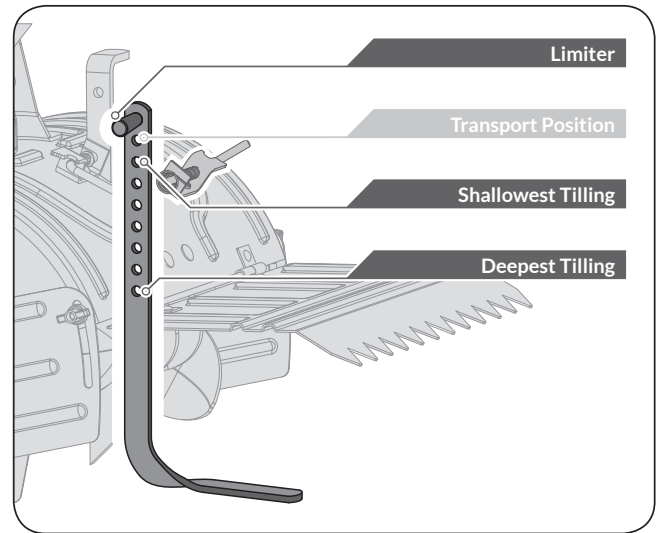


Figure 5b

HEIGHT LIMITER

Screw the spring washer, limiter and rubber cap into the bolt hole in the back of blade cover. Hold the bolt hole in place with 13mm wrench while fastening the limiter bolt in with 10mm wrench. (See **Figure 6**)

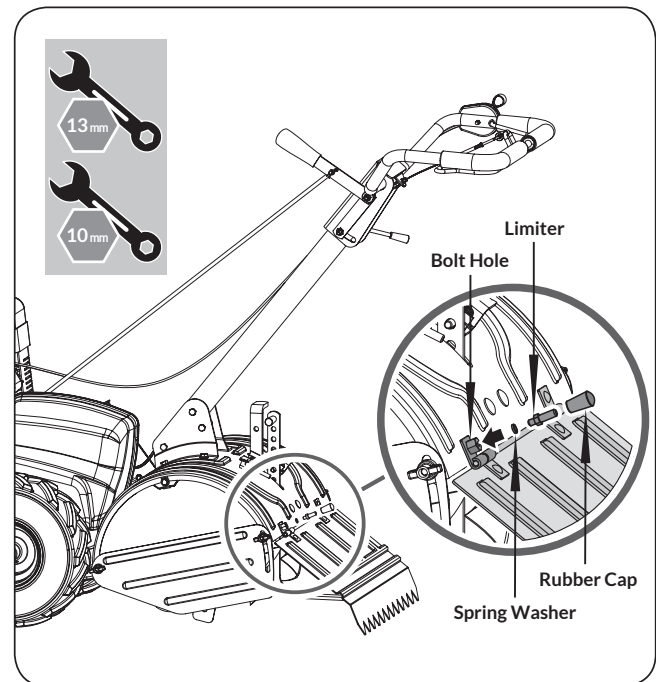


Figure 6




× 1

3

KNOW YOUR MACHINE

FEATURES AND CONTROLS


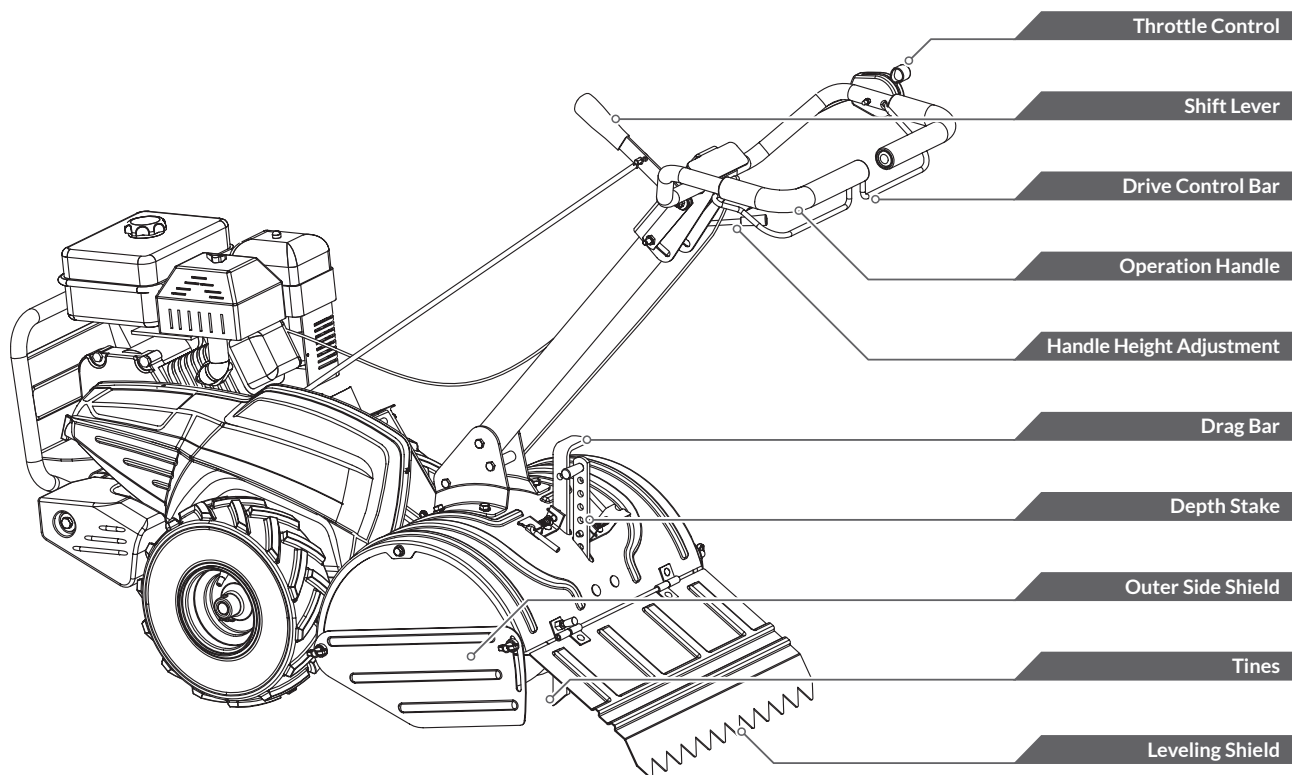


Recoil Starter Handle

Throttle Control


Choke Control


Fuel Shut-Off Valve

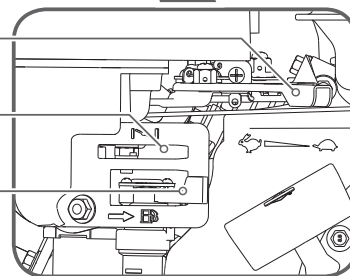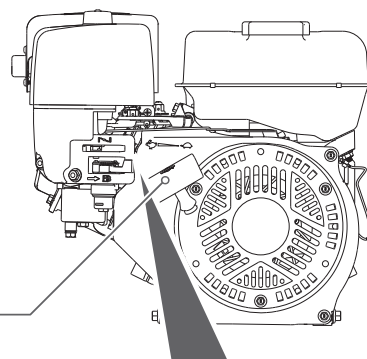

SHIFT LEVER

The shift lever has 5 positions: 3 for transport only (no tine rotation) and 2 for operating the tines in forward (F) or reverse (R): .


» Moving the shift lever to the far left "F" position will cause the tines to rotate clockwise () when you engage the drive control bar. This position is for tilling soft ground or pre-tilled soil.

» Moving the shift lever to the far left "R" position will cause the tines to rotate counter-clockwise () when you engage the drive control bar. This position is for tilling hard ground.

» **FORWARD (F)** - Move the shift lever indicator to "F" position. Engage the drive control bar and tiller will move forward.

» **REVERSE (R)** - Move the shift lever indicator to "R" position. Engage the drive control bar and tiller will move backward.

» **NEUTRAL (N)** - Release the control bar to stop movement, then move the shift lever indicator to "N" position.

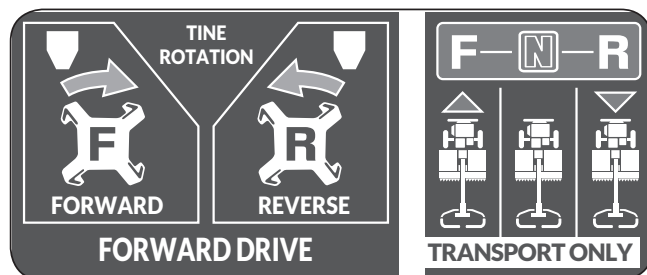

Always release the drive control lever before moving shift lever to another position. Failure to do so will result in damage to the rear tine tiller.

OPERATION HANDLE

» The operation handle is for steering your tiller, and also is where you will find the Drive Control Bar, the Throttle Control, and the Handle Height Adjustment lever.



DRIVE CONTROL BAR

» Used to engage tines and/or traction drive.

HANDLE HEIGHT ADJUSTMENT LEVER

» Unscrew this lever, move the handle up or down. Fasten the lever.

DRAG BAR

» Assists with overall balance while tilling in all conditions.

DEPTH STAKE

» Controls depth at which tiller will dig.

LEVELING SHIELD

» Levels tilled Soil.

OUTER SIDE SHIELD


» Adjustable to protect small plants from being buried.

RECOIL STARTER HANDLE

» The Recoil Starter Handle is used to start the engine.


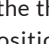
FUEL SHUT-OFF VALVE

The fuel shut - off has two position.

» **CLOSED** () - use this position to service, transport, or store the unit.



» **OPEN** () - use this position to run the unit.

THROTTLE CONTROL

» The throttle control regulates the speed of the engine, and moves between FAST , SLOW , and STOP positions. When the throttle control is moved to the STOP position, the engine will STOP.



CHOKE CONTROL

» The choke control is used to choke the carburetor and assist in starting the engine. The choke control slides between the **CHOKE CLOSED**  and **CHOKE OPEN**  positions.



Never use choke to stop engine.

OPERATION


ADD OIL TO ENGINE



The engine is shipped without oil. Do not start the engine before adding oil. Refer to your engine manual for the proper oil gauge to use.

1. Make sure the rear tine tiller is on a flat, level surface.

2. Remove the oil fill cap/dipstick to add oil.

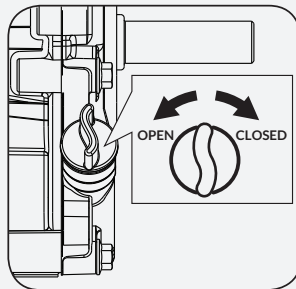

3. Using a funnel, add oil up to the **FULL** mark on the dipstick. (See engine manual for oil capacity, oil recommendation, and location of fill cap.)



DO NOT OVERFILL. Check engine oil level daily and add as needed.

ADD GASOLINE TO ENGINE



Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel. Use extreme care when handling gasoline.



Fill the fuel tank outdoors, never indoors. Gasoline vapors can ignite if they collect inside an enclosure. Explosion can result.

1. The engine must be off and allowed to cool at least two minutes before adding fuel.
2. Remove the fuel filler cap and fill the tank. (See engine manual for fuel capacity, fuel recommendation, and location of fuel cap.)

IMPORTANT: DO NOT OVERFILL!



This equipment and/or its engine may include evaporative emissions control system components, required to meet EPA and/or CARB regulations, that will only function properly when the fuel tank has been filled to the recommended level. Overfilling may cause permanent damage to evaporative emissions control system components. Filling to the recommended level ensures a vapor gap required to allow for fuel expansion. Pay close attention while filling the fuel tank to ensure that the recommended fuel level inside the tank is not exceeded. Use a portable gasoline container with an appropriately sized dispensing spout when filling the tank. Do not use a funnel or other device that obstructs the view of the tank filling process.


3. Reinstall the fuel cap and tighten. Always clean up spilled fuel.

STARTING ENGINE

1. Move the engine switch to the ON position.




1. Open the fuel shut-off valve.

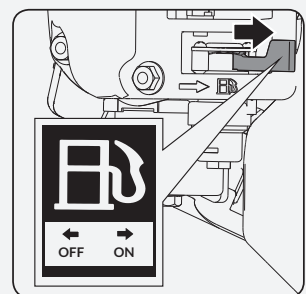


2. Move the choke lever to the CLOSED position.



If the engine is hot, closing the choke is not necessary.

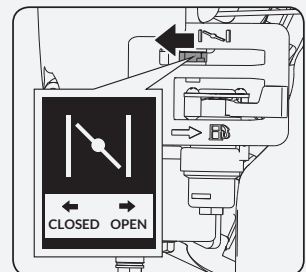

3. Move the throttle control lever slightly forward to about $\frac{1}{4}$ of the way (slightly toward the fast position).

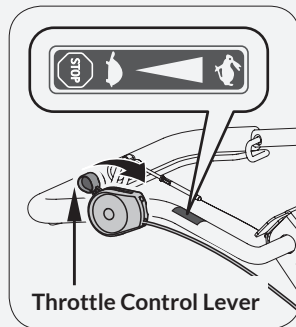



4. Pull the recoil starter until the engine starts. Return the recoil to the home position after each pull. Repeat the steps as needed. Once engine has started, set the throttle to the FAST position before you operate the unit.



Rapid retraction of the starter cord (kickback) will pull your hand and arm toward the engine faster than you can let go. Broken bones, fractures, bruises, or sprains could result.

TINE OPERATION - SHIFT LEVER

- Always release drive control bar before moving shift lever into another position.
- Tine movement is achieved by moving shift lever to either the counter rotating till position () or the forward rotating till position () and engaging drive control bar.

FORWARD - WHEELS ONLY/TINES STOPPED

- Release drive control bar and move shift lever indicator to "F" (forward) position. Engage drive control bar and tiller will move forward.

REVERSE - WHEELS ONLY/TINES STOPPED



Do not stand directly behind tiller.

- Release the drive control bar.
- Move throttle control to "SLOW" position.
- Move shift lever indicator to "R" (reverse) position.
- Hold drive control bar against the handle and tiller will move backward.

If you find the shift lever difficult to move or find it hard to shift gears, try one of the following:

- Briefly engage the drive control bar, and release, or
- Rock the tiller forward and backward using the handles

DEPTH STAKE

The depth stake (see **Figure 7**) can be raised or lowered to allow you more versatile tilling and cultivating, or to more easily transport your tiller.

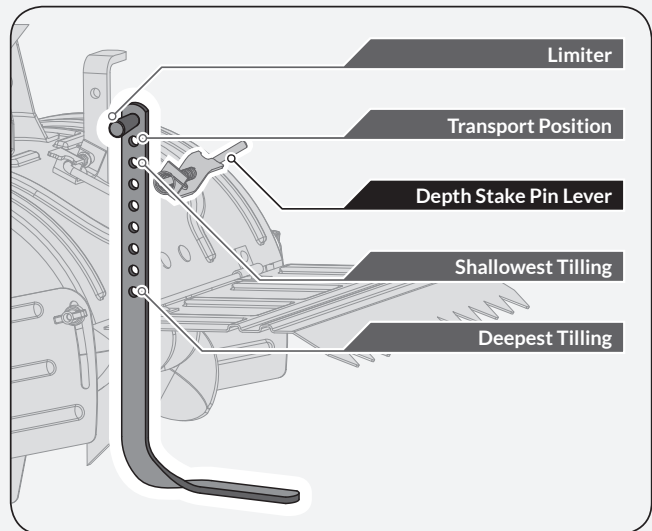




Figure 7

DRAG BAR

The drag stake (see **Figure 8**) should be raised when tilling in the counter rotating () till position. The drag stake should be lowered when tilling in the forward rotating () till position.

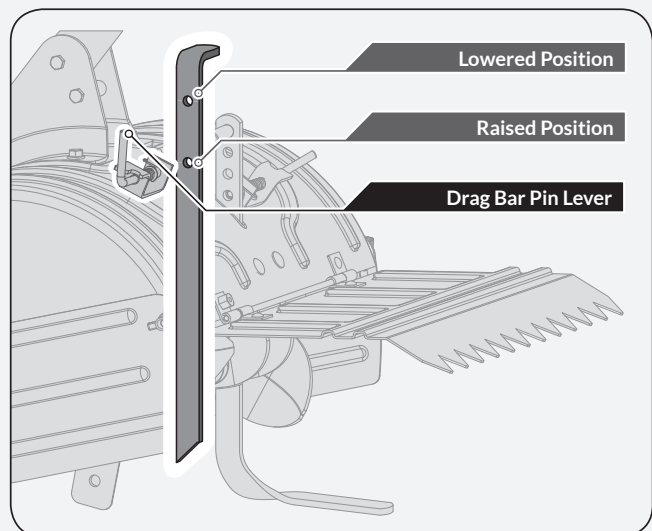


Figure 8

TILLING

Tilling is digging in, turning over and breaking up garden soil and prepare a seedbed for planting. Best tilling depth is 4" (100mm) to 6" (150mm). A tiller will also clear the soil of unwanted vegetation. The decomposition of this vegetation matter enriches the soil.


Avoid tilling soil that is too dry as it will pulverize and produce a dust that will not hold water. Water a few days before tilling. Also, tilling soil that is too wet will produce unsatisfactory clods. Wait a day or two after heavy rain for the soil to dry.

Better growth will be obtained if an area is tilled properly and used soon after tilling to preserve the moisture content.

The type of soil and working conditions will determine the actual setting of the tilling depth. In some soils, the desired depth is reached first pass over garden. In other soils, the desired depth is obtained by going over the garden two or three times. In later case, the depth regulator rod should be lowered before each succeeding pass over the garden. Passes should be made across the length and width of the garden alternately. Do not try to dig too deeply in the first pass. If the machine jumps or bucks, allow the unit to move forward at a lightly faster rate.

If the tiller stops forward motion and tries to dig in one spot, rock the handles from side to side to start it moving forward again.

Rocks which are turned up should be removed from the garden area.

- Move the depth stake pin lever to the unlock position (See **Figure 5a, Illustration 2**). Hold the depth stake limiter to pull the depth stake up for increasing tilling depth. Place depth stake pin in the hole of the depth stake to lock in position at desired depth.
- Place shift lever indicator in counter rotating () till position when tilling hard soil.
- Hold the drive control bar against the handle to start tilling movement. Tines and wheels will both turn.
- Move throttle control to "FAST" position for deep tilling. To cultivate, throttle control can be set at any desired speed, depending on how fast or slow you wish to cultivate.




IMPORTANT: Always release drive control bar before moving shift lever into another position.

TURNING

- Release the drive control bar.
- Move throttle control to "SLOW" position.
- Place shift lever indicator in "F" (forward) position. Tines will not turn.
- Lift handle to raise tines out of ground.
- Swing the handle in the opposite direction you wish to turn, being careful to keep feet and legs away from tines.
- When you have completed your turn-around, release the drive control bar and lower handle. Place shift lever in (till) position and move throttle control to desired speed. To begin tilling, hold drive control bar against the handle.

CULTIVATING

Cultivating is loosening or digging around growing plants to disrupt weeds and aerate soil. Less than 2" (50mm) depth is always desirable.

- Place shift lever indicator in forward rotating () till position when cultivating soft ground or tilling pre-tilled soil.
- Move both the depth stake pin lever and the drag stake pin lever to the unlock position (See **Figure 5a, Illustration 2 & Figure 8**). Hold the depth stake limiter to pull the depth stake

up for increasing tilling depth. Place depth stake pin in the hole of the depth stake to lock in position at desired depth. Lower drag stake to the "Lowered position" (See **Figure 8**) and lock it in position.

- Hold the drive control bar against the handle to start cultivating movement. Tines and wheels will both turn.
- Move the throttle control to the fast position for deep cultivating. To cultivate, throttle control can be set at any desired speed, depending on how fast or slow you wish to cultivate.
- Always lower the drag stake when using the forward rotating tine drive.

OUTER SIDE SHIELDS

To protect small plants from being buried while tilling, the back edges of the outer side shields are slotted so that the shields can be raised for deep tilling and lowered for shallow tilling. (See **Figure 9**) To move the shield to the desired position (both sides), Loosen Nut A and Nut B, move the shield, and retighten the nuts.

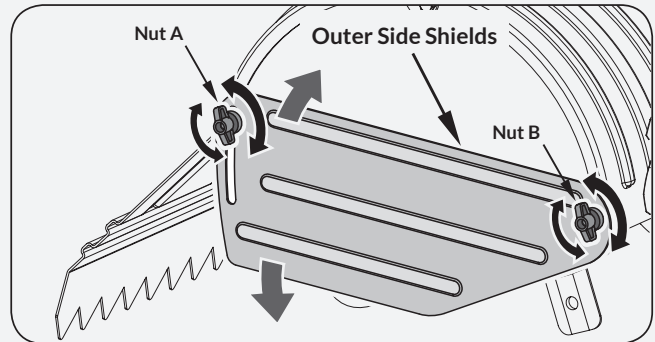


Figure 9

STOPPING THE TINES AND DRIVE

- Release drive control bar to stop movement.
- Move shift lever to "N" (neutral) position.

TRANSPORT AROUND THE YARD



CAUTION: Before lifting or transporting, allow tiller engine and muffler to cool. Disconnect spark plug wire. Drain gasoline from fuel tank.

- Release the depth stake pin. Move the depth stake down to the second top hole for transporting the tiller. Place depth stake pin in hole of depth stake to lock in position. This prevents tines from scuffing the ground.
- Place shift lever indicator in "F" (forward) position for transporting.
- Hold the drive control bar against the handle to start tiller movement. Tines will not turn.
- Move throttle control to desired speed.

IDLE SPEED

Set the throttle control lever to the SLOW position to reduce stress on the engine when work is not being performed. Lowering the engine speed will help extend the life of the engine, as well as conserve fuel and reduce noise level.

STOP ENGINE

To stop the engine in an emergency, simply turn the engine switch to the OFF position. Under normal conditions, use the following procedure:

1. Move the throttle lever to the SLOW (🐢) position.

2. Let the engine idle for one or two minutes.
3. Turn the engine switch to the OFF position.
4. Turn the fuel valve lever to the OFF (🔒) position.



Sudden stopping at a high speed under a heavy load is not recommended. Engine damage may result.



Do not move the choke control to CLOSE to stop the engine. Backfire or engine damage may occur.

MAINTENANCE

Maintaining your YARDMAX rear tine tiller will ensure long life to the machine and its components.

PREVENTIVE MAINTENANCE

1. Turn off the engine and disengage all command levers. The engine must be cool.
2. Keep the engine's throttle lever in its SLOW position and remove the spark plug wire from the spark plug and secure.
3. Inspect the general condition of the rear tine tiller. Check for loose screws, misalignment or binding of moving parts, cracked or broken parts, and any other condition that may affect its safe operation.
4. Use a soft brush, vacuum or compressed air to remove all contaminants from the machine. Then use high quality light oil to lubricate all moving parts.
5. Replace the spark plug wire.



Never use a "pressure washer" to clean your unit. Water can penetrate tight areas of the machine and its transmission case and cause damage to spindles, gears, bearings, or the engine. The use of pressure washers will result in shortened life and reduce serviceability.

GEARBOX

The gearbox was filled with lubricant to the proper level at the factory. Unless there is evidence of leakage or service has been performed on the gearbox, no additional lubricant should be required.

GENERAL LUBRICATION

Lightly lubricate all moving parts of the machine at the end of the season or every 25 operating hours.

ADJUSTING CLUTCH

» If clutch becomes difficult to engage follow these steps to adjust the cable tension.

1. Loosen the jam nut by turning it counter clockwise with 8mm wrench while holding the adjustment nut in place with 6mm wrench. (see **Figure 10, Illustration 1**)
2. Tighten (or loosen) the cable by turning the cable adjustment nut clockwise (or counter clockwise) with a 6mm wrench until you have reached your desired tightness. (see **Figure 10, Illustration 2**)
3. Once you have reached your desired cable tightness, tighten the jam nut by turning it clockwise until it is tight. (see **Figure 10 Illustration 3**)

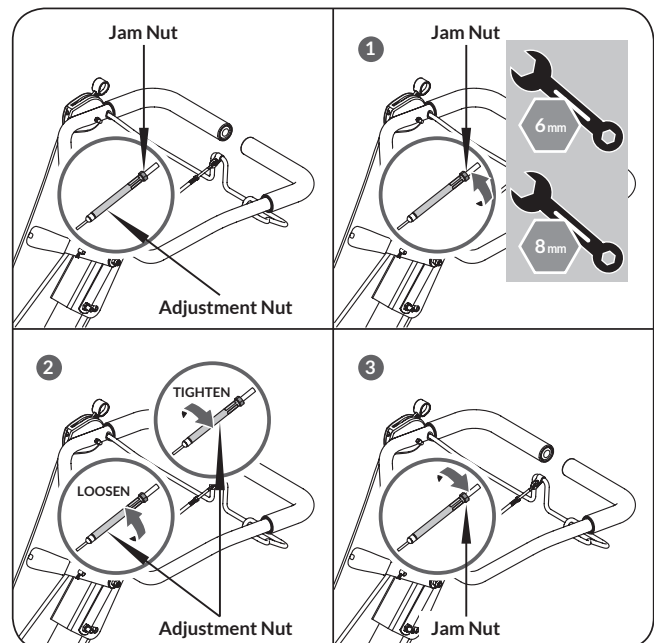


Figure 10

REPLACING THE TINES

1. Remove the outer side shield.
2. Remove the whole blade assembly.

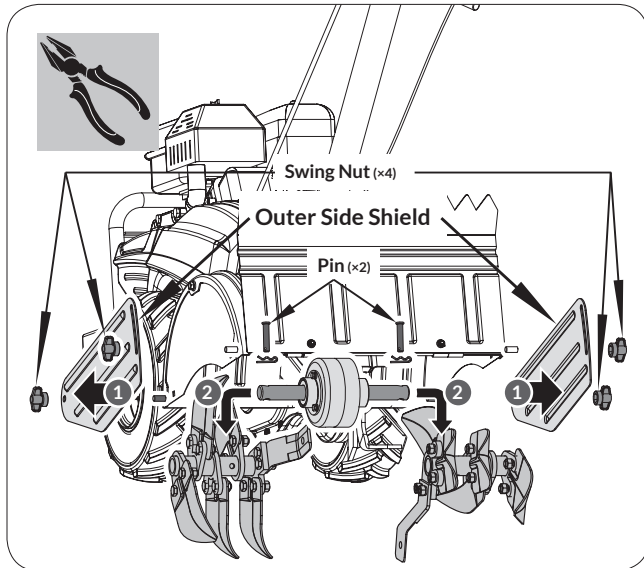


Figure 11a

3. Remove the each tine.

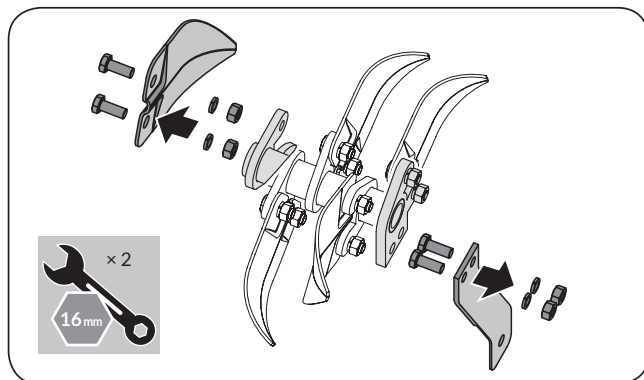


Figure 11b

REPLACING THE BELT

1. Securely prop the machine up so that the wheel on the opposite side of the engine is 1 inch off the work surface. Remove the shear pin and wheel from belt guard side of the machine, opposite side of the engine. (See **Figure 12a**)
2. Remove the 4 bolts and 1 nut on the belt guard to expose the belt assembly. (See **Figure 12b, illustration 2**)
3. Slide the belt roller off its stud below the large transmission pulley. (See **Figure 12b, illustration 3**)
4. Remove the belt from the engine and idler pulley: Rotate the transmission pulley and pull the belt gently through the roller stud while working it free from the pulley. (See **Figure 12b, illustrations 4 & 5**)

5. To install a new belt, repeat the above process in reverse.

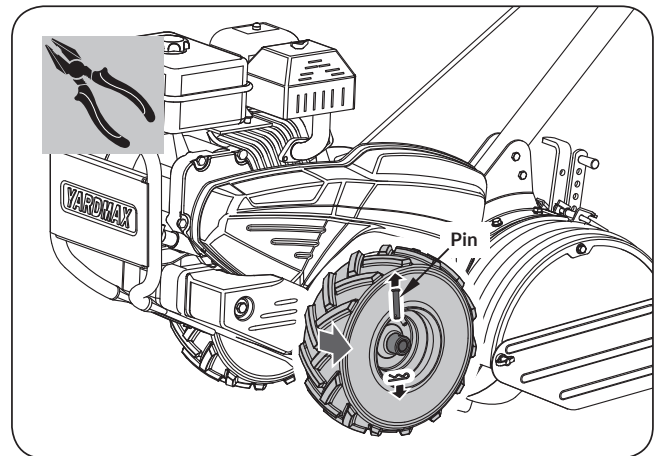


Figure 12a

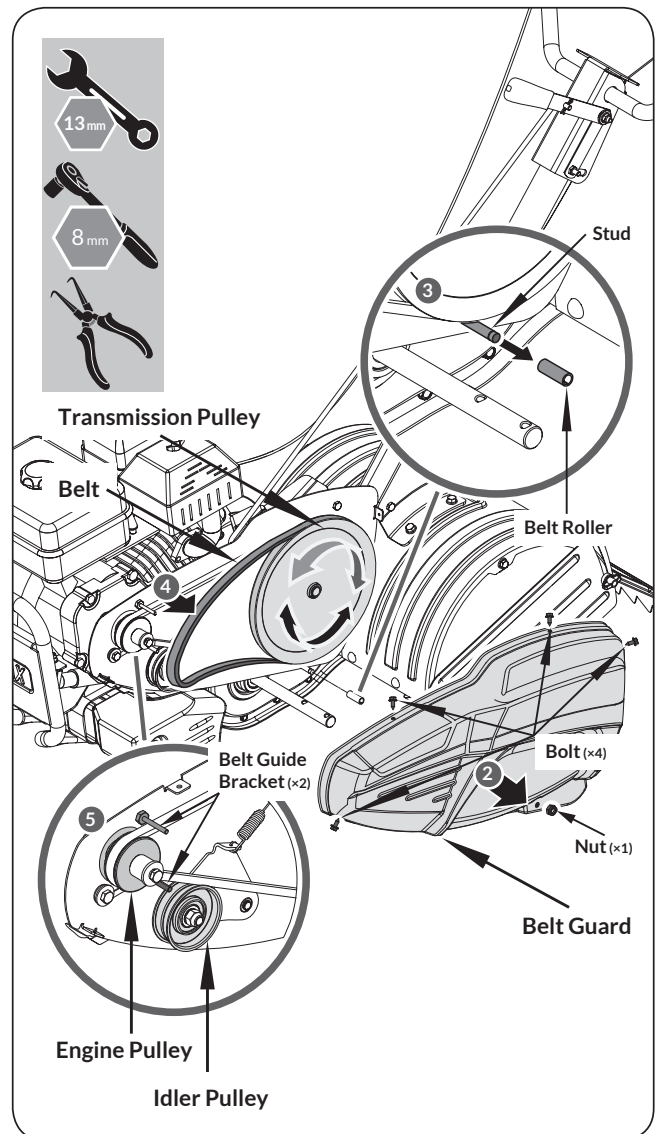


Figure 12b

ENGINE MAINTENANCE

» For information on engine maintenance, refer to the Engine Manual included with your unit. Your engine manual provides detailed information and a maintenance schedule for performing maintenance tasks.

STORAGE

If the rear tine tiller will not be used for a period longer than 30 days, follow the steps below to prepare your unit for storage.

- 1. Drain the fuel tank completely. Stored fuel containing ethanol or MTBE can start to go stale in 30 days. Stale fuel has high gum content and can clog the carburetor and restrict fuel flow.
- 2. Start the engine and run until it stops. This helps prevent gum deposits from forming inside the carburetor and possible engine damage.
- 3. While the engine is still warm, drain the oil from the engine. Refill with fresh oil of the grade recommended in the Engine Manual.
- 4. Use clean cloths to clean off the outside of the machine and to keep the air vents free of obstructions.



Do not use strong detergents or petroleum based cleaners when cleaning plastic parts. Chemicals can damage plastics.

- 5. Inspect for any loose or damaged parts. Repair or replace damaged parts and tighten loose screws, nuts or bolts.
- 6. Store your unit on flat ground in a clean, dry building that has good ventilation.




Do not store the machine with fuel in a non-ventilated area where fuel fumes may reach flame, sparks, pilot lights or any ignition sources.

TROUBLESHOOTING


| Problem | Cause | Remedy |
|-----------------------|---|--|
| Engine fails to start | <ul style="list-style-type: none">1. Spark plug wire is disconnected2. Out of fuel or stale fuel3. Engine and/or Fuel valve is not in ON position4. Choke lever is not in CLOSE position5. Blocked fuel line6. Fouled spark plug7. Engine flooding8. Belt tension lever is engaged | <ul style="list-style-type: none">1. Attach spark plug wire securely to spark plug2. Fill with clean, fresh gasoline3. Engine and Fuel valve must be in ON position4. Choke level must be in CLOSE position for a cold start5. Clean fuel line6. Clean, adjust gap, or replace7. Wait a few minutes to restart, but do not prime8. Disengage the belt tension lever |

| Problem | Cause | Remedy |
|---|--|---|
| Engine runs erratically | <ol style="list-style-type: none"> 1. Spark plug wire is loose 2. Unit running with Choke lever in CLOSE position 3. Blocked fuel line or stale fuel 4. Vent plugged 5. Water or dirt in fuel system 6. Dirty air cleaner 7. Improper carburetor adjustment | <ol style="list-style-type: none"> 1. Connect and tighten spark plug wire 2. Move choke lever to OPEN position 3. Clean fuel line. Fill tank with clean, fresh gasoline 4. Clear vent 5. Drain fuel tank. Refill with fresh fuel 6. Clean or replace air cleaner 7. Refer to engine manual |
| Engine overheats | <ol style="list-style-type: none"> 1. Engine oil level low 2. Dirty air cleaner 3. Air flow restricted 4. Carburetor not adjusted properly | <ol style="list-style-type: none"> 1. Fill crankcase with proper oil 2. Clean air cleaner 3. Remove housing and clean 4. Refer to engine manual |
| Engine will not stop when throttle control is positioned at stop, or engine speed does not increase properly when throttle control is adjusted. | <ol style="list-style-type: none"> 1. Debris interfering with throttle linkage. 2. Improper throttle linkage adjustment | <ol style="list-style-type: none"> 1. Clean dirt and debris. 2. Refer to Engine Manual to check and adjust throttle linkage. |
| Tiller moves forward during starting. | Tine clutch control not in neutral position. | Tine clutch control lever must be released to neutral to start the engine. |
| Tiller is difficult to control when tilling (machine jumps or lurches forward). | <ol style="list-style-type: none"> 1. Improper tilling depth setting. 2. Too high engine speed on hard ground. | <ol style="list-style-type: none"> 1. Raise the tines for shallower tilling by raising the depth regulator rod. 2. Set the throttle lever at lower speed. |
| Tines do not engage. | <ol style="list-style-type: none"> 1. Foreign object lodged in tines. 2. Tine clevis pin(s) missing. 3. Belt worn and/or stretched. 4. Pulley and idler not in correct adjustment. | <ol style="list-style-type: none"> 1. Stop tiller completely, check and discard foreign object. 2. Replace tine clevis pin(s). 3. Replace belt. 4. Contact dealer. |

PARTS DIAGRAM

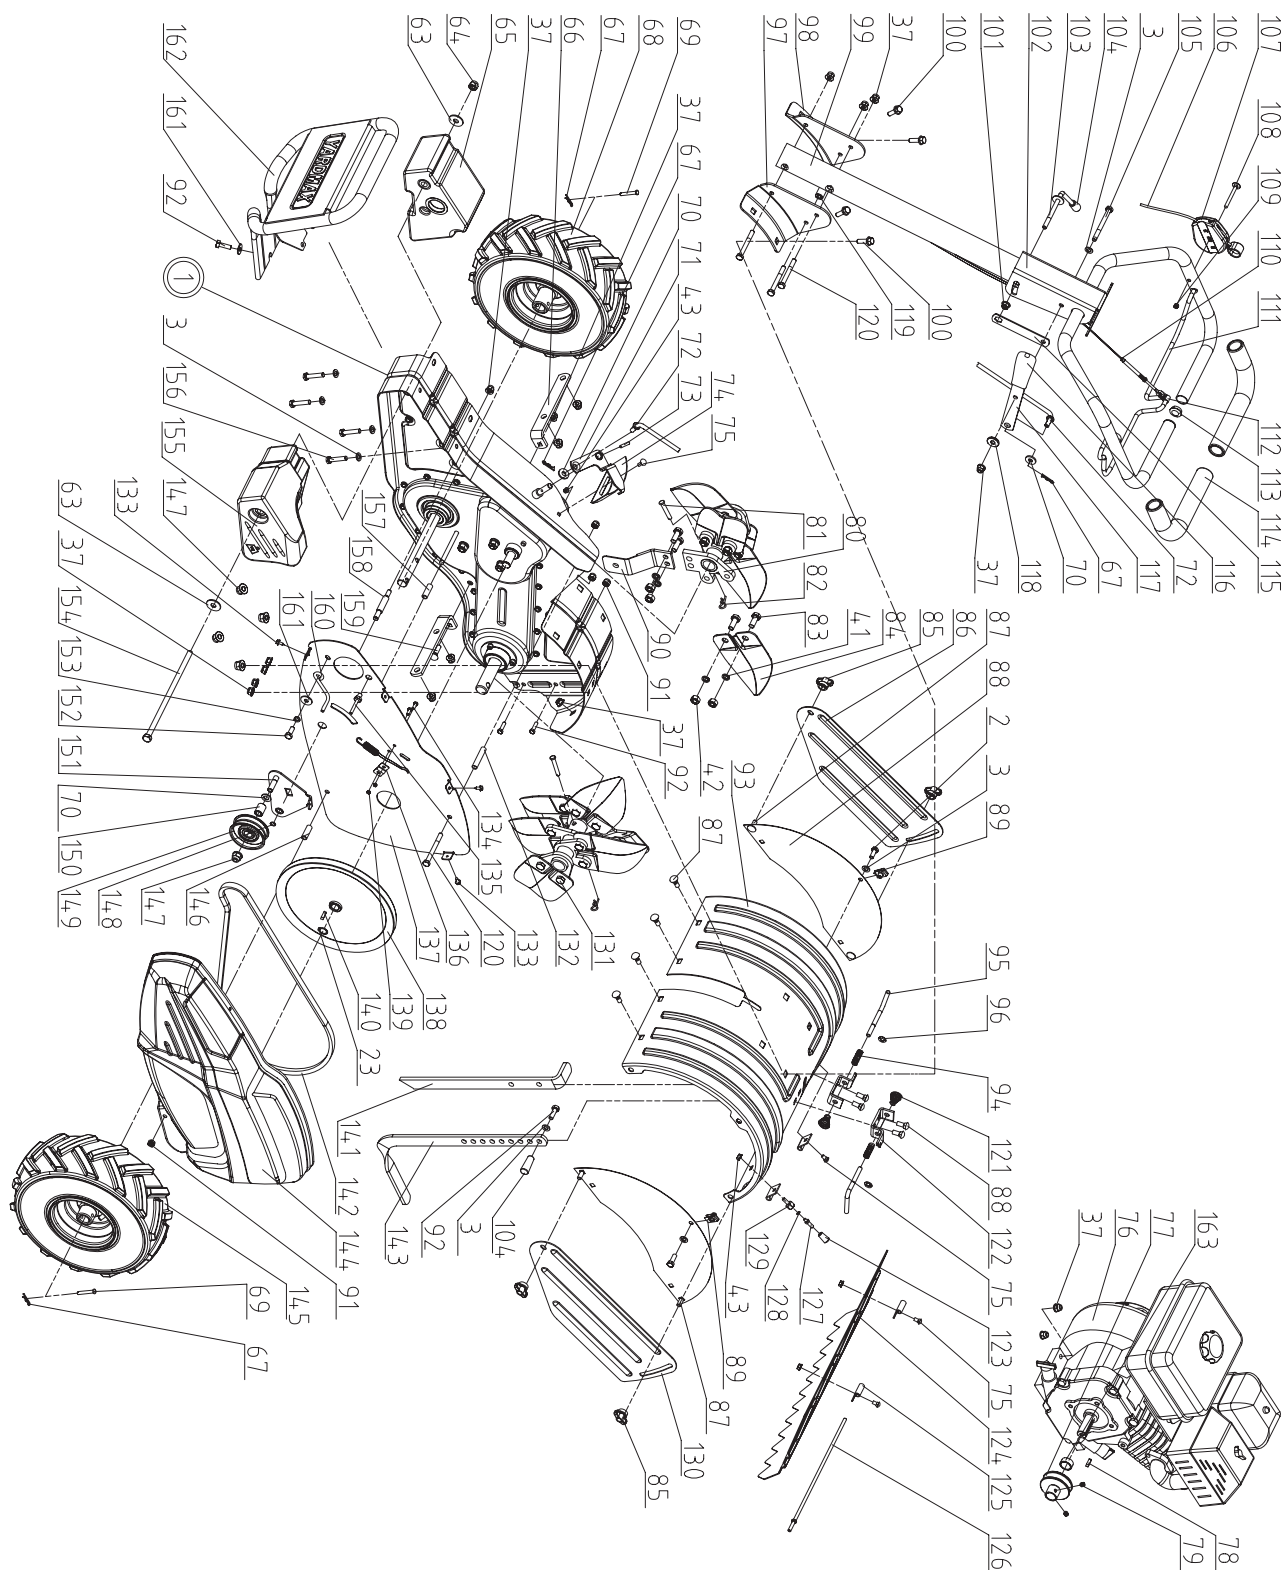

Gearbox

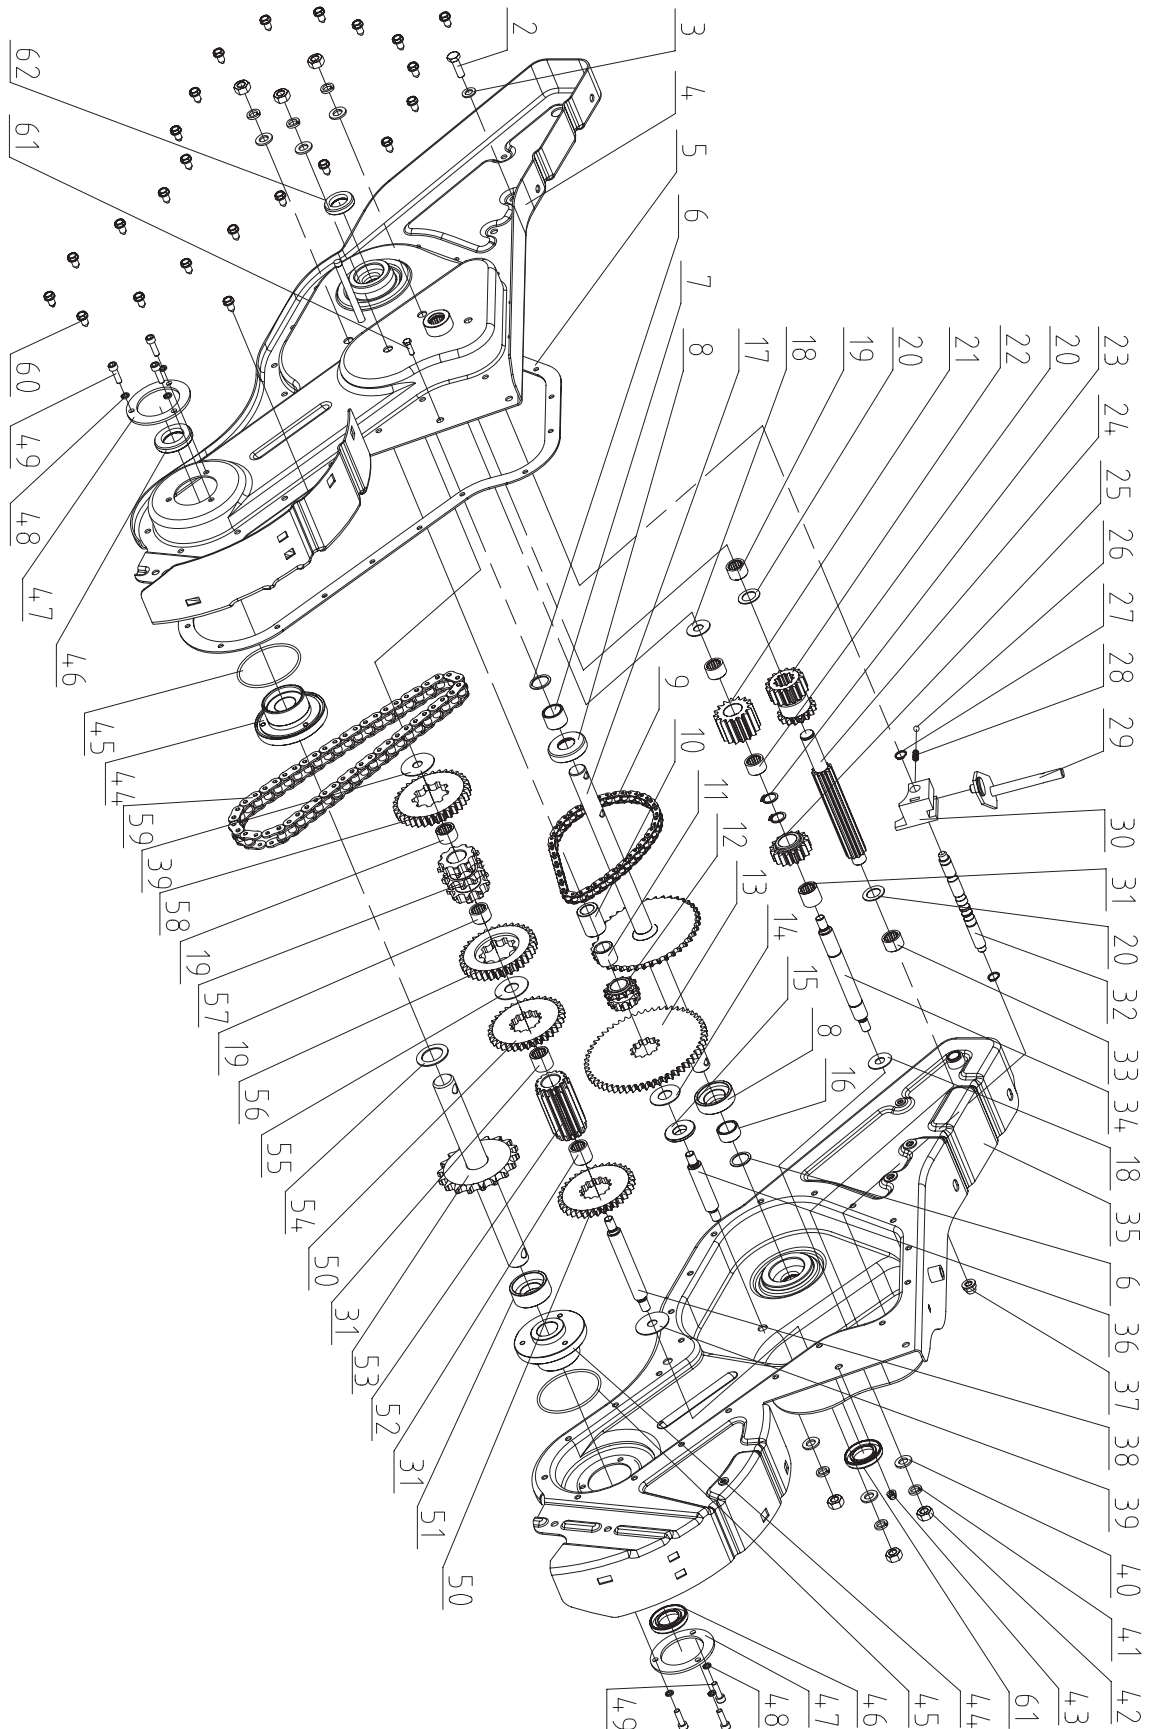

PARTS LIST

| No. | Description | Qty | No. | Description | Qty | No. | Description | Qty |
|-----|----------------------------|-----|-----|------------------------------|-----|-----|--------------------------|-----|
| 1 | Gear Box Assembly | 1 | 38 | Shaft 2 | 1 | 75 | Bolt M6×16 | 4 |
| 2 | Blot M8×20 | 1 | 39 | Wear-Resisting Gasket 5 | 2 | 76 | Engine | 1 |
| 3 | Flat Washer 8 | 12 | 40 | Flat Washer 12 | 30 | 77 | Pulley | 1 |
| 4 | Gear Box Case Weldment (L) | 1 | 41 | Spring Washer 10 | 30 | 78 | Key B5×4.76×40 | 1 |
| 5 | Rubber Gasket | 1 | 42 | Nut M10 | 6 | 79 | Screw M8×12 | 2 |
| 6 | Wear-Resisting Gasket 1 | 2 | 43 | Flange Lock Nut M6 | 6 | 80 | Blade Mount Bracket | 2 |
| 7 | Bushing I | 1 | 44 | Bushing | 2 | 81 | Pin B10×45 | 2 |
| 8 | End Cap | 2 | 45 | O-Ring 73×2.65 | 2 | 82 | R Clip 2.5 | 2 |
| 9 | Chain 06B-50 | 1 | 46 | Oil Seal FB-25×40×8 | 2 | 83 | Bolt M10×30 | 4 |
| 10 | Bushing II | 1 | 47 | Pressure Washer | 2 | 84 | Blade 2 | 10 |
| 11 | Bearing Bushing 16×20×25 | 1 | 48 | Spring Washer 6 | 6 | 85 | Swing Nut | 4 |
| 12 | Drive Chain Z12 | 1 | 49 | Screw M6×16 | 6 | 86 | Adjustable Side Shield 1 | 1 |
| 13 | Gear Z56 | 1 | 50 | Gear 1 | 2 | 87 | Bolt M8×20 | 12 |
| 14 | Wear-Resisting Gasket 7 | 1 | 51 | Spacer | 1 | 88 | Side Tine Shield | 2 |
| 15 | Thrust Washer | 1 | 52 | Gear 2 | 1 | 89 | B Style Sprig Nut M8 | 2 |
| 16 | Wheel Shaft Bushing | 1 | 53 | Tine Shaft | 1 | 90 | Blade 1 | 2 |
| 17 | Drive Shaft Weldment | 1 | 54 | Wear-Resisting Gasket 2 | 1 | 91 | Lock Nut M8 | 3 |
| 18 | Wear-Resisting Gasket 6 | 2 | 55 | Wear-Resisting Gasket 4 | 1 | 92 | Bolt M8×25 | 3 |
| 19 | Bearing HK614 | 5 | 56 | Gear 3 | 1 | 93 | Tine Shield | 1 |
| 20 | Wear-Resisting Gasket 3 | 3 | 57 | Chain | 1 | 94 | Spring | 2 |
| 21 | Gear 4 | 1 | 58 | Gear 3A | 1 | 95 | Pin | 2 |
| 22 | Gear 1 | 1 | 59 | Chain 10A-50 | 1 | 96 | C-Clip | 2 |
| 23 | C-Clip 16 | 3 | 60 | Screw M6×12 | 23 | 97 | Handle Mount Bracket 2 | 1 |
| 24 | Spline Shaft 1 | 1 | 61 | Bolt M6×16 | 1 | 98 | Handle Mount Bracket 1 | 1 |
| 25 | Gear 5 | 1 | 62 | Oil Seal FB-20×35×8 | 2 | 99 | Handle Support Frame | 1 |
| 26 | Steel Ball 1/4" (6.35mm) | 1 | 63 | Engine Shaft Washer | 2 | 100 | Bolt M10×25 | 4 |
| 27 | C-Clip 12 | 2 | 64 | Lock Nut M10 | 1 | 101 | Nut M8 | 1 |
| 28 | Spring | 1 | 65 | Counterweight 2 | 1 | 102 | Uppder Handle | 1 |
| 29 | Poking Fork Weldment | 1 | 66 | Gear Cover Mount Bracket | 2 | 103 | Lock Lever | 1 |
| 30 | Shift Fork | 1 | 67 | Clip 1.8 | 4 | 104 | Lever Knob | 2 |
| 31 | Bearing HK1620 | 3 | 68 | Right Wheel Assy | 1 | 105 | Bolt M8×85 | 1 |
| 32 | Shift Fork Guide Pin | 1 | 69 | Pin Shaft B8×45 | 2 | 106 | Throttle Cable | 1 |
| 33 | Bearing BK1614 | 1 | 70 | Flat Washer 10 | 3 | 107 | Throttle Lever Assy. | 1 |
| 34 | Shaft 3 | 1 | 71 | Direction Indicator Weldment | 1 | 108 | Bolt M6×60 | 1 |
| 35 | Gear Box Right Cover | 1 | 72 | Shift Rod | 1 | 109 | Lock Nut M6 | 1 |
| 36 | Shaft 4 | 1 | 73 | Spring Pin 5×30 | 1 | 110 | Tensioner Pulley Cable | 1 |
| 37 | Flange Lock Nut M8 | 23 | 74 | Gear Shift Markable Plate | 1 | 111 | Pulley Cable Drag Rod | 1 |

| No. | Description | Qty |
|-----|------------------------|-----|
| 112 | Bending Joint | 1 |
| 113 | End Cap 25 | 2 |
| 114 | Upper Handle Sleeve | 2 |
| 115 | Brake Connecting Plate | 1 |
| 116 | Shift Lever Knob | 1 |
| 117 | Shift Lever | 1 |
| 118 | Bushing | 1 |
| 119 | Support Sleeve | 1 |
| 120 | Bolt M8×75 | 4 |
| 121 | Spring | 2 |
| 122 | Pin Bracket | 2 |
| 123 | Rubber Cap | 1 |
| 124 | Serrated Rear Shield | 1 |
| 125 | Hinge | 4 |
| 126 | Hinge Shaft | 1 |
| 127 | Limiter Pin | 1 |
| 128 | Spring Washer 5 | 1 |
| 129 | Bolt | 1 |

| No. | Description | Qty |
|-----|--------------------------|-----|
| 130 | Adjustable Side Shield 2 | 1 |
| 131 | Bolt M10×25 | 16 |
| 132 | Spacer 3 | 1 |
| 133 | Screw M5×10 | 4 |
| 134 | Bolt M5×12 | 2 |
| 135 | Long Bolt | 1 |
| 136 | Cabel Fixation Clamp | 1 |
| 137 | Belt Cover Mount Bracket | 1 |
| 138 | Belt Pulley | 1 |
| 139 | Lock Nut M5 | 2 |
| 140 | Key A5×20 | 1 |
| 141 | Depth Stake 1 | 1 |
| 142 | Belt 4LXP1308 | 1 |
| 143 | Depth Stake 2 | 1 |
| 144 | Belt Cover | 1 |
| 145 | Left Wheel Assy | 1 |
| 146 | Spacer 2 | 1 |
| 147 | Flange Lock Nut 10 | 5 |

| No. | Description | Qty |
|-----|---------------------------|-----|
| 148 | C-Clip 9 | 1 |
| 149 | Tensioner Pulley | 1 |
| 150 | Bushing | 1 |
| 151 | Wheel Bracket Weldmen | 1 |
| 152 | Bolt 5/16 - 24 UNF*25 | 1 |
| 153 | Spring Washer 8 | 1 |
| 154 | Bolt M10×290 | 1 |
| 155 | Counterweight 1 | 1 |
| 156 | Bolt M8×40 | 4 |
| 157 | Spacer 1 | 1 |
| 158 | Tensioner Pulley Shaft | 1 |
| 159 | Bolt M8×30 | 1 |
| 160 | Belt Block Rod | 1 |
| 161 | Big Flat Washer 8 | 2 |
| 162 | Engine Protector Weldment | 1 |
| 163 | Spacer 4 | 1 |

Tame the Great Outdoors™

