

Instruction Sheet

Kit Number: 71504100

ZOOM HEADLIGHT KIT



WARNING: FAILURE TO FOLLOW INSTRUCTIONS could result in personal injury and/or damage to unit.


Read, understand, and follow all safety practices in Owner/Operator Manual before beginning.

PACKAGE CONTENTS

Check the contents of your kit for the parts listed below. Also see Figure 1.

Item	Description	Qty	Ariens P/N
1	Light	2	04815800
2	Light Bracket Weldment*	2	04816000
3	Light Harness	1	01587900
4	Harness Bracket	1	01589951
5	10-24 Locking Nyloc Nut with Insert	4	06536000
6	10-24 x 1/2" Machine Screw	4	06116700
7	5/16-18 x 3/4" Round Head Square Neck Bolt	2	06226700
8	5/16"-18 Black Zinc Top Locking Flange Nut	2	06544400
9	5/16 x 5/64" Lock Washer	2	06308600
10	5/16-18 x 1/2" Button Head Cap Screw	2	07008100

* Assembled to (item 1)

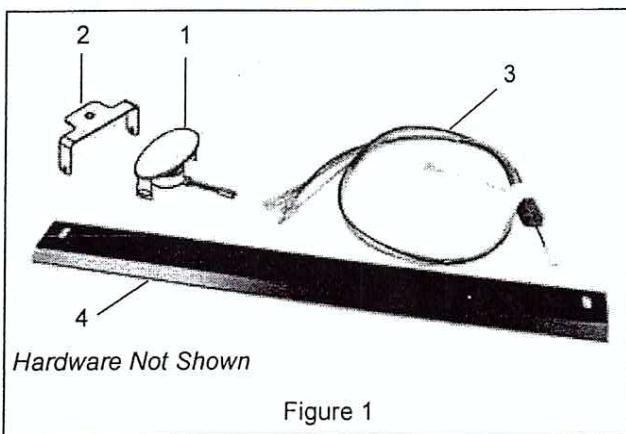


REQUIRED TOOLS

- 3/16" Hex Wrench
- 1/2", 7/16" Box or Socket Wrench

INSTALLATION

1. Stop engine; wait for all moving parts to stop and hot parts to cool. Remove key and disconnect spark plug wire(s).
2. Disconnect and remove battery. See Owner/Operator manual for instructions.
3. Connect light harness (item 3) to wiring harness on unit. Connect blue wire to blue wire, black wire to black wire. See Figure 2.

NOTE: Some headlight assemblies may have white wires instead of blue.

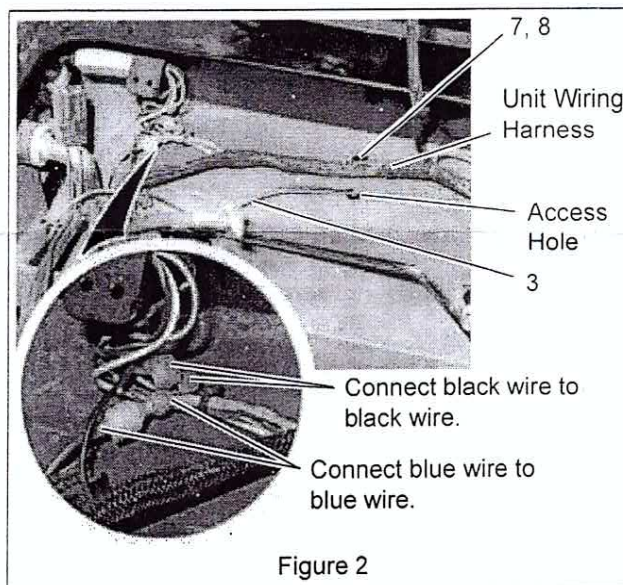

4. Route light harness through access hole and then underneath unit. See Figures 2 and 3.

NOTE: Set deck to lowest cutting position to make routing the wire easier.

5. Cover light harness with harness bracket (item 4). Attach harness bracket to underside of unit with 5/16-18 x 3/4" round head square neck bolt (item 7) and 5/16" black zinc top locking flange nut (item 8). See Figures 2 and 3.