


NOTE: TerraGrip Traction Belts should be installed as tightly as possible. This will extend the life of the belts and increase traction. Letting air out of the tire prior to installation, resulting in a reduced tire size, enables the TerraGrips to be installed tighter. After installation, add air and check the Traction Belts for tightness pulling them away from the tire. This should be difficult if the TerraGrips are installed correctly. Make sure tires are re-inflated to proper specifications

Park your vehicle on level surface and ensure parking brake is engaged

Installation:

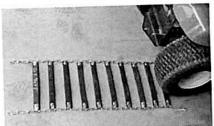

1) Lay the tire chains out on the floor behind or in front of the rear tires of the vehicle. Determine the inside from the outside by examining the hardware - the heads of the bolts should be to the inside (tire side)and the nuts to the outside. Now determine the latch from the hook. The hook goes to the inside and the latch to the outside.



2) Drive onto the tire chains leaving approx. 2/3 of the chain in front of the tire and drape the long portion of the chain around the tire. Hook the inside first, starting with the very last link. Repeat with the latch side (outside).



3) Latch Operation: Insert the top of the latch through the



4) Lever the latch backwards and connect to the side chain as shown.

5) Repeat this process taking up one link at a time alternating from the inside to the outside. Check to see that the traction belts are evenly spaced. Install the tire chains as tightly as possible and repeat for the other side!

NOTE: Secure the extra links to prevent them from damaging the vehicle during use. We have enclosed zip-ties for you convenience

Installation Tip: An Alternate installation method is to raise one wheel at a time approximately 1" off floor with sturdy jack under the axle. Lay the tire chains out on the floor and determine the inside from the outside. Drape the chain over the tire. Refer to installation for attachment directions DO NOT PLACE ANY BODY PART UNDER THE RAISED TIRE AT ANY TIME.

## Removal

Park on level ground. Turn off the engine and set parking brake. Unhook the outside latch fastener. Repeat procedure on inside hdok fastener. Lay the chains on the ground and drive vehicle off chains. Inspect chain for damage after and prior to usage chains for damaged or worn parts.

**Warranty Statement** 

Superior Tech's products are guaranteed to be free from defects in material and/or workmanship and to perform as advertised when properly assembled, installed, used, and maintained in accordance with written instructions. Failure to adhere to this will void the warranty. Superior Tech Inc. will not be responsible for labor, loss, or consequential damage of any kind or character caused by defective parts or for charges incurred in the replacement or repair of defective parts. Superior Tech reserves the right to request photos or return of damaged/defective parts. Please have original purchase date, copy of P.O./receipt and serial number (if available) when calling.

## **Warranty Period:**

Terragrips are warranted for a period of 1 year of purchase date. This product is warranted by Superior Tech to the original customer against defects in material and workmanship under normal operating conditions and use for a period of 1 year to the original customer.

Please contact your Dealer or Superior Tech at 717-569-3359 for assistance, warranty or replacement parts.

