



CheckMate™ Lawn and Athletic Field Striping Kits

1161 E. Clark Road, Suite #220

◆ DeWitt, MI 48820

◆ 800.411.0150

www.bigleaguelawns.com



CheckMate™ Lawn Striping Kit For Honda HRN Installation Guide

Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.

The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.



US Patent 6,962,039 B2, US Patent 6,993,894 B2

Mounting Instructions Honda HRN Series Mowers

Congratulations on your new purchase! You are just steps away from creating a beautifully patterned lawn using your new CheckMate™ lawn striping roller. To ensure a long life of both your mower and roller, please be sure to follow the mounting recommendations below.

Tools Required:

1/2" Wrench or Socket	12mm Wrench or Socket	3/4" Wrench or Socket
		

Before Installation Process

Safely prop up the bagger door of your mower and remove the bagger from the mower.



Step 1: Remove Existing Bolt

Using a 12mm socket or wrench, turn the bolt counter clockwise and remove it from the frame of the mower.




Step 2: Assemble Mounting Arm

Utilize Schematic

Please utilize the schematic and photo below to assemble your mounting arm. The mounting arm must be assembled exactly as pictured for the striping kit to function properly.

Note: The top bolt in each mounting arm has been pre-assembled. (DO NOT TAKE APART)

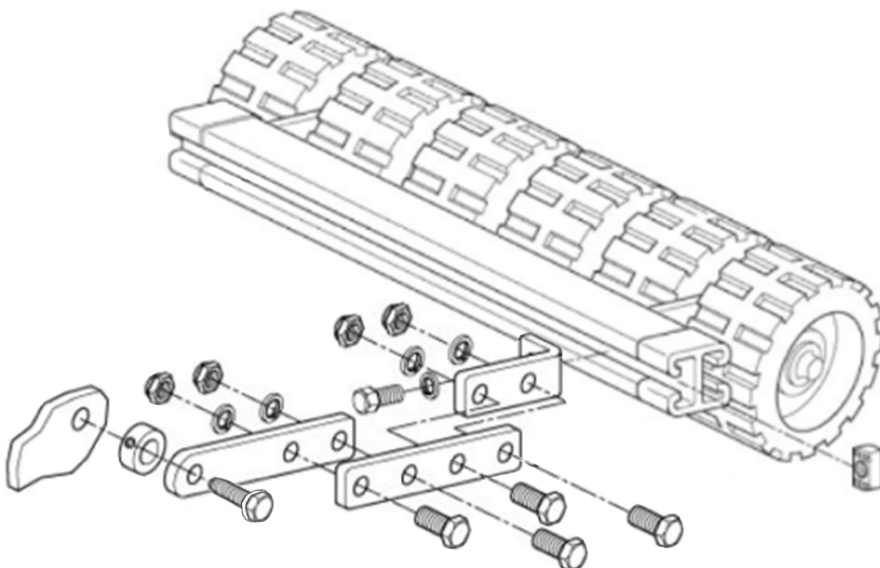

Step 3: Install Mounting Arm

Place the new mounting bolt (located at the top of the mounting arm) into the exposed hole from step 1. Thread in with your fingers and use a 1/2" wrench or socket turning clockwise to secure the bolt to the mower frame.

Note: If the mounting arm is not able to freely move up and down, reverse the bolt 1/4 turn so that it is secure but is still able to function properly.



Step 4: Repeat Steps 1-3 For Opposite Side of Mower

Step 5: Install Striping Kit

Remove preinstalled 1/2" x 1" bolts and lock washers from gray channel. Re-insert the bolt [with split lock washer] through the L shaped bracket and thread into the channel nut inside channel. **(Before tightening bolts all the way down; center roller behind the mower)**

After centering the roller; use a 3/4" wrench to firmly tighten each mounting arm to the striping roller.



Final Steps

Check installation, pick up the roller to confirm it freely pivots up and down. Also reinstall bagger to mower if desired.



Installation is now complete! Enjoy striping with your new CheckMate™ Stripping kit!

If you have any questions or concerns, feel free to reach out to us!

Phone: (800) 411-0150

Email: sales@bigleaguelawns.com

