



1161 E. Clark Road, Suite #220

◆ DeWitt, MI 48820 ◆

800.411.0150

[www.bigleaguelawns.com](http://www.bigleaguelawns.com)



## CheckMate™ Lawn Striping Kit For Honda HRX Installation Guide

### Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.

The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.


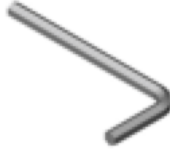





US Patent 6,962,039 B2, US Patent 6,993,894 B2

## Mounting Instructions Honda HRX Series Mowers

Congratulations on your new purchase! You are just steps away from creating a beautifully patterned lawn using your new CheckMate™ lawn striping roller. To ensure a long life of both your mower and roller, please be sure to follow the mounting recommendations below.

### Tools Required:

| 9/16" Wrench  | 1/4" Allen Wrench   | 3/8" Drill Bit  | 9/16" Socket  | Drill   |
|---|---|---|---|---|
|  |  |  |  |  |

### Before Installation Process

Safely prop up the backside of your mower and remove the bagger from the mower.

### Step 1: Remove Tire

Using a 9/16" wrench, rotate tire retaining bolt counter clockwise and remove tire.




### **Step 2: Mark Drilling Location**

Place the provided 3/8" washer against the back of the frame. The 3/8" washer should touch the back wall while resting on the debris pin. Mark the center of the hole.



### **Step 3: Drill Mounting Hole**

Using a 3/8" drill bit, carefully drill your mounting hole. Note; very little pressure should be applied to the drill. Simply allow the bit to slowly drill the hole.

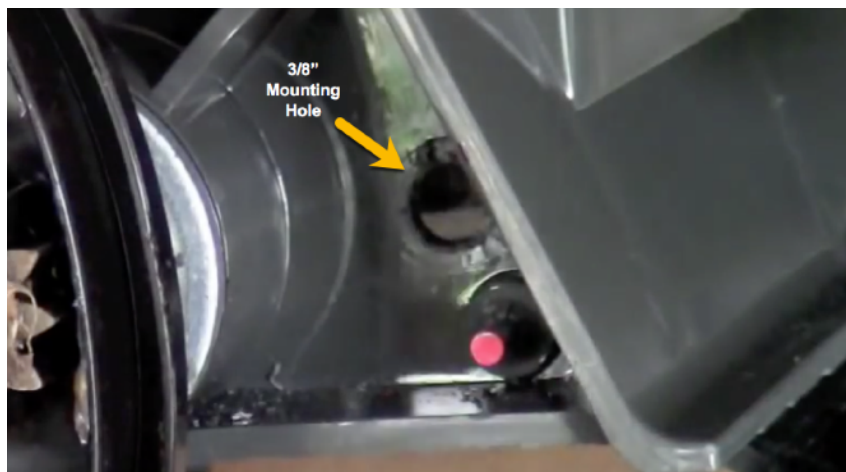



## **Step 4: Installing Mounting Arms**



### **Install Underside Bolt**

Insert a 3/8" x 3/4" bolt through the mounting hole with the threads pointing out. Using a pair of needle nose pliers will help you complete this step; especially on the back left side.



### **Lock Washer & Coupler Nut**

Place a 3/8" lock washer onto the threads and hand tighten the coupler nut to the bolt.

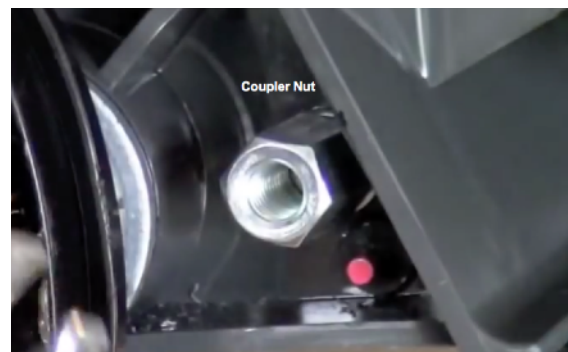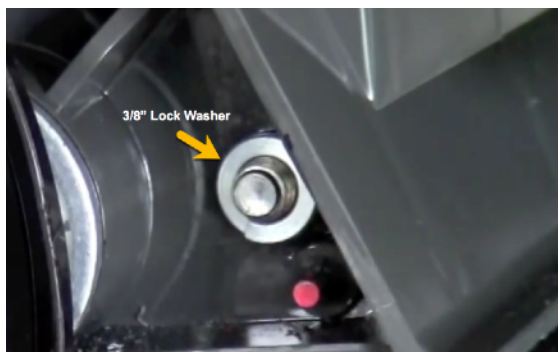

### **Tighten**

Using a 9/16" wrench and a 9/16" socket, secure the coupler nut to the mower frame.



### **Install Mounting Arm**

Thread the 3/8" button head cap screw into the existing threads and tighten using your 1/4" Allen Wrench. Once tight against the coupler nut, reverse the 1/8" turn allowing arm to swivel.



### **Step 5: Reinstall Wheel**

Place the wheel back onto the axel; aligning gears. Once aligned, use a 9/16" wrench to secure the tire to the axel.



## Step 6: Repeat Steps 1-5 For Opposite Side of Mower

### **Step 7: Install Striping Kit**

Remove preinstalled 1/2" x 1" bolts and lock washers from gray channel. Re-insert the bolt [with split lock washer] through the L shaped bracket and thread into the channel nut inside channel. **(Before tightening bolts all the way down; center roller behind the mower)**

After centering the roller; use a 3/4" wrench to firmly tighten each mounting arm to the striping roller.



### **Final Steps**

Check installation, pick up the roller to confirm it freely pivots up and down. Also reinstall bagger to mower if desired.



Installation is now complete! Enjoy your striping with your new CheckMate™ Striping kit!

## Honda HRX Bracket Assembly





# Big League Lawns®

The World's Premier Seller of Universal Lawn Stripping Rollers

View Cart | Checkout

M-F 8:30 AM-5:00 PM EST (800) 411-0150

sales@bigleaguelawns.com


Home Shop Lawn Rollers Resellers How It Works Get In Touch

Like us! → Like 2K

CheckMate™ For Residential Push Mowers  
Training Videos  
CheckMate™ For Honda HRX Installation Video

Home » CheckMate™ For Residential Push Mowers » Training Videos » CheckMate™ For Honda HRX Installation Video  
CheckMate™ For Honda HRX Installation Video

TimeMasters® Mounting Instructions  
CheckMate™ For Lawn & Garden Tractors  
CheckMate™ For Commercial Walk-Behinds  
CheckMate™ For Zero Turn Riders  
CheckMate™ for Husqvarna Zero Turn  
Replacement Hardware  
Photo Album  
Athletic Fields

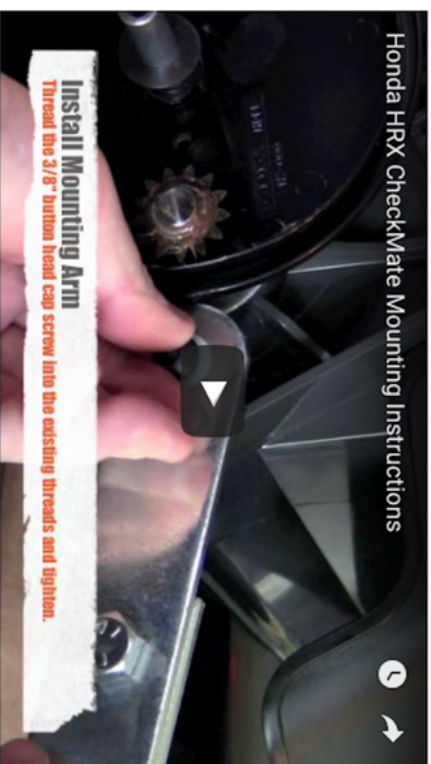

## Additional Notations Regarding Installation:

Clarity: At 0:35 seconds into the video the 3/8" washer should be used as a template to mark your holes. The washer should touch both the debris flap pin and the back wall of the deck.

Update: Using thread locker, we have attached your pivot bolt to the coupler nut for you [1:05]. Simply thread the the coupler nut to the 3/8" bolt and lock washer inserted through the mower deck.

On Honda HRX217xxx models, they have moved the transmission towards the left side of the deck. Please view location prior to drilling left side hole. Additionally, due to tight spacing, using a pair of needle nose pliers will allow you to hold the bolt while reaching up between the mower deck and transmission to insert the 3/8" bolt through the hole.



CLOSE



**PayPal CREDIT**  
Get 6 Months to pay on \$99+  
Check out with PayPal and  
choose PayPal Credit.  
Subject to credit approval. See terms.  
US customers only.



sales@bigleaguelawns.com 1161 E. Clark Rd, Ste. #220, DeWitt, MI 48820 M-F 8:30 AM-5:00 PM EST

©Big League Lawns 2016. All rights reserved. | Privacy Policy | Screen Share

Request a Quotation...