




## **CheckMate™ Striping Kit Installation Guide** For Toro® Super Recycler™ Mowers



### Mounting:

- 1.) A 5/16" Hole will need to be drilled in the approximate location noted above on each side of the mower.
- 2.) The Mounting bracket bolt should be inserted through the new hole. (Note that only the threaded portion of the mounting bolt will pass through the hole). Install 5/16" locknut onto threads and firmly tighten.
- 3.) Connect CheckMate™ using side mount method:  
  
(See Diagram on Back Page)

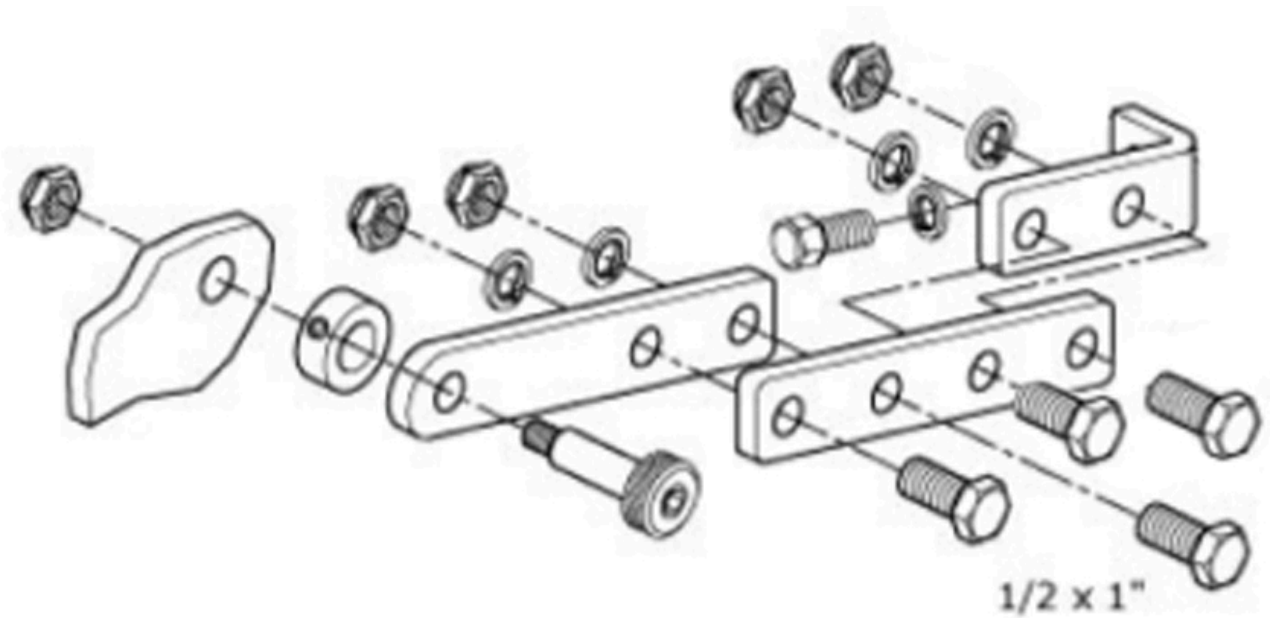

Parts List	
Part	Quantity
1/2" x 1" Bolt	8
1/2" Split Lock Washer	8
1/2" Nylon Lock Nut	8
3-Hole L-Bracket	2
3-Hole Swivel Bracket (Bolt Assembly Pre-Installed)	2
4-Hole Extension Bracket	2