


Armrest Installation Instructions
Husqvarna Z200 & Redmax Series

1) Templates

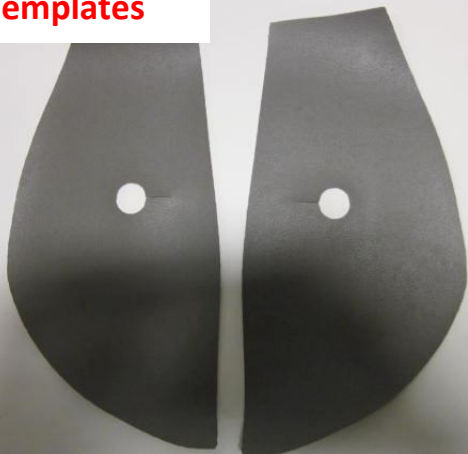

2) Side view of seat.



3) View of bracket under back cover.



← Keyhole in center of bracket. Arm pin fits here.


4) Place template on the side of the back of seat. Align with the contours of the seat.



5) Once template is aligned press thumb firmly on cut out. Keyhole will be very close to this location.




6) Be 100% sure you have found the keyhole. There are rectangle slots above and below. Very important to only cut slot in keyhole.

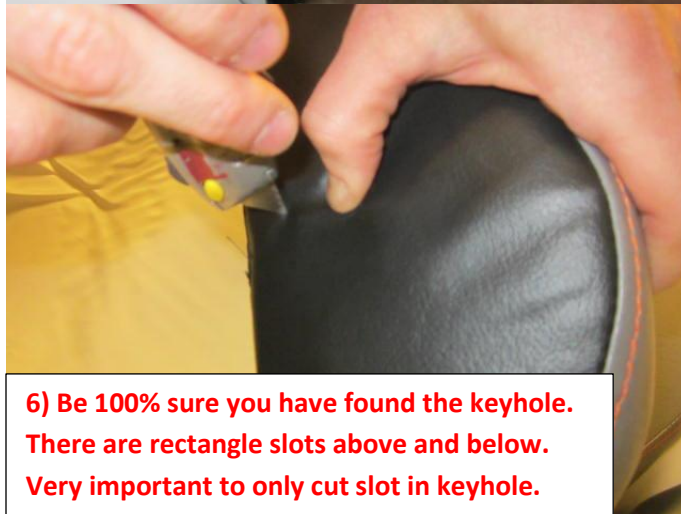

Armrest Installation Instructions

Husqvarna RZ & Redmax Series

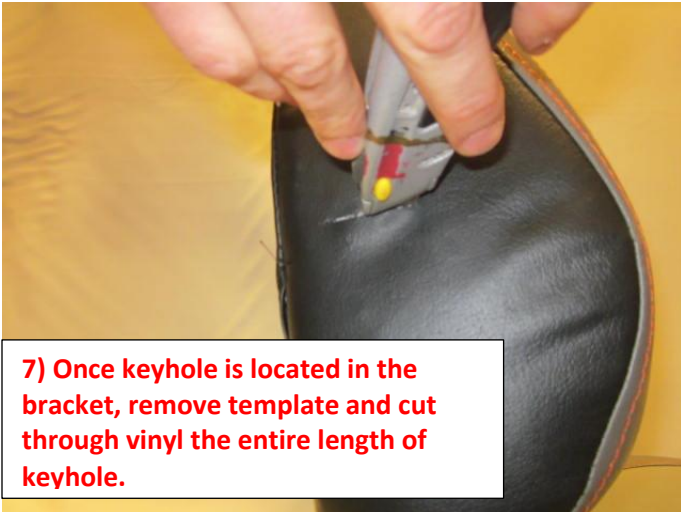

7) Once keyhole is located in the bracket, remove template and cut through vinyl the entire length of keyhole.



8) Insert arm pin in the bracket with small pin and arm facing rear of the seat.



9) Press arm pin approximately 1 ½" into bracket. Wiggle arm frame up and down until it will rotate 180 degrees and land in its home position.

Thank you for purchasing these arms. We appreciate your business.