



LAWN TRACTOR MOUNTING KIT INSTRUCTIONS

DEVELOPED BY NORDIC PLOW™



ASSEMBLY
TIPS

INSTRUCTIONS FAQs & TIPS

SAFETY

Read and understand the plow instructions, Warranty & FAQ and Tips before use.

Scan the QRC instructional videos on the first page or watch the videos on our website before use: www.nordicplow.com

Always instruct other users before they use the plow.

OPERATION

Risk of Injury:

- Never allow children to handle the plow.
- Never allow anyone to walk beside or sit on the plow when in use.
- ^a **Never operate the plow over 2 to 3 mph. Keep a slow steady speed.**
- If you hit an obstruction, immediately stop the vehicle and reverse direction.

STEP 1 & 2: The side universal mounting plate (part #77) has 4 sides with various combinations of holes to line up with those already on the mower. In the rare case where the holes do not match, it is okay to drill holes in the mount plate to fit your frame.

NOTE: Holes must be identical on both sides.

STEPS 3: There are many ways to attach the boot plate (part #76) to the mount plates (part #77). The closer the boot plates are to the machine the better.

STEP 5: Installation of the handle mount bracket (part #75).

Note: The handle mount bracket is angled and can be attached with the angle facing the plow blade or your machine. It can also be attached to the left or right side of the Spring Pivot Bracket (part #10) per the user's preference.

A. Install the axle (part #46) through any set of holes in the spring pivot bracket to use as a guide when attaching the handle mount bracket.

B. Attach the handle mount bracket making sure none of the holes interfere with the axle.


STEP 6: Be sure to include the thick spacers (part #41) onto the axle and in between the boot plate (part #76) and the Spring Pivot Bracket (part #10).

1-888-662-7569 (PLOW)

771 W. North Avenue West Chicago, IL 60185

www.nordicplow.com

1/4"

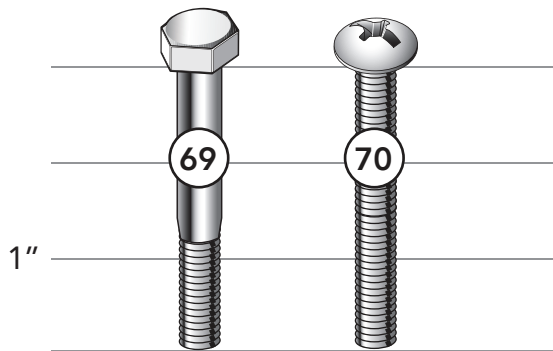

H-11201
X 1

P-31103
X 2


2"

22




47189
x3

3/8"

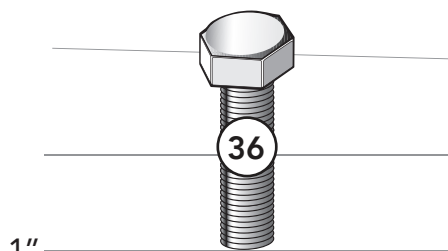

43001
X 10

37




43070
x10

38




44072
x10

1/2"

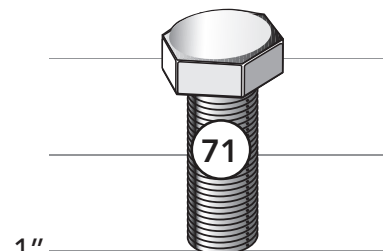


H-46521
X 2

41

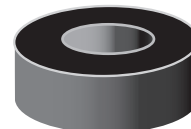

712-3083
x2


25

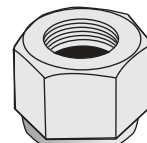

712-3083
x2

28


43343
x1



46
720116
x1




76
27527
x2

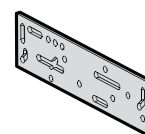

77

27526
x2

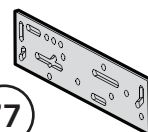


75
800HMB
x 1




74

801LHT
x1

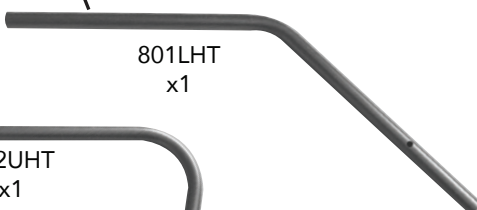

73

802UHT
x1

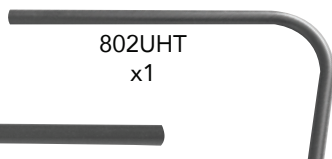

72

803JT
x1




85

804HG
x1




27528
x1


1

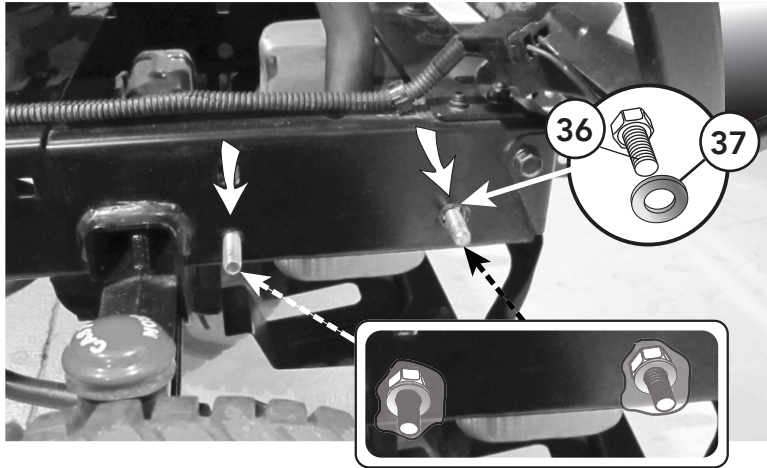


2

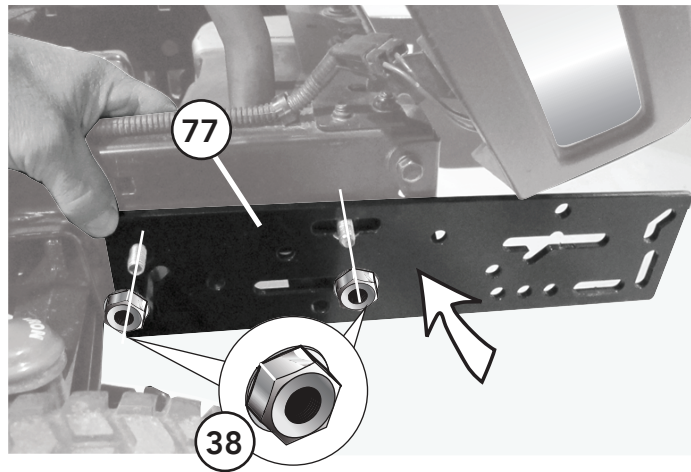


3

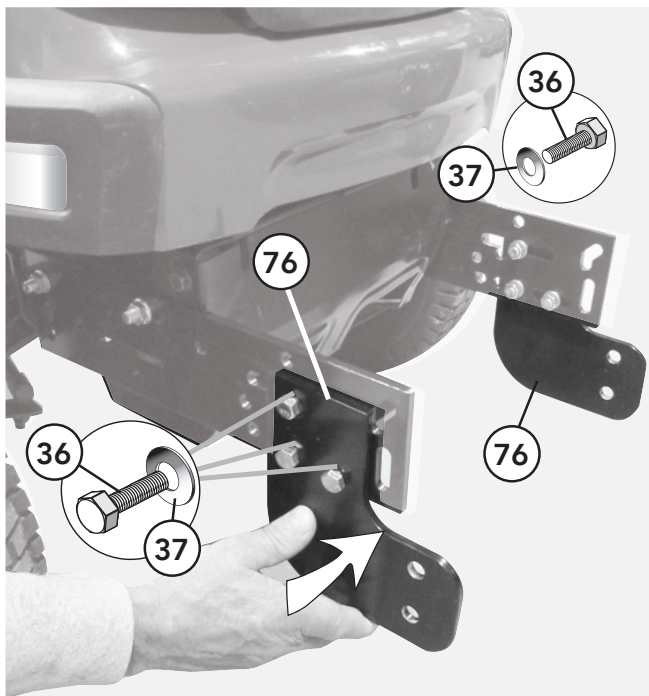


4




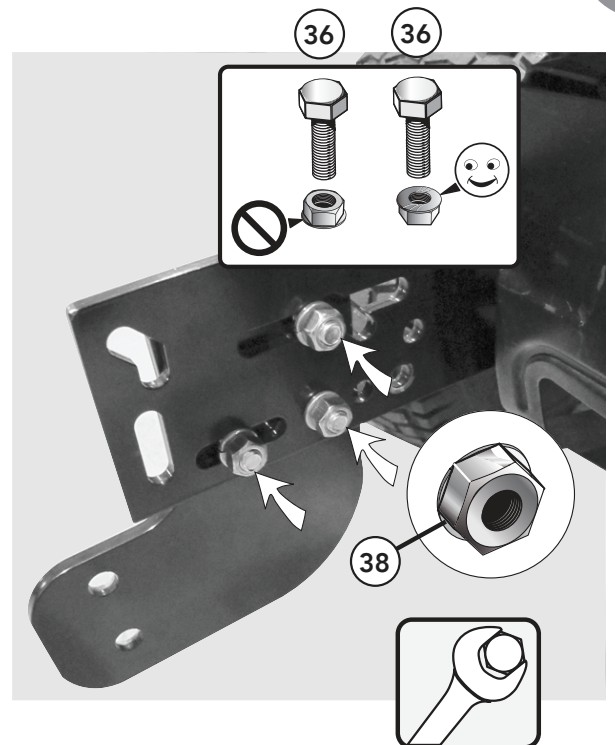


A


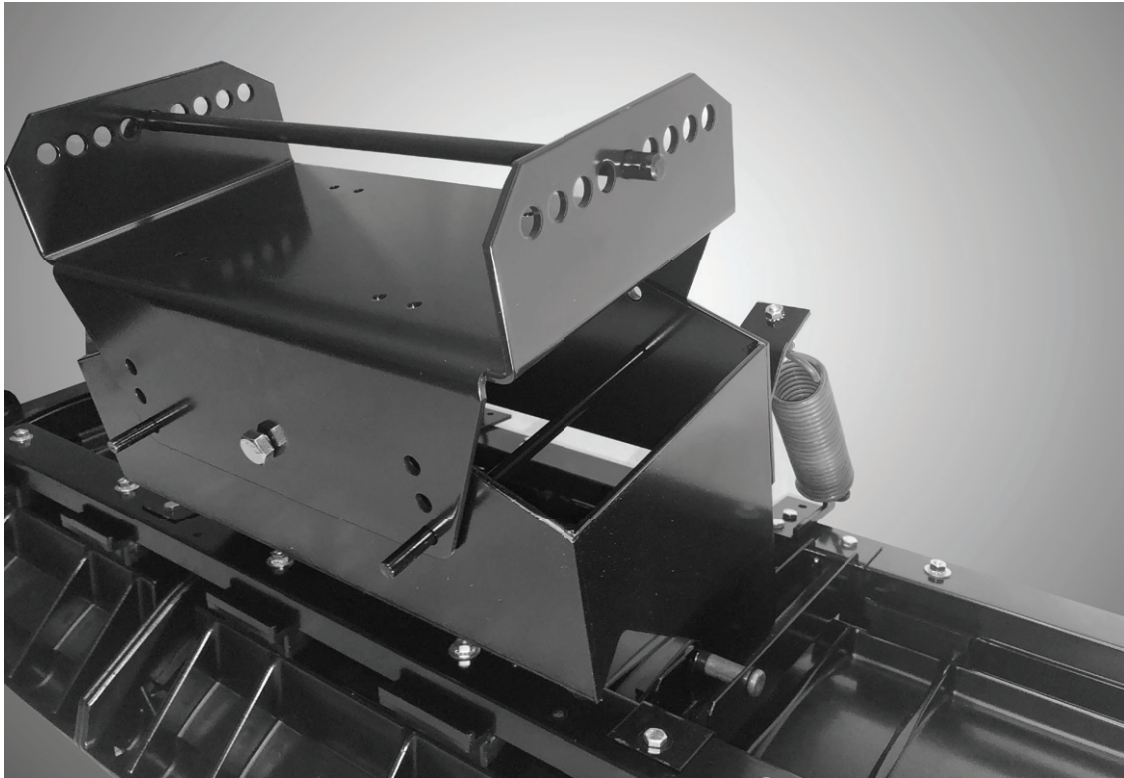


B

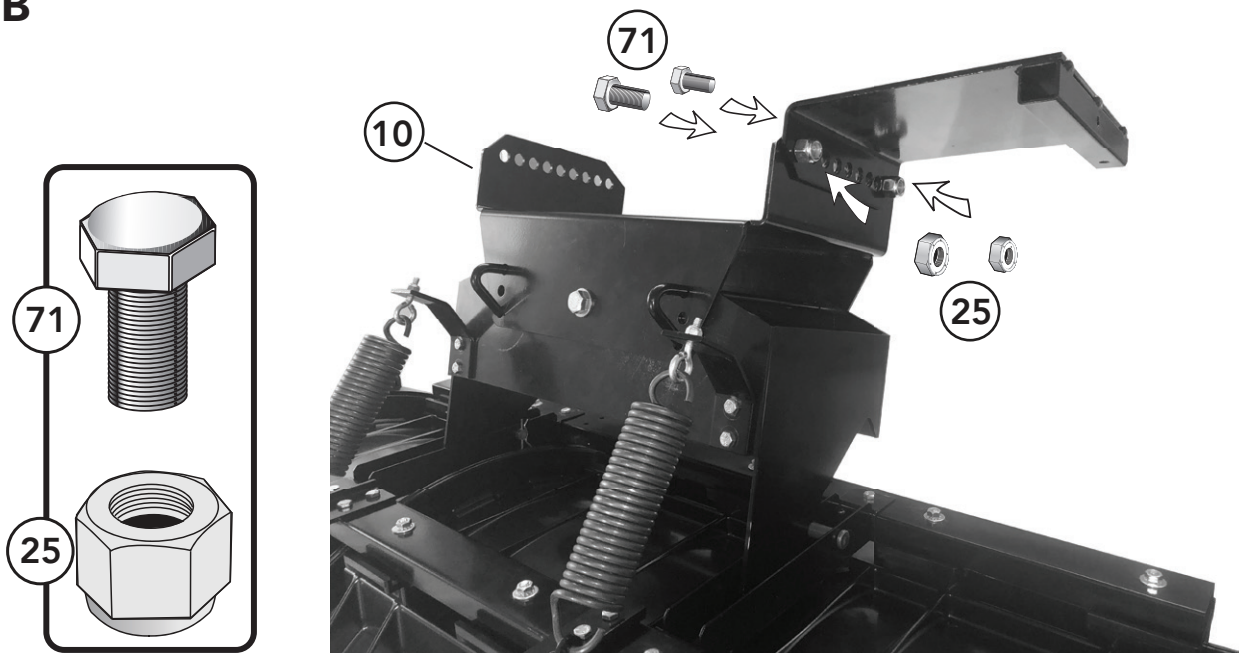

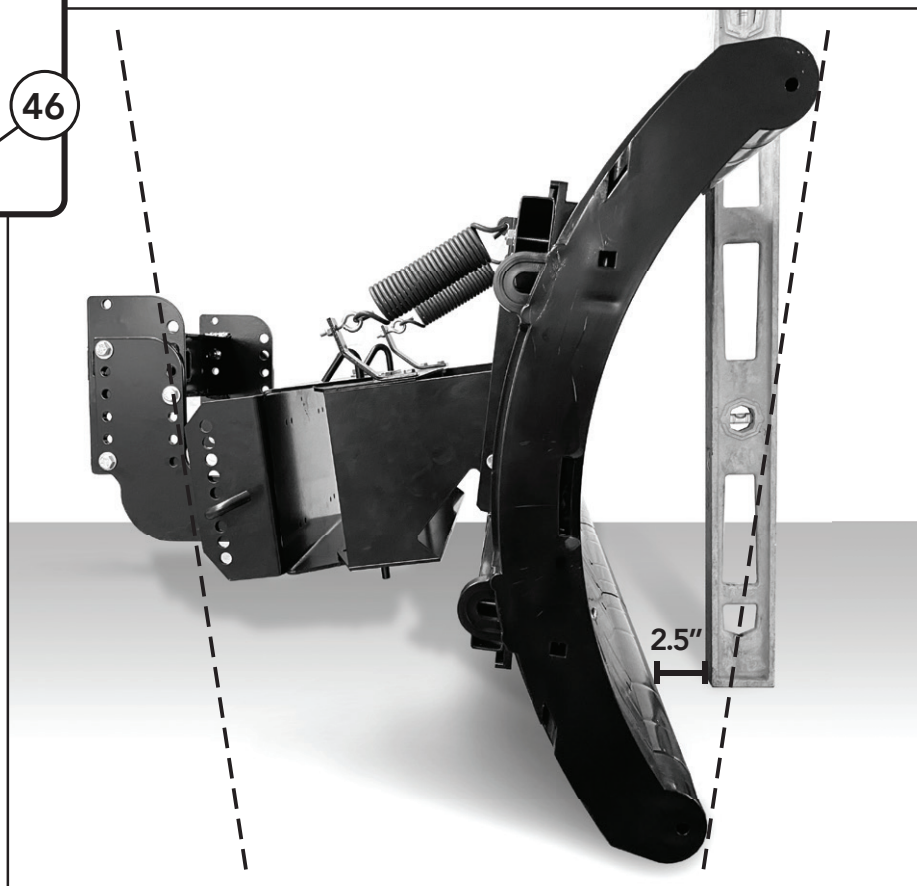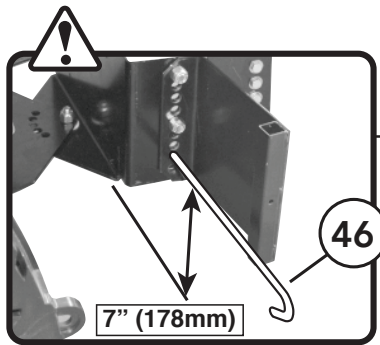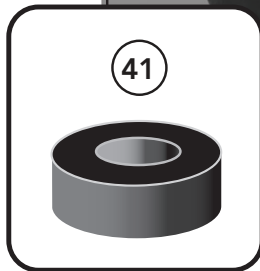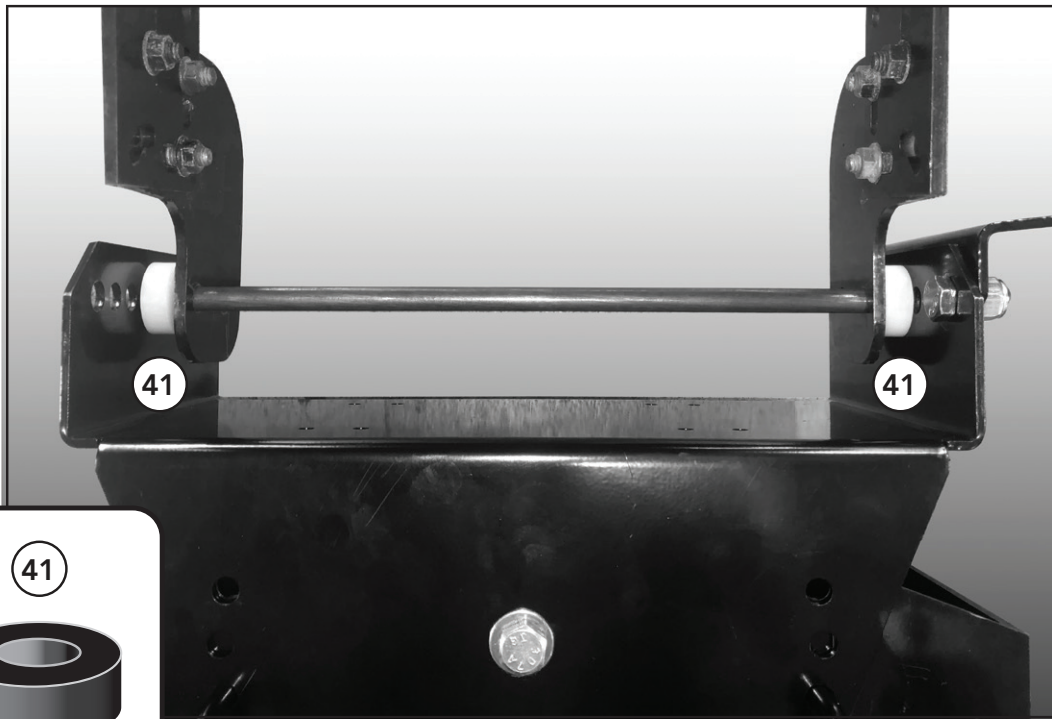

ASSEMBLY
TIPS

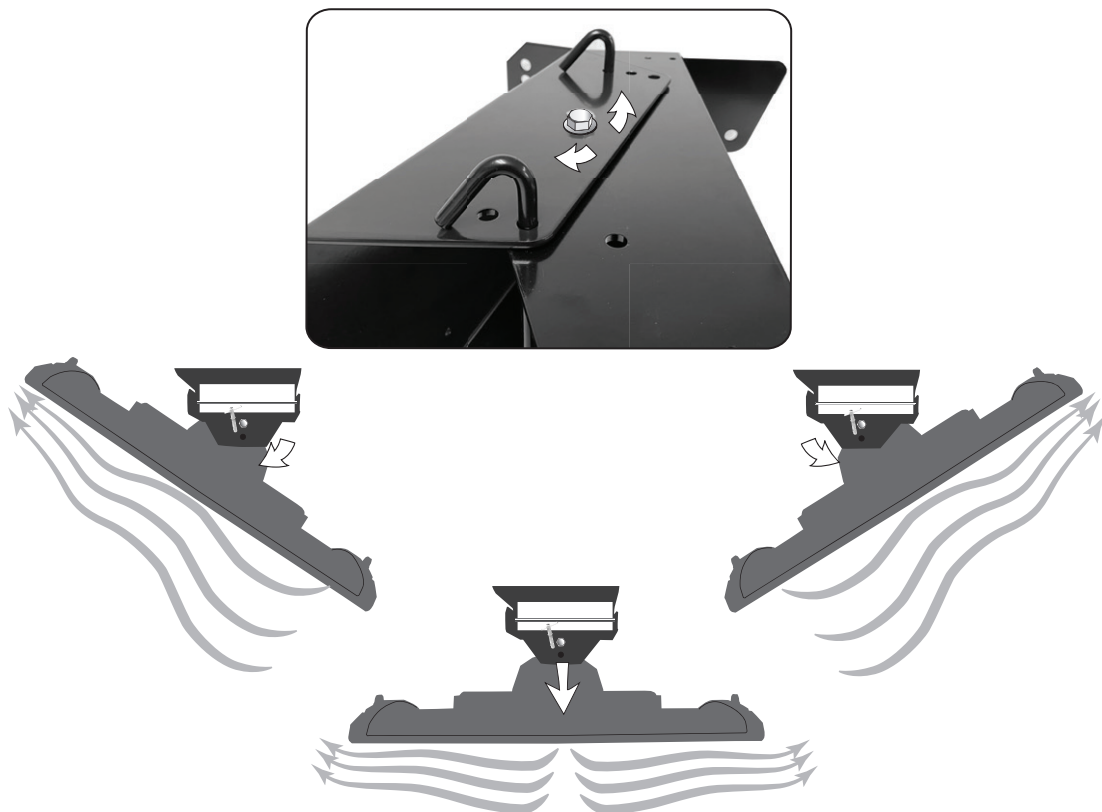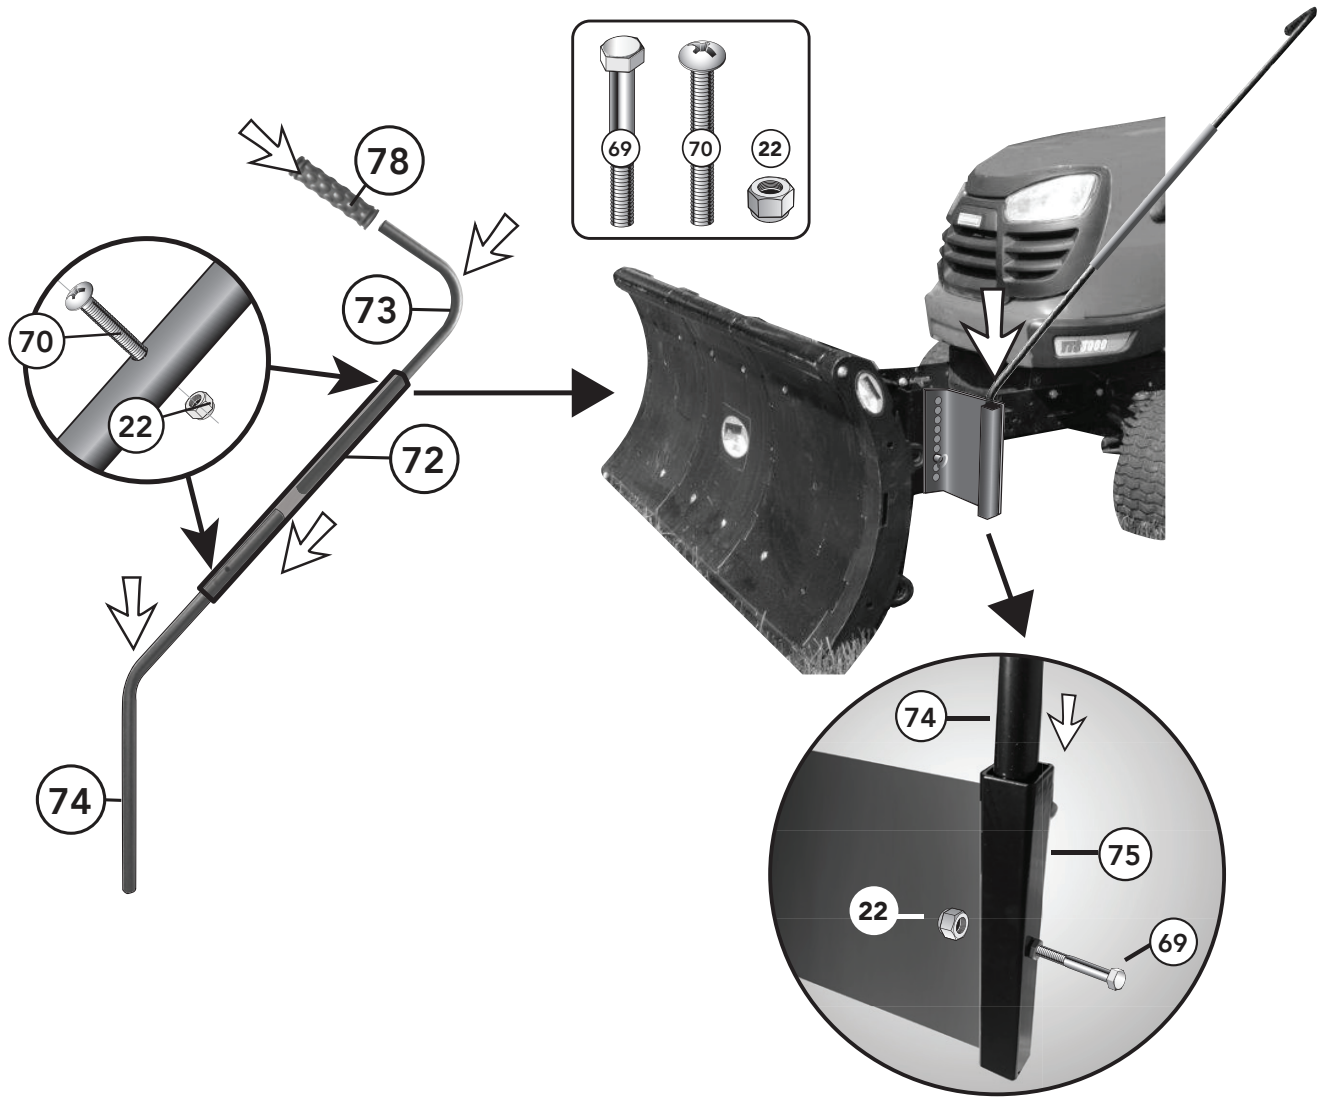

These instructions are for the Lawn Tractor Mounting Kit and are 2 of 2 packages.
The Plow and its instructions are packaged and shipped separately.



1-888-662-7569 (PLOW) | 771 W. North Avenue, West Chicago, IL 60185 | www.nordicplow.com

© September 2021