

BE INDUSTRIAL USE TELESCOPING WANDS

- 1) Remove the long wand from the box and check for any shipping damage. If there is any, report it to the retailer who sold the long wand, or to the shipping company who delivered the order.
- 2) Attach the threaded end of the hose to the elbow on the gun with Teflon tape.
- 3) Following startup instructions for your pressure washer, attach the long wand to the high pressure hose with the quick coupler. Make sure there is a nozzle in the wand before using.
- 4) See Belt Kit manual with instructions for proper usage.
- 5) Grasp the long wand firmly in both hands. Put one hand on the gun and the other on the Blue fiberglass pole.
- 6) Caution - The release of high pressure through the wand may cause the wand to kick back.
- 7) Gently move the wand closer to the surface you are pressure washing and wash with a side to side motion.
- 8) To extend the wand, loosen the black pole locks and slide the poles out. Do not slide the poles out of the pole locks. Tighten the pole locks firmly so that the poles do not slide during use, **but be careful not to overtighten** the knobs as this can damage them.

No.	Part#	Description
1	85.202.114	long wand spray gun c/w locating screws
2	85.300.105S	3/8" stainless steel screw-type male fitting (M22)
3	85.300.133	3/8" screw-type male fitting (M22)
4	85.238.118	3/8" hose assembly (18' LW)
	85.238.124	3/8" hose assembly (24' LW)
5	85.704.004	1/4" street brass elbow
6	85.205.105	large pole lock (onto fiberglass outer pole)
7	85.205.104	small pole lock (onto fiberglass outer pole)
8	85.791.024	front lance
9	85.300.102S	1/4" stainless steel female coupler (BST-2)
10	85.791.025	1/4" x 1 1/2" screw type fitting MNPT (M22)
11	85.205.118SHD	2 wand sections with locks only (18' LW)
	85.205.124SHD	3 wand sections with locks only (24' LW)
12	85.791.026	AL Pole adaptor fitting, for long wand (18'/24')
13	85.400.019	long wand belt assembly

2



3



5




10



12



11

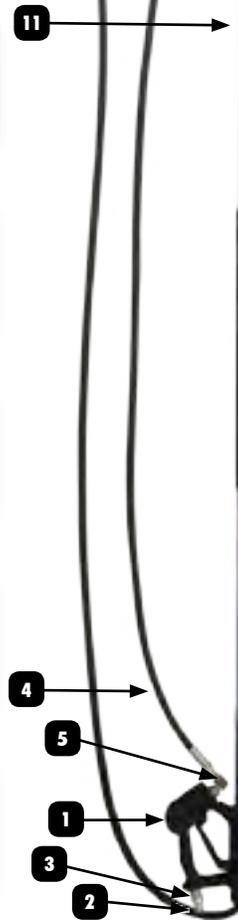

4

5

1

3

2

9

8

12

7

6

10



WARNING



Beware of overhead power lines. Contacting these lines with the long wand may result in electrocution, injury, or even death. Do not use from ladders or elevating devices of any kind. Operator must maintain both feet on solid ground.

LONG WAND OPERATING INSTRUCTIONS

When you first set up your telescoping wand for operation, remove each section to a maximum distance of 50% of the overall length of the section. Be careful when tightening the nylon locks that hold each section in position, that you don't overtighten causing the locks to seize up. Once you have extended the wand to 50% of its overall length, pull the trigger gun while under pressure and work with the wand to get a feel for how it performs. The further out you extend your telescoping wand the less accurate it becomes at the point of cleaning, and less ideal the angle at which you clean. When fully extended, each section should have approximately 6" - 8" remaining for support into the next section of pole.

Due to backwards thrusts of water under pressure, it is extremely important to pressure clean while standing firmly on solid ground and the telescoping wand gives you advantage to do this. Trying to get the nozzle end closer to the surface than it will normally go under full pressure. This can become very tiring, and can also bend the inner aluminum section of the pole if too much force is used. The wands are rated for a maximum pressure of 4000 PSI and a flow of 8 GPM, with the water being carried through a single steel braided 1/4" hose.


SERVICING & REPAIRS

Your long wand has been designed to be easily serviceable and repairable in the field.

Rinse off the threads on your nylon pole locks from time to time to help prevent dirt buildup which can cause the locks to seize up.

Should you have to replace the spray gun on the fiberglass pole, remove the two locating screws from the rear of the gun and then unscrew the entire gun from the pole.

Should you have to replace the pole adaptor fitting, clean the surface of the pole and sand lightly to create a rough surface. Use (L11261) Loctite Super Bonder glue and apply a continuous bead of approximately 2 rings to the aluminum pole before sliding on the new pole adaptor fitting. Allow the glue to set up before using.

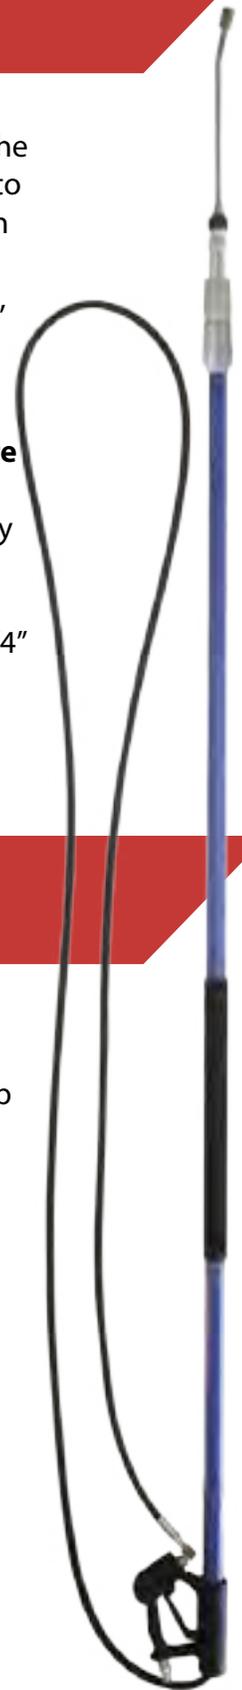

WARNING



Beware of overhead power lines. Contacting these lines with the long wand may result in electrocution, injury, or even death. Do not use from ladders or elevating devices of any kind. Operator must maintain both feet on solid ground.