



09P700

Illustrated Parts List

Model Series

09P700

TYPE NUMBERS
0001 through 0208.


TABLE OF CONTENTS

Air Cleaner	3
Armature	8
Blower Housing	6
Camshaft	2
Carburetor	4
Controls	8
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electrical System	8
Exhaust System	5
Flywheel	7
Fuel Supply	5
Gasket Set	2
Governor Spring	8
Ignition	8
Piston/Rings/Connecting Rod	2
Rewind Starter	6
Spark Plug	8
Sump	2
Warning Label	2




PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

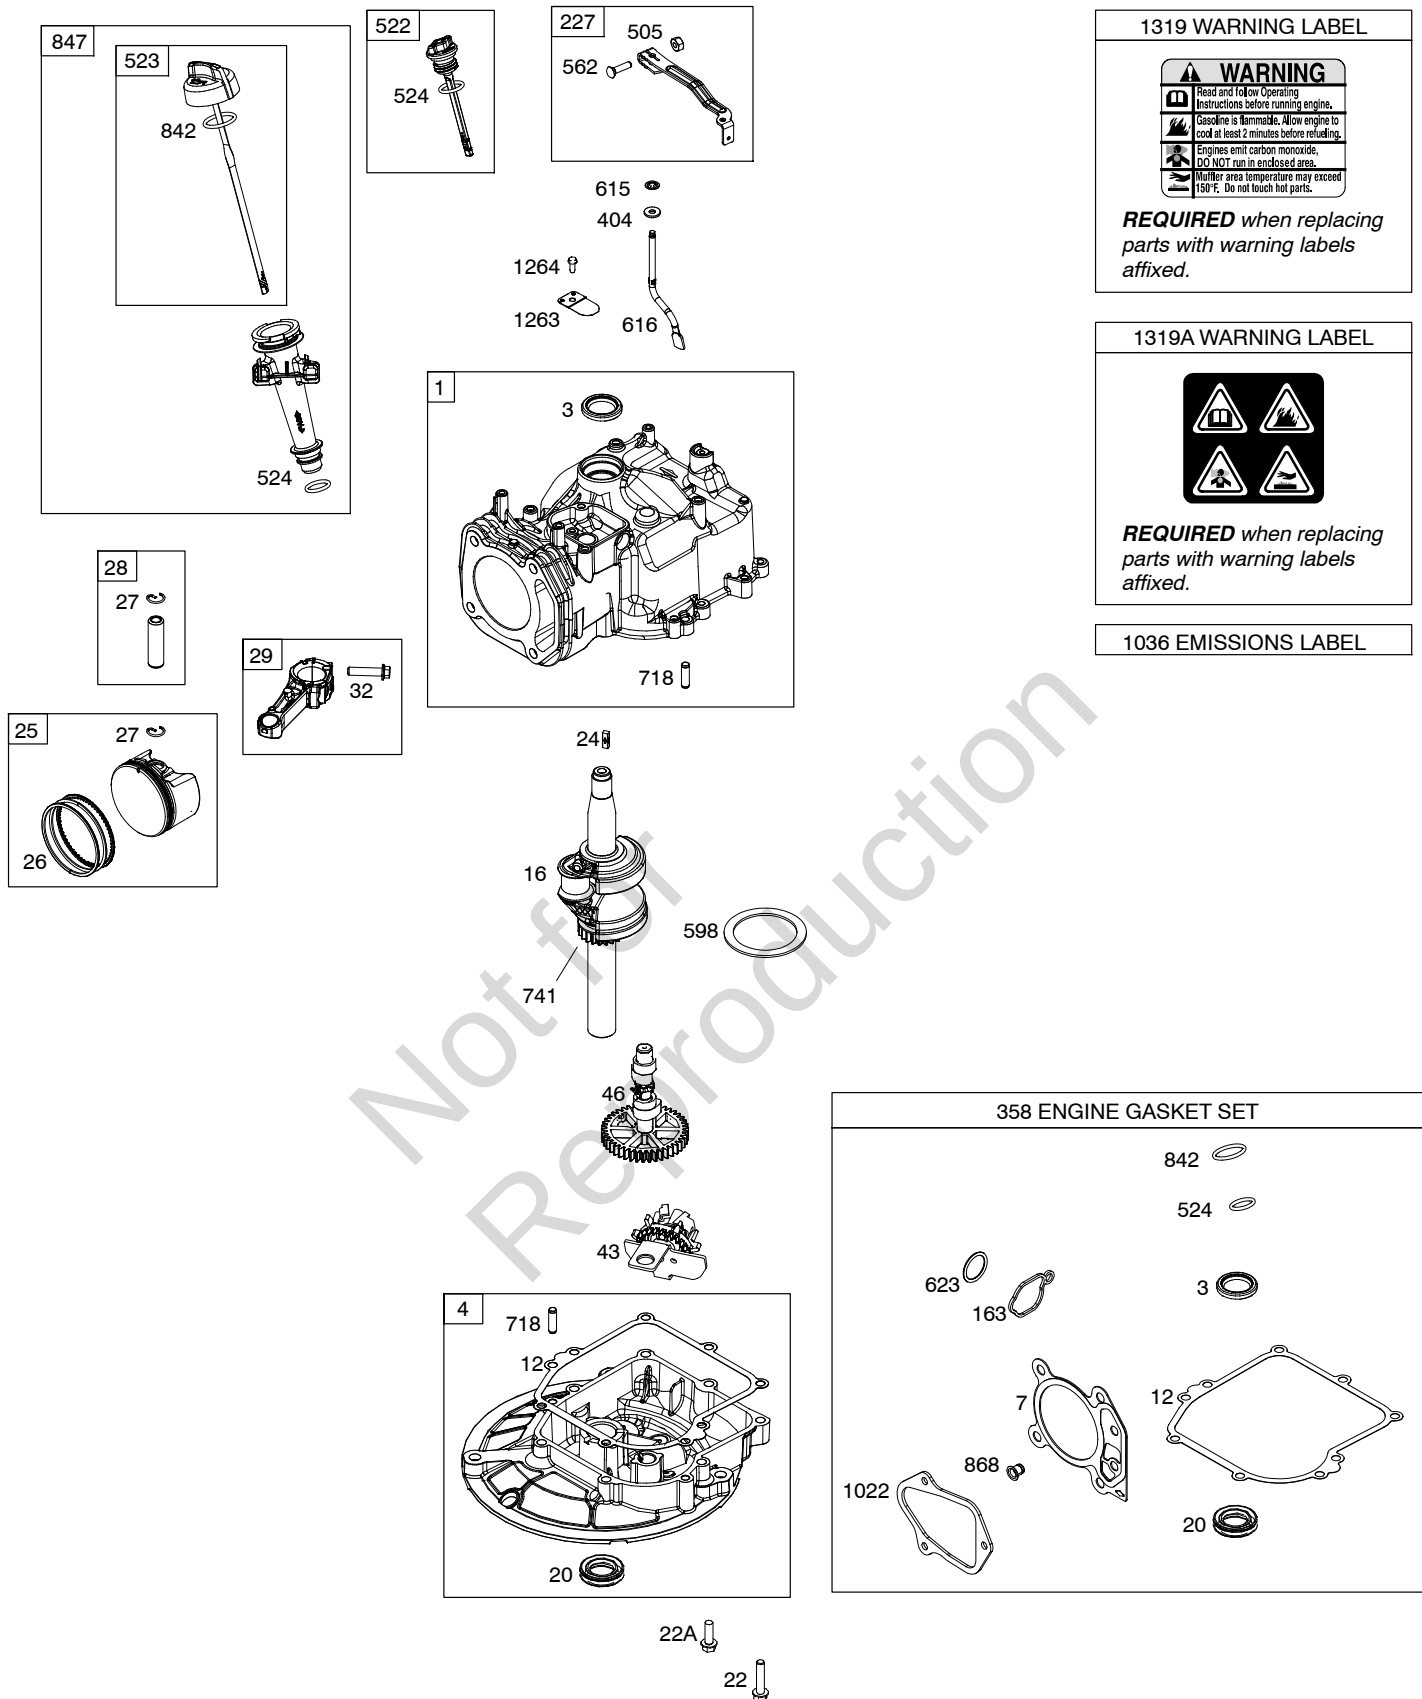


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

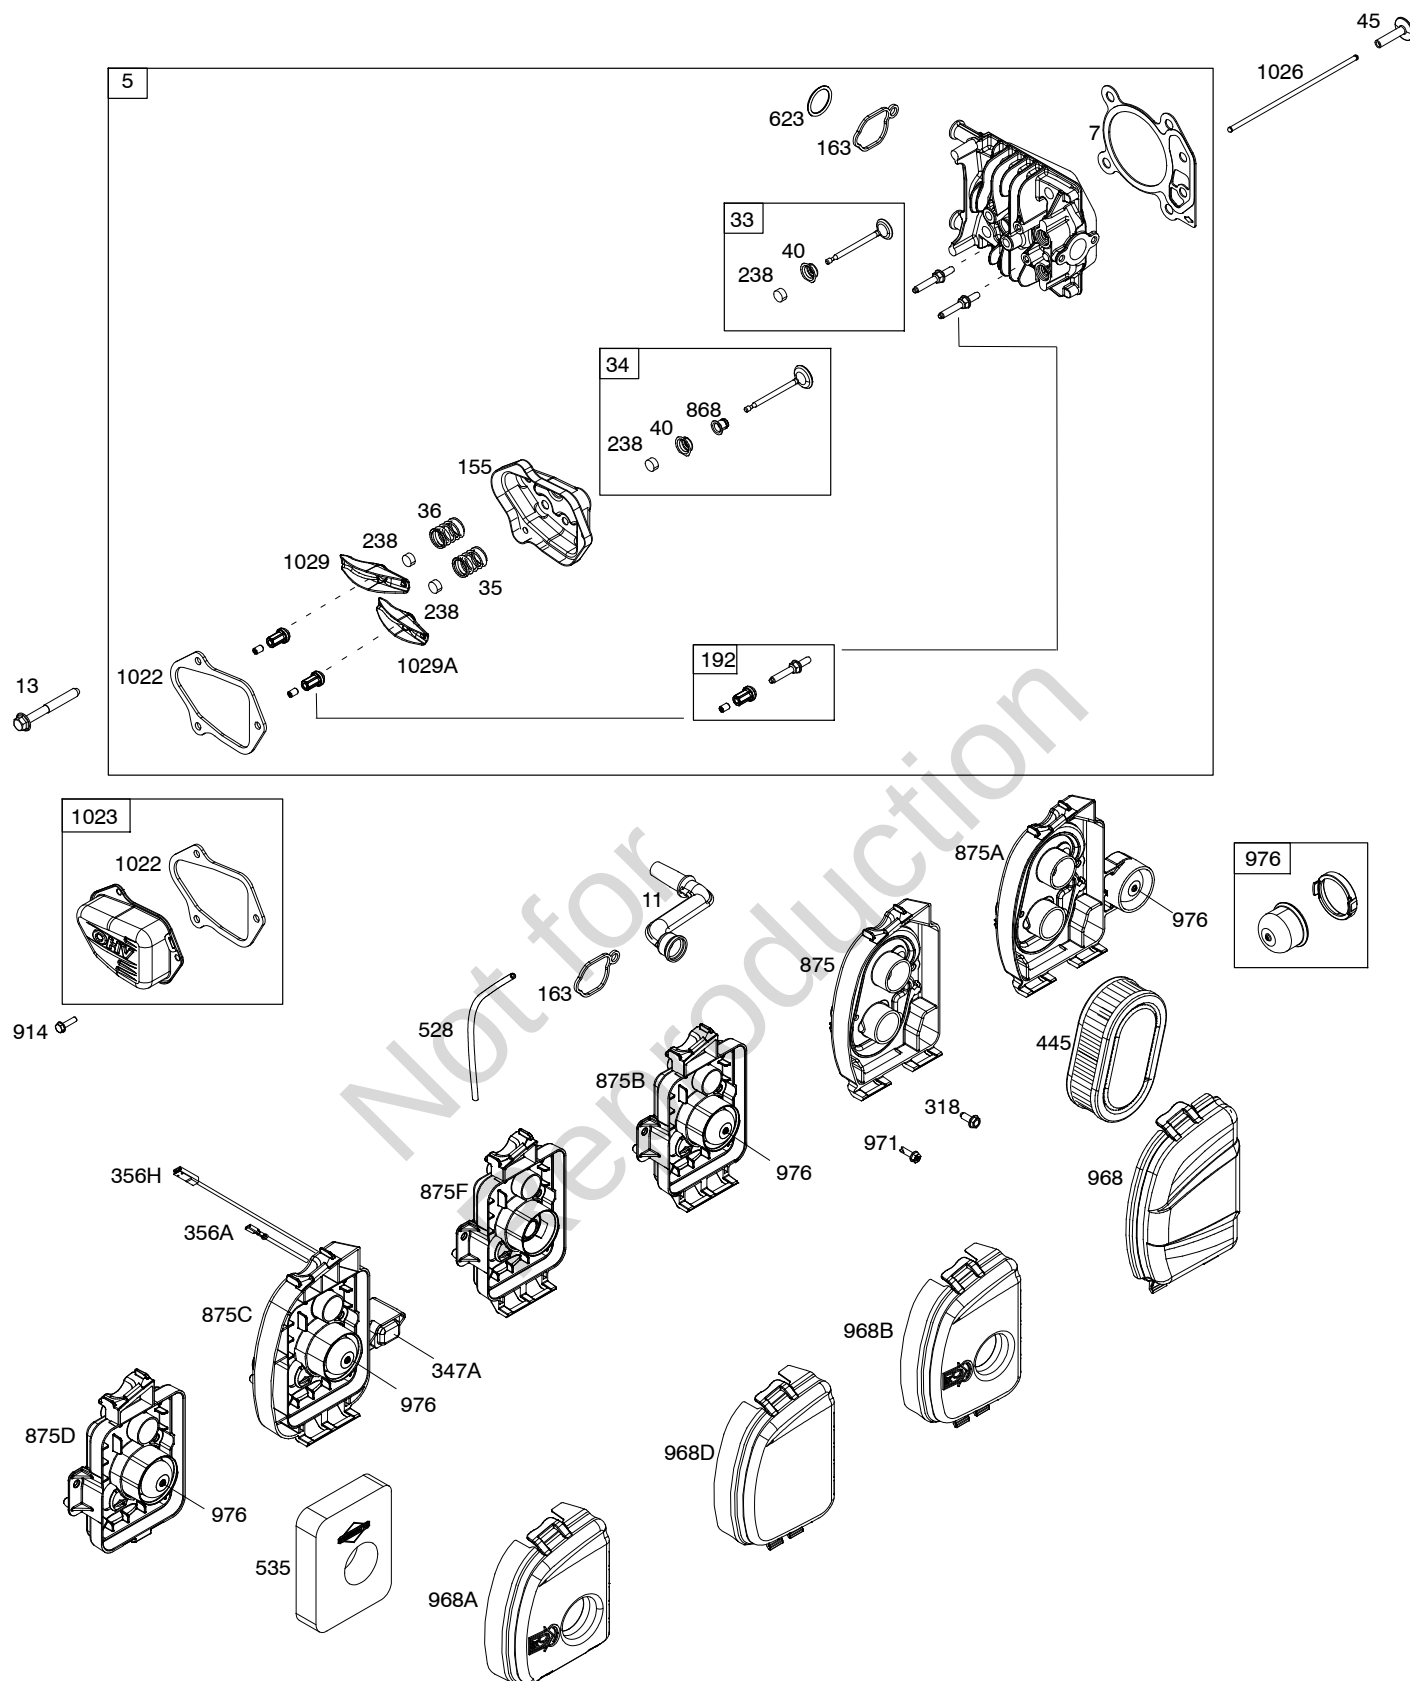





Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

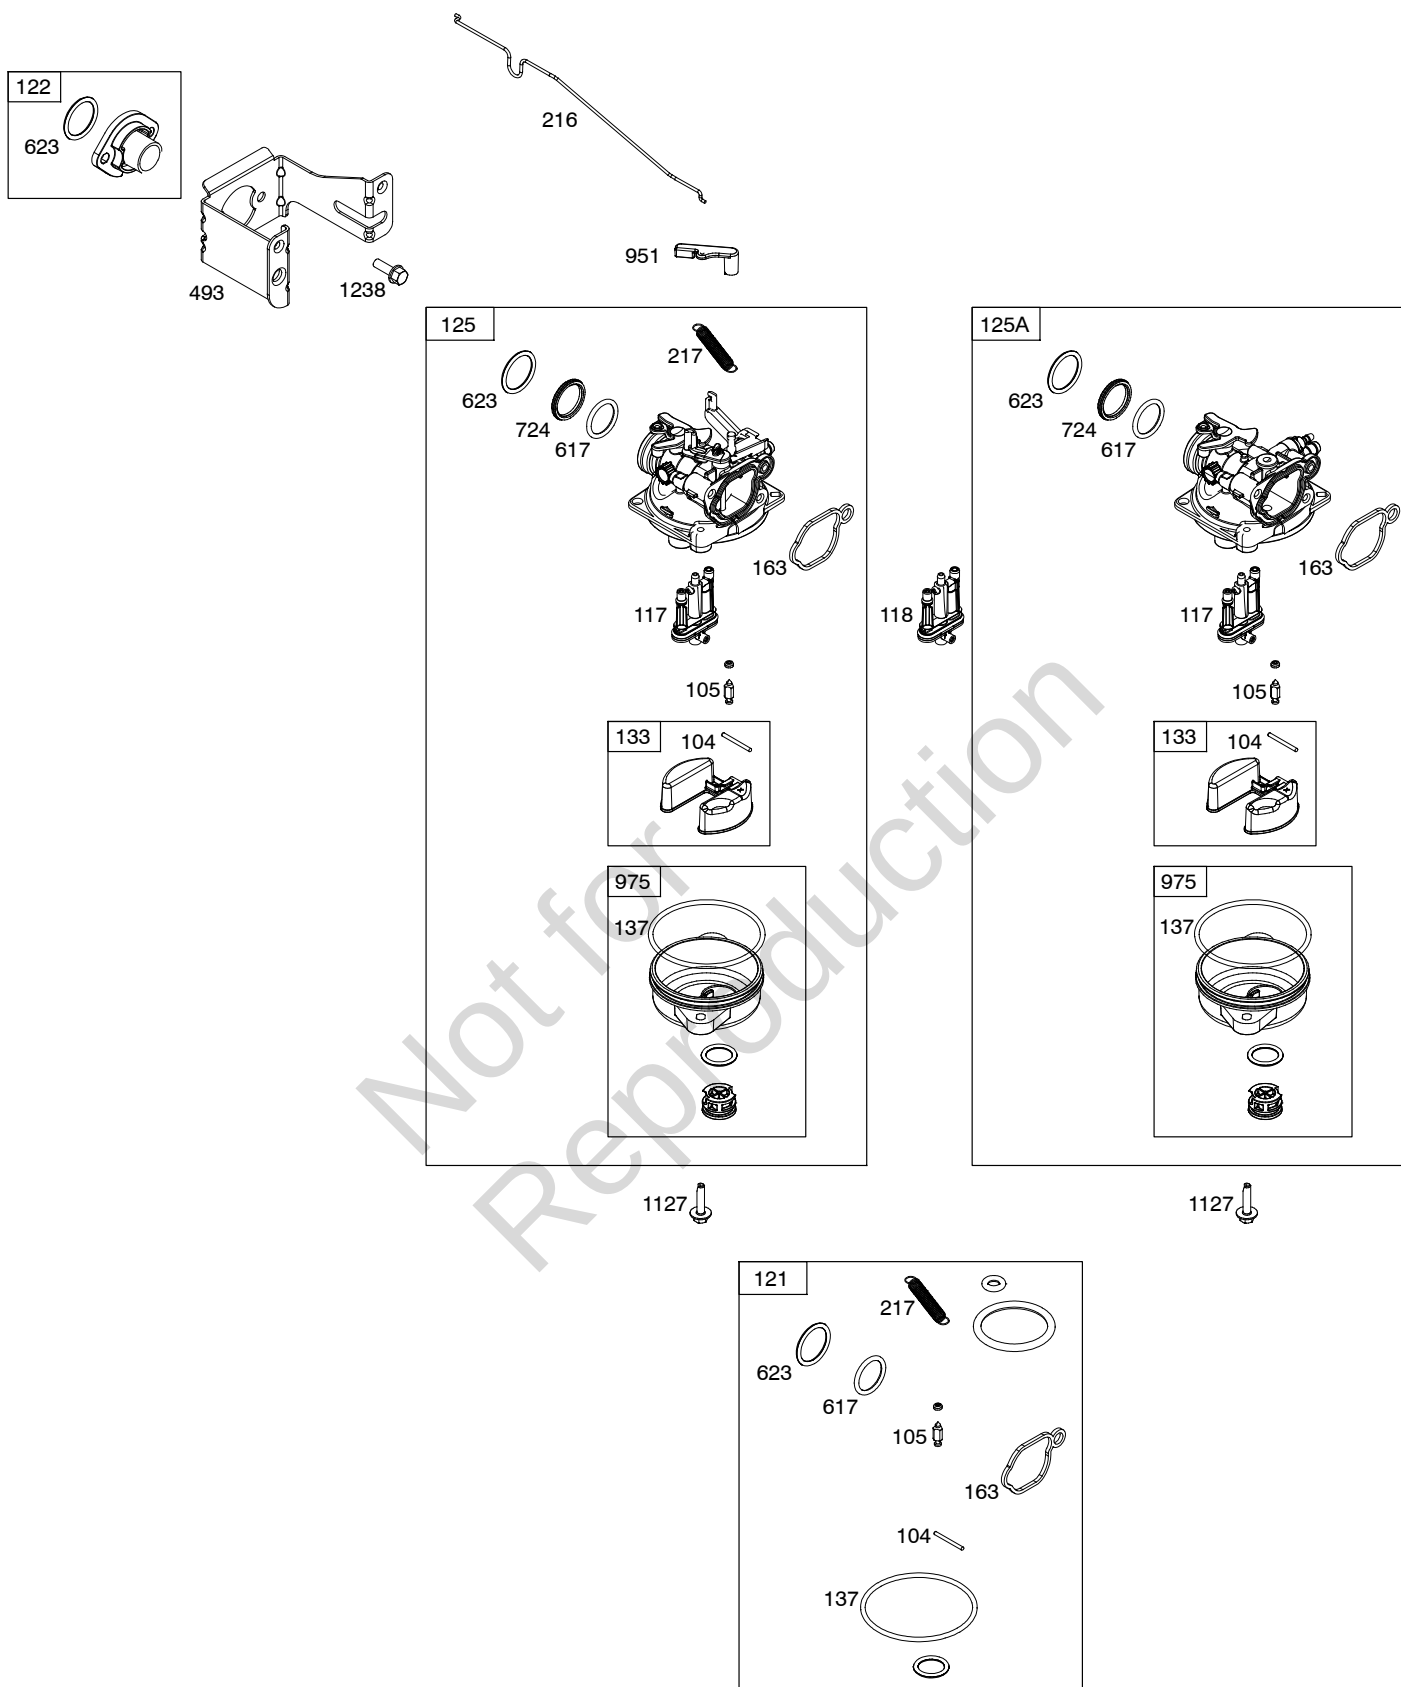


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

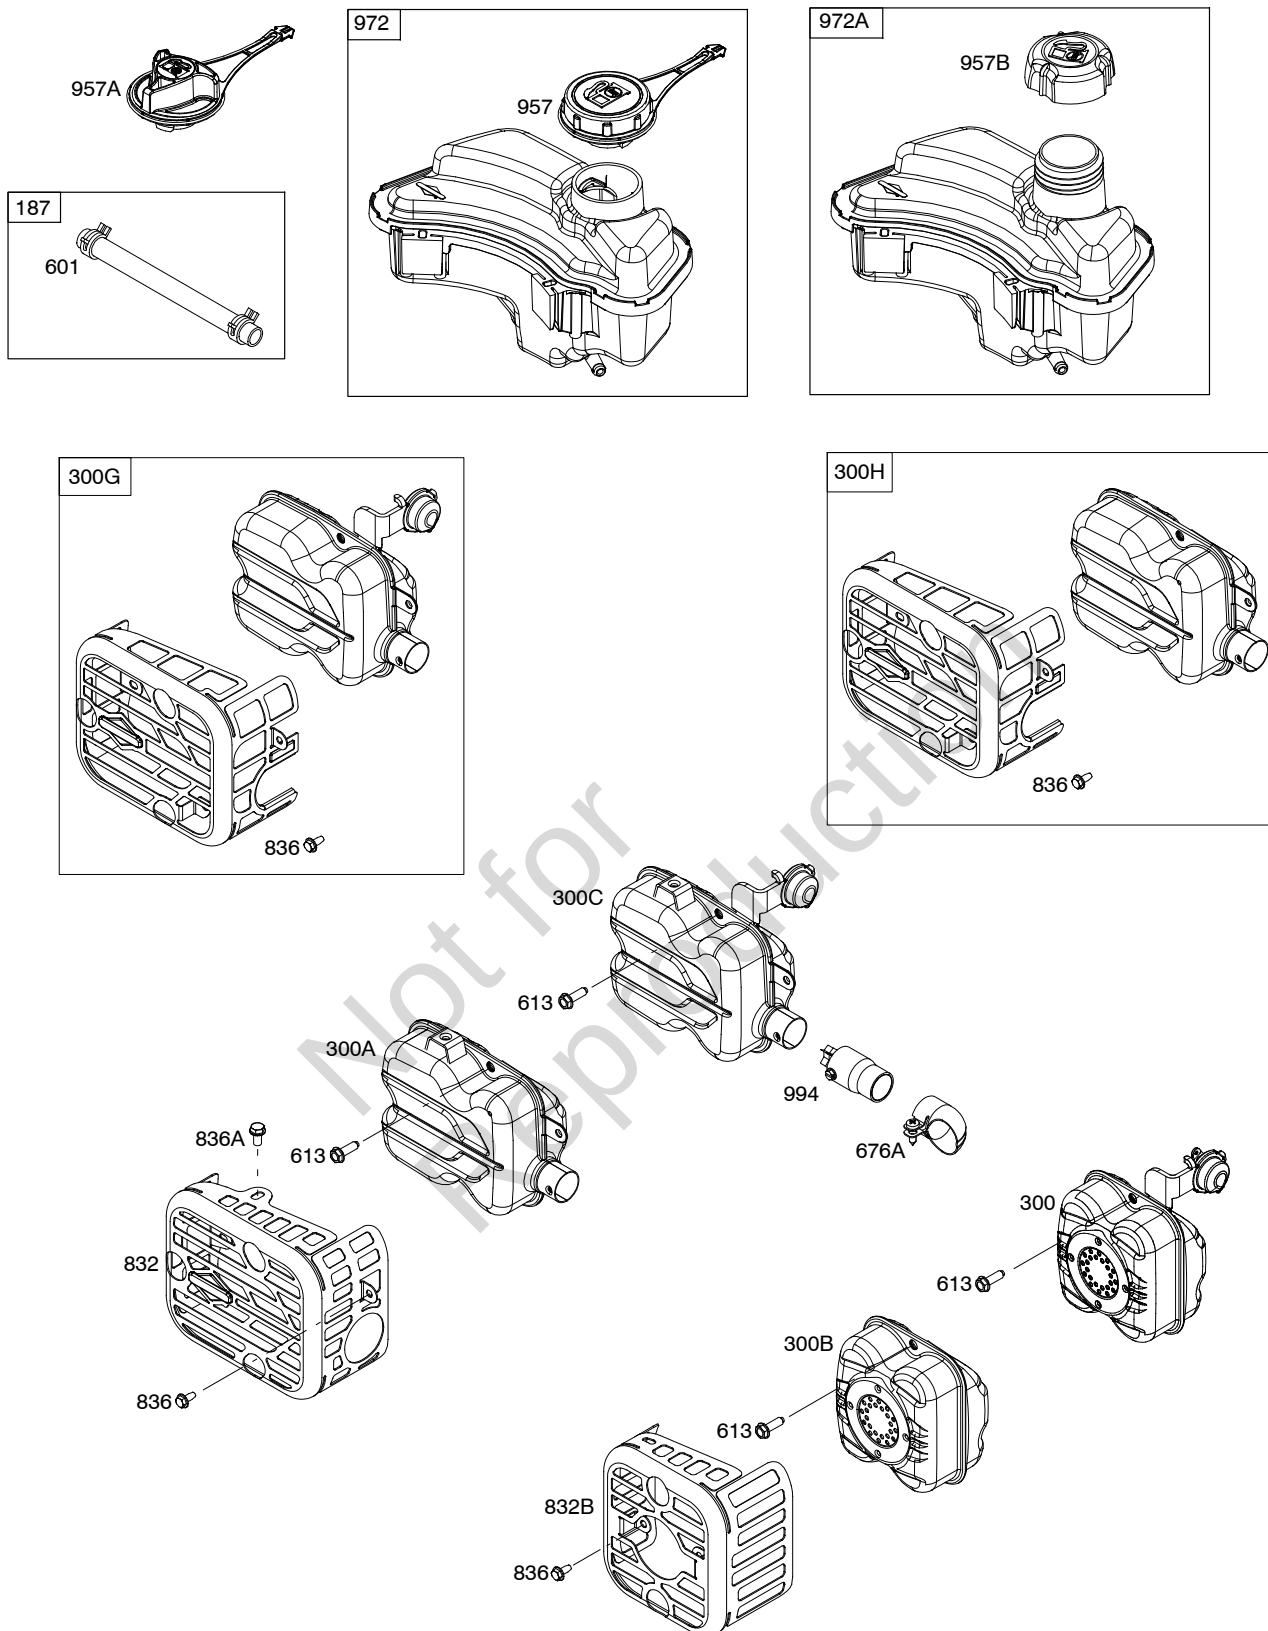


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

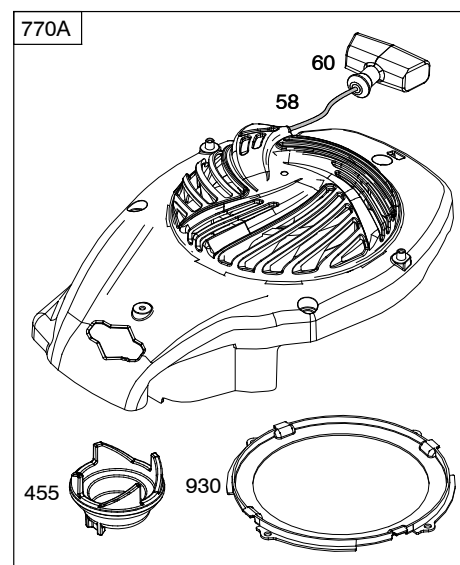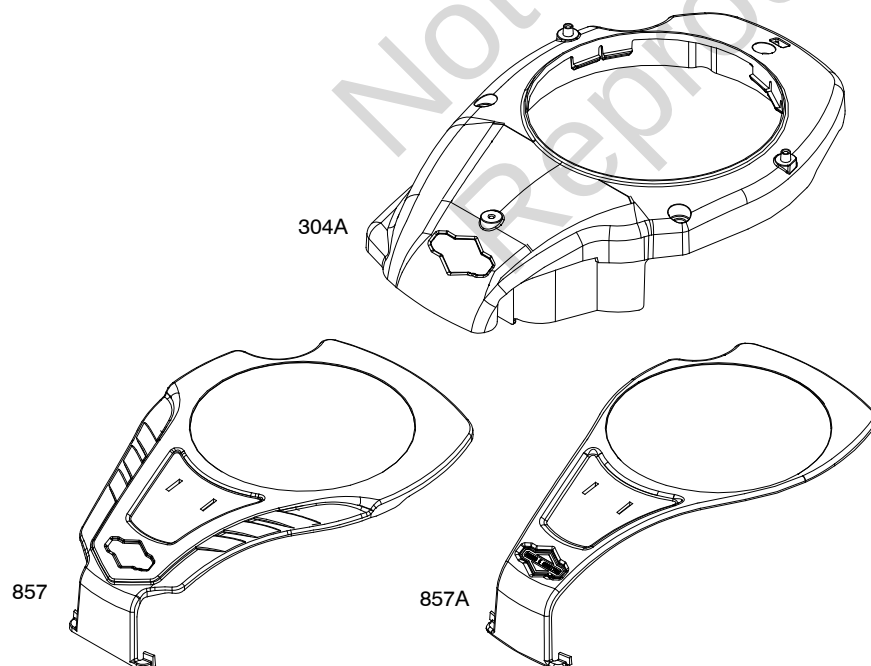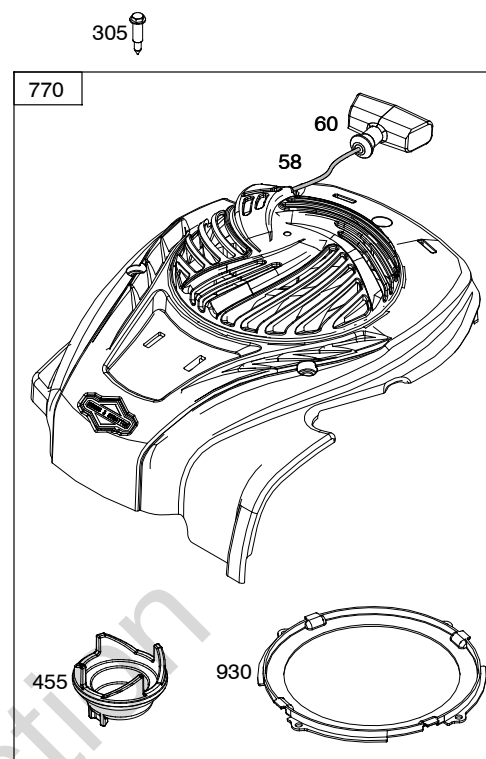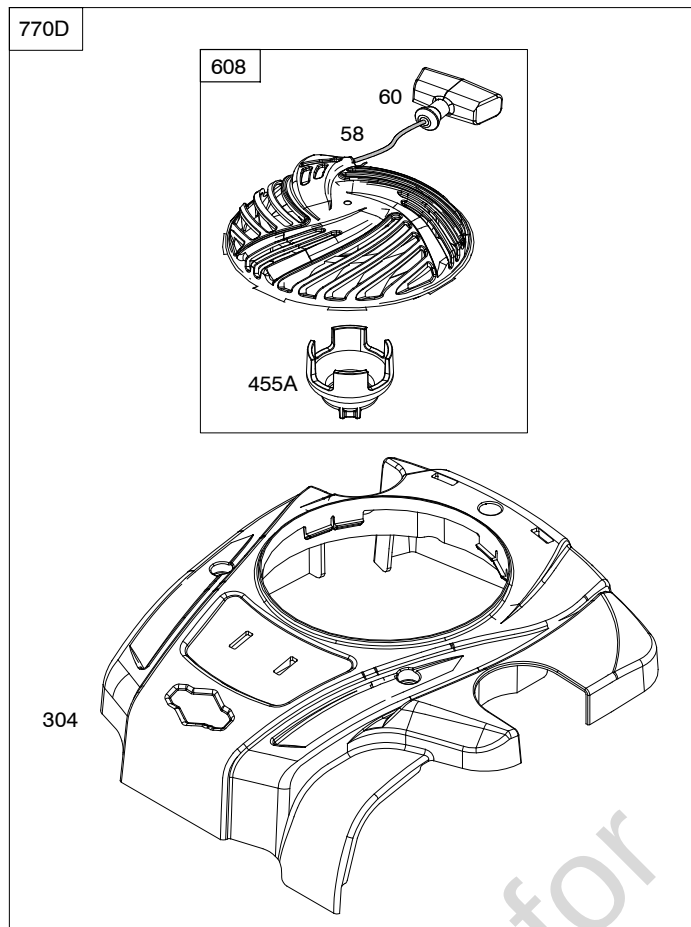

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

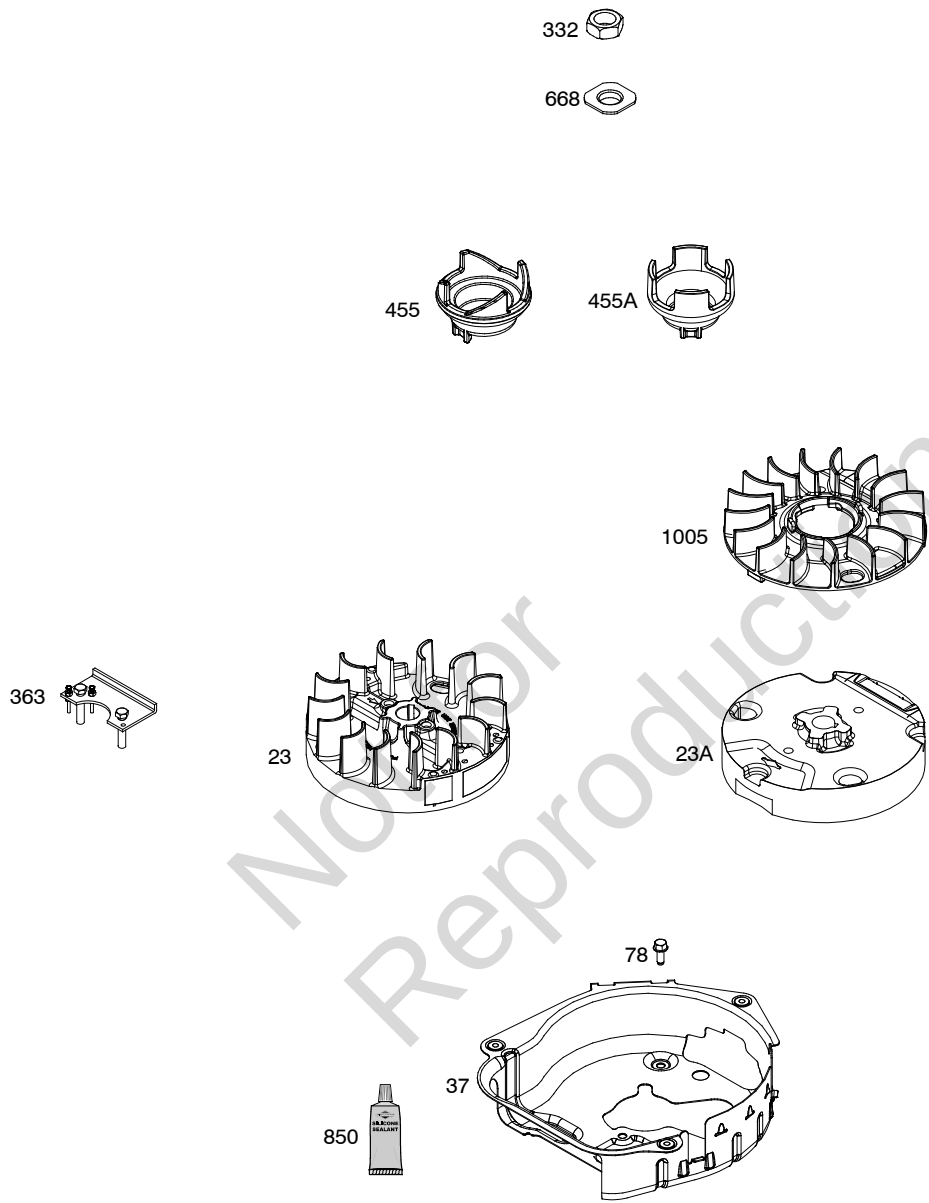

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

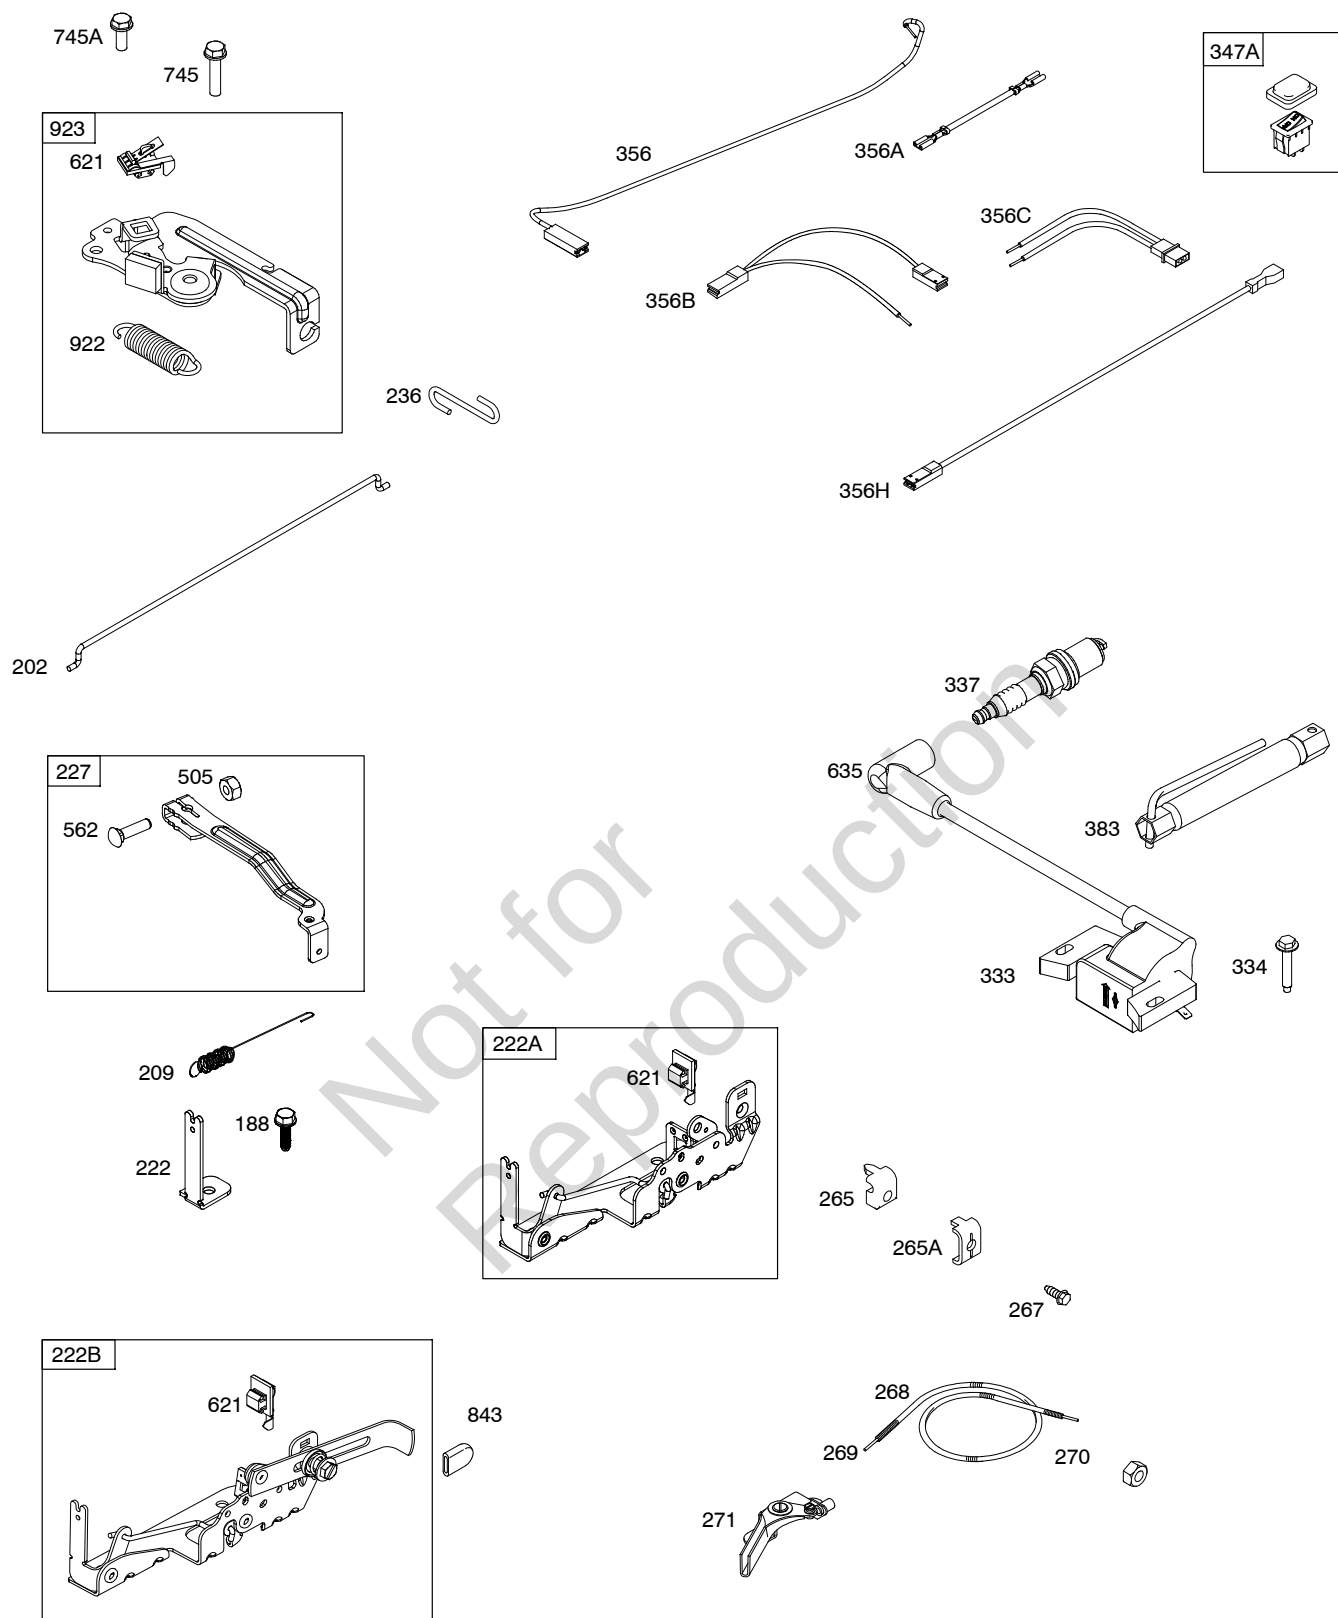

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	590519	Cylinder Assembly ----- Note ----- 595168 Cylinder Assembly Used on Type No(s). 0198, 0205.	20	391483s	Seal-Oil (PTO Side)	43	697799	Slinger-Governor/Oil ----- Note ----- 792242 Slinger- Governor/Oil (Used Before Code Date 13062400). Used on Type No(s). 0117, 0124, 0128.
3	299819s	Seal-Oil (Magnetos Side)	22	692551	Screw (Crankcase Cover/Sump)	45	590514	Tappet-Valve
4	590569	Sump-Engine	22A	590763	Screw (Crankcase Cover/Sump)	46	592968	Camshaft
5	592641	Head-Cylinder	23	590544	Flywheel	58	591108	Rope-Starter
7	799586	Gasket-Cylinder Head	23A	592005	Flywheel	60	691915	Grip-Starter Rope
11	590522	Tube-Breather	24	222698s	Key-Flywheel	60A	281434s	Grip-Starter Rope
12	799587	Gasket-Crankcase	25	590521	Piston Assembly (Standard)	60B	799716	Grip-Starter Rope
13	590512	Screw (Cylinder Head)	26	590523	Ring Set (Standard)	78	793480	Screw (Flywheel Guard)
16	590538	Crankshaft ----- Note ----- 590537 Crankshaft Used on Type No(s). 0011, 0012, 0013, 0014, 0015, 0016, 0017, 0018, 0019, 0028, 0029, 0031, 0042, 0043, 0044, 0046, 0049, 0050, 0054, 0056, 0060, 0062, 0065, 0071, 0072, 0084, 0085, 0086, 0092, 0093, 0094, 0095, 0096, 0097, 0102, 0105, 0106, 0109, 0111, 0112, 0113, 0114, 0119, 0120, 0122, 0123, 0130, 0131, 0132, 0136, 0137, 0140, 0142, 0153, 0156, 0160, 0161, 0183, 0193, 0198, 0199, 0201, 0203, 0204, 0207. 591152 Crankshaft Used on Type No(s). 0037, 0047, 0116, 0117, 0124, 0128, 0129, 0168, 0174, 0176, 0181, 0194, 0195.	27	691588	Lock-Piston Pin	104	590558	Pin-Float Hinge
			28	699659	Pin-Piston (Standard)	105	594581	Valve-Float Needle ----- Note ----- 698537 Valve-Float Needle Used on Type No(s). 0198, 0205.
			29	590518	Rod-Connecting	117	592803	Jet-Main (Standard) ----- Note ----- 592792 Jet-Main (Standard) Used on Type No(s). 0001, 0003, 0005, 0006, 0007, 0010, 0024, 0033, 0045, 0046, 0047, 0055, 0075, 0087, 0098, 0104, 0115, 0116, 0119, 0139, 0144, 0145, 0146, 0148, 0162, 0163, 0165, 0169, 0171, 0190, 0194, 0195, 0198, 0205. 592793 Jet-Main (Standard) Used on Type No(s). 0002, 0004, 0008, 0009, 0025, 0027, 0036, 0037, 0117, 0124, 0128, 0129, 0147, 0149, 0164, 0166, 0167, 0168, 0176, 0178, 0179, 0181.
			32	691664	Screw (Connecting Rod)			
			33	590531	Valve-Exhaust			
			34	590530	Valve-Intake			
			35	590532	Spring-Valve (Intake)			
			36	590532	Spring-Valve (Exhaust)			
			37	594729	Guard-Flywheel ----- Note ----- 594726 Guard- Flywheel Used on Type No(s). 0088, 0105, 0106, 0108, 0109, 0110, 0111, 0113, 0114, 0117, 0118, 0120, 0122, 0123, 0124, 0126, 0127, 0128, 0129, 0135, 0136, 0138, 0151, 0168, 0170, 0171, 0174, 0175, 0176, 0181, 0183, 0192, 0194, 0195, 0207.			
			40	590528	Retainer-Valve			

09P700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	592800	Jet-Main (Standard) Used on Type No(s). 0011, 0012, 0015, 0017, 0021, 0023, 0028, 0029, 0034, 0040, 0043, 0048, 0056, 0057, 0058, 0064, 0065, 0066, 0067, 0068, 0069, 0070, 0079, 0084, 0088, 0094, 0095, 0096, 0097, 0100, 0101, 0106, 0108, 0109, 0114, 0118, 0131, 0133, 0153, 0154, 0155, 0156, 0161, 0186, 0197, 0199.	118	592688	Jet-Main (High Altitude) ----- Note ----- 592684 Jet-Main (High Altitude) Used on Type No(s). 0001, 0003, 0005, 0006, 0007, 0010, 0024, 0033, 0045, 0046, 0047, 0055, 0075, 0087, 0098, 0104, 0115, 0116, 0119, 0139, 0144, 0145, 0146, 0148, 0162, 0163, 0165, 0169, 0171, 0190, 0194, 0195, 0198, 0205. 592685 Jet-Main (High Altitude) Used on Type No(s). 0002, 0004, 0008, 0009, 0025, 0027, 0036, 0037, 0117, 0124, 0128, 0129, 0147, 0149, 0164, 0166, 0167, 0168, 0176, 0178, 0179, 0181. 592686 Jet-Main (High Altitude) Used on Type No(s). 0011, 0012, 0015, 0017, 0021, 0023, 0028, 0029, 0034, 0040, 0043, 0048, 0056, 0057, 0058, 0064, 0065, 0066, 0067, 0068, 0069, 0070, 0079, 0084, 0088, 0094, 0095, 0096, 0097, 0100, 0101, 0106, 0108, 0109, 0114, 0118, 0131, 0133, 0153, 0154, 0155, 0156, 0161, 0186, 0197, 0199.			594283 Jet-Main (High Altitude) Used on Type No(s). 0141, 0142, 0150, 0158, 0173, 0182, 0200, 0207. 594638 Jet-Main (High Altitude) Used on Type No(s). 0177, 0180, 0206. 592687 Jet-Main (High Altitude) Used on Type No(s). 0191.
	592798	Jet-Main (Standard) Used on Type No(s). 0141, 0150, 0158, 0173, 0182, 0200, 0207.				121	590589	Kit-Carburetor Overhaul (Used Before Code Date 15030900) ----- Note ----- 594636 Kit-Carburetor Overhaul (Used After Code Date 15030800) 595174 Kit-Carburetor Overhaul Used on Type No(s). 0198, 0205.
	592796	Jet-Main (Standard) Used on Type No(s). 0177, 0180, 0206.				122	590549	Spacer-Carburetor
	592801	Jet-Main (Standard) Used on Type No(s). 0191.				125	591109	Carburetor ----- Note ----- 799584 Carburetor Used on Type No(s). 0001, 0003, 0005, 0006, 0007, 0010, 0024, 0033, 0045, 0046, 0047, 0055, 0075, 0098, 0104, 0115, 0116, 0119, 0139, 0144, 0145, 0146, 0148, 0162, 0163, 0165, 0169, 0171, 0190, 0194, 0195. 595173 Carburetor Used on Type No(s). 0198, 0205. 595553 Carburetor Used on Type No(s). 0177, 0180, 0206.
	592799	Jet-Main (Standard) (Used Before Code Date 13102400) Used on Type No(s). 0142.						
	592798	Jet-Main (Standard) (Used After Code Date 13102300) Used on Type No(s). 0142.						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
125A	591110	Carburetor Used on Type No(s). 0011, 0012, 0015, 0017, 0021, 0023, 0028, 0029, 0034, 0040, 0043, 0048, 0056, 0057, 0058, 0064, 0065, 0066, 0067, 0068, 0069, 0070, 0079, 0084, 0088, 0094, 0095, 0096, 0097, 0100, 0101, 0106, 0108, 0109, 0114, 0118, 0131, 0133, 0153, 0154, 0155, 0156, 0161, 0186, 0197, 0199. ----- Note ----- 590556 Carburetor Used on Type No(s). 0002, 0004, 0008, 0009, 0025, 0027, 0036, 0037, 0117, 0124, 0128, 0129, 0147, 0149, 0164, 0166, 0167, 0168, 0176, 0178, 0179, 0181. 590555 Carburetor Used on Type No(s). 0087. 593247 Carburetor Used on Type No(s). 0141, 0142, 0150, 0158, 0173, 0182, 0200, 0207.	155	590529	Plate-Cylinder Head	268	691025	Casing-Control Wire (Cut To Required Length)
			163	799580	Gasket-Air Cleaner			
			187	791766	Line-Fuel (Cut To Required Length)	269	691026	Wire-Control (Cut To Required Length)
			188	793480	Screw (Control Bracket)	270	691027	Nut (Control Wire Casing)
			192	590535	Adjuster-Rocker Arm	271	691028	Lever-Control
			202	590517	Link-Mechanical Governor	300	593248	Muffler Used on Type No(s). 0151, 0159, 0177, 0180, 0191, 0198, 0205, 0206.
			209	590541	Spring-Governor ----- Note ----- 591497 Spring- Governor Used on Type No(s). 0057, 0058, 0067, 0068, 0069, 0070, 0072, 0075, 0080, 0081, 0116, 0123, 0139, 0174, 0188, 0194, 0195, 0198, 0205. ----- Note ----- 592567 Spring- Governor Used on Type No(s). 0117, 0124, 0128, 0168, 0176, 0181.	300A	590564	Muffler (Used Before Code Date 16012800) Used on Type No(s). 0034, 0057, 0058, 0065, 0087, 0106, 0182.
			216	590547	Link-Choke	300B	590565	Muffler
			217	590740	Spring-Choke Return	300C	592362	Muffler (Used Before Code Date 16012800)
			222	590560	Bracket-Control	300G	595516	Muffler (Used After Code Date 16012700)
			222A	590561	Bracket-Control	300H	595515	Muffler (Used After Code Date 16012700)
			222B	593221	Bracket-Control			Used on Type No(s). 0034, 0057, 0058, 0065, 0087, 0106, 0182.
			227	590520	Lever-Governor Control	304	593961	Housing-Blower
133	591120	Float-Carburetor	236	591292	Link-Lockout	304A	593962	Housing-Blower
137	593235	Gasket-Float Bowl (Pack of 5) (Used Before Code Date 15030900) ----- Note ----- 594633 Gasket-Float Bowl (Pack of 5) (Used After Code Date 15030800)	238	590533	Cap-Valve	305	590586	Screw (Blower Housing)
			265	690798	Clamp-Casing	318	793480	Screw (Mounting Bracket)
			265A	691024	Clamp-Casing	332	690662	Nut (Flywheel)
			267	692577	Screw (Casing Clamp) ----- Note ----- 799013 Screw (Casing Clamp) Used on Type No(s). 0122, 0207.	333	593872	Armature-Magneto
						334	691061	Screw (Magneto Armature)

09P700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
337	692051	Plug-Spark (Resistor) ----- Note ----- 692720 Plug-Spark (EMS) Used on Type No(s). 0014, 0016, 0022, 0028, 0054, 0065, 0066, 0071, 0073, 0074, 0078, 0079, 0084, 0086, 0088, 0100, 0108, 0109, 0110, 0111, 0112, 0126, 0128, 0142, 0151, 0152, 0153, 0154, 0155, 0160, 0175, 0176, 0183, 0184, 0185, 0187, 0197, 0199, 0201, 0202, 0204, 0208, 0209. 591039 Plug-Spark (Resistor) Used on Type No(s). 0007, 0008, 0009, 0147, 0148, 0166, 0179. 797434 Plug-Spark (Resistor) Used on Type No(s). 0015, 0161, 0181, 0193, 0205.	445	593260	Filter-Air Cleaner Cartridge Used on Type No(s). 0003, 0005, 0007, 0010, 0014, 0015, 0016, 0021, 0022, 0023, 0024, 0028, 0031, 0038, 0045, 0046, 0054, 0060, 0061, 0065, 0066, 0067, 0068, 0069, 0070, 0071, 0073, 0074, 0078, 0079, 0080, 0081, 0084, 0086, 0087, 0088, 0096, 0098, 0099, 0100, 0101, 0103, 0104, 0105, 0106, 0107, 0108, 0109, 0110, 0111, 0112, 0113, 0114, 0116, 0119, 0120, 0122, 0123, 0125, 0126, 0127, 0130, 0131, 0132, 0133, 0135, 0137, 0138, 0139, 0143, 0144, 0145, 0146, 0148, 0151, 0152, 0153, 0154, 0155, 0160, 0161, 0162, 0163, 0165, 0169, 0170, 0171, 0172, 0174, 0175, 0183, 0184, 0185, 0186, 0187, 0188, 0189, 0190, 0192, 0193, 0194, 0195, 0196, 0197, 0198, 0199, 0201, 0202, 0204, 0205, 0208, 0209.	493	593330	Bracket-Mounting (Carburetor)
						505	793515	Nut (Governor Control Lever)
						522	590580	Plug-Dipstick/Fill
						523	796503	Dipstick
						524	691876	Seal-Dipstick Tube
						528	793006	Hose-Primer (Cut to Required Length)
						535	799579	Filter-Air Cleaner Foam Used on Type No(s). 0004, 0009, 0025, 0124, 0128, 0141, 0142, 0147, 0149, 0150, 0158, 0164, 0166, 0167, 0168, 0173, 0176, 0177, 0178, 0179, 0180, 0181, 0182, 0191, 0200, 0206, 0207.
						562	793514	Bolt (Governor-Control Lever)
						598	593291	Shim-End Play (Crankshaft or Camshaft Bearing)
						601	791850	Clamp-Hose
						608	593959	Starter-Rewind (To Be Used With Reference 455A) (Not To Be Used With Reference 455) (Used After Code Date 14082400)
347A	592694	Switch-Rocker Used on Type No(s). 0117, 0124, 0128, 0176, 0181.				613	590562	Screw (Muffler)
356	692390	Wire-Stop				615	690340	Retainer-Governor Shaft
356A	592711	Wire-Stop				616	590516	Crank-Governor
356B	594285	Wire-Stop						----- Note -----
356C	796798	Wire-Stop						592570 Crank-Governor (Used Before Code Date 13062400). Used on Type No(s). 0117.
356H	798943	Wire-Stop Used on Type No(s). 0117, 0124, 0128, 0176, 0181.	455	590545	Cup-Flywheel (Used Before Code Date 14082500)			
			455A	593960	Cup-Flywheel (To Be Used With Reference 608) (Used After Code Date 14082400)			
358	592640	Gasket Set-Engine						
363	19619	Puller-Flywheel						
383	19576s	Wrench-Spark Plug						
404	690272	Washer (Governor Crank)						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
617	270344s	Seal-O Ring (Intake Manifold)	875	590553	Base-Air Cleaner	968B	590581	Cover-Air Cleaner Used on Type No(s).
621	692310	Switch-Stop	875A	590557	Base-Air Cleaner			0004, 0008, 0009,
623	799581	Seal-O Ring (Carburetor Spacer)	875B	590584	Base-Air Cleaner Used on Type No(s).			0025, 0027, 0036,
635	692076	Boot-Spark Plug			0004, 0008, 0009,			0037, 0117, 0124,
668	590546	Spacer (Flywheel)			0025, 0027, 0036,			0128, 0129, 0141,
676A	799187	Deflector-Muffler			0037, 0129, 0141,			0147, 0149, 0150,
718	690959	Pin-Locating (Crankcase Cover/Sump)			0147, 0149, 0150,			0158, 0164, 0166,
724	697478	Retainer-Seal	875C	592695	Base-Air Cleaner Used on Type No(s).	968D	594640	Cover-Air Cleaner Used on Type No(s).
741	796210	Gear-Timing (Plastic)			0117, 0124, 0128,			0177, 0180, 0191,
745	691146	Screw (Brake)	875D	593227	Base-Air Cleaner Used on Type No(s).	971	590552	Screw (Air Cleaner Base to Carburetor/Throttle Body)
745A	690859	Screw (Brake)			0142.			
770	591139	Kit-Rewind/Blower Housing (NO LONGER AVAILABLE) (Use Reference 770D For Replacement)	875F	594639	Base-Air Cleaner Used on Type No(s).	972	590568	Tank-Fuel
770A	592049	Kit-Rewind/Blower Housing (NO LONGER AVAILABLE) (Use Reference 304A With Reference 608 For Replacement) Used on Type No(s).	914	591103	Screw (Rocker Cover)	972A	591947	Tank-Fuel
		0084, 0085, 0101,	922	692135	Spring-Brake	975	591492	Bowl-Float (Used Before Code Date 15030900)
		0107, 0115, 0159,	923	691487	Brake			----- Note -----
		0165.			----- Note -----			594632 Bowl-Float (Used After Code Date 15030800)
770D	595355	Kit-Rewind/Blower Housing			595198 Brake Used on Type No(s).	976	594281	Primer-Carburetor
832	590566	Guard-Muffler	930	590585	Guard-Rewind (Used Before Code Date 15041300)	994	690813	Arrestor-Spark
832B	592709	Guard-Muffler			0201.	1005	592050	Fan-Flywheel
836	690661	Screw (Muffler Guard)	951	591104	Lever-Choke	1022	591255	Gasket-Rocker Cover
836A	793500	Screw (Muffler Guard)	957	799585	Cap-Fuel Tank (Black)	1023	590513	Cover-Rocker
842	691031	Seal-O Ring (Dipstick Tube)			----- Note -----	1026	590515	Rod-Push
843	593215	Sleeve-Lever			591003 Cap-Fuel Tank (Red)	1029	590526	Arm-Rocker
847	590572	Dipstick/Tube Assembly	957A		Cap-Fuel Tank (Order Replacement Fuel Tank Cap Reference Number 957)	1029A	590527	Arm-Rocker
850	100106	Sealant-Liquid	957B	692046	Cap-Fuel Tank	1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
857	591113	Trim-Blower Housing Cover	968	590548	Cover-Air Cleaner	1127	590554	Screw (Float Bowl to Carburetor Body)
857A	591114	Trim-Blower Housing Cover	968A	593228	Cover-Air Cleaner Used on Type No(s).	1238	590562	Screw (Carburetor Spacer)
868	590534	Seal-Valve (Intake)			0142.	1263	697124	Reed-Breather
						1264	793453	Screw (Breather Reed)
						1319	794467	Label-Warning
						1319A	797669	Label-Warning

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10242-13 Assemblies include all parts shown in frames. 03/18/2016

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

