


Unpack 542090 cart and locate the base, axle, 2)wheel assemblies, 2 washers and 2 axle caps to affix the wheels to the axle.

Place axle through frame of cart

Place cart base on hard surface with axle extending through wheel assembly, install flat washer and install wheel cap using a socket and mallet as shown in the photo below.

Repeat on opposite side.

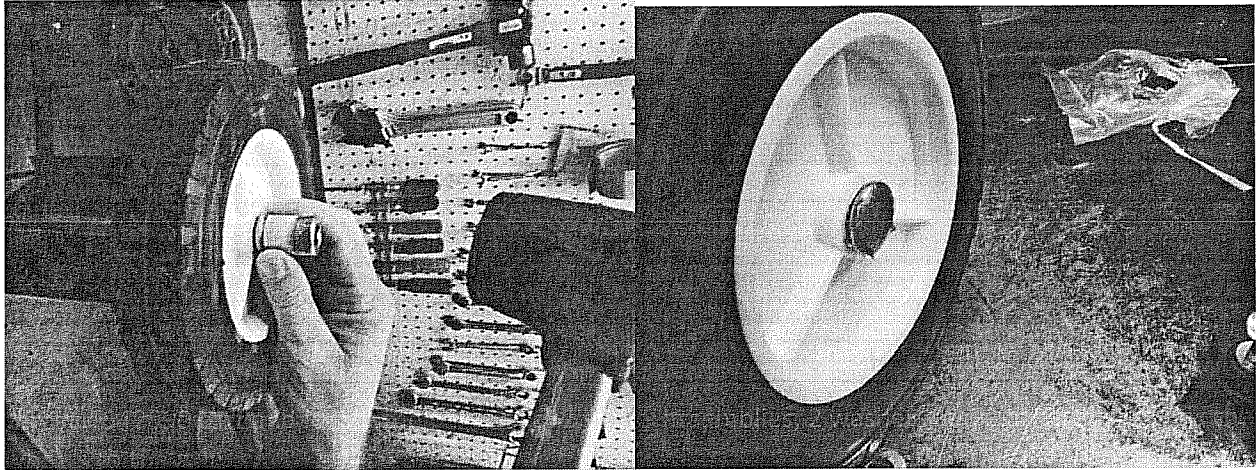


Locate Handle assembly, detergent basket and 2) Basket rod fastener.

Slide one side of the detergent basket through handle frame, pull handle wider to allow the basket mounting rod to slide into place between the handles.

Place handle on a hard surface on side with basket mounting rod facing upward. Affix the basket rod fastener onto basket mounting rod using a socket and mallet as shown in the photo below.

Repeat on opposite side of cart handle.

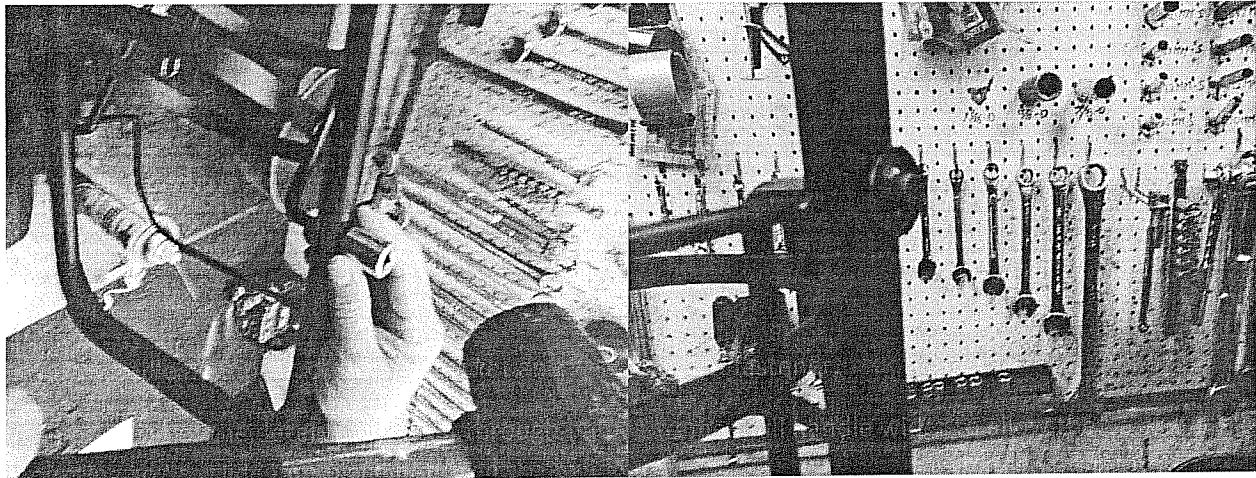

Locate thumbscrew, thumbscrew bolt and flat washer.

Slide handle on to cart base and affix handle using the bolt, thumbscrew and swasher as shown in the photo below.

