




# 120V INFLATOR

CARS • TRUCKS • BIKES • INFLATABLES




**!** **ATTENTION! READ ALL INSTRUCTIONS CAREFULLY**  
FAILURE TO FOLLOW WARNING INSTRUCTIONS CAN RESULT IN FIRE,  
PERSONAL INJURY OR PROPERTY DAMAGE.

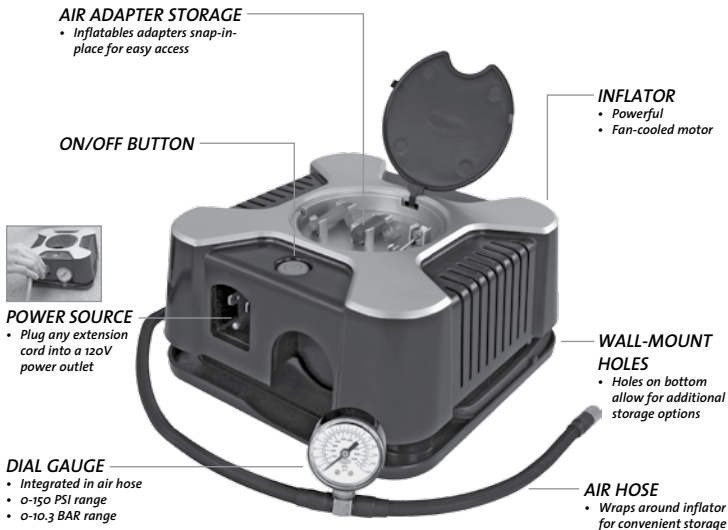

## TECH SPECS

<b>IDEAL USES</b>	Tires, Inflatables, Sports Balls
<b>TIRE INFLATION TIME</b>	4 min*
<b>CFM</b>	0.53 (15 LPM)
<b>AIR HOSE LENGTH</b>	2' (0.6m)
<b>POWER CORD LENGTH</b>	Consumer-supplied extension cord
<b>POWER SOURCE</b>	120 volt wall outlet
<b>GAUGE</b>	In-line dial gauge



\* (0-35 PSI, Standard Tire: P195/65 R15)

**CAUTION: HOT • DO NOT HOLD IN HAND WHILE OPERATING • PLACE INFLATOR ON A HARD, CLEAN SURFACE.**

1. **DO NOT** use inflator continuously for more than 10 minutes. Allow unit to cool approximately 25 minutes between uses. Do not leave inflator unattended.
2. **ALWAYS** ensure air hose connector is secured on the valve stem for proper inflation.
3. **ALWAYS** use a pressure gauge to check tire pressure. **DO NOT** overinflate.
4. Keep inflator out of reach of children.
5. For use with 120 volt outlets only.

## ***INFLATE TIRES***



1. Screw air hose connector onto tire's valve stem.
2. Plug extension power cord into the inflator. Insert opposite end into a 120 volt wall power outlet.
3. Press on/off button to turn on inflator. Inflate tire to manufacturer's recommended air pressure.\* When proper pressure is reached, press on/off button again to turn off inflator. Unplug power cord and remove air hose connector.

\*NOTE: Correct tire pressure can be found in vehicle owner's manual or on driver's side door jamb.

# **TROUBLESHOOTING**

## **Inflator does not turn on:**

1. Make sure plug is fully inserted into the inflator and wall outlet.
2. Make sure the outlet is live by using a known functional electronic device.
3. Check the extension cord for damaged prongs, frays or breaks.

## **Inflator runs but does not inflate:**

1. Be sure the air hose connector is tightly screwed onto the valve stem.
2. Check tire for leaks.
3. Check air hose for breaks and leaks at fittings.
4. Check tire valve for leaks.
5. Check valve core for damage.

## **Inflator runs slowly:**

1. The inflator may have overheated from excessive use. Shut it off and allow it to cool for 25 minutes.

**NOTE:** If tire is totally deflated, it is possible that the tire could separate from the rim allowing air to leak out when trying to inflate. In the event this occurs, it may be necessary to jack up the tire prior to inflation.

**GROUNDING INSTRUCTIONS:** Use only a 3-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that accepts the plug on the product. Make sure your extension cord is not damaged. When using an extension cord, be sure to use one heavy enough to carry the current your product draws. For lengths less than 100 ft, 18 AWG extension cords shall be used. An undersized cord results in a drop in line voltage and loss of power and overheating.

Limited Warranty: Manufacturer's liability is limited to product replacement or cash refund with proof of purchase.

QUESTIONS OR COMMENTS: Call 888-45-SLIME or visit [www.slime.com](http://www.slime.com)

Accessories Marketing, Inc, a division of Illinois Tool Works, Inc. 125 Venture Drive, Suite 210, San Luis Obispo, CA 93401 USA

Slime® is a trademark of Illinois Tool Works, Inc., registered in the U.S. and other countries.