



Installation Manual

Generator Set with QSJ5.9G Engine and PowerCommand® 1.1/2.3 Control

C45 N6 (Spec A)
C50 N6 (Spec A)
C60 N6 (Spec A)
C70 N6 (Spec A)
C80 N6 (Spec A)
C100 N6 (Spec A)

California

Proposition 65 Warning

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Table of Contents

1. IMPORTANT SAFETY INSTRUCTIONS	1
1.1 Warning, Caution, and Note Styles Used in This Manual	1
1.2 General Information	1
1.3 General Precautions	2
1.4 Generator Set Voltage Is Deadly	5
1.5 Engine Exhaust Is Deadly	5
1.6 Fuel and Fumes Are Flammable	6
1.7 Batteries Can Explode	6
1.8 Vented Batteries	7
1.9 Moving Parts Can Cause Severe Personal Injury or Death	7
1.10 The Hazards of Carbon Monoxide	8
2. INTRODUCTION	9
2.1 About This Manual	9
2.2 Related Literature	9
2.3 Before Installation	10
2.4 Model Specifications	11
3. PRE-INSTALLATION CONSIDERATIONS	17
3.2 Installation Codes and Standards for Safety	18
3.3 Required Items for Installation	19
4. INSTALLATION	21
4.1 Site Assessment and Preparation	21
4.2 Fuel Selection and Fuel System Connection	25
4.3 Engine Exhaust	33
4.4 Electrical Connections	33
5. STARTUP AND CONFIGURATION	47
5.1 Exercise Settings	47
5.2 Time Setup	51
5.3 Brightness and Contrast	55
5.4 History and About Menu	57
5.5 Installation Checklist	59
5.6 Startup	60
5.7 InPower Service Tool	61
5.8 Disabling the AMF Feature	61
APPENDIX A. FUEL LINE SELECTION	63
A.0 Fuel System Pipe Sizing Introduction	64
A.1 Gas Pipe Sizing	65
APPENDIX B. OUTLINE AND SYSTEM DRAWINGS	77

APPENDIX C. WIRING DIAGRAMS.....	91
APPENDIX D. SEISMIC REQUIREMENTS.....	133
D.1 Seismic Installation Instructions	135

1 Important Safety Instructions

SAVE THESE INSTRUCTIONS.

This manual contains important instructions for the generator set. Follow these instructions during installation, operation, and maintenance of the generator set and batteries.

Thoroughly read the Operator Manual before operating the generator set. Safe operation and top performance can only be obtained when the equipment is properly operated and maintained.

1.1 Warning, Caution, and Note Styles Used in This Manual

The following safety styles and symbols found throughout this manual indicate potentially hazardous conditions to the operator, service personnel, or equipment.

DANGER

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

CAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates information considered important, but not hazard-related (e.g., messages relating to property damage).

1.2 General Information

This manual should form part of the documentation package supplied by Cummins Power Generation with specific generator sets. In the event that this manual has been supplied in isolation please contact your authorized dealer.

NOTICE

It is in the operator's interest to read and understand all warnings and cautions contained in the documentation relevant to the generator set operation and daily maintenance.

1.3 General Precautions

- Keep ABC fire extinguishers accessible.
- Make sure that all fasteners are secure and torqued properly.
- Keep the generator set and its compartment clean. Do not store any items in the generator set compartment.
- Before working on the generator set, make sure the generator set is shut down and disabled.
 1. Press the generator set's "O" (Off) button to stop the generator set. Allow the generator set to thoroughly cool to the touch.
 2. If applicable, turn off and disconnect the battery charger from the AC source before disconnecting the battery cables.
 3. Disconnect the negative (–) cable from the battery and secure it from contacting the battery terminals to prevent accidental starting.
- Use caution when making adjustments when the generator set is running, hot, or when parts are electrically live, as all situations may cause personal injury or death.
- Used engine oil has been identified by some state and federal agencies as causing cancer or reproductive toxicity. Do not ingest, inhale, or come into contact with used oil or its vapors.
- Do not work on the generator set when mentally or physically fatigued or after consuming alcohol or drugs.

NOTICE

Only trained and authorized personnel shall maintain or service the generator set.

NOTICE

The installation of the generator set shall provide enough ventilation to ensure that gases generated by vented batteries during charging, or caused by equipment malfunction, are removed.

General Safety Precautions

WARNING

Hot Pressurized Liquid

Contact with hot liquid can cause severe burns.

Do not open the pressure cap while the engine is running. Let the engine cool down before removing the cap. Turn the cap slowly and do not open it fully until the pressure has been relieved.

WARNING

Moving Parts

Moving parts can cause severe personal injury.

Use extreme caution around moving parts. All guards must be properly fastened to prevent unintended contact.

WARNING

Toxic Hazard

Used engine oils have been identified by some state and federal agencies to cause cancer or reproductive toxicity.

Do not ingest, breathe the fumes, or contact used oil when checking or changing engine oil. Wear protective gloves and face guard.

WARNING

Electrical Generating Equipment

Incorrect operation and maintenance can result in severe personal injury or death.

Do not operate equipment when fatigued, or after consuming any alcohol or drug.

Make sure that only suitably trained and experienced service personnel perform electrical and/or mechanical service.

WARNING

Toxic Gases

Substances in exhaust gases have been identified by some state and federal agencies to cause cancer or reproductive toxicity.

Do not breathe in or come into contact with exhaust gases.

WARNING

High Noise Level

Generator sets in operation emit noise, which can cause hearing damage.

Wear appropriate ear protection at all times.

⚠ WARNING**Hot Surfaces**

Contact with hot surfaces can cause severe burns.

Wear appropriate PPE when working on hot equipment and avoid contact with hot surfaces.

⚠ WARNING**Toxic Hazard**

Ethylene glycol, used as an engine coolant, is toxic to humans and animals.

Wear appropriate PPE. Clean up coolant spills and dispose of used coolant in accordance with local environmental regulations.

⚠ WARNING**Combustible Liquid**

Ignition of combustible liquids is a fire or explosion hazard which can cause severe burns or death.

Do not store fuel, cleaners, oil, etc., near the generator set. Do not use combustible liquids like ether.

⚠ WARNING**Combustible Gases**

Generator sets in operation have combustible gases under pressure, which if ignited can cause eye and ear damage.

Wear appropriate eye and ear protection at all times.

⚠ WARNING**Combustible Gases**

Generator sets in operation have combustible gases under pressure, which if ignited can cause severe injury.

Do not operate the generator set with any doors open.

⚠ WARNING**Fire Hazard**

Materials drawn into the generator set, as well as accumulated grease and oil, are a fire hazard. Fire can cause severe burns or death.

Keep the generator set and the surrounding area clean and free from obstructions. Make sure the generator set is mounted in a manner to prevent combustible materials from accumulating under the unit.

⚠ WARNING***Automated Machinery***

Accidental or remote starting of the generator set can cause severe personal injury or death.

Isolate all auxiliary supplies and use an insulated wrench to disconnect the starting battery cables (negative [-] first).

NOTICE

Keep multi-class ABC fire extinguishers handy. Class A fires involve ordinary combustible materials such as wood and cloth. Class B fires involve combustible and flammable liquid fuels and gaseous fuels. Class C fires involve live electrical equipment. (Refer to NFPA No. 10 in applicable region.)

NOTICE

Before performing maintenance and service procedures on enclosed generator sets, make sure the service access doors are secured open.

NOTICE

Stepping on the generator set can cause parts to bend or break, leading to electrical shorts, or to fuel, coolant, or exhaust leaks. Do not step on the generator set when entering or leaving the generator set room.

1.4 Generator Set Voltage Is Deadly

- Generator set output connections must be made by a trained and experienced electrician in accordance with all applicable codes.
- This generator set and the public utility may only be connected to house circuits by means of the automatic transfer switch.

⚠ CAUTION

Improper connections can lead to electrocution of utility workers and damage to equipment. Make sure that the connections are installed properly by a trained technician.

- Use caution when working on live electrical equipment. Remove jewelry, and make sure clothing and shoes are dry. Stand on a dry wooden platform.

1.5 Engine Exhaust Is Deadly

- See [The Hazards of Carbon Monoxide](#) to learn the symptoms of Carbon Monoxide poisoning.

- Locate the generator set away from doors, windows, other openings into the house, and where exhaust gases will disperse away from the house.

1.6 Fuel and Fumes Are Flammable

Fire, explosion, and personal injury or death can result from improper practices.

- Do not fill fuel tanks while the engine is running unless the tanks are outside the engine compartment. Fuel contact with hot engine or exhaust is a potential fire hazard.
- Do not permit any flame, cigarette, pilot light, spark, arcing equipment, or other ignition source near the generator set or fuel tank.
- Fuel lines must be adequately secured and free of leaks. Fuel connection at the engine should be made with an approved flexible line. Do not use copper piping on flexible lines as copper will become brittle if continuously vibrated or repeatedly bent.
- Make sure all fuel supplies have a positive shutoff valve.
- Make sure the battery area has been well-ventilated prior to servicing near it. Lead-acid batteries emit a highly explosive hydrogen gas that can be ignited by arcing, sparking, smoking, etc.

1.7 Batteries Can Explode

Batteries can explode, causing severe skin and eye burns and can release toxic electrolytes.

WARNING

Combustible Gases

Batteries can explode, causing severe skin and eye burns, and can release toxic electrolytes.

Do not dispose of the battery in a fire, because it is capable of exploding. Do not open or mutilate the battery.

WARNING

Electric Shock Hazard

Batteries present the risk to high short circuit current.

Remove watches, rings, or other metal objects. Use tools with insulated handles.

NOTICE

Servicing of batteries is to be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.

NOTICE

- Wear safety glasses.
- Do not smoke.
- To prevent arcing when disconnecting the battery:
 1. Press the Stop switch.
 2. Disconnect AC power from any battery chargers.
 3. Remove the negative (-) battery cable to prevent starting.
- To prevent arcing when reconnecting the battery:
 1. Reconnect the positive (+) cable.
 2. Reconnect the negative (-) cable.
 3. Reconnect the battery charger to AC power supply.
- When replacing the generator set battery, always replace it with a battery as specified in this manual.

1.8 Vented Batteries

⚠ WARNING***Toxic Hazard***

The electrolyte in vented batteries is a dilute sulfuric acid that is harmful to the skin and eyes. It is also electrically conductive and corrosive.

Always:

- 1. Wear full eye protection and protective clothing;***
- 2. If the electrolyte contacts the skin, wash it off immediately with water;***
- 3. If the electrolyte contacts the eyes, flush them thoroughly and immediately with water and seek medical attention; and***
- 4. Wash spilled electrolyte down with an acid neutralizing agent. A common practice is to use a solution of one pound (500 grams) bicarbonate of soda (also known as baking soda or sodium bicarbonate) to one gallon (4 liters) of water.***
- 5. Continue to add the bicarbonate of soda solution until the evidence of reaction (that is, foaming) has stopped.***
- 6. Flush the resulting liquid with water and dry the area.***

1.9 Moving Parts Can Cause Severe Personal Injury or Death

- Do not wear loose clothing or jewelry near moving parts, such as fans.
- Keep hands away from moving parts.
- Keep guards in place over fans.

1.10 The Hazards of Carbon Monoxide

Carbon monoxide (CO) is an odorless, colorless, tasteless and non-irritating gas. You cannot see it or smell it. Red blood cells, however, have a greater affinity for CO than for oxygen. Therefore, exposure even to low levels of CO for a prolonged period can lead to asphyxiation (lack of oxygen) resulting in death. Mild effects of CO poisoning include eye irritation, dizziness, headaches, fatigue and the inability to think clearly. More extreme symptoms include vomiting, seizures and collapse.

Engine-driven generator sets produce harmful levels of carbon monoxide that can injure or kill you.

What Is Carbon Monoxide Poisoning?

Carbon Monoxide (CO) is an odorless, colorless, tasteless and non-irritating gas. You cannot see it or smell it. Red blood cells, however, have a greater affinity for CO than for Oxygen. Therefore, exposure even to low levels of CO for a prolonged period can lead to asphyxiation (lack of Oxygen) resulting in death. Mild effects of CO poisoning include eye irritation, dizziness, headaches, fatigue and the inability to think clearly. More extreme symptoms include vomiting, seizures and collapse.

Protecting Yourself from CO Poisoning

- Locate the generator set in an area where there are no windows, doors, or other access points into the home.
- Make sure all CO detectors are installed and working properly.
- Pay attention for signs of CO poisoning.
- Check the exhaust system for corrosion, obstruction, and leaks every time you start the generator set and every eight hours when you run it continuously.

2 Introduction

This generator set is intended for stationary installation for emergency use only.

2.1 About This Manual

This manual is a guide for the installation of the generator set models listed on the front cover. Proper installation is essential for top performance, reliable operation, and safety. Read through this manual before starting the installation. This manual covers outdoor applications only. For other applications, such as indoor applications, contact your local Cummins dealer or reference the Application Manual at the following link:
<http://www.cumminspower.com/www/literature/applicationmanuals/t030.pdf>

NOTICE

The installation must comply with all applicable building codes.

See the generator set's specific Operator Manual for operation and maintenance and specific Service Manual for service.

NOTICE

Manuals are updated from time to time to reflect changes in the equipment and its specifications. The most up-to-date version of this manual is found on the QuickServe website (<https://quickserve.cummins.com/info/index.html>).

2.2 Related Literature

Before any attempt is made to operate the generator set, the operator should take time to read all of the manuals supplied with the generator set, and to familiarize themselves with the warnings and operating procedures.

The literature provided with the generator set is as follows:

- Operator Manual (A051X877)
- Installation Manual (A051X873)

NOTICE

A generator set must be operated and maintained properly if you are to expect safe and reliable operation. The Operator manual includes a maintenance schedule and a troubleshooting guide.

The Health and Safety manual must be read in conjunction with this manual for the safe operation of the generator set:

- **Health and Safety Manual (0908-0110)**
- **Warranty Statement (A028U870)**
- ***C45 N6, C50 N6 and C60 N6 models only: Emissions Component Defect Warranty Statement (A028X278)***
- ***C70 N6, C80 N6 and C100 N6 models only: Emissions Component Defect Warranty Statement (A028X279)***

The relevant manuals appropriate to your generator set are also available. The documents below are in English:

- Service Manual (A051X880)
- Parts Manual (A051X891)
- EControls, Inc., Global Control Platform (GCP) Software Service Manual (A035C596)
- EControls, Inc., 4G Software Service Manual (A052G032)
- EControls, Inc., GCP Engine Display Interface Software (EDIS) Training Manual (A035C608)
- EControls, Inc., 4G Software Operator Manual (A052G024)
- Engine Operation & Maintenance Manual for QSJ5.9G (4388606)
- RA Series Transfer Switch Owner Manual (A046S594) - if applicable
- PowerCommand® 1302 Controller Owner's Manual (900-0661)
- Service Tool Manual (A043D529)
- Standard Repair Times - HL Family (A053K365)
- T-030: Liquid Cooled Generator Set Application Manual (A040S369) - for application information

2.3 Before Installation

Before beginning the installation of the generator set, verify that the unit was correctly selected. Check the following features:

- Model
- Specifications
- Options
- Fuel Supply

2.4 Model Specifications

NOTICE

Damage caused by failure to follow the manufacturer's recommendation will not be covered by the warranty. Please contact your authorized distributor.

TABLE 1. 5.9L MODEL VARIATIONS

Models	Description
C45 N6, C50 N6, C60 N6, C70 N6, C80 N6, C100 N6	60 Hz, 1800 RPM

TABLE 2. COLD WEATHER SPECIFICATIONS (ALL MODELS)

Temperature	Description	Battery Type	Group
Above 40 °F (4 °C)	Battery charger	Standard	34
0 to 40 °F (-17 to 4 °C)	Battery charger, coolant heater (1000W), CCV heater ¹	Standard	34
Below 0 °F (-17 °C)	Battery charger, coolant heater (1500W), oil heater, battery heater, CCV heater ¹ , cold weather starter ²	Larger	4D

¹CCV heaters are provided as part of the cold and extreme cold coolant heater packages.
²The cold weather starter is provided as part of the extreme cold coolant heater package.

NOTICE

For NFPA 110 applications, a coolant heater is required. A factory option is available.

TABLE 3. FUEL SPECIFICATIONS 60 HZ, 1800 RPM

Type	Unit	C45 N6	C50 N6	C60 N6	C70 N6	C80 N6	C100 N6
Liquid Propane Full Load	scfh	289.6	321.6	370.2	384.2	420.8	518.7
	BTU/hr	651,600	723,600	832,950	864,450	946,800	1,167,075
Natural Gas Full Load	scfh	711.2	806.3	933.8	988.4	1,083.5	1,317.7
	BTU/hr	721,868	818,395	947,807	1,003,226	1,099,753	1,337,466

Type	Unit	C45 N6	C50 N6	C60 N6	C70 N6	C80 N6	C100 N6
Fuel Pressure		6 - 12 inch water column (1.5 - 3.0 kPa)					
		Maximum pressure under any condition: 13 inch water column (3.2 kPa)					

TABLE 4. ENGINE SPECIFICATIONS (ALL MODELS)

Type	Specification
Engine	6 cylinder-in-line, single-cam, liquid-cooled, 4-stroke, spark ignited
Bore	4.02 in (102 mm)
Stroke	4.72 in (120 mm)
Displacement	359 in ³ (5.88 L)
Compression Ratio (Natural Gas & LPG)	8.5:1
Firing Order	1-5-3-6-2-4
Spark Plug Gap 45, 50, 60 kW)	0.020 in (0.508 mm)
Spark Plug Gap (70, 80, 100 kW)	0.016 in (0.40 mm)
Spark Plug Torque	28 ft-lb (38 Nm)
Crankshaft Rotation (Viewed from the Front of the Engine)	Clockwise
Engine Weight (Dry, Long Block Only)	911 lb (413 kg)
Valve Clearance (Intake)	0.012 in (0.305 mm)
Valve Clearance (Exhaust)	0.024 in (0.610 mm)
Coolant	<ul style="list-style-type: none"> • 50/50 coolant solution (50% pure water and 50% anti-freeze) • 4.23 gallons (16 L) capacity
Oil Capacity	4 gallons (15 L)

Type	Specification
Oil Standards	<ul style="list-style-type: none"> • Must adhere to Cummins® Engineering Standard (CES) 20074 • Use of improper oils can result in engine damage. Use only the required oils: <ul style="list-style-type: none"> ◦ 5W-40 (all ambient temperatures) ◦ 15W-40 (above 40 °F [4 °C] ambient temperature) (use of GEO 15W-40 oil in ambient temperatures below 40 °F [4 °C] could result in engine turbocharger damage) • A sulfated ash limit of 0.6% mass has been placed on all engine lubricating oils recommended for use in Cummins® B, natural gas engines. Higher ash oils can cause valve and/or piston damage, cause spark plug fouling, and lead to excessive oil consumption and degradation of the catalyst.

TABLE 5. GENERATOR SET SIZE SPECIFICATIONS

Enclosure Type	Size (L x W x H)
Open/Weather	98 x 40 x 58 in (2489 x 1016 x 1473 mm); does not include exhaust discharge elbow
Sound Level 1	119 x 40 x 58 in (3023 x 1016 x 1473 mm)
Sound Level 2	136 x 40 x 58 in (3454 x 1016 x 1473 mm)

TABLE 6. GENERATOR SET WET WEIGHT (POUNDS) (60 HZ, 1800 RPM)

Configuration	C45 N6	C50 N6	C60 N6	C70 N6	C80 N6	C100 N6
Open	2180	2180	2431	2449	2587	2719
Weather	2359	2359	2610	2628	2766	2898
Sound Level 1	2455	2455	2706	2724	2862	2994
Sound Level 2	2485	2485	2736	2754	2892	3024

NOTICE

Weights are approximate and can be affected by selected options. Refer to outline drawings for specific weight information.

TABLE 7. GENERATOR SPECIFICATIONS 60 HZ, 1800 RPM

Type	C45 N6	C50 N6	C60 N6	C70 N6	C80 N6	C100 N6
Generator	Brushless, 4-pole rotating field, single bearing					
Power (kVA) 1 Phase	45	50	60	70	80	100
Power (kVA) 3 Phase	56.3	62.5	75	87.5	100	125
Rated Voltages (V)	120/240, 1 Ph					
	227/480, 3 Ph					
	347/600, 3 Ph					
	120/240, 3 Ph					
	120/208, 3 Ph					
	127/220, 3 Ph					
	F1PO (Reconnectable, Full Single Phase Output)					

NOTICE

Maximum I_2 = 8%. Generator set load unbalance must not exceed 25% between any phases.

TABLE 8. GENERATOR SET DERATING GUIDELINES

Model	Phase	Engine Power Available Up To...		Derate At...	
		Elevation	Ambient Temperature	Elevation	Temperature
C45 N6	Both	2200 ft (675 m)	104 °F (40 °C)	4% per 985 ft (300 m)	2% per 18 °F (10 °C)
C50 N6	Both	490 ft (150 m)	77 °F (25 °C)		
C60 N6	Both	3280 ft (1000 m)	104 °F (40 °C)		
C70 N6	1	8450 ft (2575 m)			
	3	10000 ft (3048 m)			
C80 N6	1	5985 ft (1825 m)			
	3	8200 ft (2500 m)			
C100 N6	1	1560 ft (700 m)	77 °F (25 °C)		
	3	3280 ft (1000 m)	104 °F (40 °C)		

TABLE 9. CONTROL SPECIFICATIONS (ALL MODELS)

Control	Purpose
PC 1.1	Generator Set
Enovations I28 EPR	Engine (45, 50, 60 kW Generator Sets)
Enovations 4G LDI	Engine (70, 80, 100 kW Generator Sets)

TABLE 10. DC SYSTEM SPECIFICATIONS (ALL MODELS)

Type	Specification
Nominal Battery Voltage	12 VDC
Battery Group	34 Standard, 4D High Capacity (Requires Large Battery Tray)
Battery Type	Maintenance-Free
Minimum Cold Crank Amps	850 Standard, 1080 High Capacity (Requires Large Battery Tray)

TABLE 11. LUBRICATING OIL SYSTEM SPECIFICATIONS

Type	Specification
Lubricating Oil Pressure at Idle (Minimum)	15 psi (104 kPa)
Lubricating Oil Pressure at Rated Speed (Minimum)	
Filter Bypass Valve-Opening Pressure	45 psi (311 kPa)
Pressure Regulator Valve-Opening Pressure	65 psi (449 kPa)
Lubricating Oil Capacity (Standard Sump):	
--High	15 qt (14.2 liters)
--Low	13 qt (12.4 liters)
--Total System	16 qt (15.1 liters)

This page is intentionally blank.

3 Pre-Installation Considerations

Areas of consideration:

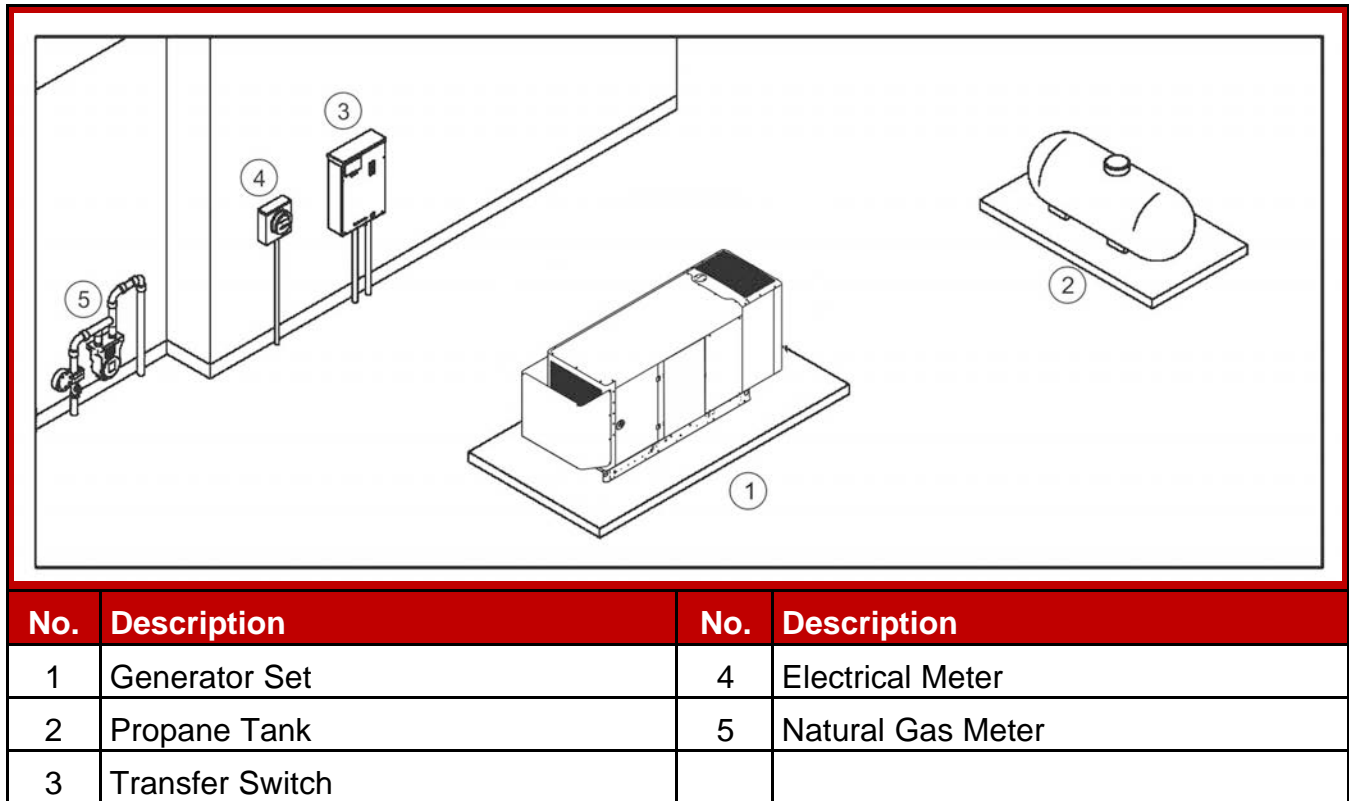


FIGURE 1. SITE PREPARATION EXAMPLE

- Location of the generator set - this is one of the first decisions to be made, as it affects all other aspects of the installation, such as:
 - Length of electric wiring
 - Length of gas lines (natural gas or propane - both must be inspected by the gas utility inspectors and building inspectors)
 - Site preparation:
 - Access to the site
 - Trenches
 - Site preparation materials needed
- Fuel supply pressure
- Automatic transfer switch location and connections
- Tools and materials required

- Minimum distance from the propane tank fill (verify the legal minimum distance with local code officials)
- Accessories required (if any) for the customer's application (utility power may be required at the generator set; make plans accordingly)

NOTICE

Depending on the locality and use of the generator set, it may be necessary to obtain an air quality emissions permit before installation begins. Check with local pollution control or air quality authority to determine permit requirements.

3.2 Installation Codes and Standards for Safety

NOTICE

The generator set installer bears sole responsibility for following all applicable local codes and regulations.

The following list of codes and standards may apply to the installation and operation of the generator set. This list is for reference only and not intended to be inclusive of all applicable codes and standards. The address of each agency is listed so that copies of the codes may be obtained for reference. Installation codes and recommendations are subject to change, and may vary by location or over time.

TABLE 12. INSTALLATION CODES AND STANDARDS FOR SAFETY RECOMMENDATIONS

Code or Standard	Organization
NFPA 70 - National Electrical Code NFPA 37 - Installation and Use of Stationary Combustion Engines and Gas Turbines NFPA 54 - National Fuel Gas Code NFPA 58 - Storage and Handling of Liquefied Petroleum Gases NFPA 110 - Standard for Emergency and Standby Power Systems	National Fire Protection Association 470 Atlantic Avenue Boston, MA 02210
CSA Electrical Bulletin CSA 22.1 Canadian Electrical Code CSA B149 CSA C22.2 No. 100 CSA C22.2 No. 14	Canadian Standards Association Housing and Construction Materials Section 178 Rexdale Blvd. Rexdale, Ontario, Canada M9Q 1R3

Code or Standard	Organization
California Administrative Code - Title 25 Chapter 3	State of California Documents Section P.O. Box 1015 North Highlands, CA 95660

3.3 Required Items for Installation

Tools and materials are used for the installation of this generator set. These items are identified in the following sections. Please refer to local codes and standards, because they may affect the materials required.

Materials Required

NOTICE

Refer to local codes and standards, which may affect material requirements.

NOTICE

If a 100% rated breaker is used, 90 °C wire must be used for L1, L2, and L3 with the wire size determined by the 75 °C ampacity tables. Aluminum wire is not allowed with 100% rated breakers.

NOTICE

A UL-listed grounding electrode terminal within its ratings and suitable for the application must be installed and labeled “Grounding Electrode Terminal”.

Electrical Materials:

NOTICE

Class 1 wiring methods must be used for connecting the generator set.

- Four code compliant AC power wires; L1, L2, N and Gnd (add another wire for 3-phase for a total of 5 AC wires)
- If an RA automatic transfer switch will be installed, refer to the RA Series Transfer Switch Owner Manual.
- Wire sizes (DC control and power and AC sense only):
 - DC control or AC sense wires under 1000 feet circuit length => 18-14 AWG of the insulation type below

- DC control or AC sense wires 1000-2000 feet circuit length => 16-14 AWG of the insulation type below
- All AC and DC wires and cables must be rated 75 °C minimum, stranded copper, and rated for wet locations.
 - For wire sizes 14 AWG and larger, use insulation types: RHW, RHW-2, THHW, THW, THW-2, THWN, THWN-2, XHHW, XHHW-2, USE-2, ZW-2
 - For wire sizes 16 and 18 AWG, use insulation types: FFH-2, KFF-2, PAFF, PFF, PGFF, PTFF, RFH-2, RFHH-2, RFHH-3, SFF-2, TFF, TFFN, ZFF
- Code compliant 20 A, 120 VAC, GFCI protected circuit for alternator heaters, battery charger, coolant heater, oil heater, and/or battery heater (if equipped)
- Code compliant conduit for all wires

Mounting Materials:

- Four base tie-down bolts

NOTICE

Seismic zone installations require compliance to specific mounting configurations.

Fuel Materials:

- Flexible fuel line (provided with generator)
- UL listed pipe thread sealant
- Fuel line (natural gas and propane: 6 - 12 inch water column [1.5 - 3.0 kPa] fuel pressure) at generator set
- Fuel pressure regulator (as required)
- Manual fuel shut-off at generator set ahead of automatic valves on generator set fuel system

Loose Parts Shipped With the Generator

The following loose parts are shipped with the generator set:

- Flexible fuel hose assembly
- Two enclosure keys (where applicable)
- Battery tie-down
- Sound level 2 baffle (where applicable)
- Weather enclosure exhaust elbow (where applicable)
- Literature (Operator Manual, Installation Manual, Health and Safety Manual, and Warranty Statements)

4 Installation

NOTICE

The installer is responsible for complying with all applicable installation codes and safety requirements. See the Installation Codes and Standards for Safety section of this manual for more information.

The following sections cover a step-by-step overview of a typical generator set installation.

Review these sections to become familiar with specific procedures and important safety precautions before beginning the installation.

4.1 Site Assessment and Preparation

Proper component location and site preparation have a very important impact on completing a successful installation. The major components and sources of power needed for installation include the following items:

- Generator set
- Transfer switch
- Electrical utility
- Fuel source: natural gas or propane vapor
- Accessories (may be required under certain conditions)

Picking a Location

WARNING

Exhaust gas is deadly. Locate the generator set away from doors, windows, and other openings to the house and where exhaust gases will disperse away from the house.

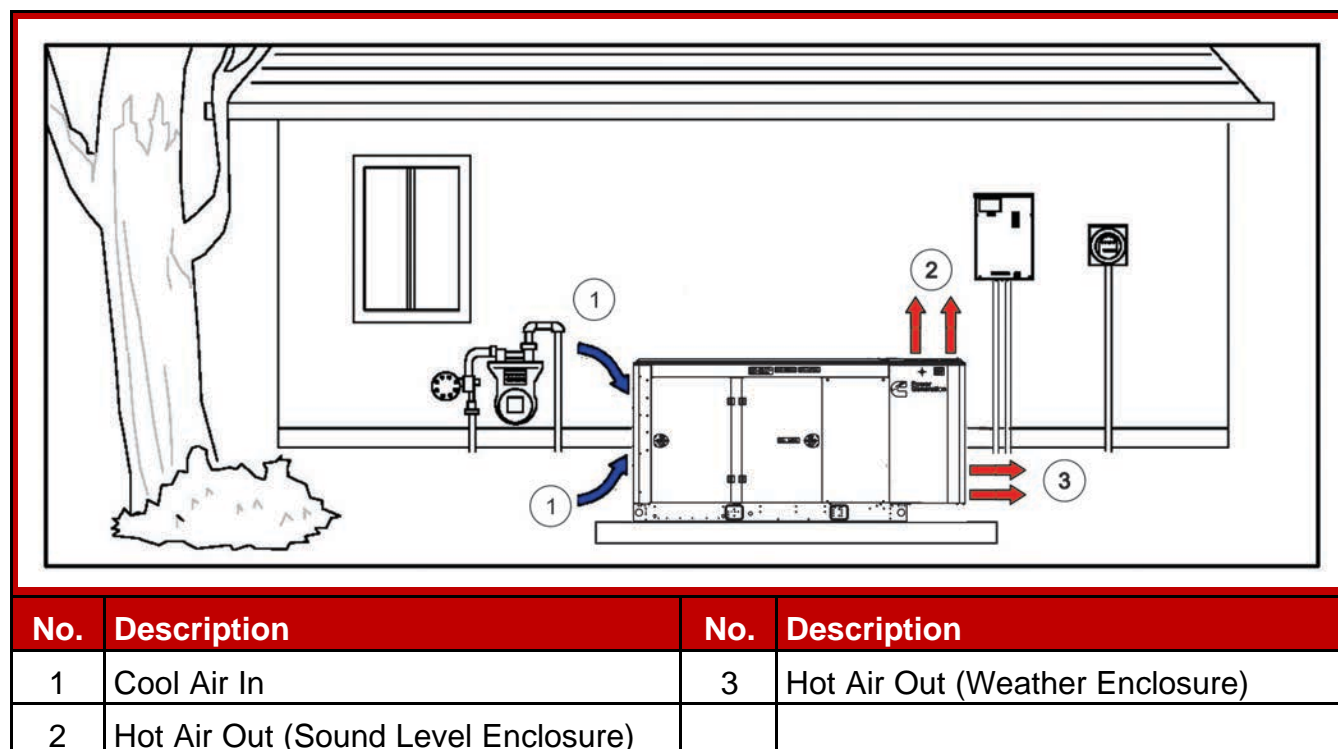


FIGURE 2. GENERATOR SET LOCATION

The generator set location is critical for safety and performance. Follow the guidelines below:

- Must comply with applicable codes (NFPA, NEC, IBC, etc.).
- This manual only covers outdoor installations with Cummins factory installed enclosures. For other installation types, contact your local Cummins dealer or reference the Application Manual at the following link: <http://www.cumminspower.com/www/literature/applicationmanuals/t030.pdf>
- Consider access to utilities (electric meters, transfer switch, remote fuel tank location, etc.).
- Call the local utilities to mark the locations of buried utility services (gas, electric, or telephone) before digging.
- Verify the locations of any other buried components (gas, electric or telephone) with the homeowner before digging.

Follow the clearance guidelines below:

- The exhaust side of the generator set must be located 5 feet from combustible materials (NFPA 37).
- The exhaust side of the generator must be located 5 feet from any opening in a wall (window, door, vent, etc.).
- The generator must be located such that the exhaust is not able to accumulate in an occupied area.

- The generator must have enough room for installation, service, and maintenance.
- The generator must be located to ensure ventilation openings are not blocked.
- Position the generator set so that cooling air is free to enter and leave the area.
- Locate and position the generator set so that prevailing winds carry exhaust gases and potential fuel leaks away from the house or occupied area.

Laying the Foundation

When laying the foundation:

1. Clear obstructions, and make sure that there is adequate clearance for access.
2. Level the ground, and make sure that the ground is compact and settled. Ensure that it is stable ground, not subject to flooding.
3. Prepare the concrete pad.
 - The pad should be constructed of reinforced concrete with a 28-day compressive strength of at least 2500 psi (17,237 kPa).
 - The pad should be at least 5 in (127 mm) deep and extend at least 6 in (150 mm) beyond the skid on all sides.

NOTICE

Refer to the foundation drawing for stub-up dimensions.

NOTICE

Seismic installation may require a different pad and securing devices.

NOTICE

Local codes and standards may have different requirements.

4. Lift the generator set onto the pad, and secure it.

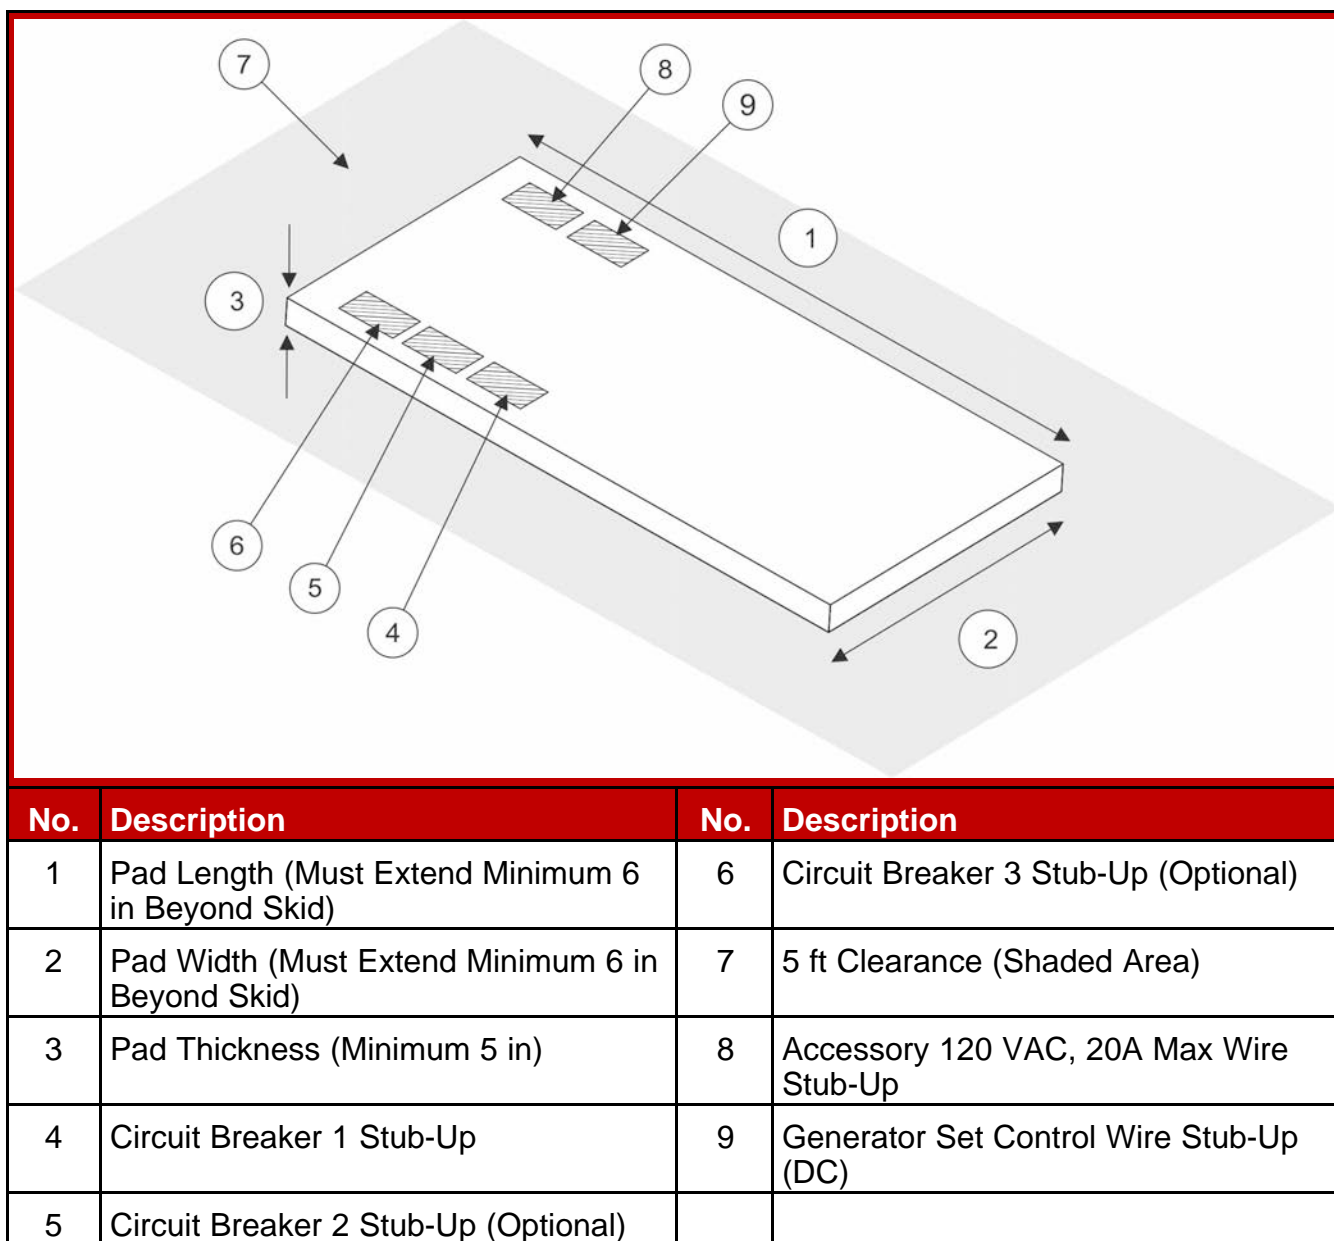


FIGURE 3. CONCRETE PAD PREPARATION

Lifting and Moving the Generator Set

⚠ WARNING

Heavy Load

The generator set is heavy. Handle with care.

Use appropriate lifting techniques to move the generator set. Do not use the lifting eyes on the engine and alternator to lift the entire generator set.

Dropping the generator set can cause severe personal injury or death. Keep feet and hands clear when lifting the generator set.

⚠ CAUTION

The generator set is shipped with oil in the engine crankcase. Keep the generator set upright.

Mounting the Generator Set

Mount the generator set on a substantial and level base such as a concrete pad. A non-combustible material must be used for the pad. Verify that the mounting pad is level lengthwise, widthwise, and diagonally.

NOTICE

Seismic installation may require specific anchorage.

4.2 Fuel Selection and Fuel System Connection

For fuel specifications (such as BTU/hr), see the Model Specifications section.

NOTICE

This generator set has a convertible fuel system. The generator may run on natural gas or propane, depending on the preferences of the owner. All generator sets come preconfigured from the factory for natural gas fuel. For more information on converting the fuel system type, refer to the Service Manual.

NOTICE

Fuel systems must be installed by qualified service technicians. Improper installation presents hazards of fire and improper operation, resulting in severe personal injury or property damage.

⚠ WARNING

Gaseous fuels are flammable, explosive, and can cause severe personal injury or death. Do not smoke if you smell gas, are near fuel tanks for fuel-burning equipment, or are in an area sharing ventilation with such equipment. Keep flames, sparks, pilot lights, electrical arcs, arc-producing equipment and all other sources of ignition well away. Keep a type ABC fire extinguisher handy.

In all fuel system installations, cleanliness is extremely important.

- Make every effort to prevent fuel contamination from:
 - Moisture
 - Dirt
 - Excess thread sealant

- Contaminants of any kind
- Clean all fuel system components before installing.

Gaseous-fuel supply system design, materials, components, fabrication, assembly, installation, testing, inspection, operation, and maintenance must comply with the applicable codes. See NFPA Standards No. 37, 54, and 58. For seismic installation, refer to the seismic label. Where seismic installation is required, there may be specific anchorage requirements for the generator set and other installed components.

Most codes require a manual shutoff valve ahead of a flexible fuel hose. The manual valve should be of the indicating type. The generator set has electric (battery-powered) shutoff valves included.

NOTICE

It is recommended that a shutoff valve be located near the generator set for emergency shut off or servicing the generator set. Follow applicable codes.

Until the generator set is connected, cap the fuel line stub-up at the generator set to prevent dirt from entering and gas from discharging if the gas supply shutoff valve is opened accidentally.

To determine the required capacity, add generator set consumption to the gas consumed for heating, cooking, clothes drying, etc. A typical natural gas installation might require a 400,000 BTU meter. Consideration should also be given to utilizing high pressure gas supply if available. This reduces the required size and cost of gas piping, especially if the location of the generator set requires a long supply line.

Natural Gas Fuel System

Requirements for a natural gas generator set are as follows:

- Adequate fuel supply to operate correctly and run at full load
- Pipeline quality gas
- The length of the fuel supply pipe from the gas service entrance to the generator set must be known to determine the correct fuel pipe size (refer to the [Fuel Line Selection](#) charts)

NOTICE

Iron pipe must be a minimum of schedule 40 subject to the authority having jurisdiction.

- Cummins flexible fuel line to protect the fuel system from vibration, expansion, and contraction
- Manual shutoff valve

⚠ WARNING

Fuel leaks can lead to explosive accumulations of gas. Prevent gas leaks and the accumulation of gaseous fuel in the event of a leak.

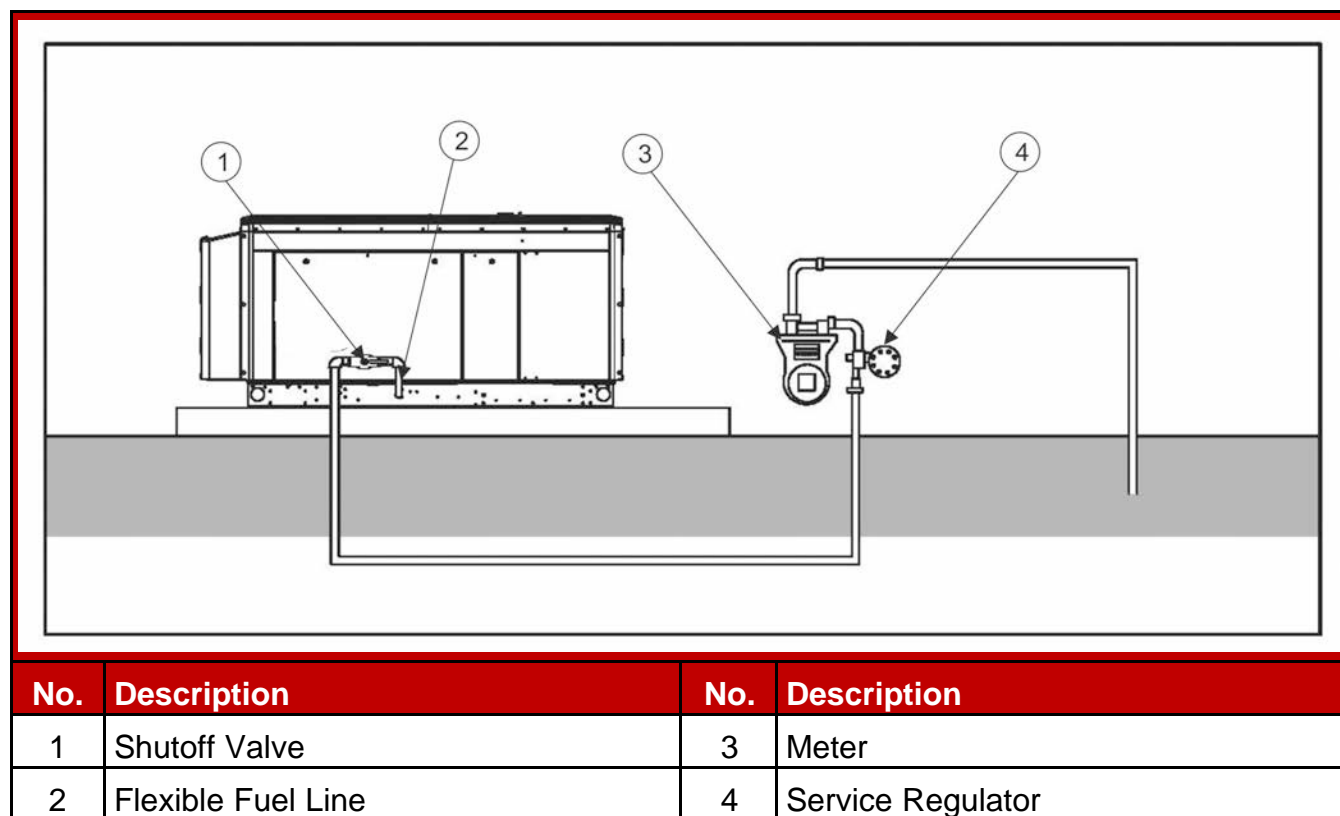


FIGURE 4. TYPICAL NATURAL GAS INSTALLATION

Natural Gas Supply Line Size

The natural gas supply meter may need to be exchanged for a higher capacity meter to supply the additional gas consumed by the generator set.

Use the total load requirement of the generator set to determine the size of the fuel supply pipe. Use the tables and charts in the [Fuel Line Selection](#) appendix to determine the correct pipe size.

An older site might require upgrading and repair of the gas supply system. Schedule an upgrade or repair to minimize power and gas supply interruptions.

Make sure the full load fuel supply pressure at the inlet to the generator fuel shutoff valves is set at 6 - 12 inch water column (1.5 - 3.0 kPa) for all operating loads (no load to full load). (The maximum pressure under any condition is 13 inch water column [3.2 kPa].) Refer to the Model Specifications section.

Propane Fuel System

Propane vapor can be used as a primary fuel source or as a backup fuel source for the generator sets with two independent fuel sources connected to the generator set.

WARNING

Fuel leaks can lead to explosive accumulations of gas. Propane sinks in air and can accumulate inside housings, basements, and other below-grade spaces. Prevent gas leaks and the accumulation of gaseous fuel in the event of a leak.

NOTICE

NFPA Standard No. 58 requires all persons handling and operating propane to be trained in proper handling and operating procedures.

The required components in a propane vapor fuel system are as follows:

Component	Description
Propane Tank	Make sure to identify and utilize the correct tank size based on fuel flow requirements and the lowest average temperature for your region. If the tank is sized incorrectly, the generator set could run out of fuel. Refer to the Minimum LPG Tank Size figure in the Fuel Line Selection appendix.
Shutoff Valve	Useful during installation or in the event of a leak (may be required to meet local codes).
Primary Regulator	Located at the tank outlet, the primary regulator reduces the tank pressure to the working pressure in the fuel supply line. Primary and secondary regulators must be properly matched for a safe and functional system. Consult with your propane supplier to ensure that the regulators are properly sized.
Secondary Regulator	Located near the generator set, the secondary regulator reduces the higher line pressure to a working pressure of 6 - 12 inch water column (1.5 - 3.0 kPa). Higher pressure before the secondary regulator is necessary to ensure that there is enough fuel available at the secondary regulator for a fully loaded generator set.
Fuel Line	Connects to the fuel supply. It must be sized properly using the propane fuel line sizing charts (see the Fuel Line Selection appendix). Installation must comply with all national, state, and local codes.
Cummins Flexible Fuel Line	Protects the fuel system from vibration, expansion, and contraction.

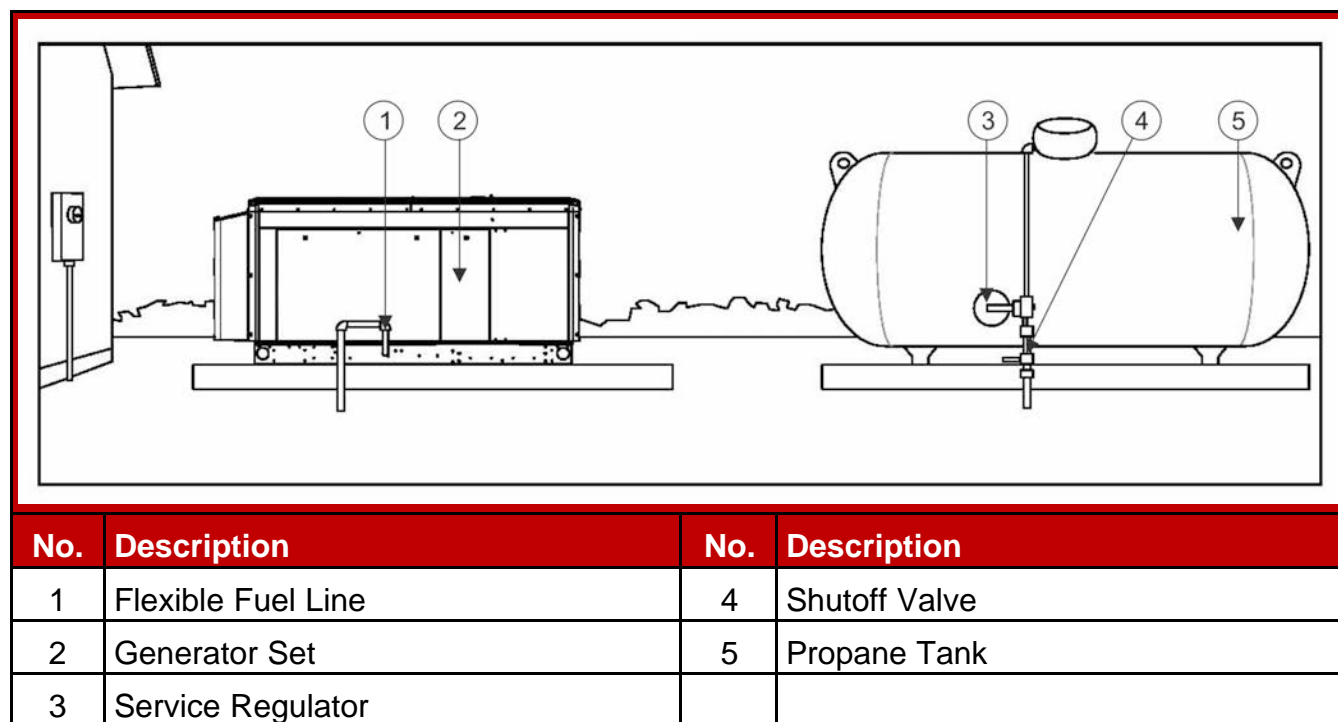


FIGURE 5. TYPICAL PROPANE INSTALLATION

Propane Fuel

⚠ WARNING

Propane presents the hazard of fire or explosion that can cause severe personal injury or death. Do not permit any flame, spark, arc-producing equipment, switch, pilot light, cigarette, or other ignition source near the fuel system. Keep an ABC type fire extinguisher nearby.

⚠ WARNING

Fuel leaks can lead to explosive accumulations of gas. Propane sinks in air and can accumulate inside housings, basements and other below-grade spaces. Prevent gas leaks and the accumulation of gaseous fuel in the event of a leak.

Use clean, fresh HD-5 grade propane or equivalent product consisting of at least 90% propane.

NOTICE

NFPA Standard No. 58 requires all persons handling and operating propane to be trained in proper handling and operating procedures.

NOTICE

Commercial propane may contain more than 2.5% butane, which can result in poor fuel vaporization and low tank pressure, resulting in poor engine starting and operation in below 32 °F (0 °C) temperatures.

Propane Tank Size

When propane is used, size the tank correctly to ensure successful generator set operation.

Considerations when figuring the proper propane tank size:

- Temperature is a critical factor that affects the size of the tank.
 - Ambient temperatures can affect how quickly liquid is converted to gas.
 - Generator set fuel consumption is the same regardless of the surrounding temperatures.
 - Colder weather climates require larger fuel tanks. Larger tanks have greater surface area, allowing more liquid propane to vaporize and maintain the required fuel rate.
 - Propane is stored as liquid. Keep the fuel tank at least 50% full to operate properly. Fuel tanks that are less than 50% full may not have the capacity to vaporize enough propane to operate the generator set and other LP appliances.
- Propane tanks are sized by their internal volume in gallons, not the amount of fuel they can hold (which is less).
- Propane tanks are generally filled to only 80% of their capacity. Therefore, a 500-gallon (1892-liter) tank results in 400-gallon (1514-liter) tank capacity.
- Low ambient temperatures affect the amount of fuel available from the propane tank.
- Approximately 60% of the fuel (in gallons) filled in the tank can be effectively used. Therefore, a 500-gallon (1892-liter) tank results in 240-gallon (908-liter) usable capacity.

To assist in the proper installation of the propane tank, follow the guidelines below.

- Consult your tank and propane supplier for assistance in all aspects of determining tank size, selection of components and installation requirements.
- Fit the propane tanks with a pressure reducing regulator before connection to the generator set to prevent fuel system damage.
- Locate the propane tanks and all other fuel system components at least 10 feet (3 meters) from any source of combustion (including the generator set). The fuel supplier or local code may require a larger distance between the tank and source of combustion.

- Install the propane tanks according to all national and local codes and standards, and as required by the fuel tank and fuel supplier.

Refer to the [Fuel Line Selection](#) appendix for propane figures and tables.

Sizing Fuel Lines

Incorrect fuel line size may cause the generator set to not run or provide full power output. Fuel line sizes for installations typically range from 1/4 to 2 or more inches in diameter.

To determine the optimal fuel line size, the following information is needed:

Category	Description
Fuel Flow Requirements for the Generator Set	Fuel flow requirements have a large impact on fuel line size.
Fuel Source (Natural Gas or Propane Vapor)	Fuel sources can affect fuel line size. Natural gas installations generally require a higher fuel flow rate compared to propane vapor installations, since propane has a higher energy content.
Fuel Line Length (Including Fittings)	Factor in the equivalent lengths of all of the fittings (elbows, tees, valves) in the installation in addition to the fuel line length. Longer lengths require larger diameters.
Fuel Line Type (e.g., Copper Tubing or Iron Pipe)	Most fuel line types are iron pipe or copper tubing. Be sure to use the sizing chart for the fuel line type when sizing the fuel line.

There are some basic but very important steps all installers must follow to make sure that fuel lines are sized correctly:

1. Verify adequate fuel flow, quality, and pressure available from utility connection.
2. Determine fuel requirements at full load. See the Model Specifications section to determine the fuel flow requirements.
3. Determine equivalent length of fuel line fittings required. See the NFPA Pipe Fittings table in the [Fuel Line Selection](#) appendix to determine the equivalent lengths for elbows, tees, and valves. Add this length to fuel line length to determine total equivalent length.
4. Determine required fuel line size at full load. See the [Fuel Line Selection](#) appendix to determine the fuel line size.

To calculate the minimum pipe size:

1. Make a list of all the fittings and valves in a proposed system and add their equivalent lengths.
2. Add all lengths of straight pipe to arrive at a total equivalent length to the fittings/valves total.
3. Choose the applicable table based on the fuel system and fuel line material.

4. Obtain the maximum fuel requirements for the specific generator set from the Model Specifications section.
5. Refer to the fuel line sizing charts in the [Fuel Line Selection](#) appendix. Locate the equivalent length of pipe (or next larger equivalent length) in the left hand column. Move across the row to where the maximum capacity number is as large or larger than the maximum fuel consumption (or next larger). At the top of that column is the minimum nominal pipe size or tubing size required for the system as designed.

Installing Fuel Lines

The basic components required for fuel line installation are as follows:

- Flexible connection
- Fuel line
- Shutoff valve
- Fuel supply

To install the fuel lines:

1. Connect a flexible fuel line to the fuel connection ports on the generator set.
2. Connect the opposite end of the flexible fuel line to the fuel source line near the shutoff valve.

NOTICE

A shutoff valve is recommended and often required by local and state codes.

Testing the Fuel System for Leaks

After assembly and before initial operation, all of the fuel system components must be tested and proven free of any leaks.

WARNING

Fuel presents the hazard of explosion or fire which can result in severe personal injury or death. Do not use an open flame to check for leaks. Do not smoke or allow any flame, spark, pilot light, arc-producing equipment, switch or other ignition sources around fuel or fuel components. Keep multi-class ABC fire extinguishers handy.

NOTICE

Follow any local codes and standards, as they may require a different method or documentation of a leak test.

After assembly, and before initial operation, all fuel system connections, hose, valves, regulators and fittings must be tested and proven free of leaks using a soap-and-water (or equivalent) solution while the system is under gas or air pressure of at least 1.5 times the supply pressure or 3 psi (20.7 kPa) minimum.

1. [Copied from GSBB Manual] **Energize the fuel solenoid from a separate 12 VDC source before testing the fuel system.**
2. Pressurize the system to a minimum of one and a half times the required fuel supply pressure.
3. Spray the soap-and-water solution on all of the joints.
4. Inspect all of the joints and monitor the line pressure. If bubbles appear, there is a leak.
5. If a leak is found, tighten the joints, recheck for leaks, and repair or replace component(s) as needed.

4.3 Engine Exhaust

The exhaust system for this generator set is complete and was designed specifically for this generator set. Do not modify or add to the exhaust system of this generator set.

WARNING

Exhaust gas is deadly. Make sure that the exhaust system terminates away from building vents, windows, doors, and sheltered spaces that may not have ample fresh air ventilation.

WARNING

Engine discharge air and exhaust carry carbon monoxide gas (odorless and invisible) which can cause asphyxiation and death. Never use engine discharge air or exhaust for heating a room or enclosed space.

4.4 Electrical Connections

WARNING

Improper installation can lead to electrocution and damage to property. Electrical connections must be made by a licensed electrician.

⚠ WARNING

Automatic startup of the generator set during installation can cause severe personal injury or death. Make sure the generator set is shut down and disabled:

- 1. Press the generator set's "O" (Off) button to stop the generator set. Allow the generator set to thoroughly cool to the touch.***
- 2. Turn off and disconnect the battery charger from the AC source before disconnecting the battery cables.***
- 3. Disconnect the negative (–) cable from the battery and secure it from contacting the battery terminals to prevent accidental starting.***

NOTICE

Refer to regional codes and the National Electrical Code (NFPA 70) for all electrical installation requirements.

NOTICE

Class 1 wiring methods must be used for connecting the generator set.

AC Connections

NOTICE

If a 100% rated breaker is used, 90 °C wire must be used for L1, L2, and L3 with the wire size determined by the 75 °C ampacity tables. Aluminum wire is not allowed with 100% rated breakers.

NOTICE

When using a circuit breaker with an adjustable, electronic trip unit, the amperage and trip curve settings may need adjustment to match the generator set load wiring, or downstream loads and circuit breakers. An accessory seal kit (part number A026M166) is available to tamper-proof the adjustable settings.

For grounding and neutral connections, look for the following symbols on the generator set circuit breaker cabinets.

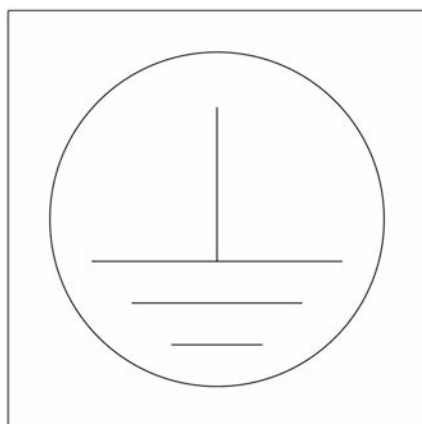


FIGURE 6. EQUIPMENT GROUNDING CONDUCTOR SYMBOL

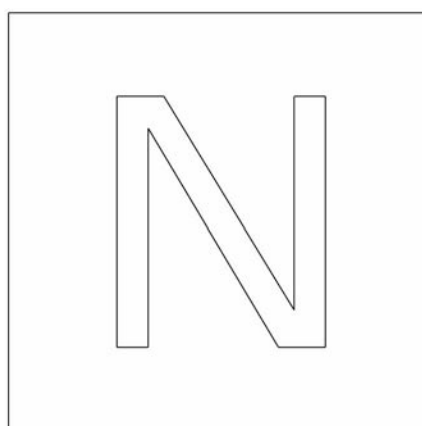


FIGURE 7. EQUIPMENT NEUTRAL CONNECTION SYMBOL

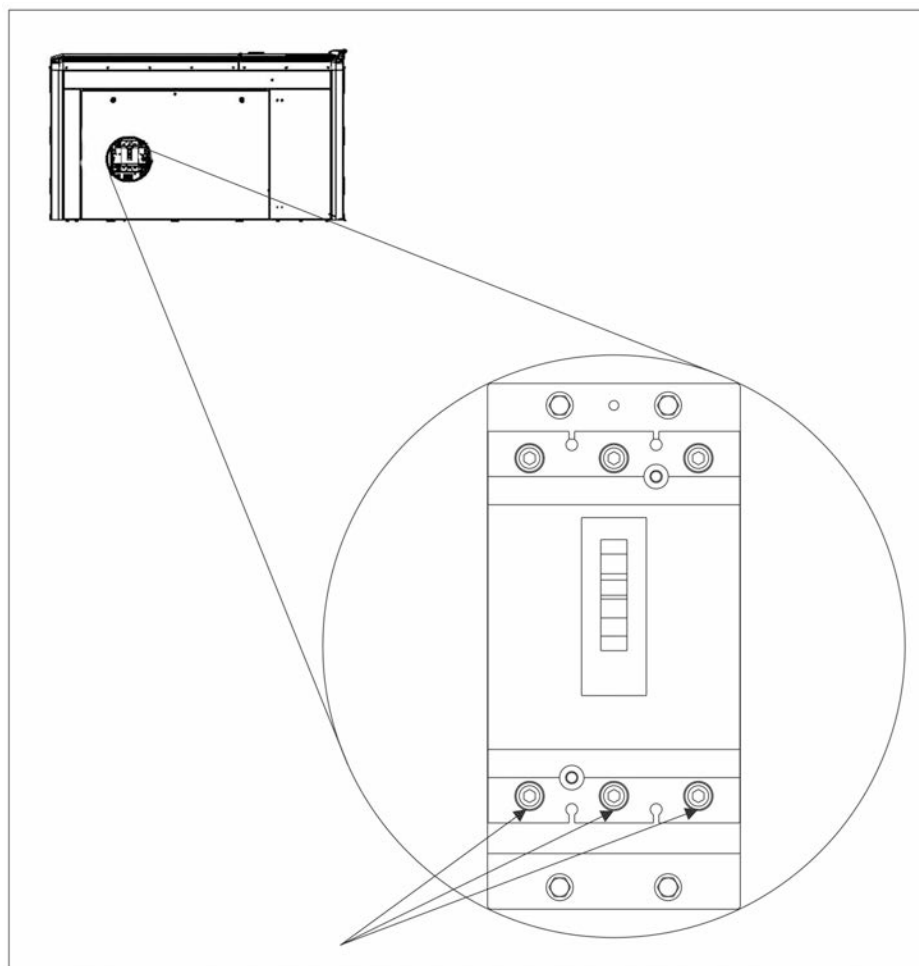


FIGURE 8. CIRCUIT BREAKER AC LOAD CONNECTION LOCATIONS

For connection to the generator set, AC load connections are made in the circuit breaker box. To access:

1. Open the enclosure side door to gain access to main circuit breaker box.
2. Place all circuit breaker handle in the OFF position.
3. Remove the eight bolts holding the circuit breaker cover.
4. Install the conductors to the circuit breaker load-side terminals, neutral lug, and equipment grounding lug.
5. Torque the circuit breaker terminals per specifications on the circuit breaker label.
6. Torque the neutral lug on the H & J-frame circuit breakers to 120 in-lb (14 Nm).
7. Torque the neutral lug on the L-frame circuit breakers to 442 in-lb (50 Nm).
8. Torque the equipment grounding lug to 120 in-lb (14 Nm).
9. Fill in the stub-up openings with an approved duct seal or mastic tape to keep out insects and rodents.
10. Install the circuit breaker cover.

-
11. Turn all circuit breakers on.

Automatic Transfer Switch AC Connections

 **WARNING**

Failure to use an approved transfer switch can lead to the electrocution of personnel working on the utility lines, damage to equipment, fire, or personal injury. An approved switching device must be used to prevent interconnection to the public utility.

Install the transfer switch in accordance with the RA Series Transfer Switch Owner Manual.

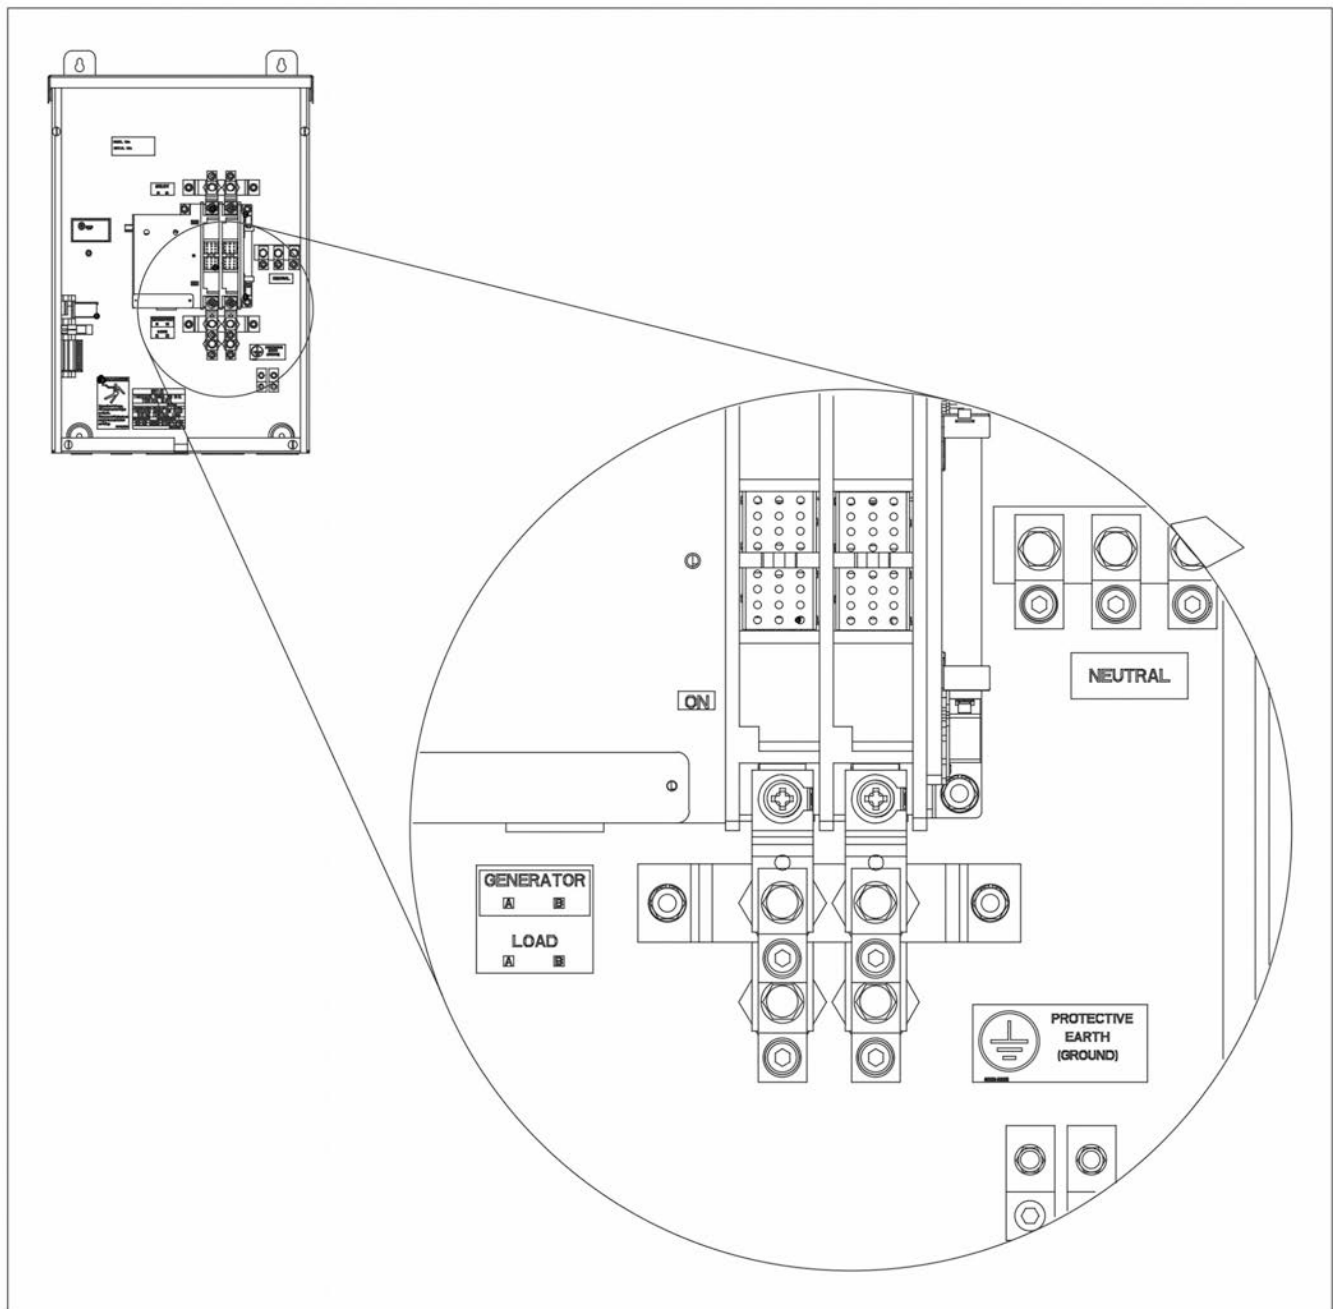


FIGURE 9. RA SERIES TRANSFER SWITCH AC CONNECTIONS LOCATION

Factory Option and Accessory Connections

The AC-powered options or accessories available include the battery charger, engine coolant heater, alternator heater, oil heater, battery warmer, and CCV heater (included with coolant heater).

NOTICE

The CCV heater requires power from a 120 VAC, 20 Amp protected circuit from the Main Distribution Panel. The CCV needs to be powered even during utility outages. Use 12 AWG 167 °F (75 °C) conductors to connect to the generator set AC distribution connector.

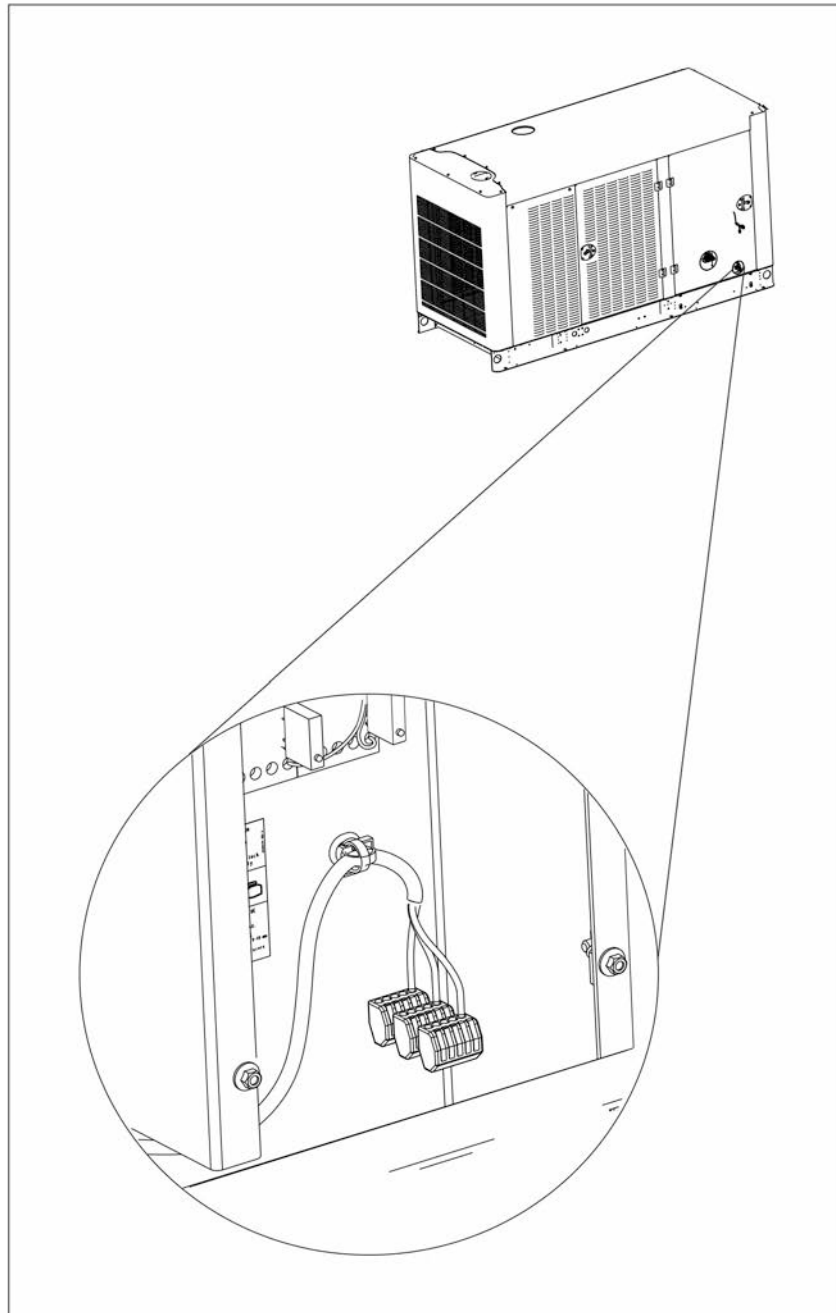


FIGURE 10. AC ACCESSORY CONNECTIONS

DC Connections

NOTICE

When selecting and installing conduit to the generator set, account for any needed accessories, such as a remote display, etc.

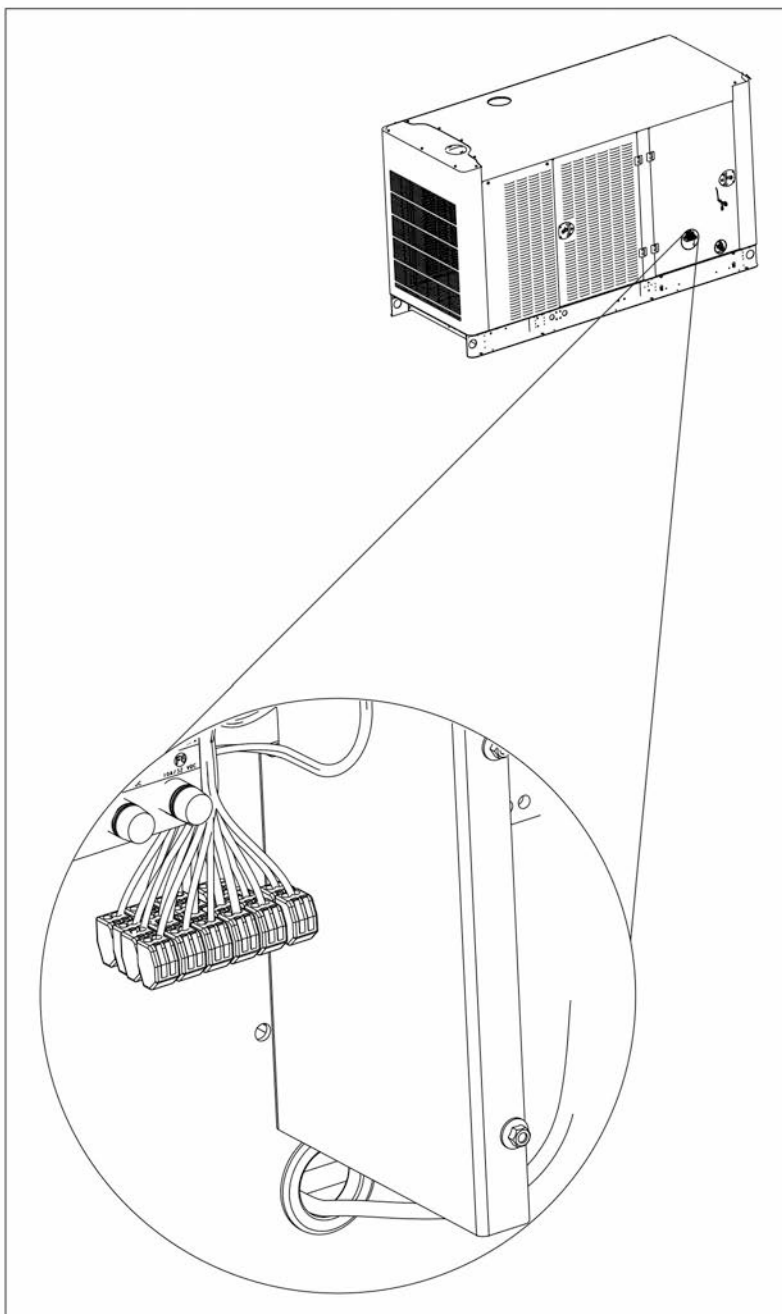


FIGURE 11. DC CUSTOMER CONNECTIONS

Automatic Transfer Switch DC Connections

WARNING

Failure to use an approved transfer switch can lead to the electrocution of personnel working on the utility lines, damage to equipment, fire, or personal injury. An approved switching device must be used to prevent interconnection to the public utility.

Install the transfer switch in accordance with the RA Series Transfer Switch Owner Manual. The following image shows the location of the Cummins RA Series Transfer Switch customer connections.

NOTICE

Class 1 wiring methods should be used for connecting the generator set and transfer switch signal wiring.

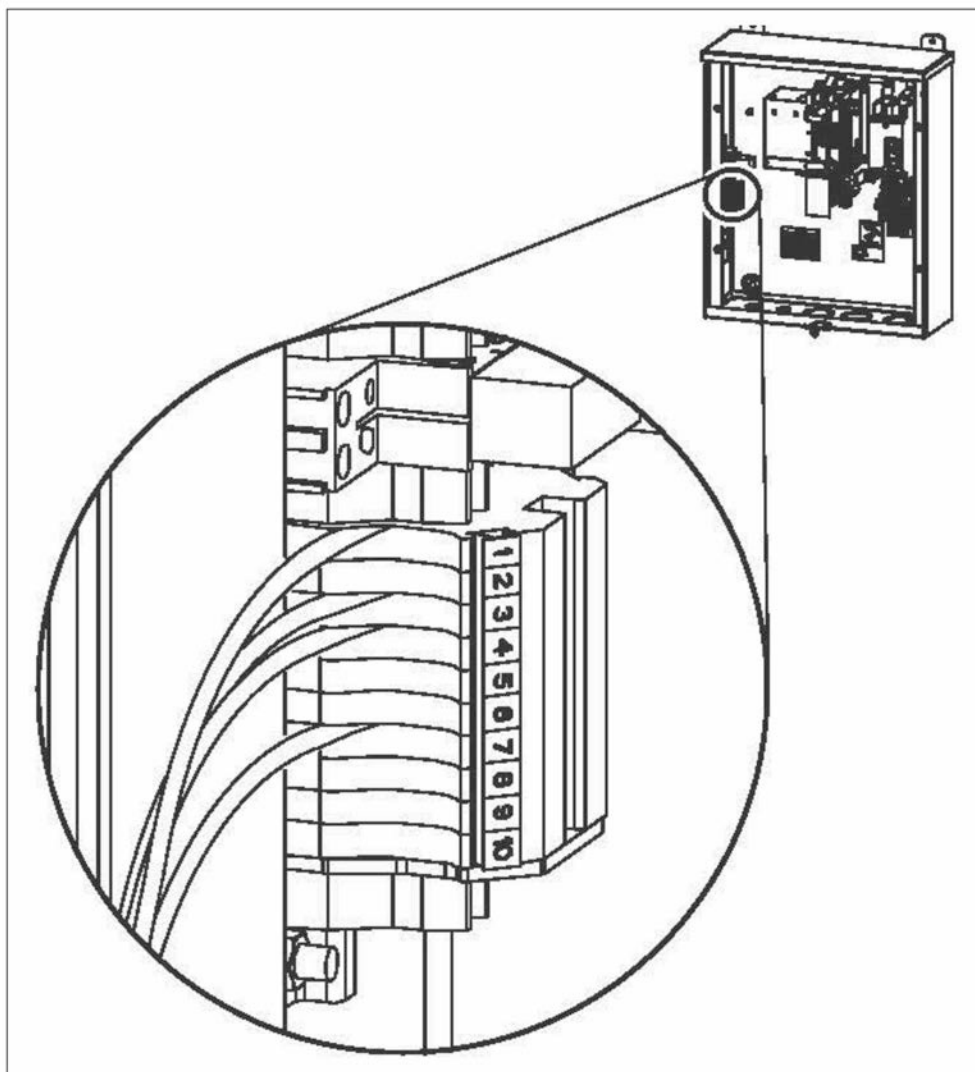


FIGURE 12. RA SERIES TRANSFER SWITCH DC CONNECTIONS LOCATION

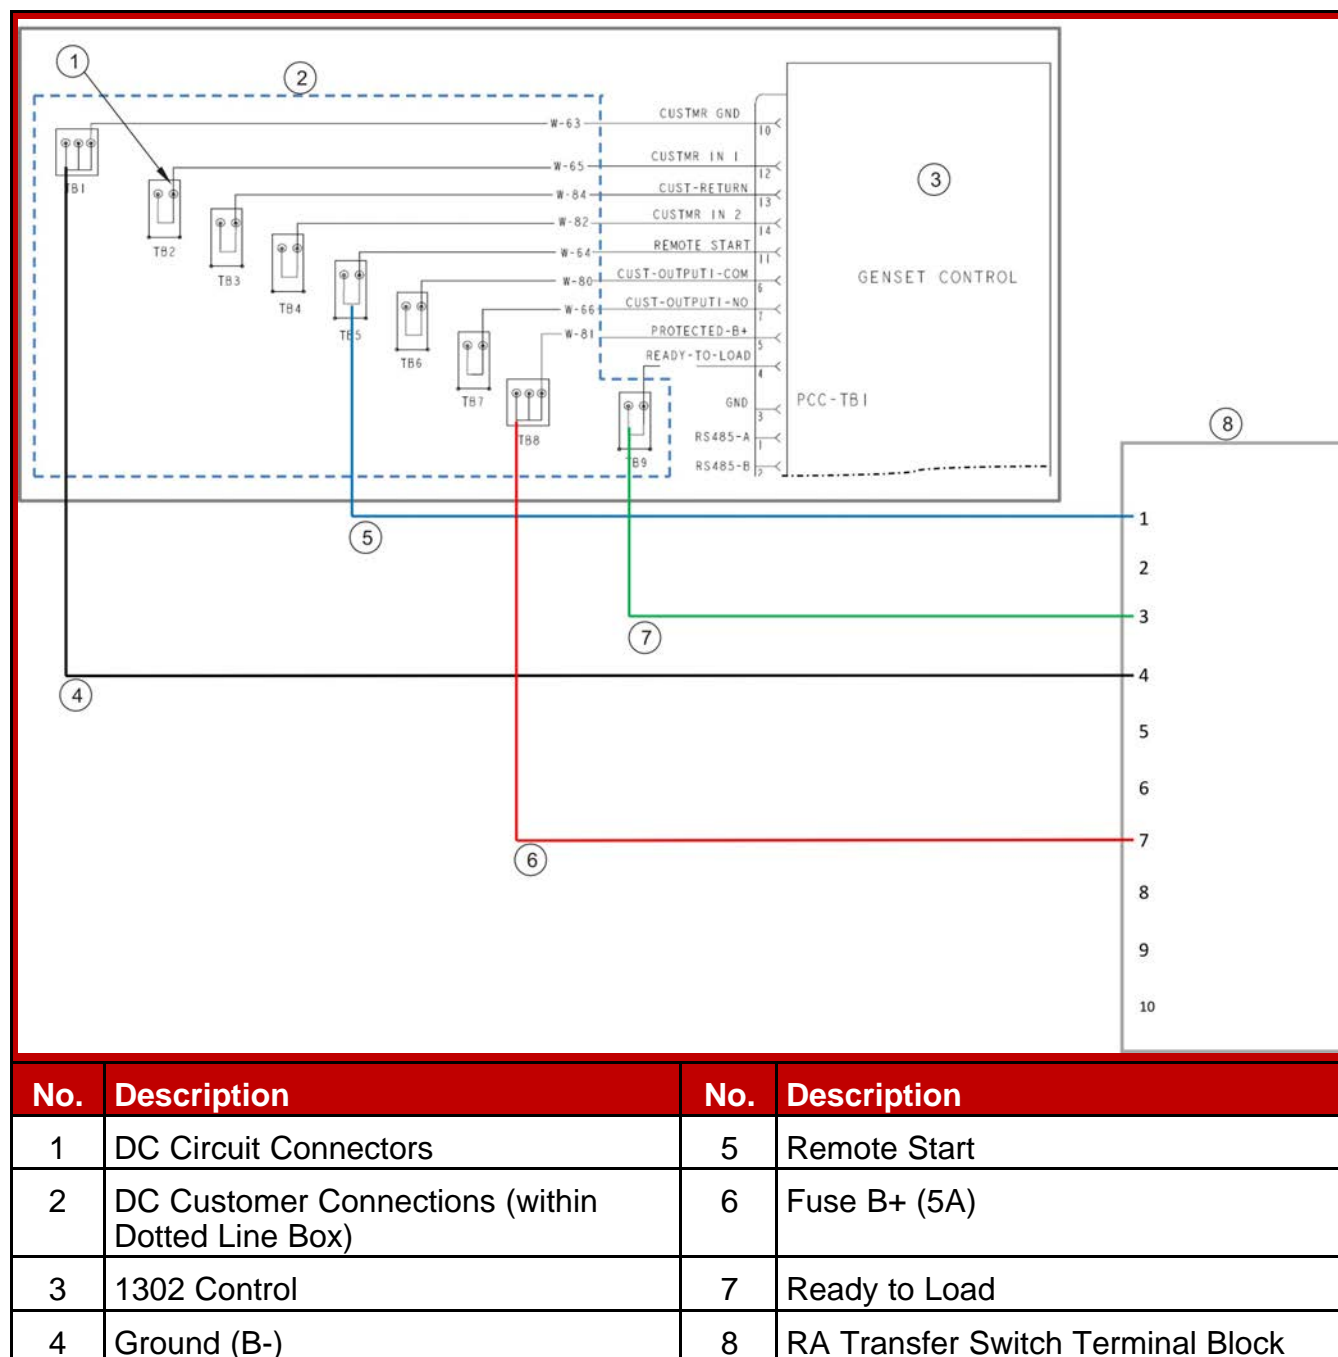


FIGURE 13. GENERATOR SET TO RA TRANSFER SWITCH DC CUSTOMER CONNECTIONS

Grounding

NOTICE

The generator set is shipped from the factory with the neutral and equipment ground not bonded together.

Refer to local codes and standards for grounding procedures.

Battery

The generator set requires a 12V battery (negatively grounded) for engine cranking and powering the electronic control system. When the generator set is running, the battery is charged from the engine-driven battery alternator. When the set is not running, an AC powered battery charger is needed to keep the battery charged.

As part of the installation, make sure that the battery is secured to the battery tray with the strap provided.

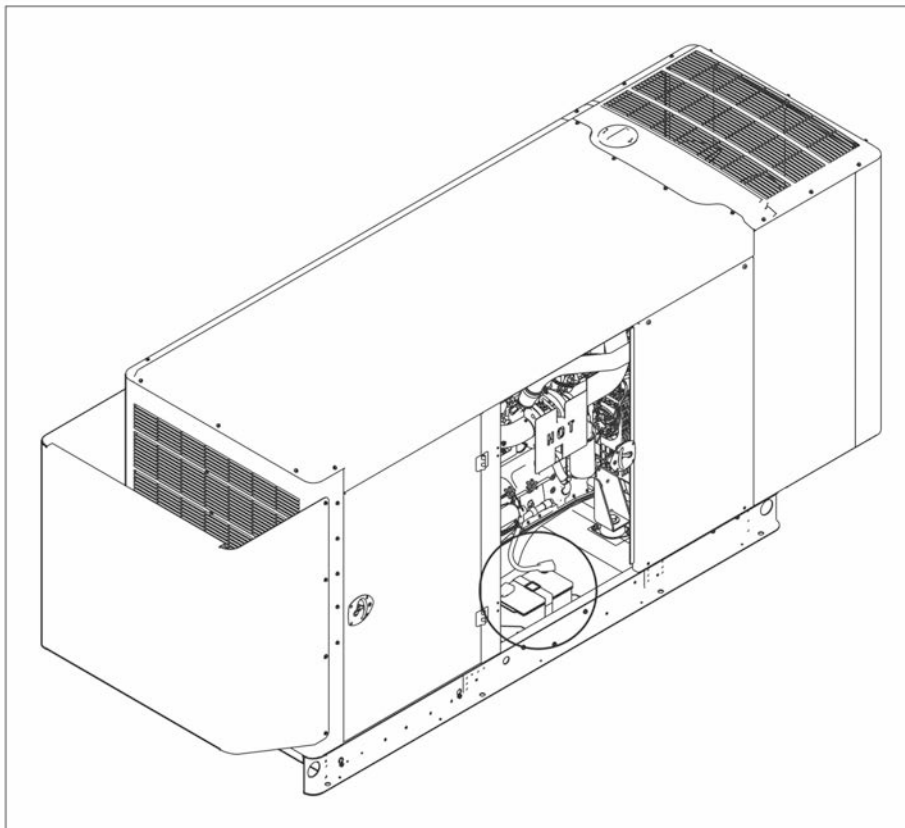


FIGURE 14. BATTERY LOCATION

⚠ CAUTION

Ensure that the AC power to the battery charger is disconnected when installing the battery.

⚠ CAUTION

Wear proper safety protection when working around batteries. Keep open flames and sparks away from the equipment.

⚠ CAUTION

Only personnel knowledgeable of batteries and required precautions should perform or supervise battery servicing.

To connect the battery:

1. Connect the positive battery terminal.
2. Connect the negative battery terminal.
3. Make sure that the black and red battery cable boots are in place.

Refer to the Model Specifications section for battery specifications.

An optional thermostatically controlled battery heater is available for more reliable starting in ambient temperatures below 0 °F (-18 °C).

To prevent injury due to accidental startup, do not connect the battery cables to the battery until the installation has been completed; tools, rags, and body parts are away from any rotating parts or electrically live parts; and it is time to start the set.

This page is intentionally blank.

5 Startup and Configuration

5.1 Exercise Settings

NOTICE

When battery power is lost, these settings must be reset.

NOTICE


Not applicable without a single phase RA series transfer switch.
--

To access the Clock/Exerciser Menu:

1. From any Information Menu, hold down the up and down arrows simultaneously for two seconds. The Service Menu appears.
2. Navigate through the screens to find and select **Clock/Excr** in the Service Menu.

NOTICE

The following screens represent the standard operator panel (that is, HMI211). If using an in-home operator panel, which may be additionally purchased as an option, the screens may look slightly different. This procedure applies to both operator panels.

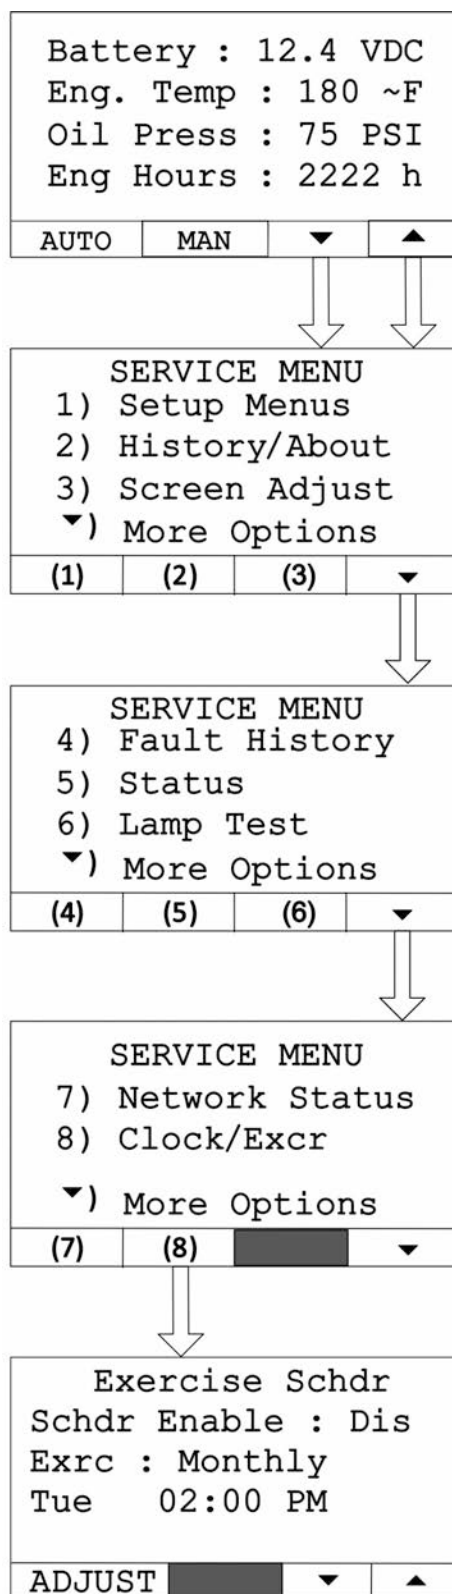**FIGURE 15. CLOCK/EXERCISER MENU NAVIGATION**

Updating Exercise Frequency

NOTICE

Not applicable without a single phase RA series transfer switch.

To update the exercise frequency and dates on the Clock/Exerciser Menu:

1. From any Information Menu, hold down the up and down arrows simultaneously for two seconds. The Service Menu appears.
2. Access the Time Setup screen by selecting **Clock Exerciser** on the Genset Service Menu.
3. Press the down key on the Time Setup screen to access the Daylight Saving Adjust screen.
4. Select **Adjust**.
5. Press the down key on the Daylight Saving Adjust Start screen.
6. Select **Adjust**.
7. Press **Exercise Schdr** on the Daylight Saving Adjust End screen.
8. Press **Adjust**.

When updating these settings, the functions of the keys are as follows:

- The horizontal right arrow key is used to select successive blocks for editing settings on the screen.
- Use the + or - keys to edit the following settings:
 - Schdr Enable: Enable or Disable
 - Exercise Schedule: Semi-Annual (every six months), Quarterly, Monthly, Bi-Monthly (the first and third week of every month based on the time set when the Bi-Monthly option is selected), or Weekly
 - Exercise Schedule: Day, Hours, Minutes, AM/PM
- Press **Save** to save any changes. After saving, the Save button changes to the Adjust button.

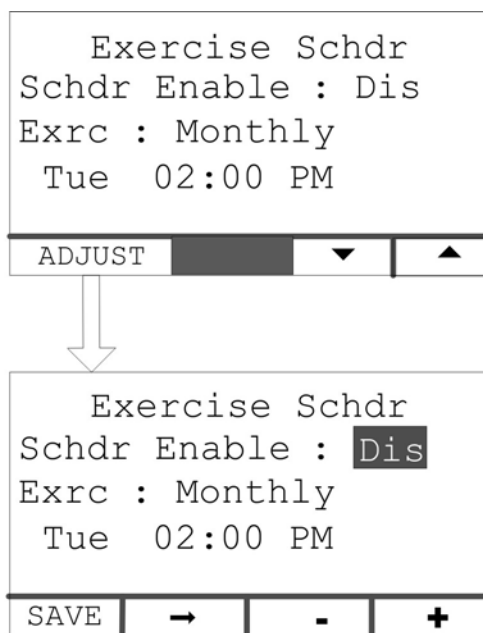


FIGURE 16. EXERCISE FREQUENCY NAVIGATION

Updating Exercise Duration

NOTICE

Not applicable without a single phase RA series transfer switch.

To update the exercise duration on the Clock/Exerciser Menu:

1. From any Information Menu, hold down the up and down arrows simultaneously for two seconds. The Service Menu appears.
2. Access the Time Setup screen by selecting **Clock Exerciser** on the Genset Service Menu.
3. Press the down key on the Time Setup screen to access the Daylight Saving Adjust screen.
4. Select **Adjust**.
5. Press the down key on the Daylight Saving Adjust Start screen.
6. Select **Adjust**.
7. Press **Exercise Schdr** on the Daylight Saving Adjust End screen.
8. Press the down key on the Exercise Schdr Menu.
9. Press **Adjust**.

When updating these settings, the functions of the keys are as follows:

- The horizontal right arrow key is used to select the duration block for editing exercise duration.
- Use the + or - keys to edit the exercise duration minutes.

- Press **Save** to save any changes. After saving, the Save button changes to the Adjust button.

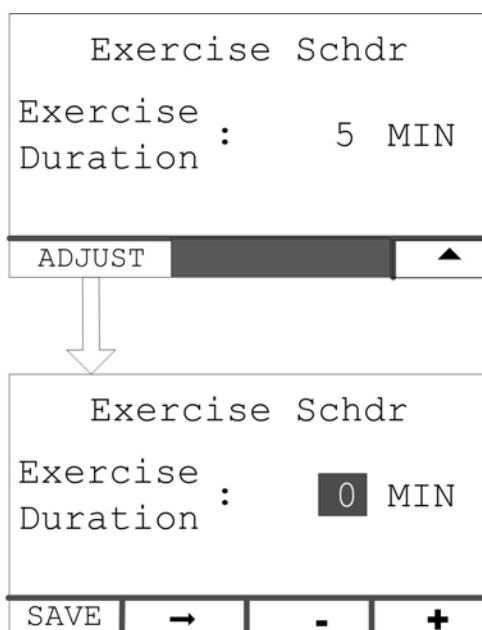


FIGURE 17. EXERCISE DURATION NAVIGATION

5.2 Time Setup

NOTICE

When battery power is lost, these settings must be reset.

NOTICE

Not applicable without a single phase RA series transfer switch.

To set up the generator set clock for the current date and time:

1. From any Information Menu, hold down the up and down arrows simultaneously for two seconds. The Service Menu appears.
2. Access the Time Setup screen by selecting **Clock Exerciser** on the Genset Service Menu.
3. Select **Adjust**.

When updating these settings, the functions of the keys are as follows:

- The horizontal right arrow key is used to select successive blocks for editing settings on the screen.
- Select the left arrow to return to the previous screen.
- Adjust values by using the + or - keys on the Adjust Menu of the Time Setup screen.

- Press **Save** to save any changes. After saving, the Save button changes to the Adjust button.

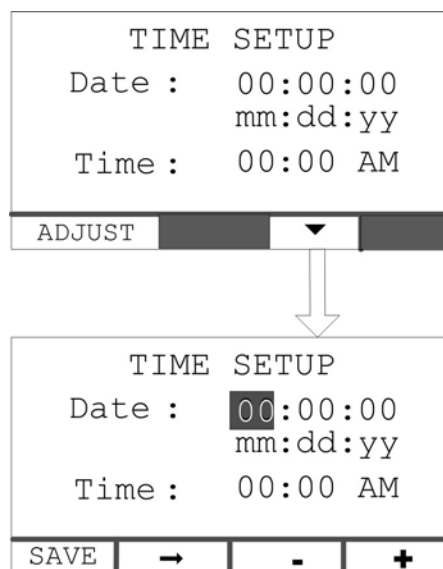


FIGURE 18. TIME SETUP SCREEN

Updating Daylight Saving Adjust Screen

To update the Time and Adjustment on the Daylight Saving Adjust screen:

1. From any Information Menu, hold down the up and down arrows simultaneously for two seconds. The Service Menu appears.
2. Access the Time Setup screen by selecting **Clock Exerciser** on the Genset Service Menu.
3. Press the down key on the Time Setup screen to access the Daylight Saving Adjust screen.
4. Select **Adjust**.

When updating these settings, the functions of the keys are as follows:

- The horizontal right arrow key is used to select successive blocks for editing settings on the screen.
- Select the left arrow to return to the previous screen.
- Adjust values by using the + or - keys on the Adjust screen of the Daylight Saving Adjust screen.
- Press **Save** to save any changes. After saving, the Save button changes to the Adjust button.

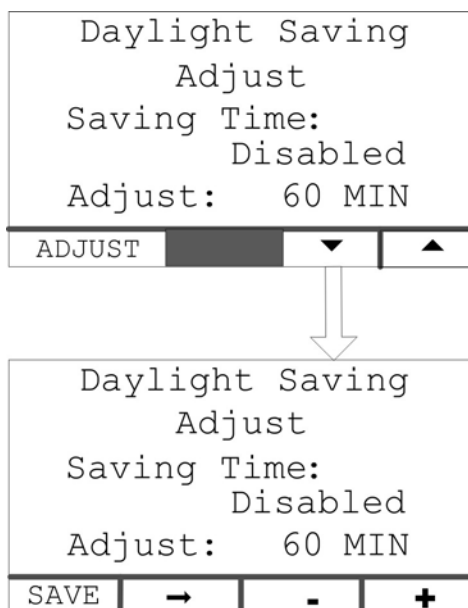


FIGURE 19. DAYLIGHT SAVING ADJUST SCREEN NAVIGATION

To access and update the Daylight Saving Adjust Start screen:

1. Press the down key on the Daylight Saving Adjust screen.
2. Press **Adjust**.

When updating these settings, the functions of the keys are as follows:

- The horizontal right arrow key is used to select successive blocks for editing settings on the screen.
- Use the + or - keys to edit the following settings:
 - Month
 - Week
 - Day
 - Hour
- Press **Save** to save any changes. After saving, the Save button changes to the Adjust button.

Daylight Saving
Adjust Start
Mth Wk Day Hr
0 1 Sun 0 AM
ADJUST

Daylight Saving
Adjust Start
Mth Wk Day Hr
0 1 Sun 0 AM
SAVE

FIGURE 20. DAYLIGHT SAVING ADJUST START SCREEN

To access and update the Daylight Saving Adjust End screen:

1. Press the down key on the Daylight Saving Adjust Start screen.
2. Press **Adjust**.

When updating these settings, the functions of the keys are as follows:

- The horizontal right arrow key is used to select successive blocks for editing settings on the screen.
- Use the + or - keys to edit the following settings:
 - Month
 - Week
 - Day
 - Hour
- Press **Save** to save any changes. After saving, the Save button changes to the Adjust button.

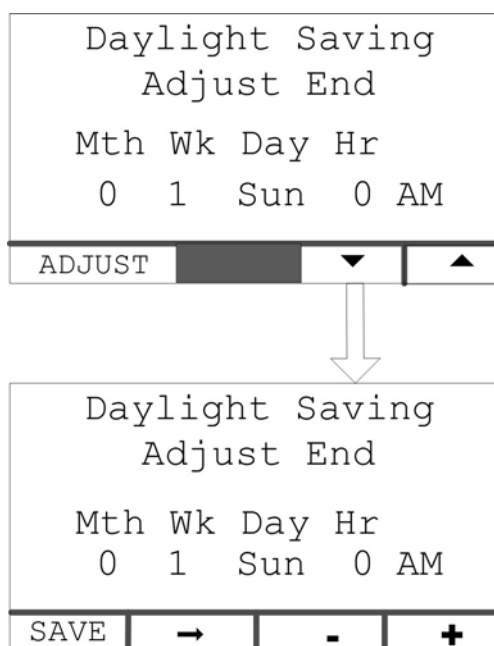


FIGURE 21. DAYLIGHT SAVING ADJUST END SCREEN

5.3 Brightness and Contrast

The Screen Adjust screen allows the contrast, brightness, and units to be set. To access the Screen Adjust screen:

1. From any Information screen, hold down the up and down arrows simultaneously for two seconds to gain access to the Service Menu screen.
2. Select **Screen Adjust**.

To adjust the contrast, brightness, or units from the Screen Adjust screen:

1. From the Screen Adjust screen, select **Adjust** to access the screen variables.
2. Press the right arrow to move between the variables.
3. Adjust settings, and press **Save** to save any changes.

When updating these settings, the functions of the keys are as follows:

- The horizontal right arrow key is used to select successive blocks for editing settings on the screen.
- Select the left arrow to return to the previous screen.
- Adjust values by using the + or - keys on the Adjust screen of the Display Setup screen.
- Press **Save** to save any changes. After saving, the Save button changes to the Adjust button.

NOTICE

The following screens represent the standard operator panel (HMI211). If using an in-home operator panel, which may be additionally purchased as an option, the screens may look slightly different. This procedure applies to both operator panels.

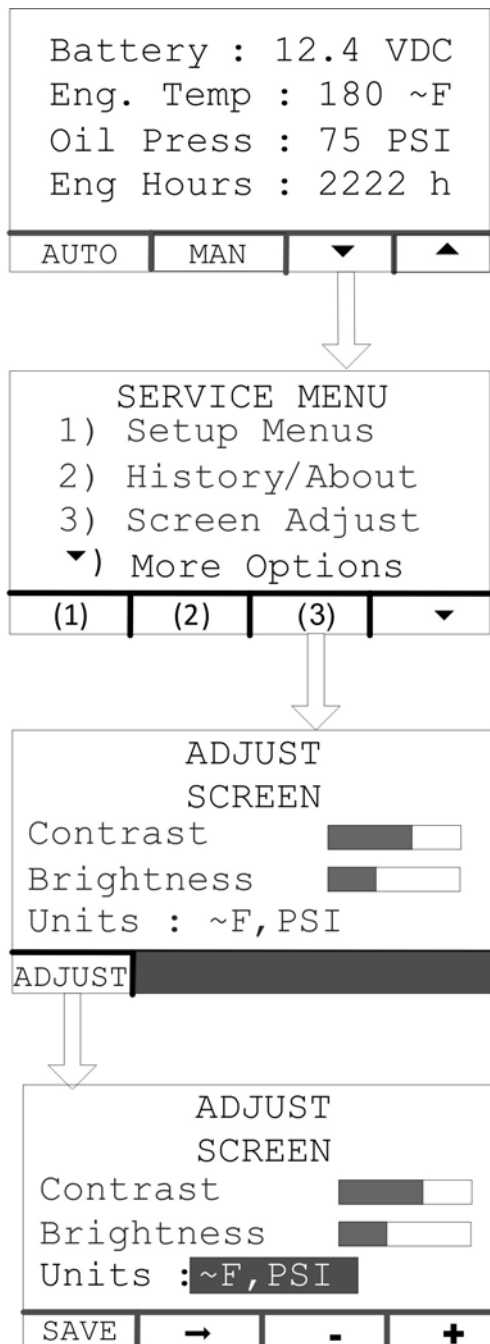


FIGURE 22. BRIGHTNESS AND CONTRAST SCREEN NAVIGATION

NOTICE

Adjusting the brightness on the operator panel adjusts the brightness of both the LCD backlight and the LEDs on the display. The contrast should never be 0 or 100% on any of the screens. The default value for Brightness is 50%.


5.4 History and About Menu

To access the History/About screen:

1. From any Information Menu, hold down the up and down arrows simultaneously for two seconds. The Service Menu appears.
2. Select **History/About**.
3. Advance through the screens to view information about the generator set, control, and display.

NOTICE

The following screens represent the standard operator panel (HMI211). If using an in-home operator panel, which may be additionally purchased as an option, the screens may look slightly different. This procedure applies to both operator panels.

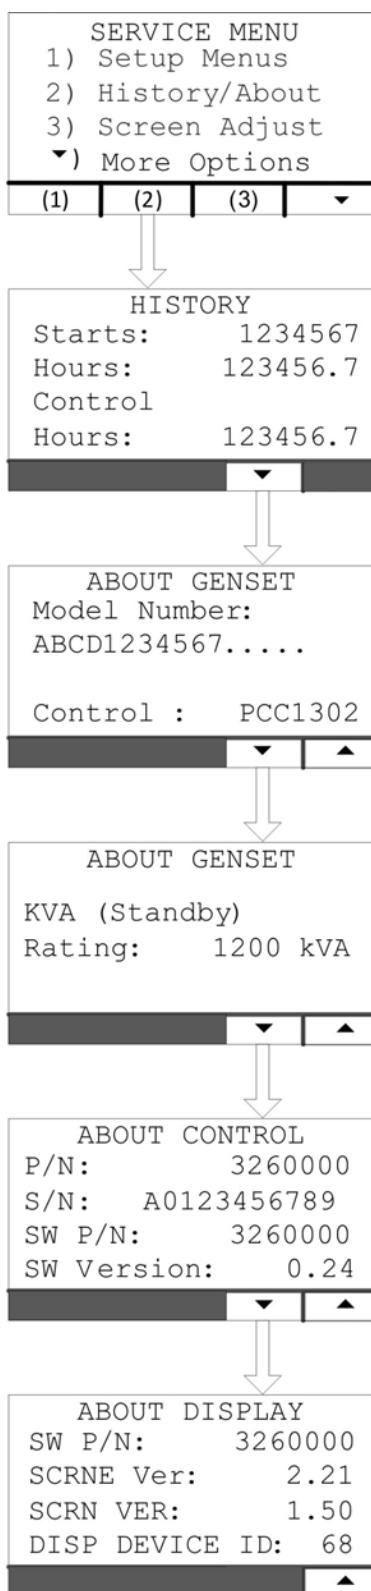**FIGURE 23. HISTORY/ABOUT MENU**

5.5 Installation Checklist

Tick	Item
	General
	Generator set wattage capacity is sufficient to handle maximum anticipated load.
	At least 5 feet of clearance to combustible materials is provided. At least 3 feet of clearance is provided around the entire generator set for service and ventilation.
	The generator set is located in an area not subject to flooding.
	All installers have read and are familiar with the Generator Set Installation manual and the Health and Safety manual.
	All installers have been thoroughly briefed on preventive maintenance procedures.
	All installers have read and understand all important safety instructions.
	Generator Set Support
	The floor, roof or earth on which the generator set rests is strong enough and will not allow shifting or movement. Local codes for soil bearing capacity were followed.
	The generator set is properly supported and secured to an approved base.
	The supporting base is of non-combustible material and extends 6 inches all around the generator set.
	Natural Gas and LP Vapor Fuel System
	Fuel line size has been verified for generator set fuel consumption and pressure.
	Approved flexible fuel line is installed between main fuel supply and the generator set's fuel system near the generator set
	Fuel lines are properly installed, supported and protected against damage.
	Fuel supply shutoff valves are installed to turn off fuel flow in case of leaks.
	No leaks are found in fuel supply line as a result of leak testing fuel systems.
	The inside of all fuel supply lines is free of contaminants.
	Fuel pressure is at 6 - 12 inch water column (1.5 - 3.0 kPa). Maximum pressure under any condition: 13 inch water column (3.2 kPa).
	Fuel pressure maintains at least 6 inches water column (1.5 kPa) when the generator set is at rated load.
	The installation is compliant with all state and local codes and regulations.
	AC and DC Wiring
	The control is configured for the proper fuel type.
	Wire sizes, wire types, insulation, conduits and connection methods all meet applicable codes.

Tick	Item
	AC and DC wires are separated in their own conduit to prevent electrical induction.
	All load, line and generator connections are well made and correct.
	Generator Set Pre-Start
	A safety check was performed just before starting.
	The generator set engine is properly serviced with oil and coolant.
	The battery is properly installed, serviced and charged.
	The battery charger and engine coolant heater are connected and operational, if applicable.
	All generator set covers and safety shields are installed correctly.
	The fuel supply is turned on.
	All fuel shutoff valves are operational.
	The date and time have been set in the generator set control.
	The generator set operating mode has been selected.

5.6 Startup

WARNING

Automatic startup of the generator set during installation can cause severe personal injury or death. Push the control switch OFF and disconnect the negative (–) cable from the battery to keep the generator set from starting.

After verifying that the installation was completed correctly, start and test the system. Make sure to connect the battery cables to the battery with the positive (+) cable first.

The following information applies to C70 N6, C80 N6, and C100 N6 models only: Adaptive learn is an engine ECM function that allows the generator set to "learn" its environment. There are small differences in the performance of each engine and fuel system component, so the ECM uses inputs from the engine sensors to adjust running conditions to operate more consistently for each individual generator set. After installation is complete and while testing the overall system function, the generator set must be run with no active faults under load (that is, transfer switch connected to maximum customer load available) until the engine temperature reaches 175 °F (80 °C) to allow the adaptive learn function to initialize.

Read through the Operator Manual and perform the maintenance and pre-start checks as instructed. The generator set is shipped from the factory with the proper level of engine oil and coolant, but should be checked before it is started. Start and operate the generator set following all the instructions and precautions in the Operator Manual. Ensure that the bonding bolts are installed into the service panels before leaving the site.

NOTICE

Before leaving the site, if the generator set is ready to be placed in service, set the control switch to the AUTO position to provide automatic standby power.

NOTICE

Contact your local Cummins service representative if you encounter a fault code.

5.7 InPower Service Tool

The InPower™ service tool can be used in troubleshooting to perform tests, verify control inputs and outputs, and test protective functions. Refer to the InPower User's Guide, provided with the InPower software for test procedures.

5.8 Disabling the AMF Feature

NOTICE

This procedure must be performed by a qualified technician.

On single-phase units, the control is shipped with the Automatic Mains Failure (AMF) feature enabled. This feature has logic to control the RA Automatic Transfer Switch (ATS), including a 5-minute retransfer to utility delay. If you are not using an RA ATS, you can eliminate the 5-minute retransfer to utility delay by disabling the AMF feature using the instructions below.

NOTICE

This procedure is optional. If you do not disable the AMF feature, the generator set will just run for an additional 5 minutes after the utility has been restored.

NOTICE

These steps cannot be performed with the HMI211; they can only be performed with the InPower service tool.

1. Connect to the PCC1302 via InPower.
2. Navigate to the Adjustments->Features->Automatic Transfer Switch folder.
3. Select the Auto Mains Failure Enable parameter.
4. Double-click on Enabled in the Value field.
5. A pop-up will appear with available choices. Select Disabled.
6. Select Device->Save Adjustments from the top menu bar.

-
7. A pop-up will appear asking if the change is to be saved. Click the Save button.
 8. After a pop-up appears confirming that the change has been saved, disconnect InPower from the PCC1302.

Appendix A. Fuel Line Selection

Table of Contents

Table 15. Equivalent Lengths of Pipe Fittings and Valves in Feet (Meters)	65
Table 17. Natural Gas Schedule 40 Metallic Pipe Sizing	67
Table 19. Natural Gas Semirigid Copper Tubing Sizing	69
Table 21. Propane Vapor Schedule 40 Metallic Pipe Sizing	71
Table 23. Propane Vapor Semirigid Copper Tubing Sizing	72
Table 25. Propane Schedule 40 Iron Pipe Sizing, Liquid Withdrawal (Maximum Capacity of Pipe in Cubic Feet of Gas per Hour)*	74
Figure 24. Minimum LPG Tank Size (50% Full) Required to Maintain 5 PSIG at Specific Withdrawal Rate and Minimum Expected Winter Temperature	76

A.0 Fuel System Pipe Sizing Introduction

Incorrect fuel line size may cause the generator set to not run or provide full power output.

Tables are included in this section to help calculate pipe sizing for natural gas and propane vapor withdrawal under specified conditions. Consult NFPA 54 or other applicable codes for other operating conditions or other fuel system installation requirements.

Refer to the *Engineering Application Manual T-030: Liquid Cooled Generator Sets* manual (A040S369) for more information.

To determine the optimal fuel line size, the following information is needed:

Category	Description
Fuel Flow Requirements for the Generator Set	Fuel flow requirements have a large impact on fuel line size.
Fuel Source (Natural Gas or Propane Vapor)	Fuel sources can affect fuel line size. Natural gas installations generally require a higher fuel flow rate compared to propane vapor installations, since propane has a higher energy content.
Fuel Line Length (Including Fittings)	As fuel line lengths increase, they may require larger diameter fuel lines. Be sure to consider the equivalent length of all of the fittings (elbows, tees, valves) in the installation in addition to the straight pipe length.
Fuel Line Type (e.g., Copper Tubing or Iron Pipe)	Most fuel line types are iron pipe or copper tubing. Be sure to use the sizing chart for the fuel line type when sizing the fuel line.

NOTICE

NFPA 54 has selection tables for other approved fuel lines. Verify with the authorities having jurisdiction the allowed fuel line type for the generator set installation.

A.1 Gas Pipe Sizing

NOTICE

The following tables in this section are reprinted with permission from NFPA 54-2015, *National Fuel Gas Code*, Copyright © 2014, National Fire Protection Association.

- Natural Gas Schedule 40 Metallic Pipe Sizing
- Natural Gas Semirigid Copper Tubing Sizing
- Propane Vapor Schedule 40 Iron Pipe Sizing
- Propane Vapor Semirigid Copper Tubing Sizing
- Propane Schedule 40 Iron Pipe Sizing, Liquid Withdrawal (Maximum Capacity of Pipe in Cubic Feet of Gas per Hour)

This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

Sizing of gas piping for proper fuel delivery, both flow and pressure, can become quite complex. A simplified method is to convert all fittings, valves, etc. to equivalent lengths of pipe in the diameter(s) being considered. The total equivalent length can then be related to flow capacity. Equivalent lengths of pipe fittings and valves can be found in the table below.

TABLE 15. EQUIVALENT LENGTHS OF PIPE FITTINGS AND VALVES IN FEET (METERS)

TYPE OF FITTING	NOMINAL INCH (MILLIMETER) PIPE SIZE								
	1/2 (15)	3/4 (20)	1 (25)	1-1/4 (32)	1-1/2 (40)	2 (50)	2-1/2 (65)	3 (80)	4 (100)
90° Std. Elbow or Tee Reduced ½.	1.6 (0.5)	2.0 (0.6)	2.6 (0.8)	3.3 (1.0)	4.0 (1.2)	5.0 (1.5)	6.0 (1.8)	7.5 (2.3)	10.0 (3.1)
90° Long Radius Elbow or Straight Run Tee	1.0 (0.3)	1.4 (0.4)	1.7 (0.5)	2.3 (0.7)	2.6 (0.8)	3.3 (1.0)	4.1 (1.3)	5.0 (1.5)	6.7 (2.0)
45° Elbow	0.8 (0.2)	0.9 (0.3)	1.3 (0.4)	1.7 (0.5)	2.1 (0.6)	2.6 (0.8)	3.2 (1.0)	4.0 (1.2)	5.2 (1.6)
180° Std. Bend	2.5 (0.8)	3.2 (1.0)	4.1 (1.2)	5.6 (1.7)	6.3 (1.9)	8.2 (2.5)	10.0 (3.1)	12.0 (3.7)	17.0 (5.2)
TEE, Side Inlet or Outlet	3.0 (0.9)	4.0 (1.2)	5.0 (1.5)	7.0 (2.1)	8.0 (2.4)	10.0 (3.0)	12.0 (3.7)	15.0 (4.6)	21.0 (6.4)

Foot Valve and Strainer	3.7 (1.1)	4.9 (1.5)	7.5 (2.3)	8.9 (2.7)	11.0 (3.4)	15.0 (4.6)	18.0 (5.5)	22.0 (6.7)	29.0 (8.8)
Swing Check Valve, Fully Open	6.0 (1.8)	8.0 (2.4)	10.0 (3.0)	14.0 (4.3)	16.0 (4.9)	20.0 (6.1)	25.0 (7.6)	30.0 (9.1)	40.0 (12.2)
Globe Valve, Fully Open	18.0 (5.5)	22.0 (6.7)	29.0 (8.8)	38.0 (11.6)	43.0 (13.1)	55.0 (16.8)	69.0 (21.0)	84.0 (25.6)	120.0 (36.6)
Angle Valve, Fully Open	7.0 (2.1)	9.0 (2.7)	12.0 (3.7)	15.0 (4.6)	18.0 (5.5)	24.0 (7.3)	29.0 (8.8)	35.0 (10.7)	47.0 (14.3)
Gate Valve, Fully Open	0.7 (0.2)	0.9 (0.3)	1.0 (0.3)	1.5 (0.5)	1.8 (0.5)	2.3 (0.7)	2.8 (0.9)	3.2 (1.0)	4.5 (1.4)

The remaining tables in this section show maximum gas capacity for equivalent lengths of various pipe sizes.

Here are some basic but very important steps that all installers must follow to make sure that fuel lines are sized correctly:

1. Verify adequate fuel flow, quality, and pressure available from the natural gas utility connection or the propane system.
2. Obtain the maximum fuel consumption requirements at full load for the specific generator set from the Model Specifications section and for all gas appliances attached to the pipe system.
3. Make a list of all the fittings and valves in the proposed system used in this generator set installation.
4. Determine the equivalent length of all fuel line fittings (elbows, tees, and valves). (See the NFPA Pipe Fittings table in this appendix to determine the equivalent lengths for all fuel line fittings.)
5. Add the equivalent length of the fuel line fittings to the lengths of straight pipe to determine the total equivalent length of the system.
6. Choose the applicable table in this appendix based on the fuel type (natural gas, propane vapor or liquid propane) and fuel line material.
7. Determine the fuel line size at full load:
 - a. Locate the equivalent length of pipe (or next larger equivalent length) in the left hand column.
 - b. Move across the row to where the maximum flow capacity number is as large or larger than the maximum fuel consumption.
 - c. Move to the top of that column to where the minimum nominal pipe size or tubing size required **for the system as designed** is shown.

TABLE 17. NATURAL GAS SCHEDULE 40 METALLIC PIPE SIZING

Gas:	Natural													
Inlet Pressure:	Less than 2 psi													
Pressure Drop:	0.5 in. w.c.													
Specific Gravity:	0.60													
	Pipe Size (in.)													
Nominal :	1/2	3/4	1	1 1/4	1 1/2	2	2 1/2	3	4	5	6	8	10	12
Actual ID:	0.622	0.824	1.049	1.380	1.610	2.067	2.469	3.068	4.026	5.047	6.065	7.981	10.020	11.938
Length (ft)	Capacity in Cubic Feet of Gas per Hour													
10	172	360	678	1,390	2,090	4,020	6,400	11,300	23,100	41,800	67,600	139,000	252,000	399,000
20	118	247	466	957	1,430	2,760	4,400	7,780	15,900	28,700	46,500	95,500	173,000	275,000
30	95	199	374	768	1,150	2,220	3,530	6,250	12,700	23,000	37,300	76,700	139,000	220,000
40	81	170	320	657	985	1,900	3,020	5,350	10,900	19,700	31,900	65,600	119,000	189,000
50	72	151	284	583	873	1,680	2,680	4,740	9,660	17,500	28,300	58,200	106,000	167,000
60	65	137	257	528	791	1,520	2,430	4,290	8,760	15,800	25,600	52,700	95,700	152,000
70	60	126	237	486	728	1,400	2,230	3,950	8,050	14,600	23,600	48,500	88,100	139,000
80	56	117	220	452	677	1,300	2,080	3,670	7,490	13,600	22,000	45,100	81,900	130,000
90	52	110	207	424	635	1,220	1,950	3,450	7,030	12,700	20,600	42,300	76,900	122,000
100	50	104	195	400	600	1,160	1,840	3,260	6,640	12,000	19,500	40,000	72,600	115,000
125	44	92	173	355	532	1,020	1,630	2,890	5,890	10,600	17,200	35,400	64,300	102,000
150	40	83	157	322	482	928	1,480	2,610	5,330	9,650	15,600	32,100	58,300	92,300
175	37	77	144	296	443	854	1,360	2,410	4,910	8,880	14,400	29,500	53,600	84,900

200	34	71	134	275	412	794	1,270	2,240	4,560	8,260	13,400	27,500	49,900	79,000
250	30	63	119	244	366	704	1,120	1,980	4,050	7,320	11,900	24,300	44,200	70,000
300	27	57	108	221	331	638	1,020	1,800	3,670	6,630	10,700	22,100	40,100	63,400
350	25	53	99	203	305	587	935	1,650	3,370	6,100	9,880	20,300	36,900	58,400
400	23	49	92	189	283	546	870	1,540	3,140	5,680	9,190	18,900	34,300	54,300
450	22	46	86	177	266	512	816	1,440	2,940	5,330	8,620	17,700	32,200	50,900
500	21	43	82	168	251	484	771	1,360	2,780	5,030	8,150	16,700	30,400	48,100
550	20	41	78	159	239	459	732	1,290	2,640	4,780	7,740	15,900	28,900	45,700
600	19	39	74	152	228	438	699	1,240	2,520	4,560	7,380	15,200	27,500	43,600
650	18	38	71	145	218	420	669	1,180	2,410	4,360	7,070	14,500	26,400	41,800
700	17	36	68	140	209	403	643	1,140	2,320	4,190	6,790	14,000	25,300	40,100
750	17	35	66	135	202	389	619	1,090	2,230	4,040	6,540	13,400	24,400	38,600
800	16	34	63	130	195	375	598	1,060	2,160	3,900	6,320	13,000	23,600	37,300
850	16	33	61	126	189	363	579	1,020	2,090	3,780	6,110	12,600	22,800	36,100
900	15	32	59	122	183	352	561	992	2,020	3,660	5,930	12,200	22,100	35,000
950	15	31	58	118	178	342	545	963	1,960	3,550	5,760	11,800	21,500	34,000
1,000	14	30	56	115	173	333	530	937	1,910	3,460	5,600	11,500	20,900	33,100
1,100	14	28	53	109	164	316	503	890	1,810	3,280	5,320	10,900	19,800	31,400
1,200	13	27	51	104	156	301	480	849	1,730	3,130	5,070	10,400	18,900	30,000

1,30 0	12	26	49	100	150	289	460	813	1,66 0	3,00 0	4,86 0	9,98 0	18,1 00	28,7 00
1,40 0	12	25	47	96	144	277	442	781	1,59 0	2,88 0	4,67 0	9,59 0	17,4 00	27,6 00
1,50 0	11	24	45	93	139	267	426	752	1,53 0	2,78 0	4,50 0	9,24 0	16,8 00	26,6 00
1,60 0	11	23	44	89	134	258	411	727	1,48 0	2,68 0	4,34 0	8,92 0	16,2 00	25,6 00
1,70 0	11	22	42	86	130	250	398	703	1,43 0	2,59 0	4,20 0	8,63 0	15,7 00	24,8 00
1,80 0	10	22	41	84	126	242	386	682	1,39 0	2,52 0	4,07 0	8,37 0	15,2 00	24,1 00
1,90 0	10	21	40	81	122	235	375	662	1,35 0	2,44 0	3,96 0	8,13 0	14,8 00	23,4 00
2,00 0	NA	20	39	79	119	229	364	644	1,31 0	2,38 0	3,85 0	7,91 0	14,4 00	22,7 00
NA: Applies to a flow of less than 10 cfh. Note: All table entries are rounded to 3 significant digits.														

TABLE 19. NATURAL GAS SEMIRIGID COPPER TUBING SIZING

Gas:	Natural								
Inlet Pressure:	Less than 2 psi								
Pressure Drop:	0.5 in. w.c.								
Specific Gravity:	0.60								
	Tube Size (in.)								
Nominal K & L:	1/4	3/8	1/2	5/8	3/4	1	1 1/4	1 1/2	2
Nominal ACR:	3/8	1/2	5/8	3/4	7/8	1 1/8	1 3/8	—	—
Outside:	0.375	0.500	0.625	0.750	0.875	1.125	1.375	1.625	2.125
Inside:*	0.305	0.402	0.527	0.652	0.745	0.995	1.245	1.481	1.959
Length (ft.)	Capacity in Cubic Feet of Gas per Hour								
10	27	55	111	195	276	590	1,060	1,680	3,490
20	18	38	77	134	190	406	730	1,150	2,400
30	15	30	61	107	152	326	586	925	1,930

40	13	26	53	92	131	279	502	791	1,650
50	11	23	47	82	116	247	445	701	1,460
60	10	21	42	74	105	224	403	635	1,320
70	NA	19	39	68	96	206	371	585	1,220
80	NA	18	36	63	90	192	345	544	1,130
90	NA	17	34	59	84	180	324	510	1,060
100	NA	16	32	56	79	170	306	482	1,000
125	NA	14	28	50	70	151	271	427	890
150	NA	13	26	45	64	136	245	387	806
175	NA	12	24	41	59	125	226	356	742
200	NA	11	22	39	55	117	210	331	690
250	NA	NA	20	34	48	103	186	294	612
300	NA	NA	18	31	44	94	169	266	554
350	NA	NA	16	28	40	86	155	245	510
400	NA	NA	15	26	38	80	144	228	474
450	NA	NA	14	25	35	75	135	214	445
500	NA	NA	13	23	33	71	128	202	420
550	NA	NA	13	22	32	68	122	192	399
600	NA	NA	12	21	30	64	116	183	381
650	NA	NA	12	20	29	62	111	175	365
700	NA	NA	11	20	28	59	107	168	350
750	NA	NA	11	19	27	57	103	162	338
800	NA	NA	10	18	26	55	99	156	326
850	NA	NA	10	18	25	53	96	151	315
900	NA	NA	NA	17	24	52	93	147	306
950	NA	NA	NA	17	24	50	90	143	297
1,000	NA	NA	NA	16	23	49	88	139	289
1,100	NA	NA	NA	15	22	46	84	132	274
1,200	NA	NA	NA	15	21	44	80	126	262
1,300	NA	NA	NA	14	20	42	76	120	251
1,400	NA	NA	NA	13	19	41	73	116	241
1,500	NA	NA	NA	13	18	39	71	111	232

1,600	NA	NA	NA	13	18	38	68	108	224
1,700	NA	NA	NA	12	17	37	66	104	217
1,800	NA	NA	NA	12	17	36	64	101	210
1,900	NA	NA	NA	11	16	35	62	98	204
2,000	NA	NA	NA	11	16	34	60	95	199

NA: A flow of less than 10 cfh.
 Note: All table entries are rounded to 3 significant digits.
 *Table capacities are based on Type K copper tubing inside diameter (shown), which has the smallest inside diameter of the copper tubing products.

TABLE 21. PROPANE VAPOR SCHEDULE 40 METALLIC PIPE SIZING

Gas:		Undiluted Propane							
Inlet Pressure:		11.0 in. w.c.							
Pressure Drop:		0.5 in. w.c.							
Specific Gravity:		1.50							
INTENDED USE: Pipe Sizing Between Single- or Second-Stage (Low-Pressure) Regulator and Appliance									
	Pipe Size (in.)								
Nominal Inside:	1/2	3/4	1	1 1/4	1 1/2	2	2 1/2	3	4
Actual:	0.622	0.824	1.049	1.380	1.610	2.067	2.469	3.068	4.026
Length (ft.)	Capacity in Thousands of BTU per Hour								
10	291	608	1,150	2,350	3,520	6,790	10,800	19,100	39,000
20	200	418	787	1,620	2,420	4,660	7,430	13,100	26,800
30	160	336	632	1,300	1,940	3,750	5,970	10,600	21,500
40	137	287	541	1,110	1,660	3,210	5,110	9,030	18,400
50	122	255	480	985	1,480	2,840	4,530	8,000	16,300
60	110	231	434	892	1,340	2,570	4,100	7,250	14,800
80	101	212	400	821	1,230	2,370	3,770	6,670	13,600
100	94	197	372	763	1,140	2,200	3,510	6,210	12,700
125	89	185	349	716	1,070	2,070	3,290	5,820	11,900
150	84	175	330	677	1,010	1,950	3,110	5,500	11,200
175	74	155	292	600	899	1,730	2,760	4,880	9,950

200	67	140	265	543	814	1,570	2,500	4,420	9,010
250	62	129	243	500	749	1,440	2,300	4,060	8,290
300	58	120	227	465	697	1,340	2,140	3,780	7,710
350	51	107	201	412	618	1,190	1,900	3,350	6,840
400	46	97	182	373	560	1,080	1,720	3,040	6,190
450	42	89	167	344	515	991	1,580	2,790	5,700
500	40	83	156	320	479	922	1,470	2,600	5,300
550	37	78	146	300	449	865	1,380	2,440	4,970
600	35	73	138	283	424	817	1,300	2,300	4,700
650	33	70	131	269	403	776	1,240	2,190	4,460
700	32	66	125	257	385	741	1,180	2,090	4,260
750	30	64	120	246	368	709	1,130	2,000	4,080
800	29	61	115	236	354	681	1,090	1,920	3,920
850	28	59	111	227	341	656	1,050	1,850	3,770
900	27	57	107	220	329	634	1,010	1,790	3,640
950	26	55	104	213	319	613	978	1,730	3,530
1,000	25	53	100	206	309	595	948	1,680	3,420
1,100	25	52	97	200	300	578	921	1,630	3,320
1,200	24	50	95	195	292	562	895	1,580	3,230
1,300	23	48	90	185	277	534	850	1,500	3,070
1,400	22	46	86	176	264	509	811	1,430	2,930
1,500	21	44	82	169	253	487	777	1,370	2,800
1,600	20	42	79	162	243	468	746	1,320	2,690
1,700	19	40	76	156	234	451	719	1,270	2,590
1,800	19	39	74	151	226	436	694	1,230	2,500
1,900	18	38	71	146	219	422	672	1,190	2,420
2,000	18	37	69	142	212	409	652	1,150	2,350

Note: All table entries are rounded to 3 significant digits.

TABLE 23. PROPANE VAPOR SEMIRIGID COPPER TUBING SIZING

Gas:	Undiluted Propane
Inlet Pressure:	11.0 in. w.c.

Pressure Drop:		0.5 in. w.c.							
Specific Gravity:		1.50							
INTENDED USE: Tube Sizing Between Single- or Second-Stage (Low-Pressure) Regulator and Appliance									
	Tube Size (in.)								
Nominal K & L:	1/4	3/8	1/2	5/8	3/4	1	1 1/4	1 1/2	2
Nominal ACR:	3/8	1/2	5/8	3/4	7/8	1 1/8	1 3/8	—	—
Outside:	0.375	0.500	0.625	0.750	0.875	1.125	1.375	1.625	2.125
Inside:*	0.305	0.402	0.527	0.652	0.745	0.995	1.245	1.481	1.959
Length (ft.)	Capacity in Thousands of BTU per Hour								
10	45	93	188	329	467	997	1,800	2,830	5,890
20	31	64	129	226	321	685	1,230	1,950	4,050
30	25	51	104	182	258	550	991	1,560	3,250
40	21	44	89	155	220	471	848	1,340	2,780
50	19	39	79	138	195	417	752	1,180	2,470
60	17	35	71	125	177	378	681	1,070	2,240
70	16	32	66	115	163	348	626	988	2,060
80	15	30	61	107	152	324	583	919	1,910
90	14	28	57	100	142	304	547	862	1,800
100	13	27	54	95	134	287	517	814	1,700
125	11	24	48	84	119	254	458	722	1,500
150	10	21	44	76	108	230	415	654	1,360
175	NA	20	40	70	99	212	382	602	1,250
200	NA	18	37	65	92	197	355	560	1,170
250	NA	16	33	58	82	175	315	496	1,030
300	NA	15	30	52	74	158	285	449	936
350	NA	14	28	48	68	146	262	414	861
400	NA	13	26	45	63	136	244	385	801
450	NA	12	24	42	60	127	229	361	752
500	NA	11	23	40	56	120	216	341	710
550	NA	11	22	38	53	114	205	324	674

600	NA	10	21	36	51	109	196	309	643
650	NA	NA	20	34	49	104	188	296	616
700	NA	NA	19	33	47	100	180	284	592
750	NA	NA	18	32	45	96	174	274	570
800	NA	NA	18	31	44	93	168	264	551
850	NA	NA	17	30	42	90	162	256	533
900	NA	NA	17	29	41	87	157	248	517
950	NA	NA	16	28	40	85	153	241	502
1,000	NA	NA	16	27	39	83	149	234	488
1,100	NA	NA	15	26	37	78	141	223	464
1,200	NA	NA	14	25	35	75	135	212	442
1,300	NA	NA	14	24	34	72	129	203	423
1,400	NA	NA	13	23	32	69	124	195	407
1,500	NA	NA	13	22	31	66	119	188	392
1,600	NA	NA	12	21	30	64	115	182	378
1,700	NA	NA	12	20	29	62	112	176	366
1,800	NA	NA	11	20	28	60	108	170	355
1,900	NA	NA	11	19	27	58	105	166	345
2,000	NA	NA	11	19	27	57	102	161	335

NA: A flow of less than 10,000 BTU/hr.

Note: All table entries are rounded to 3 significant digits.

*Table capacities are based on Type K copper tubing inside diameter (shown), which has the smallest inside diameter of the copper tubing products.

**TABLE 25. PROPANE SCHEDULE 40 IRON PIPE SIZING, LIQUID WITHDRAWAL
(MAXIMUM CAPACITY OF PIPE IN CUBIC FEET OF GAS PER HOUR)***

Equivalent Length of Pipe (ft.)	Schedule 40 Iron Pipe Size (in.): Nominal (Inside Diameter)								
	1/2 (0.622)	3/4 (0.824)	1 (1.049)	1 1/4 (1.38)	1 1/2 (1.61)	2 (2.067)	3 (3.068)	3 1/2 (3.548)	4 (4.026)
30	733	1,532	2,885	5,924	8,876	17,094	48,164	70,519	98,238
40	627	1,311	2,469	5,070	7,597	14,630	41,222	60,355	84,079

Equivalent Length of Pipe (ft.)	Schedule 40 Iron Pipe Size (in.): Nominal (Inside Diameter)								
	1/2 (0.622)	3/4 (0.824)	1 (1.049)	1 1/4 (1.38)	1 1/2 (1.61)	2 (2.067)	3 (3.068)	3 1/2 (3.548)	4 (4.026)
50	556	1,162	2,189	4,494	6,733	12,966	36,534	53,492	74,518
60	504	1,053	1,983	4,072	6,100	11,748	33,103	48,467	67,519
70	463	969	1,824	3,746	5,612	10,808	30,454	44,589	62,116
80	431	901	1,697	3,484	5,221	10,055	28,331	41,482	57,787
90	404	845	1,593	3,269	4,899	9,434	26,583	38,921	54,220
100	382	798	1,504	3,088	4,627	8,912	25,110	36,764	51,216
150	307	641	1,208	2,480	3,716	7,156	20,164	29,523	41,128
200	262	549	1,034	2,122	3,180	6,125	17,258	25,268	35,200
250	233	486	916	1,881	2,819	5,428	15,295	22,395	31,198
300	211	441	830	1,705	2,554	4,919	13,859	20,291	28,267
350	194	405	764	1,568	2,349	4,525	12,750	18,667	26,006
400	180	377	711	1,459	2,186	4,209	11,861	17,366	24,193
450	169	354	667	1,369	2,051	3,950	11,129	16,295	22,700
500	160	334	630	1,293	1,937	3,731	10,512	15,391	21,442
600	145	303	571	1,172	1,755	3,380	9,525	13,946	19,428
700	133	279	525	1,078	1,615	3,110	8,763	12,830	17,873
800	124	259	488	1,003	1,502	2,893	8,152	11,936	16,628

Equivalent Length of Pipe (ft.)	Schedule 40 Iron Pipe Size (in.): Nominal (Inside Diameter)								
	1/2 (0.622)	3/4 (0.824)	1 (1.049)	1 1/4 (1.38)	1 1/2 (1.61)	2 (2.067)	3 (3.068)	3 1/2 (3.548)	4 (4.026)
900	116	243	458	941	1,409	2,715	7,649	11,199	15,601
1000	110	230	433	889	1,331	2,564	7,225	10,579	14,737
1500	88	184	348	713	1,069	2,059	5,802	8,495	11,834
2000	76	158	297	611	915	1,762	4,966	7,271	10,128

*Pipe size recommendations are based on schedule 40 black iron pipe.

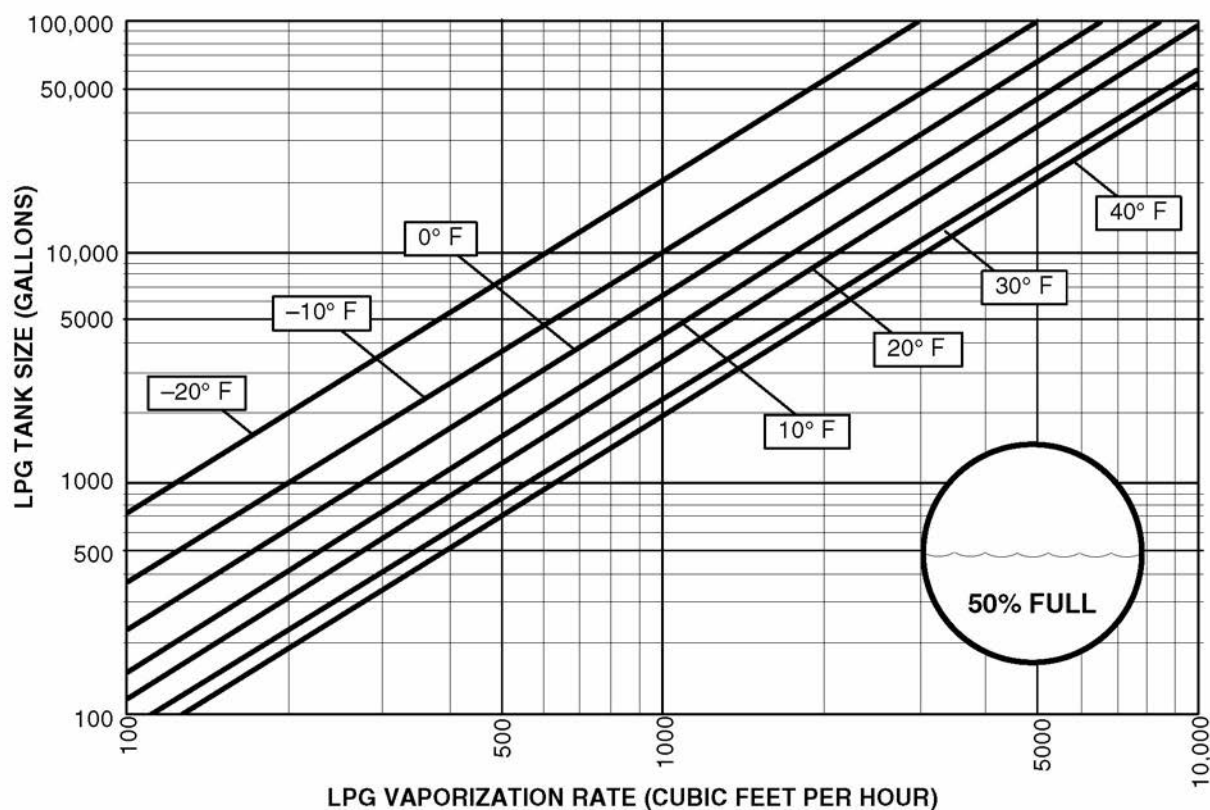


FIGURE 24. MINIMUM LPG TANK SIZE (50% FULL) REQUIRED TO MAINTAIN 5 PSIG AT SPECIFIC WITHDRAWAL RATE AND MINIMUM EXPECTED WINTER TEMPERATURE

Appendix B. Outline and System Drawings

Table of Contents

Figure 25. Generator Set Outline, 45-50 kW (Sheet 1 of 2)	79
Figure 26. Generator Set Outline, 45-50 kW (Sheet 2 of 2)	80
Figure 27. Generator Set Outline, 60 kW (Sheet 1 of 2)	81
Figure 28. Generator Set Outline, 60 kW (Sheet 2 of 2)	82
Figure 29. Generator Set Outline, 70-100 kW (Sheet 1 of 2)	83
Figure 30. Generator Set Outline, 70-100 kW (Sheet 2 of 2)	84
Figure 31. Generator Set Outline, Accessories (Sheet 1 of 2)	85
Figure 32. Generator Set Outline, Accessories (Sheet 2 of 2)	86
Figure 33. Foundation Outline (Sheet 1 of 1)	87
Figure 34. Enclosure Outline, Weather (Sheet 1 of 1)	88
Figure 35. Enclosure Outline, Sound Attention Level 1 and Level 2 (Sheet 1 of 2)	89
Figure 36. Enclosure Outline, Sound Attention Level 1 and Level 2 (Sheet 2 of 2)	90

This page is intentionally blank.

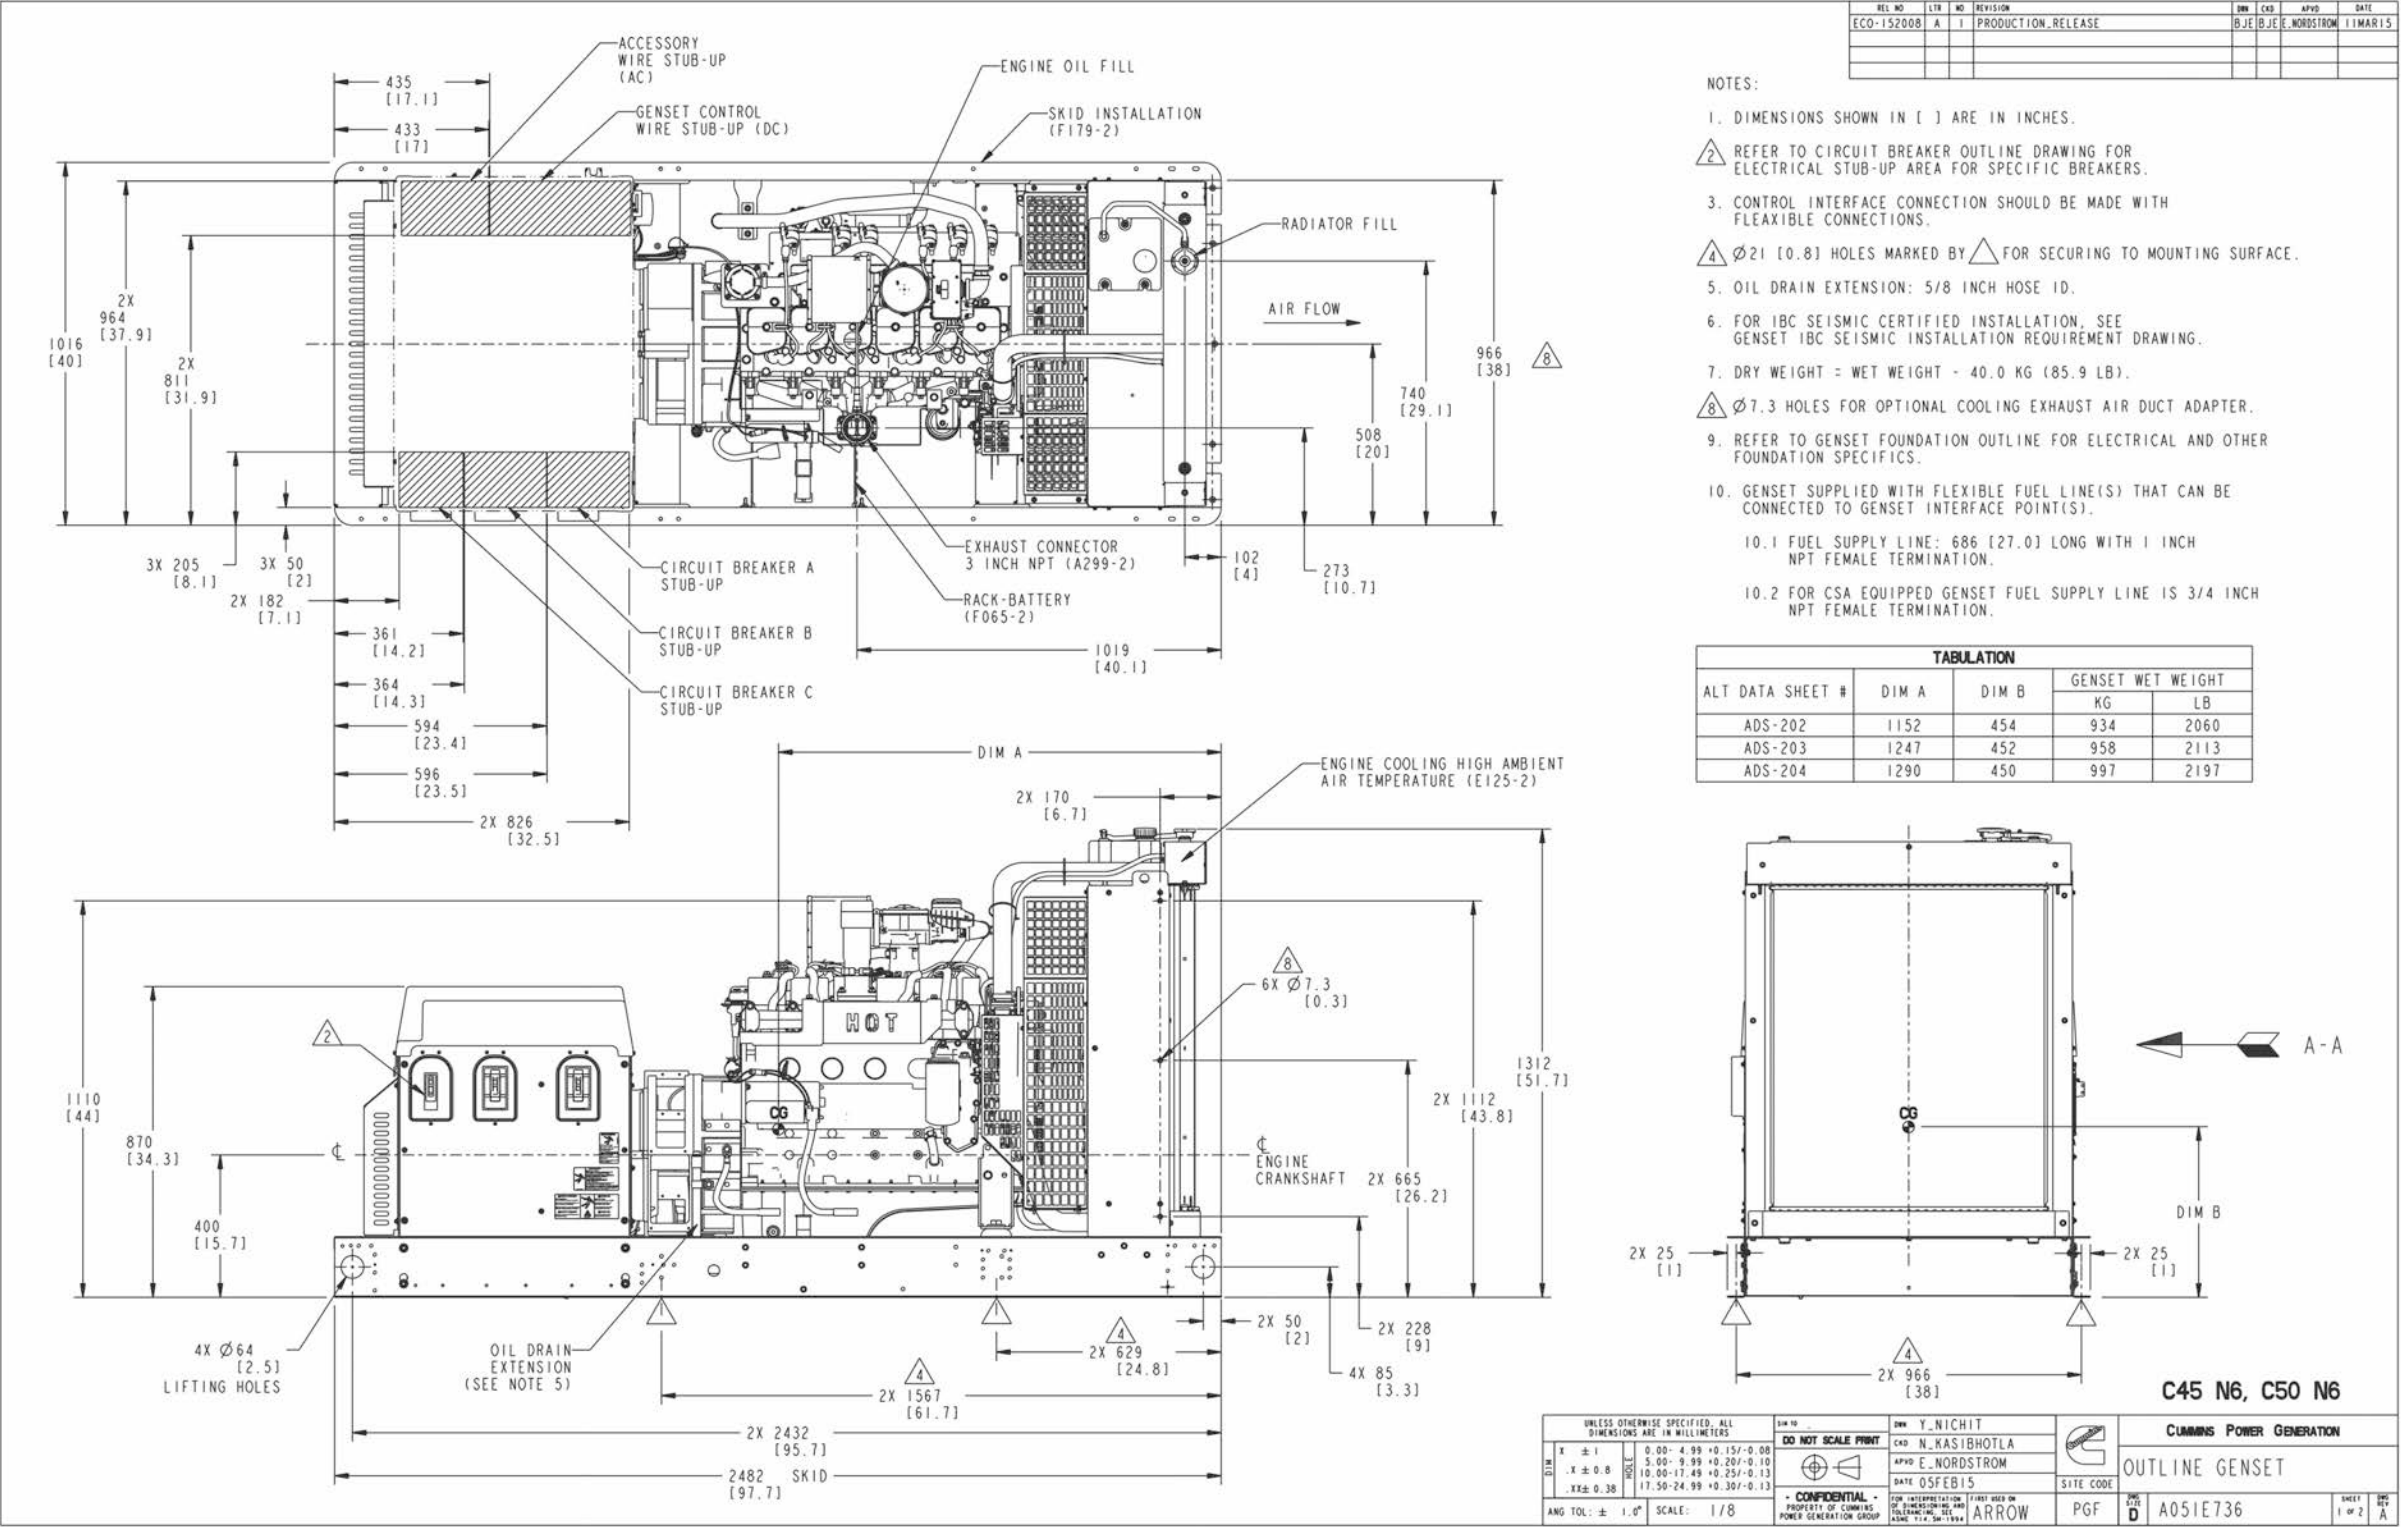


FIGURE 25. GENERATOR SET OUTLINE, 45-50 KW (SHEET 1 OF 2)

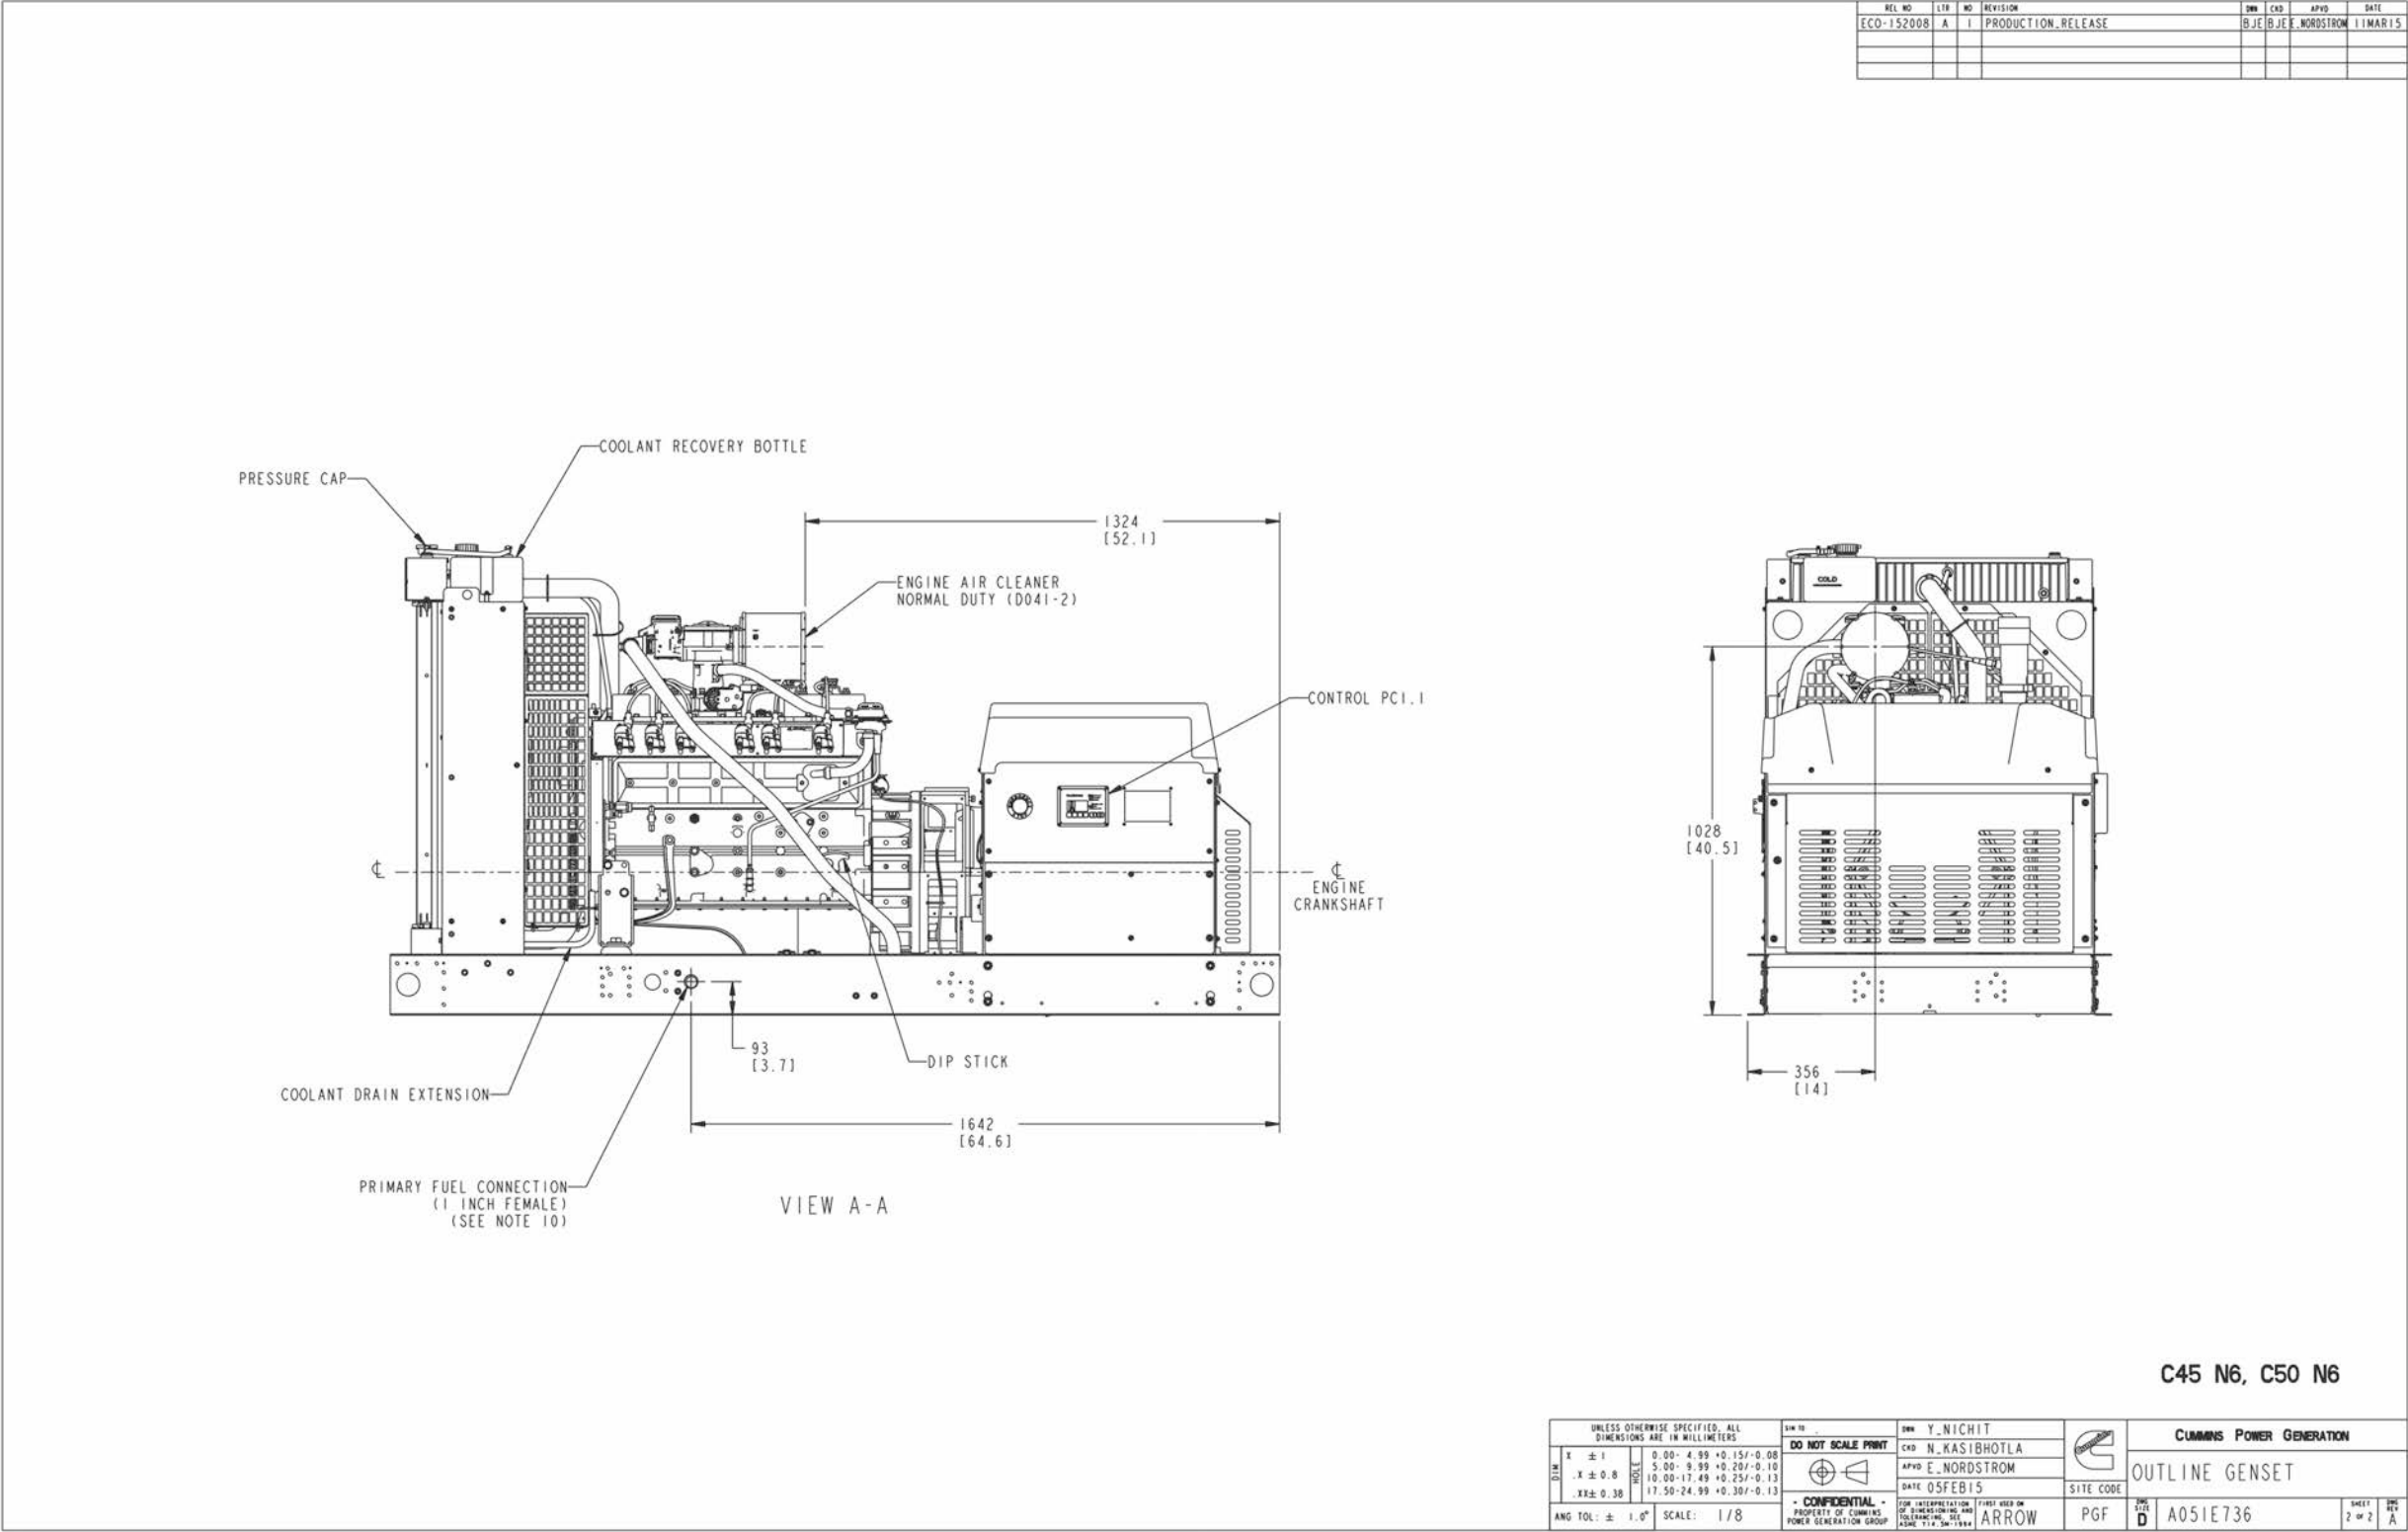


FIGURE 26. GENERATOR SET OUTLINE, 45-50 KW (SHEET 2 OF 2)

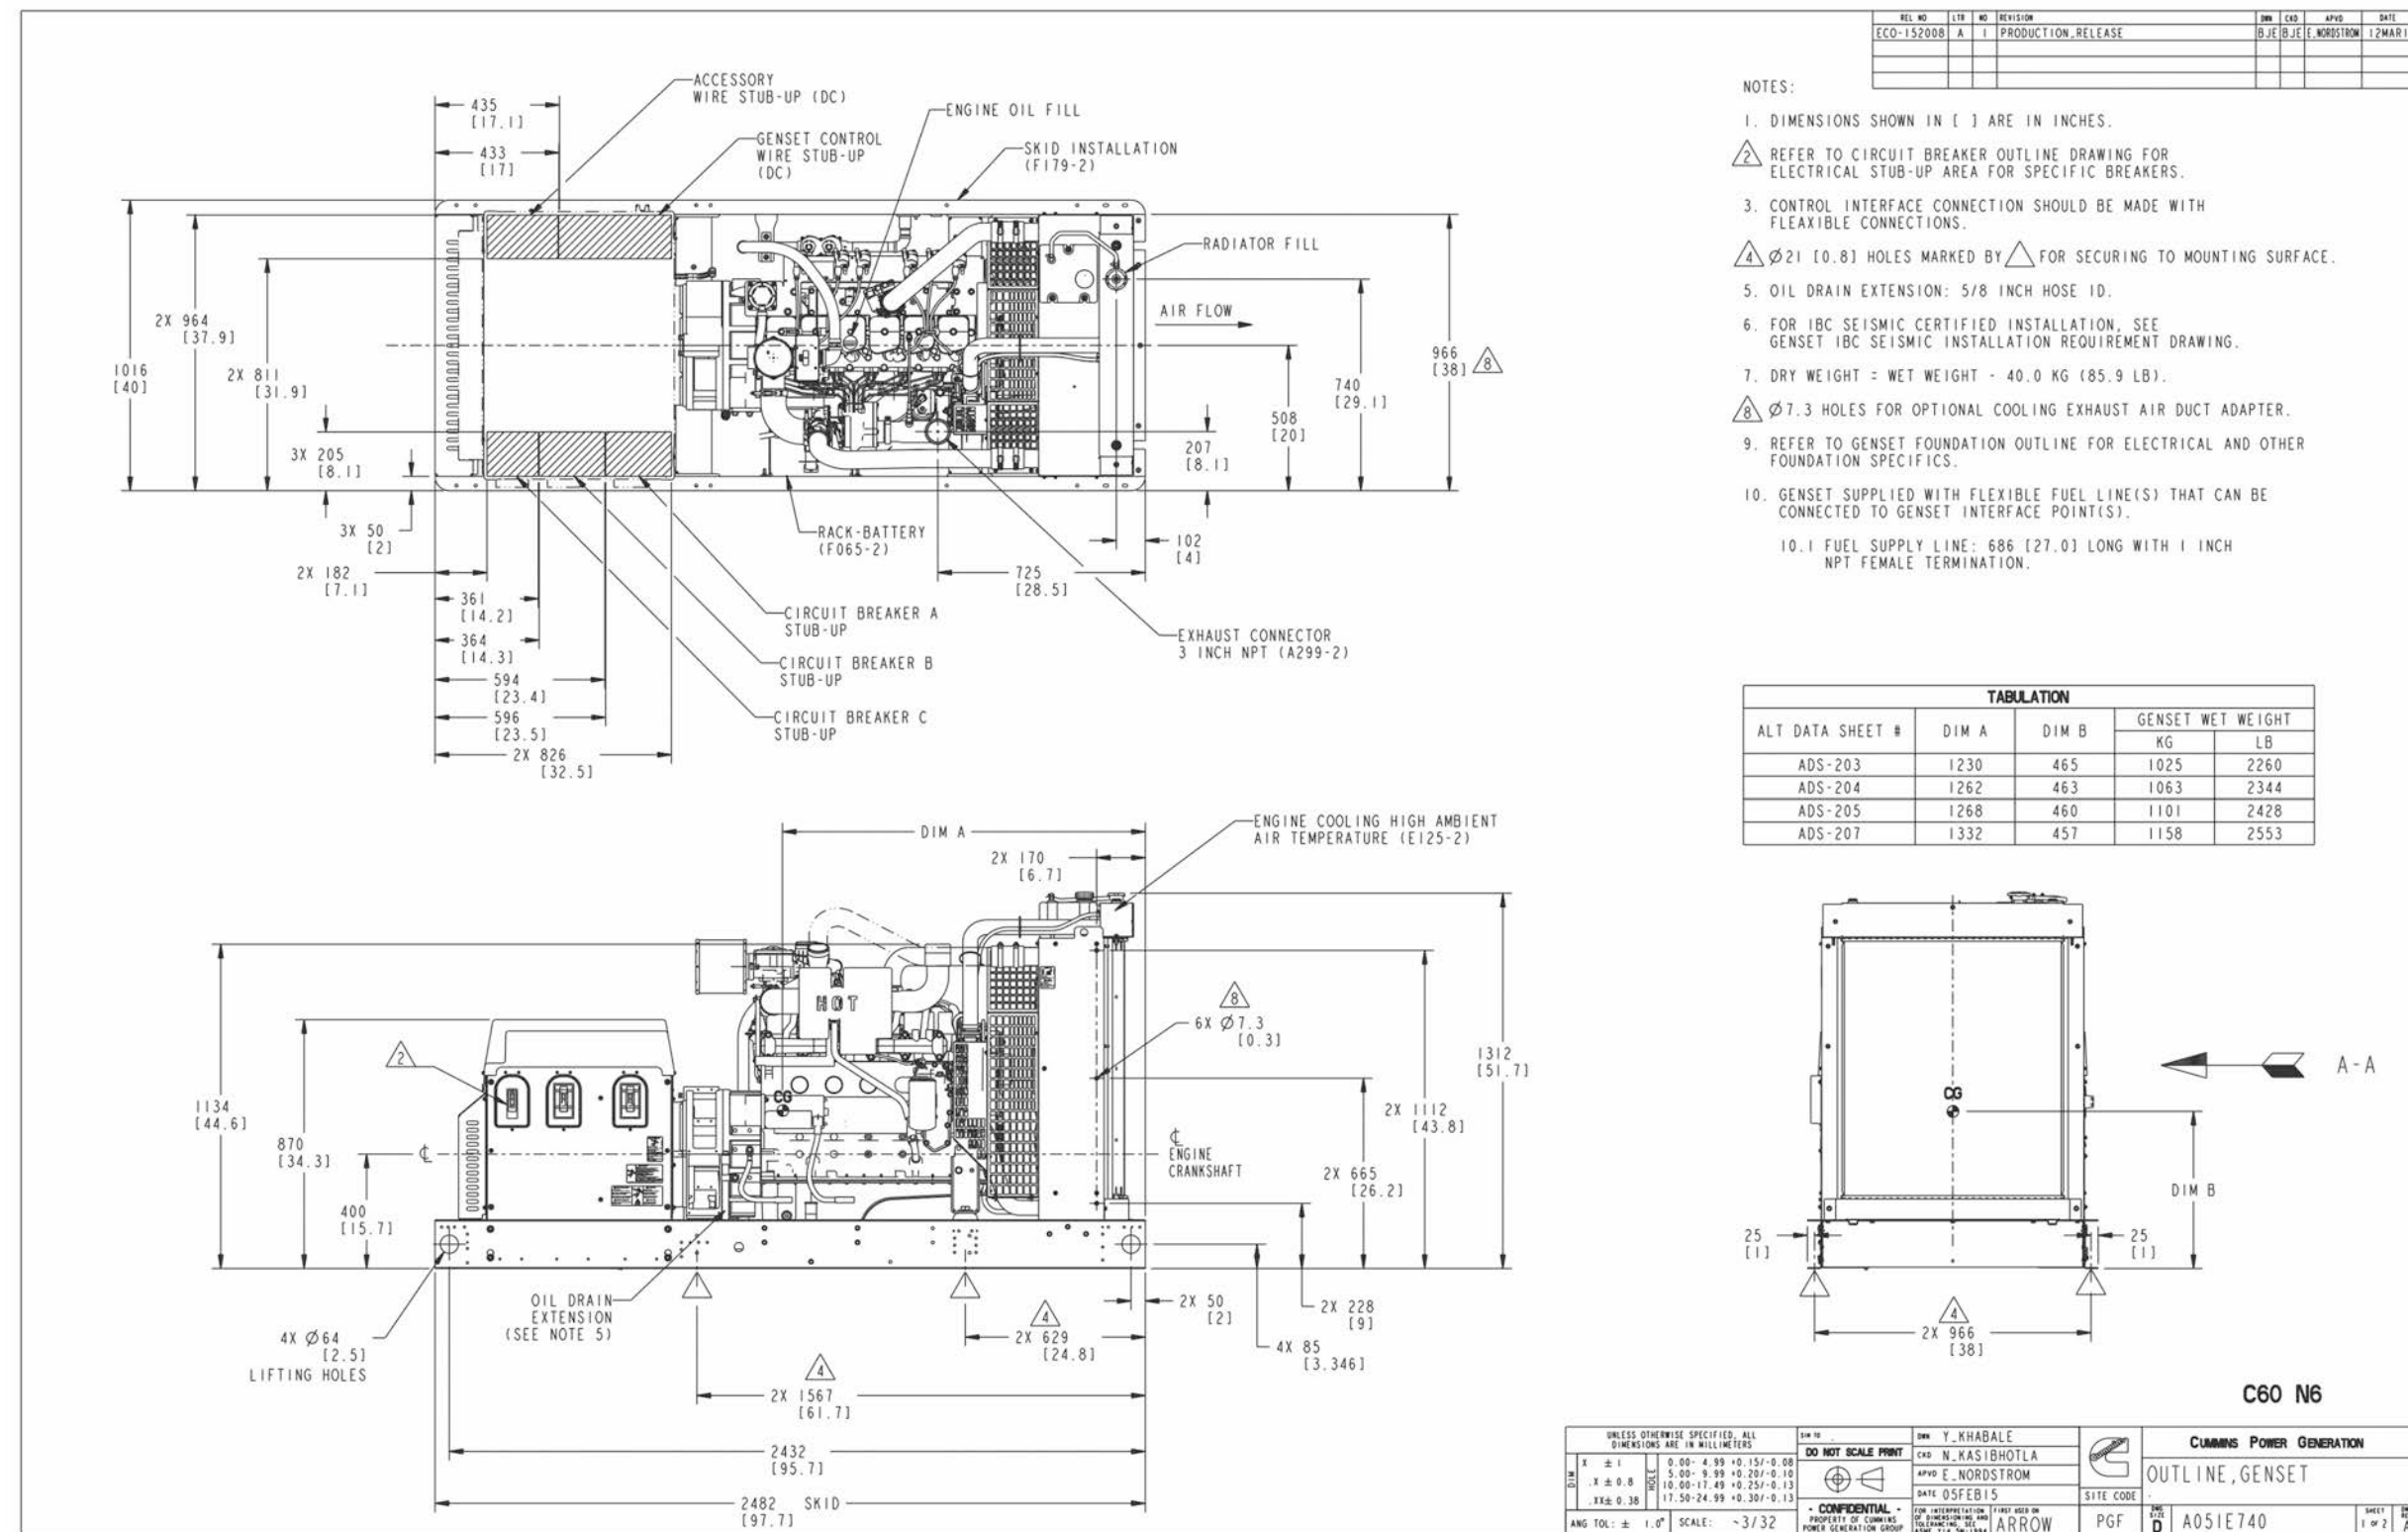


FIGURE 27. GENERATOR SET OUTLINE, 60 KW (SHEET 1 OF 2)

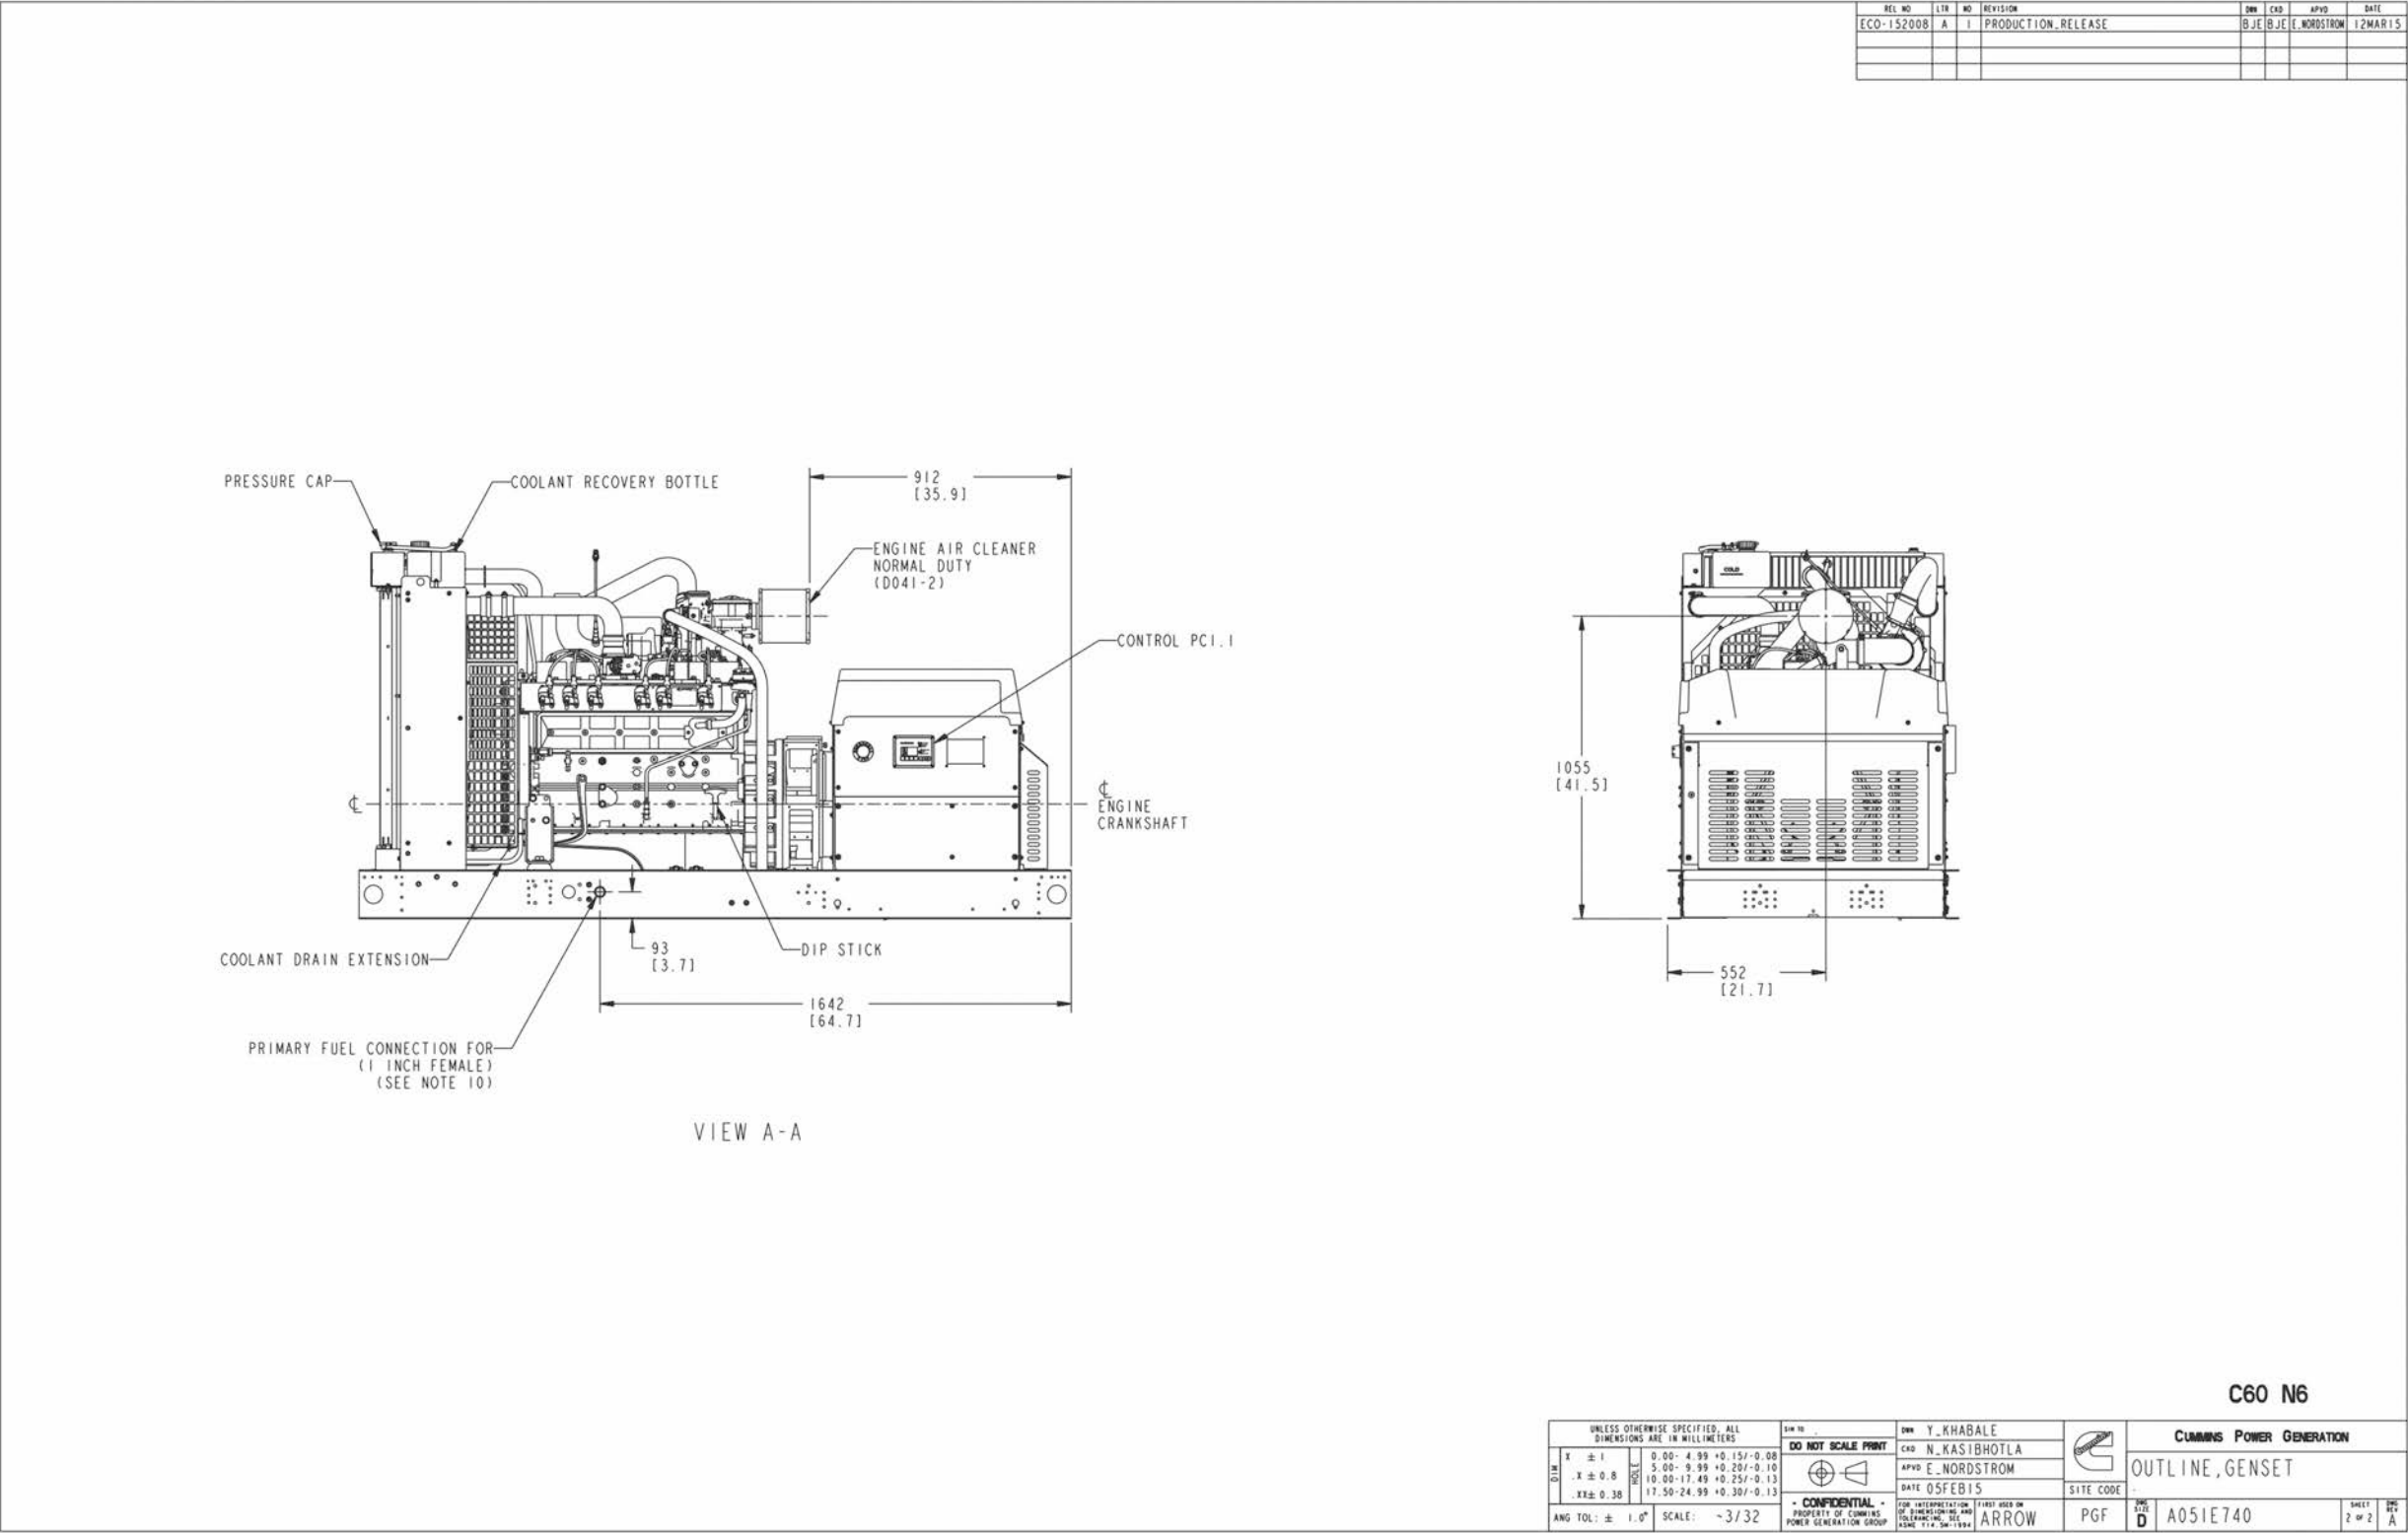


FIGURE 28. GENERATOR SET OUTLINE, 60 KW (SHEET 2 OF 2)

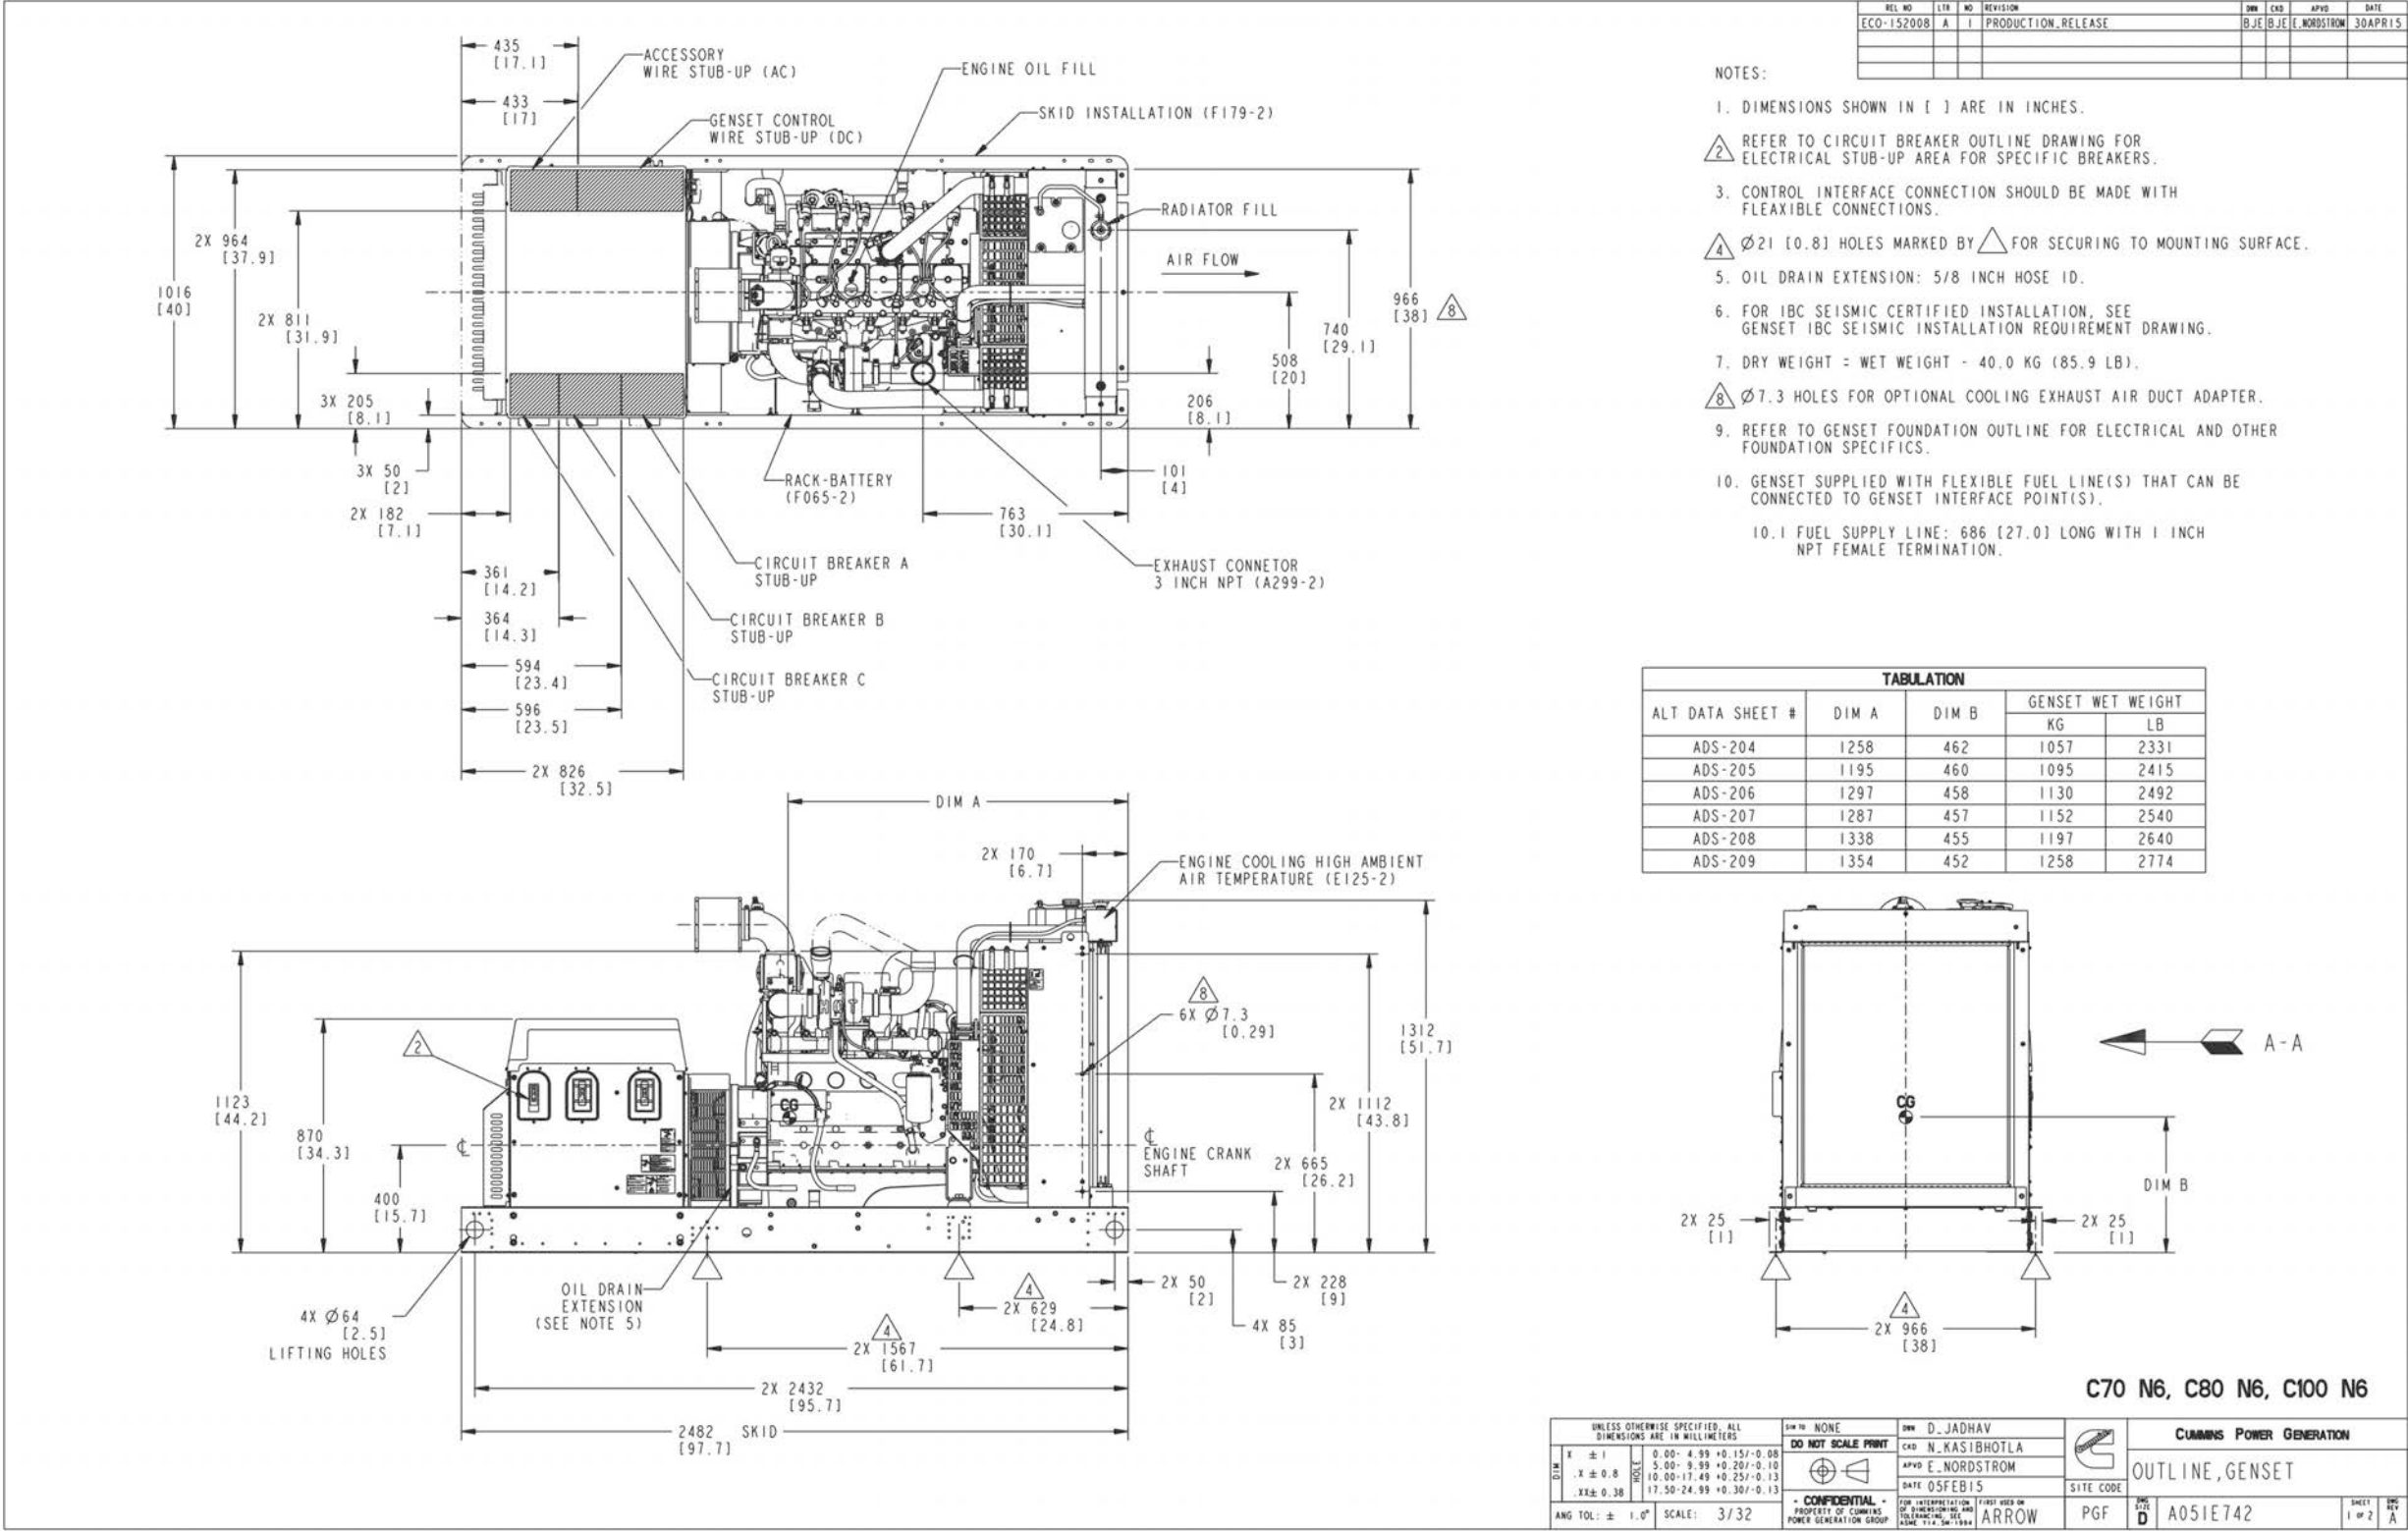


FIGURE 29. GENERATOR SET OUTLINE, 70-100 KW (SHEET 1 OF 2)

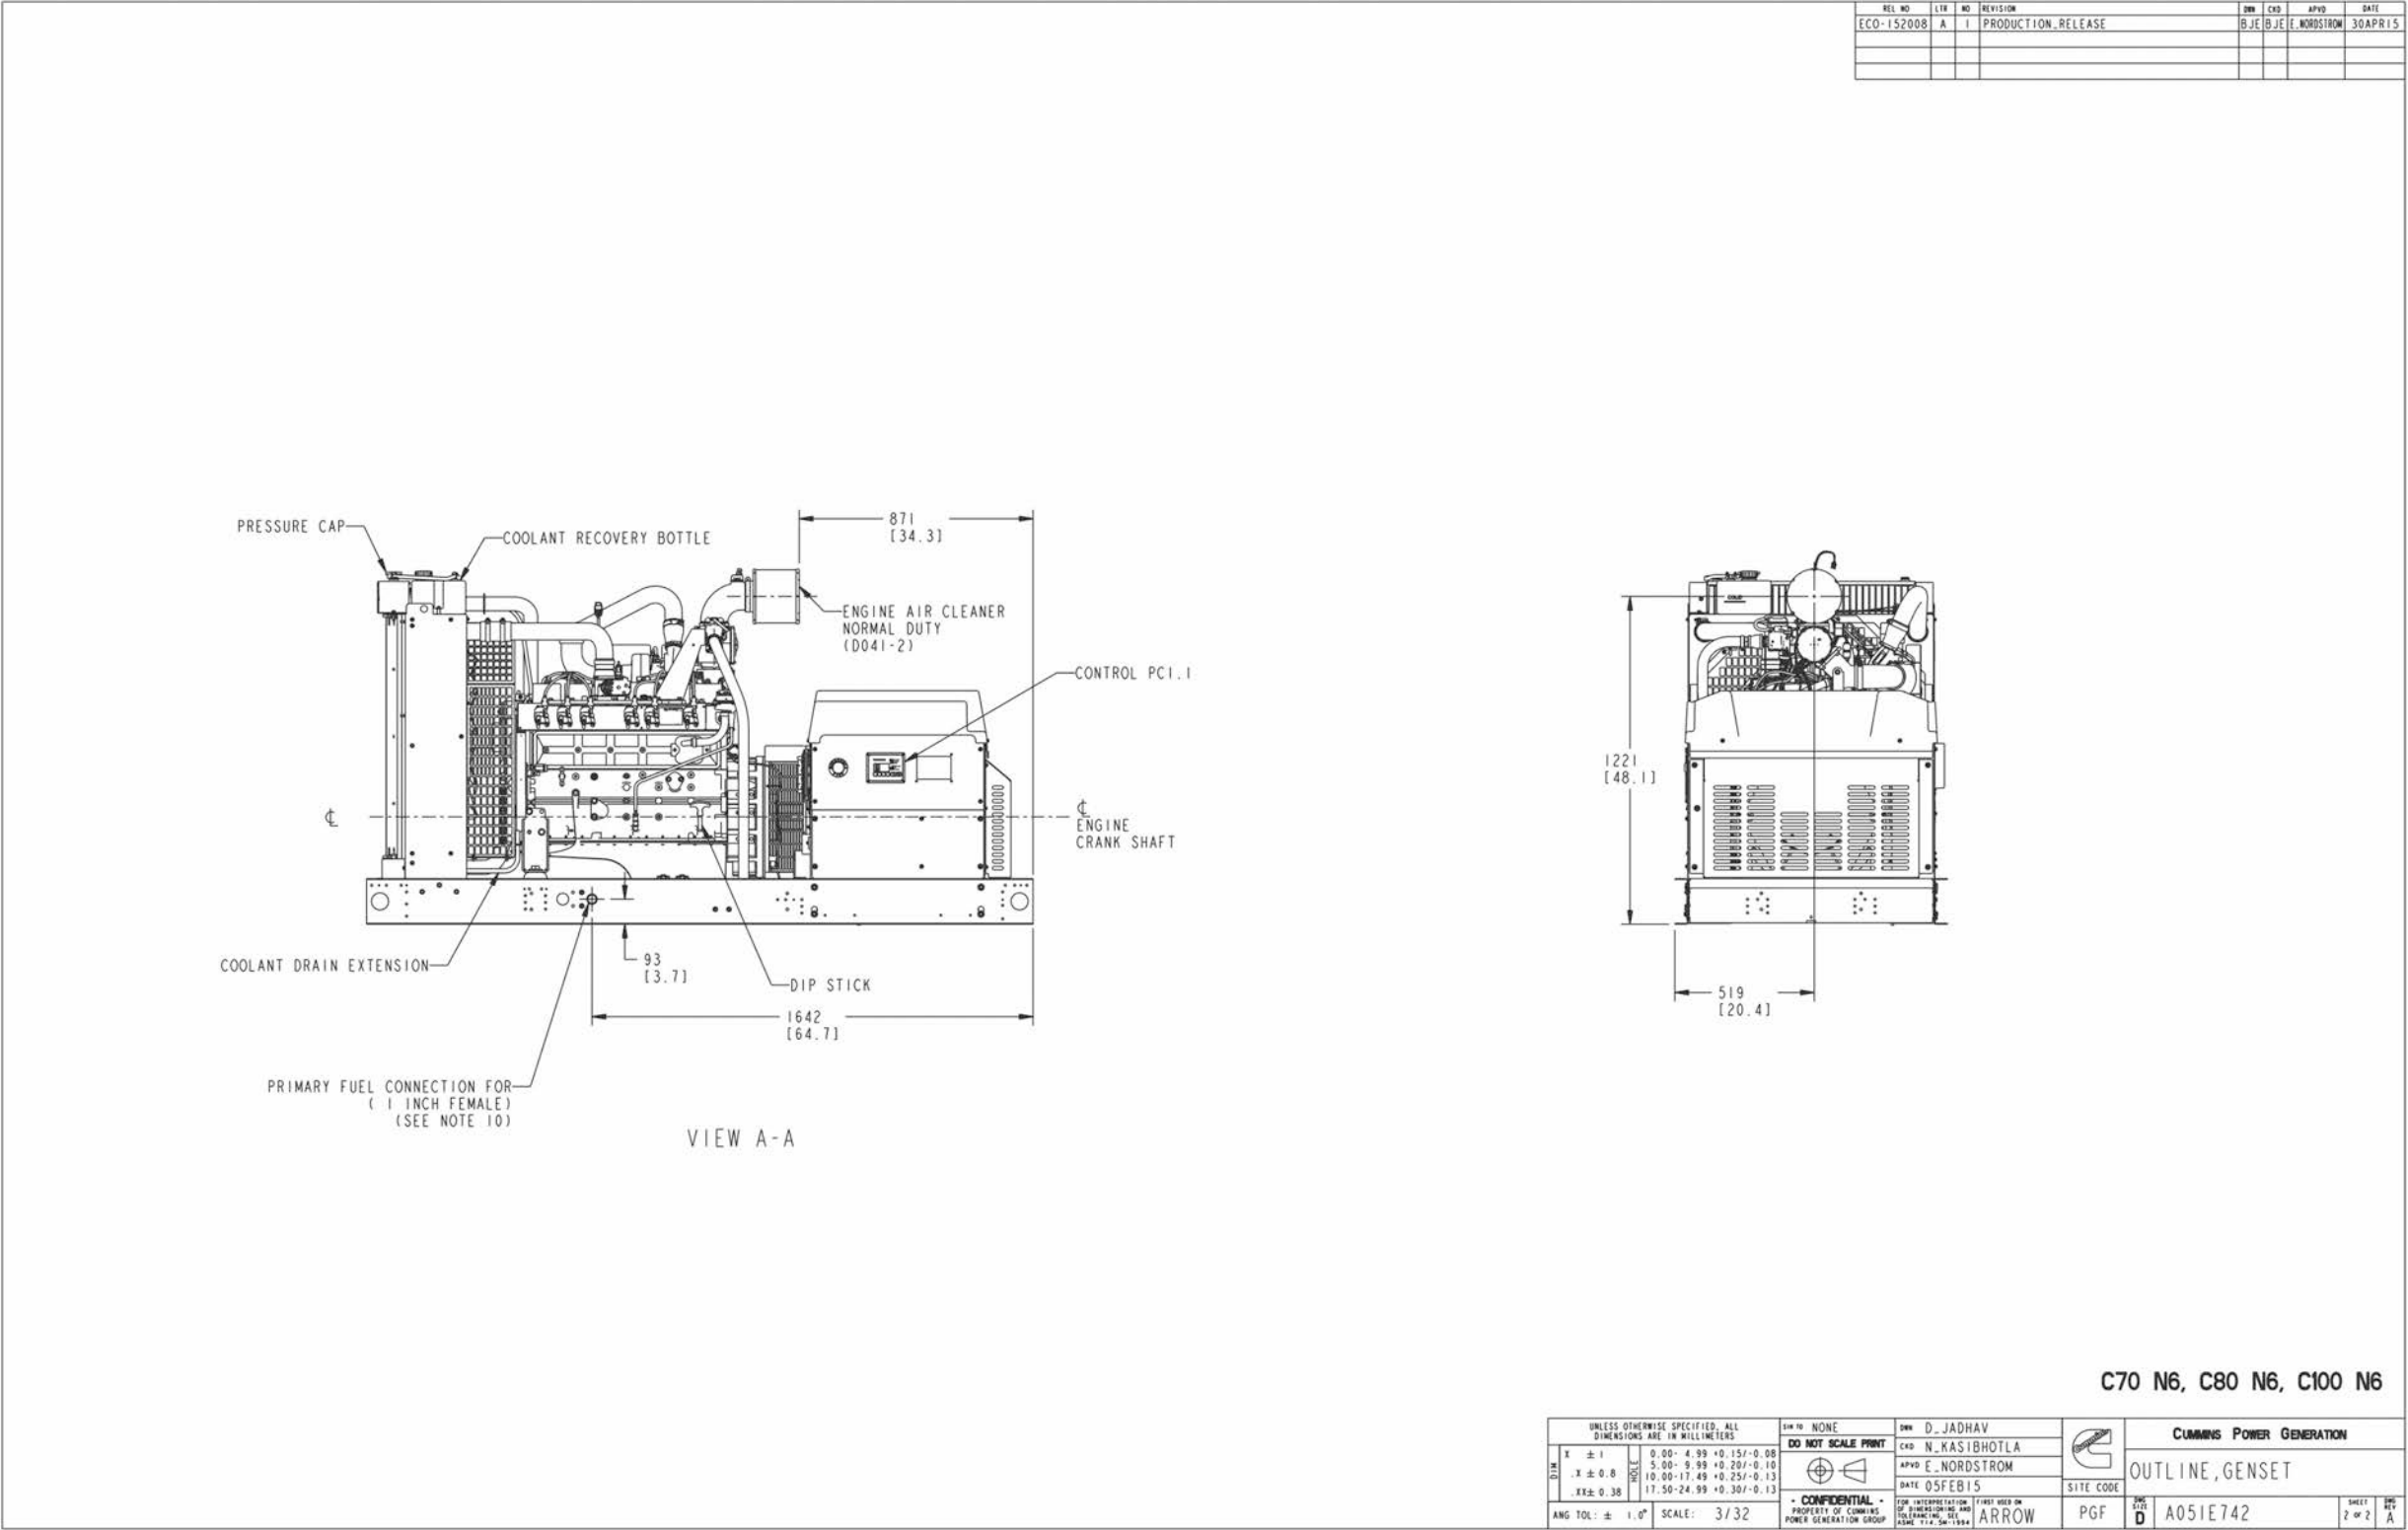


FIGURE 30. GENERATOR SET OUTLINE, 70-100 KW (SHEET 2 OF 2)

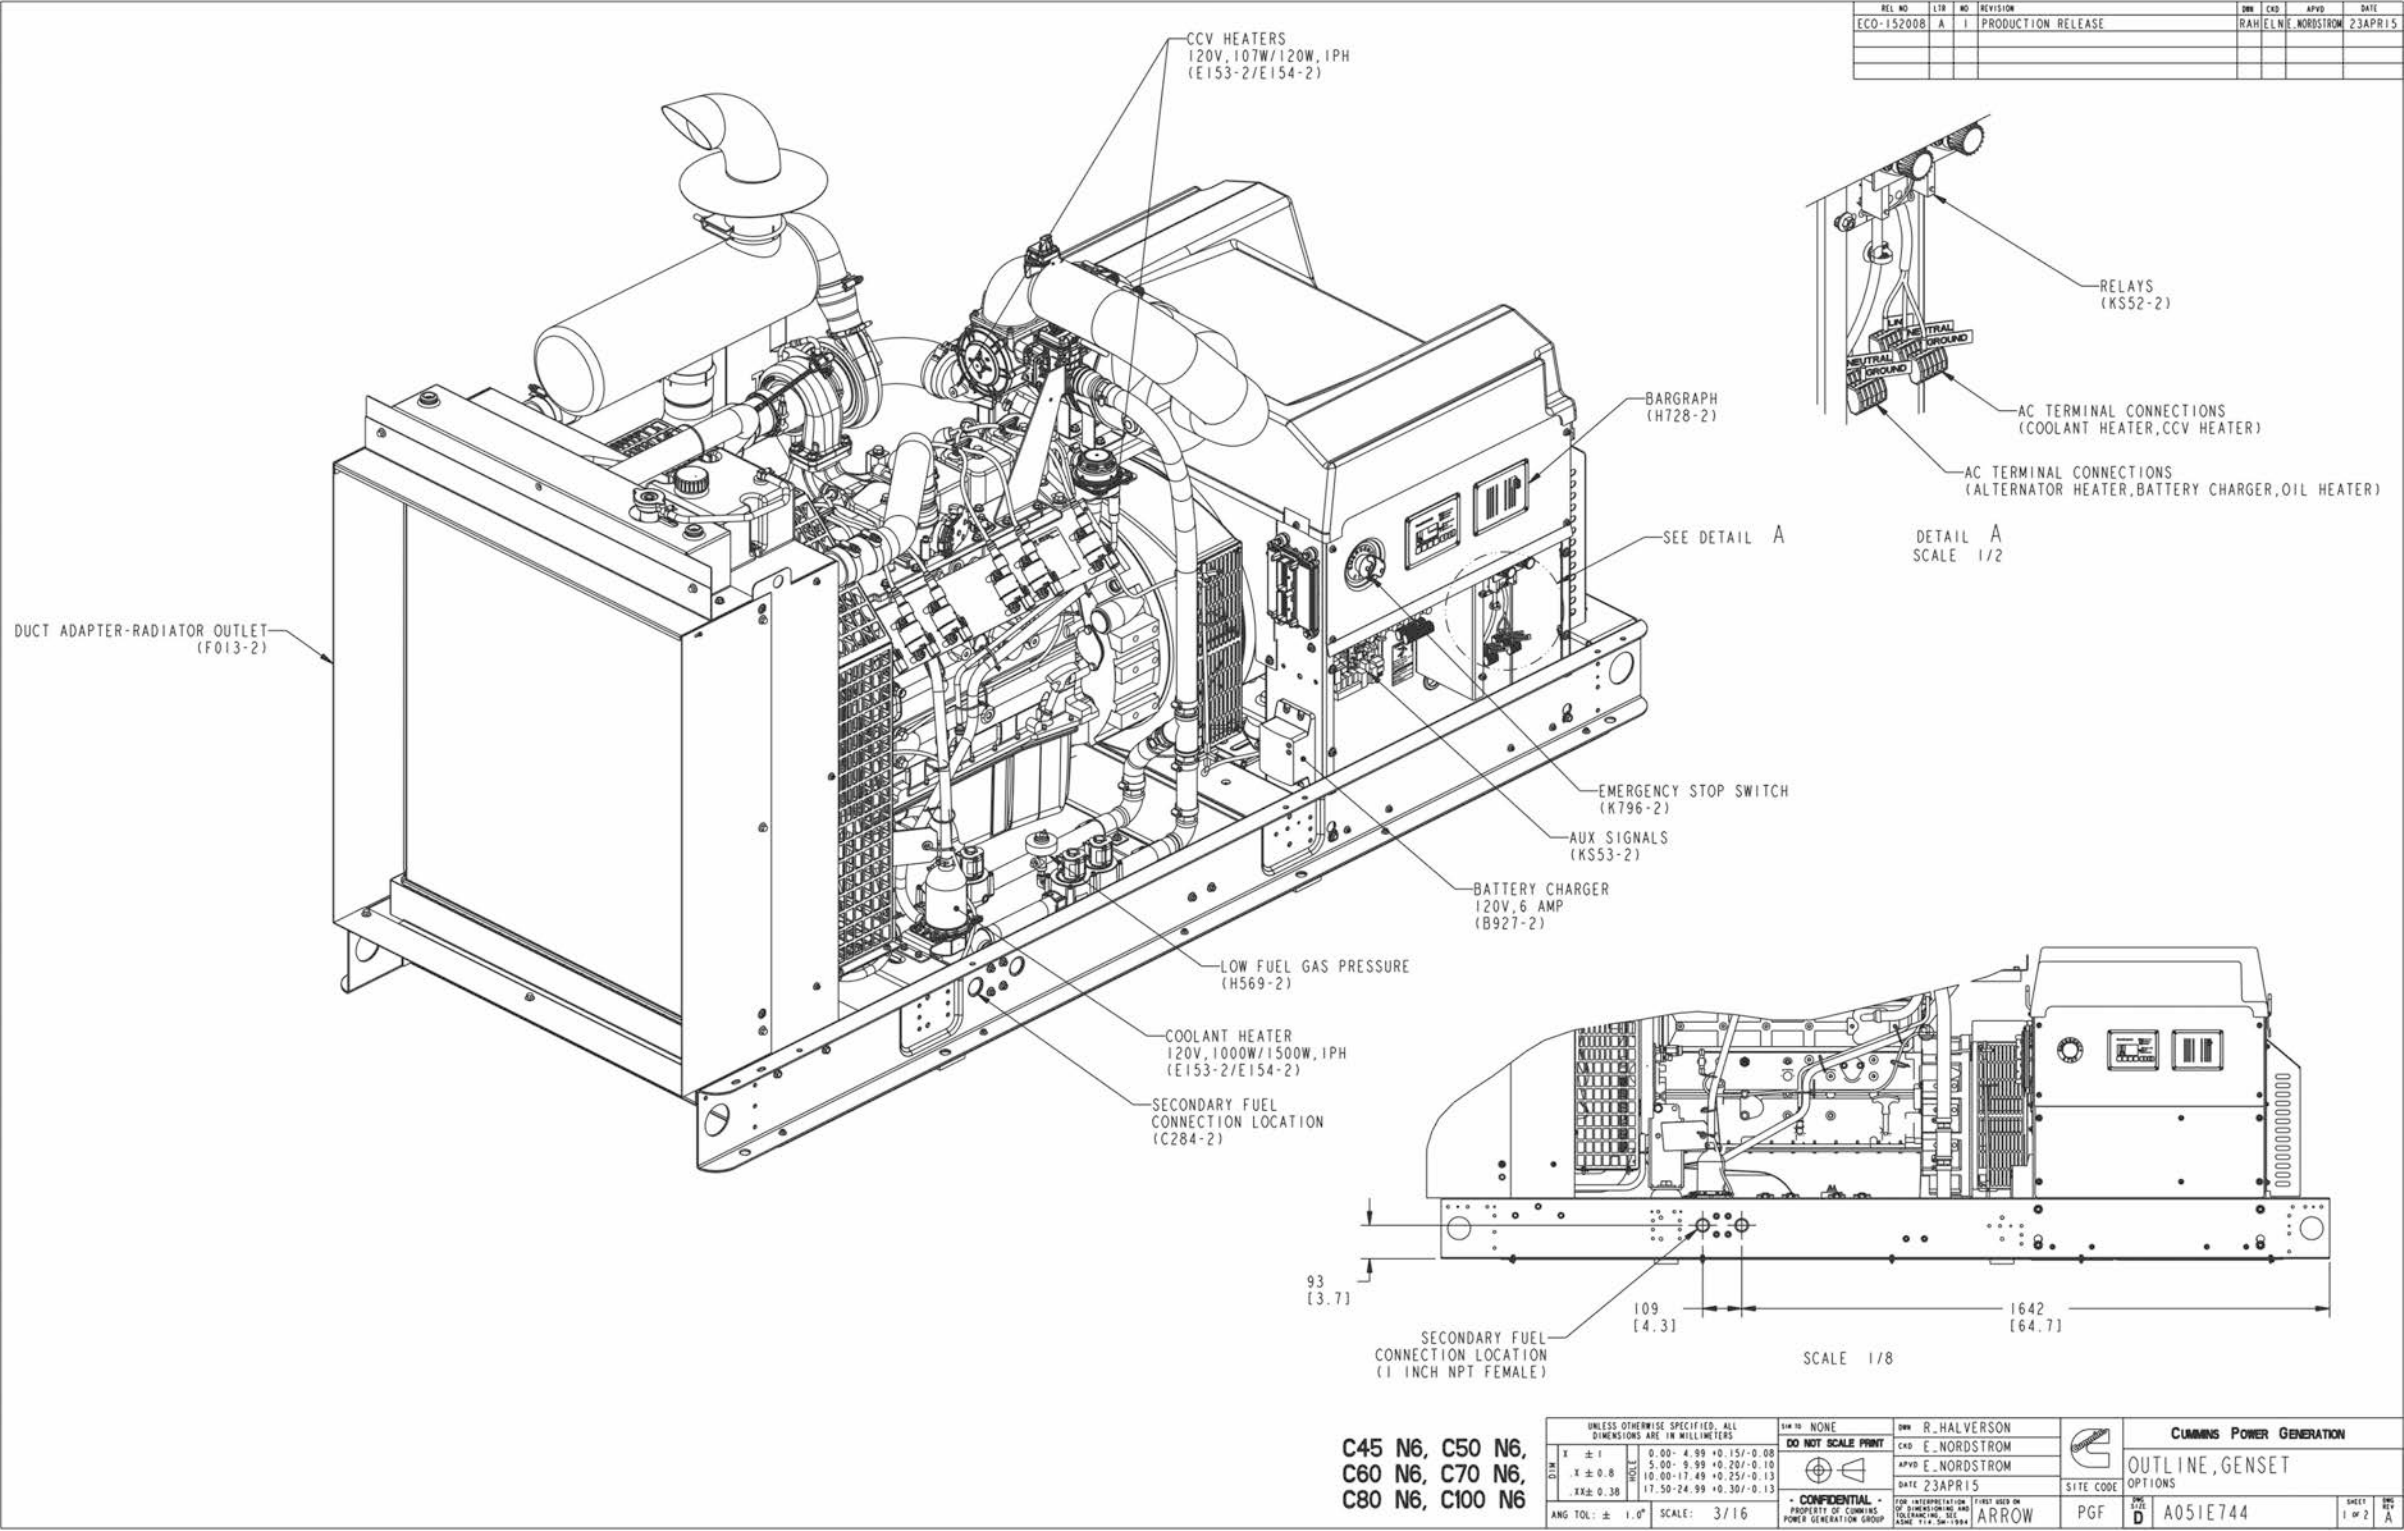


FIGURE 31. GENERATOR SET OUTLINE, ACCESSORIES (SHEET 1 OF 2)

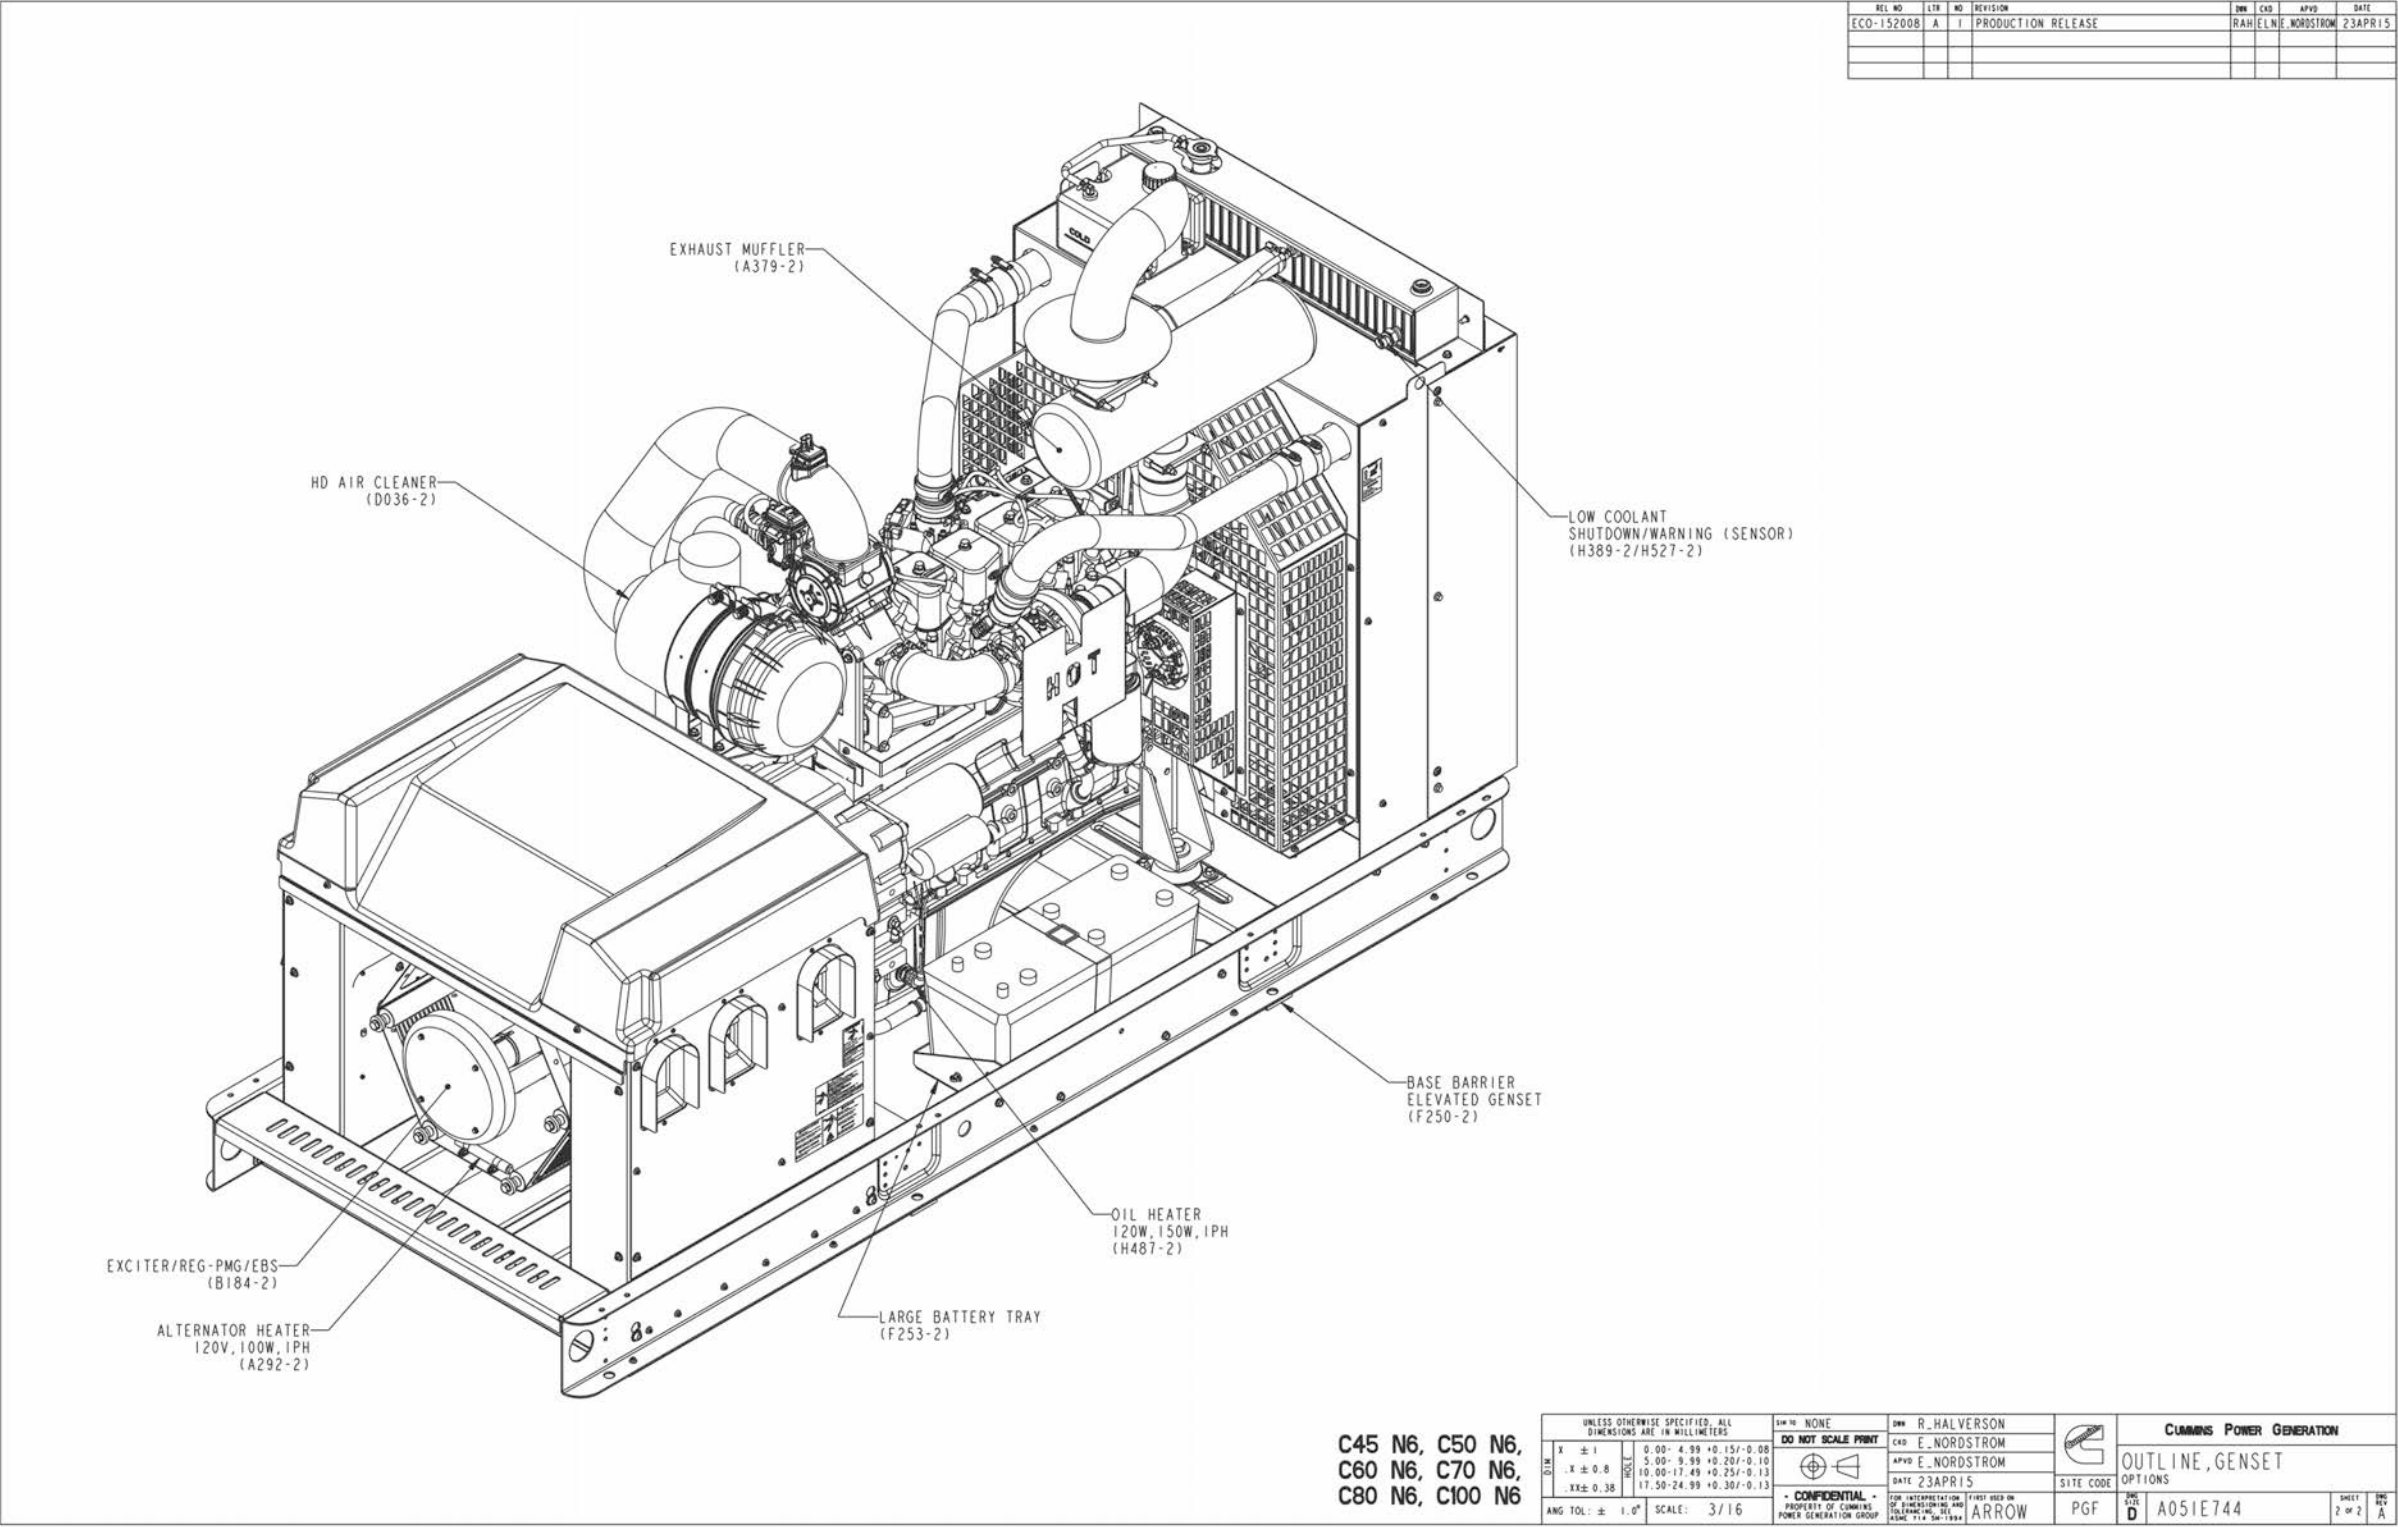


FIGURE 32. GENERATOR SET OUTLINE, ACCESSORIES (SHEET 2 OF 2)

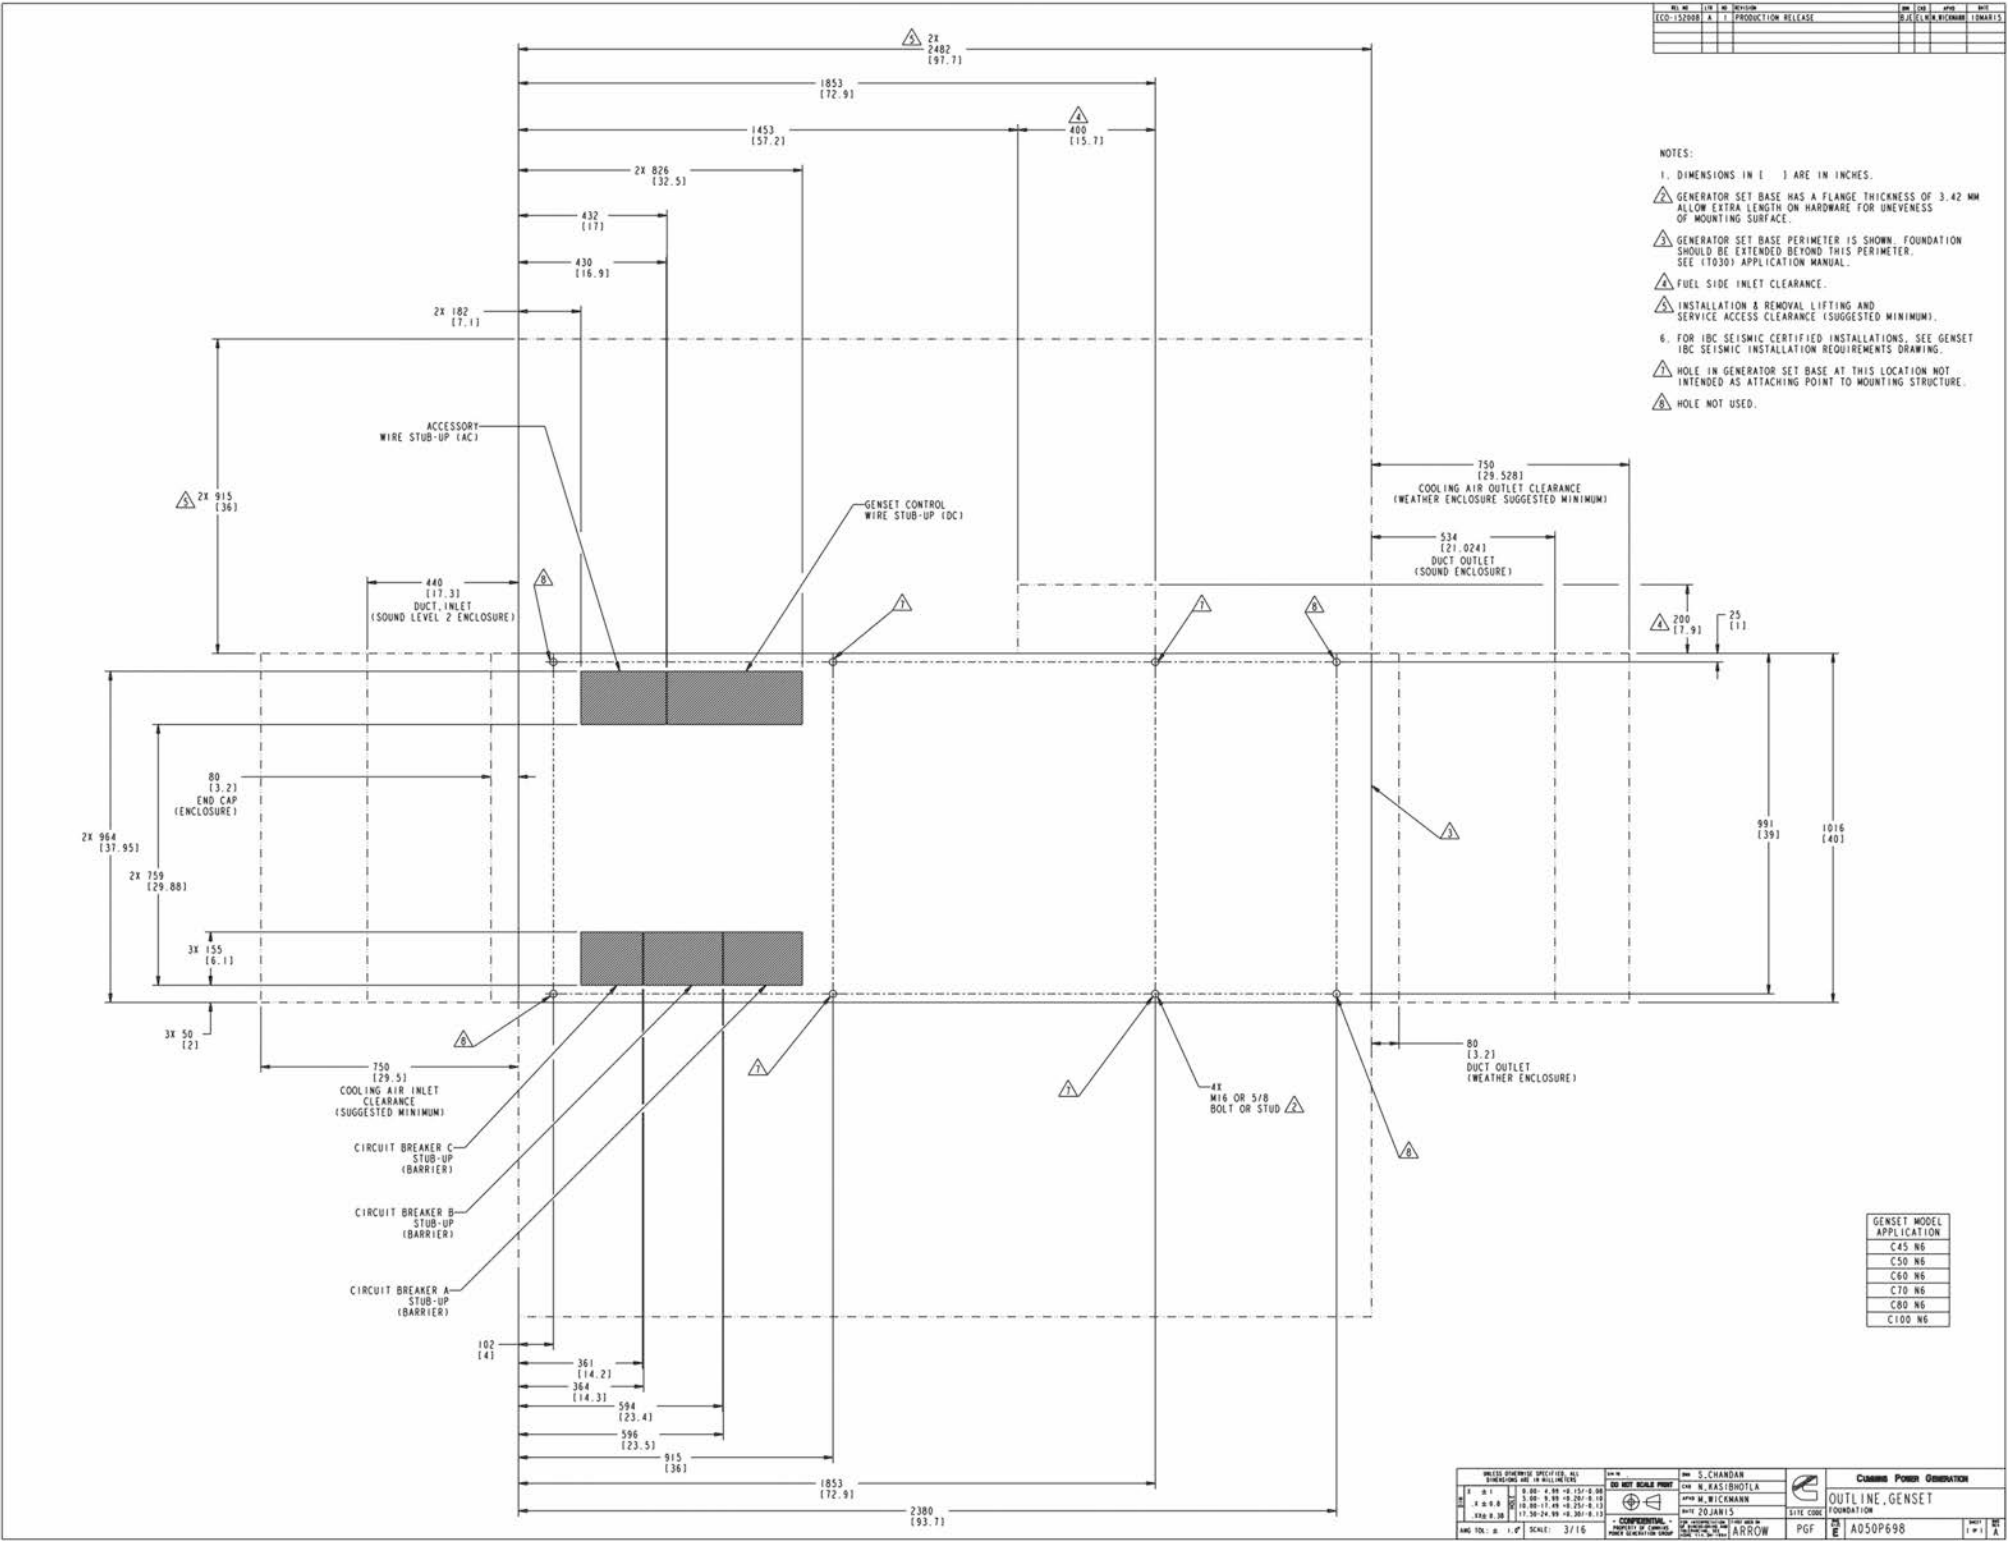


FIGURE 33. FOUNDATION OUTLINE (SHEET 1 OF 1)

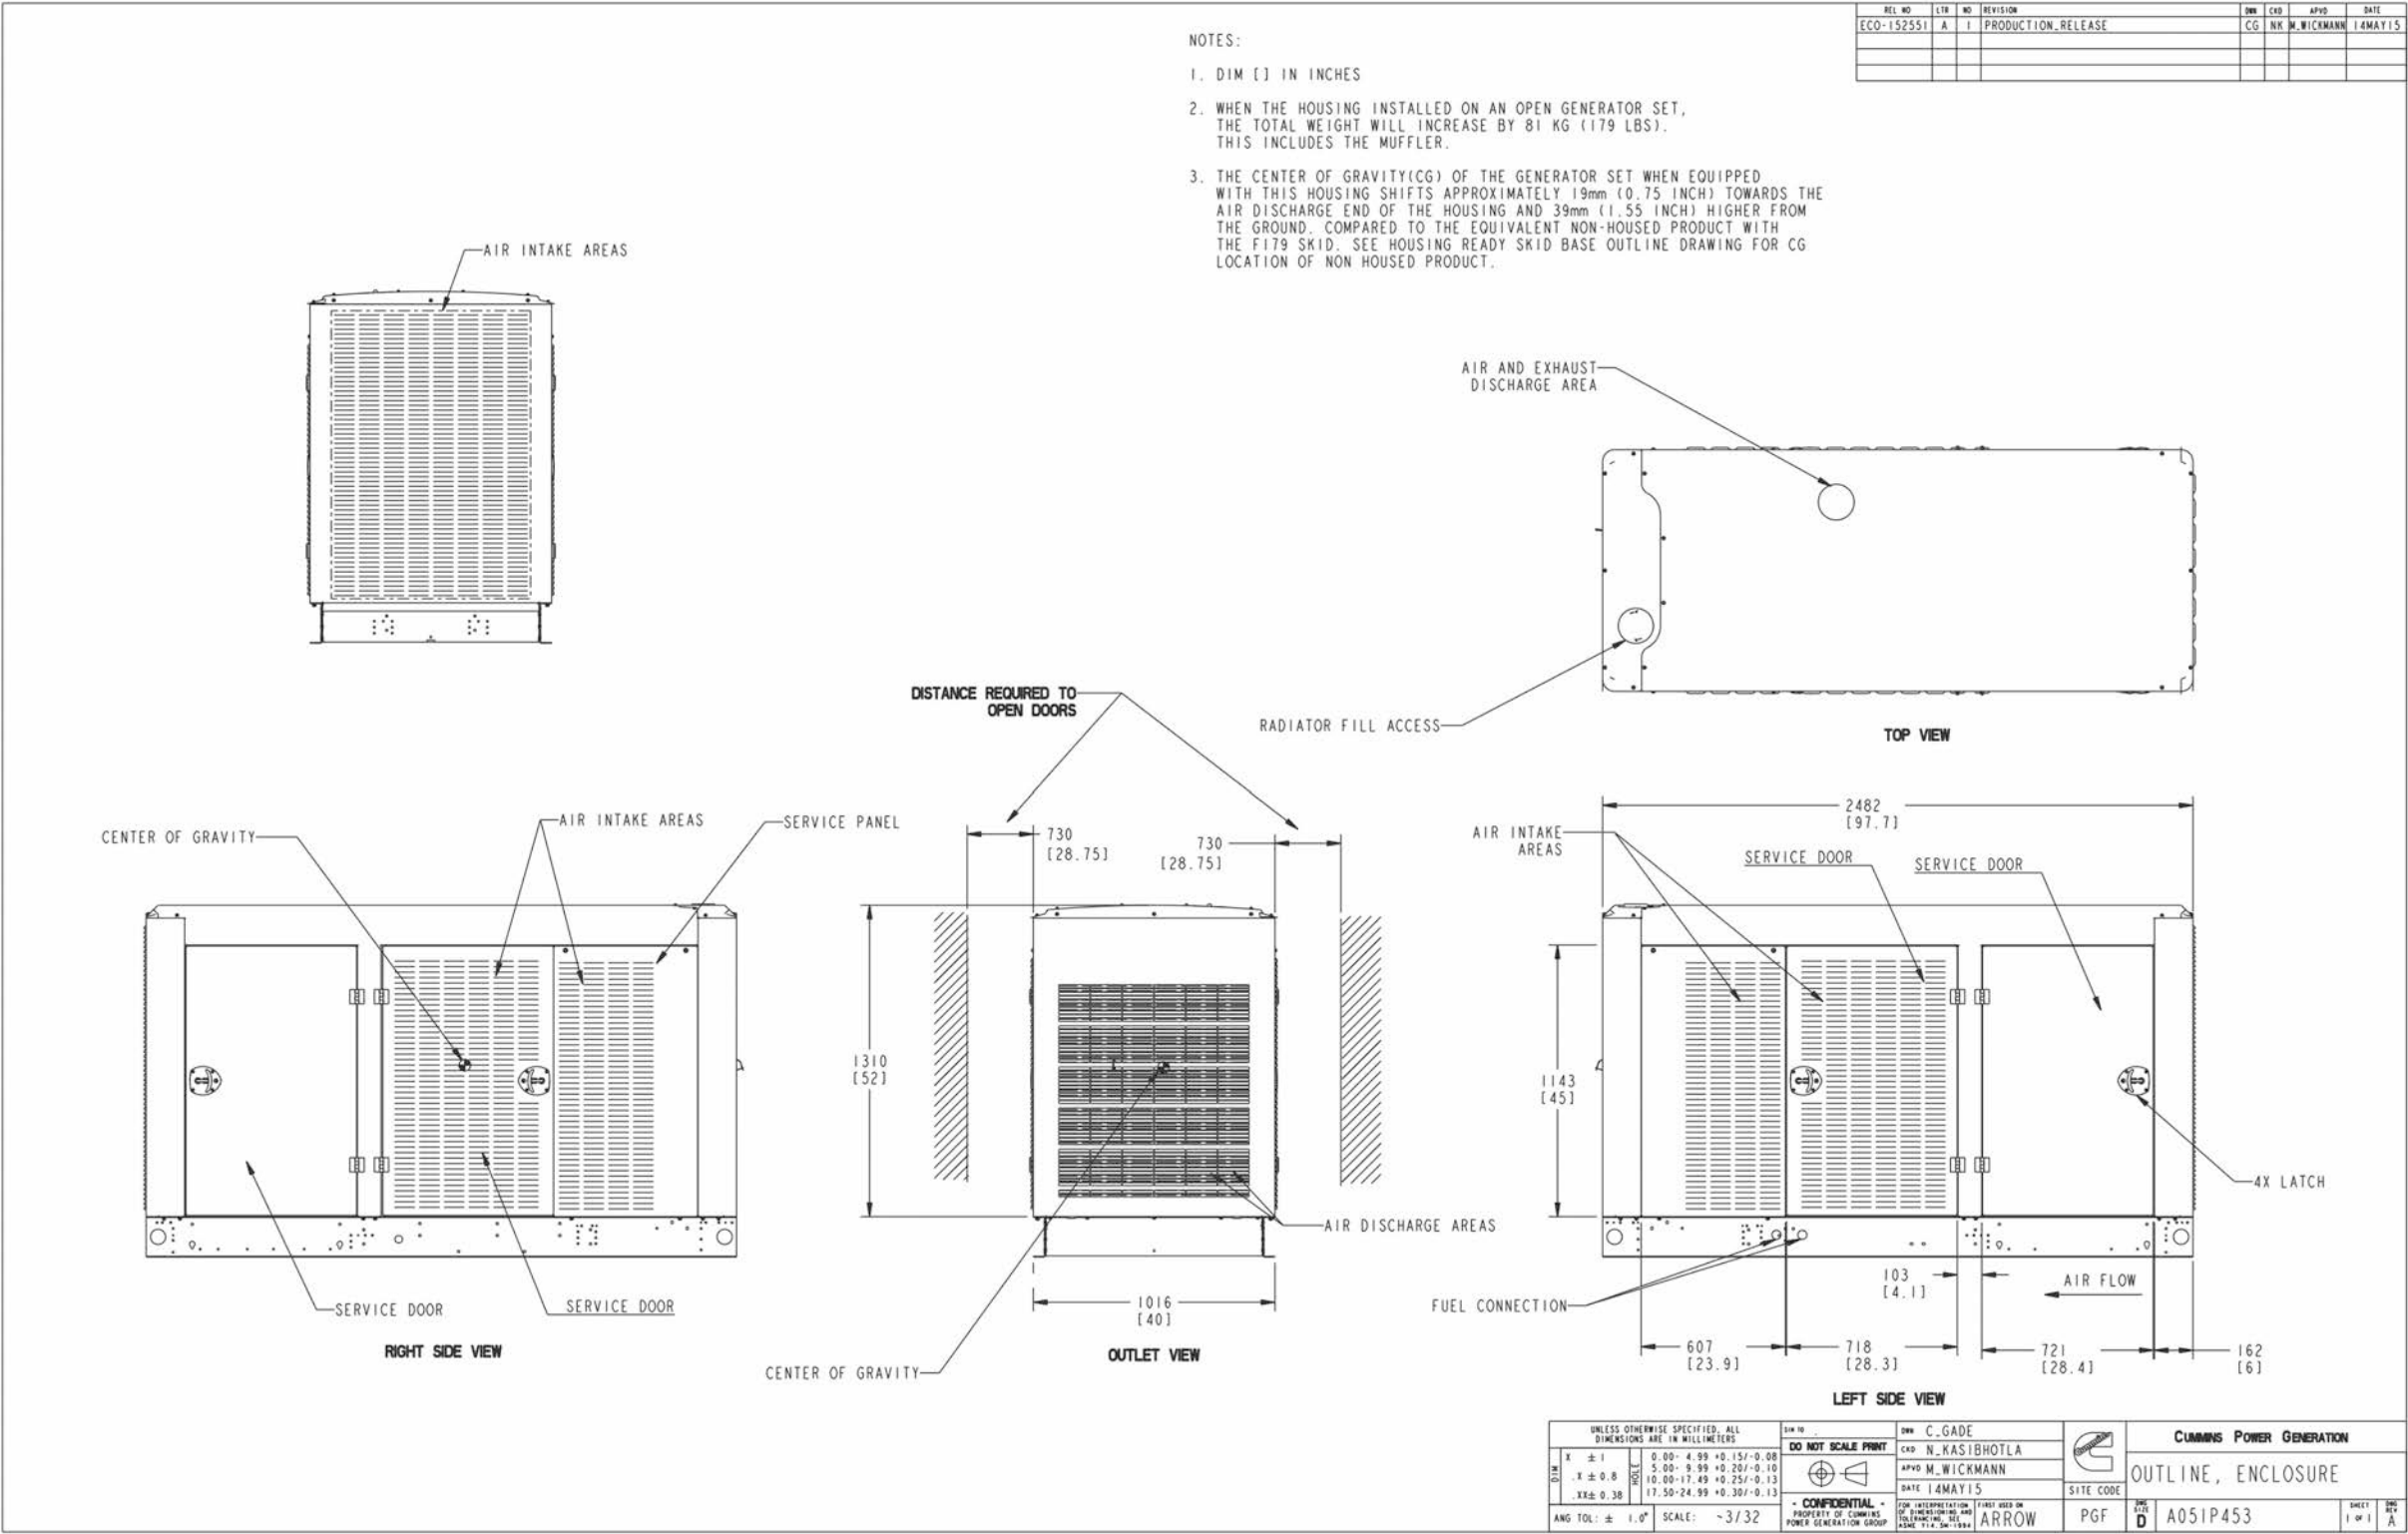


FIGURE 34. ENCLOSURE OUTLINE, WEATHER (SHEET 1 OF 1)

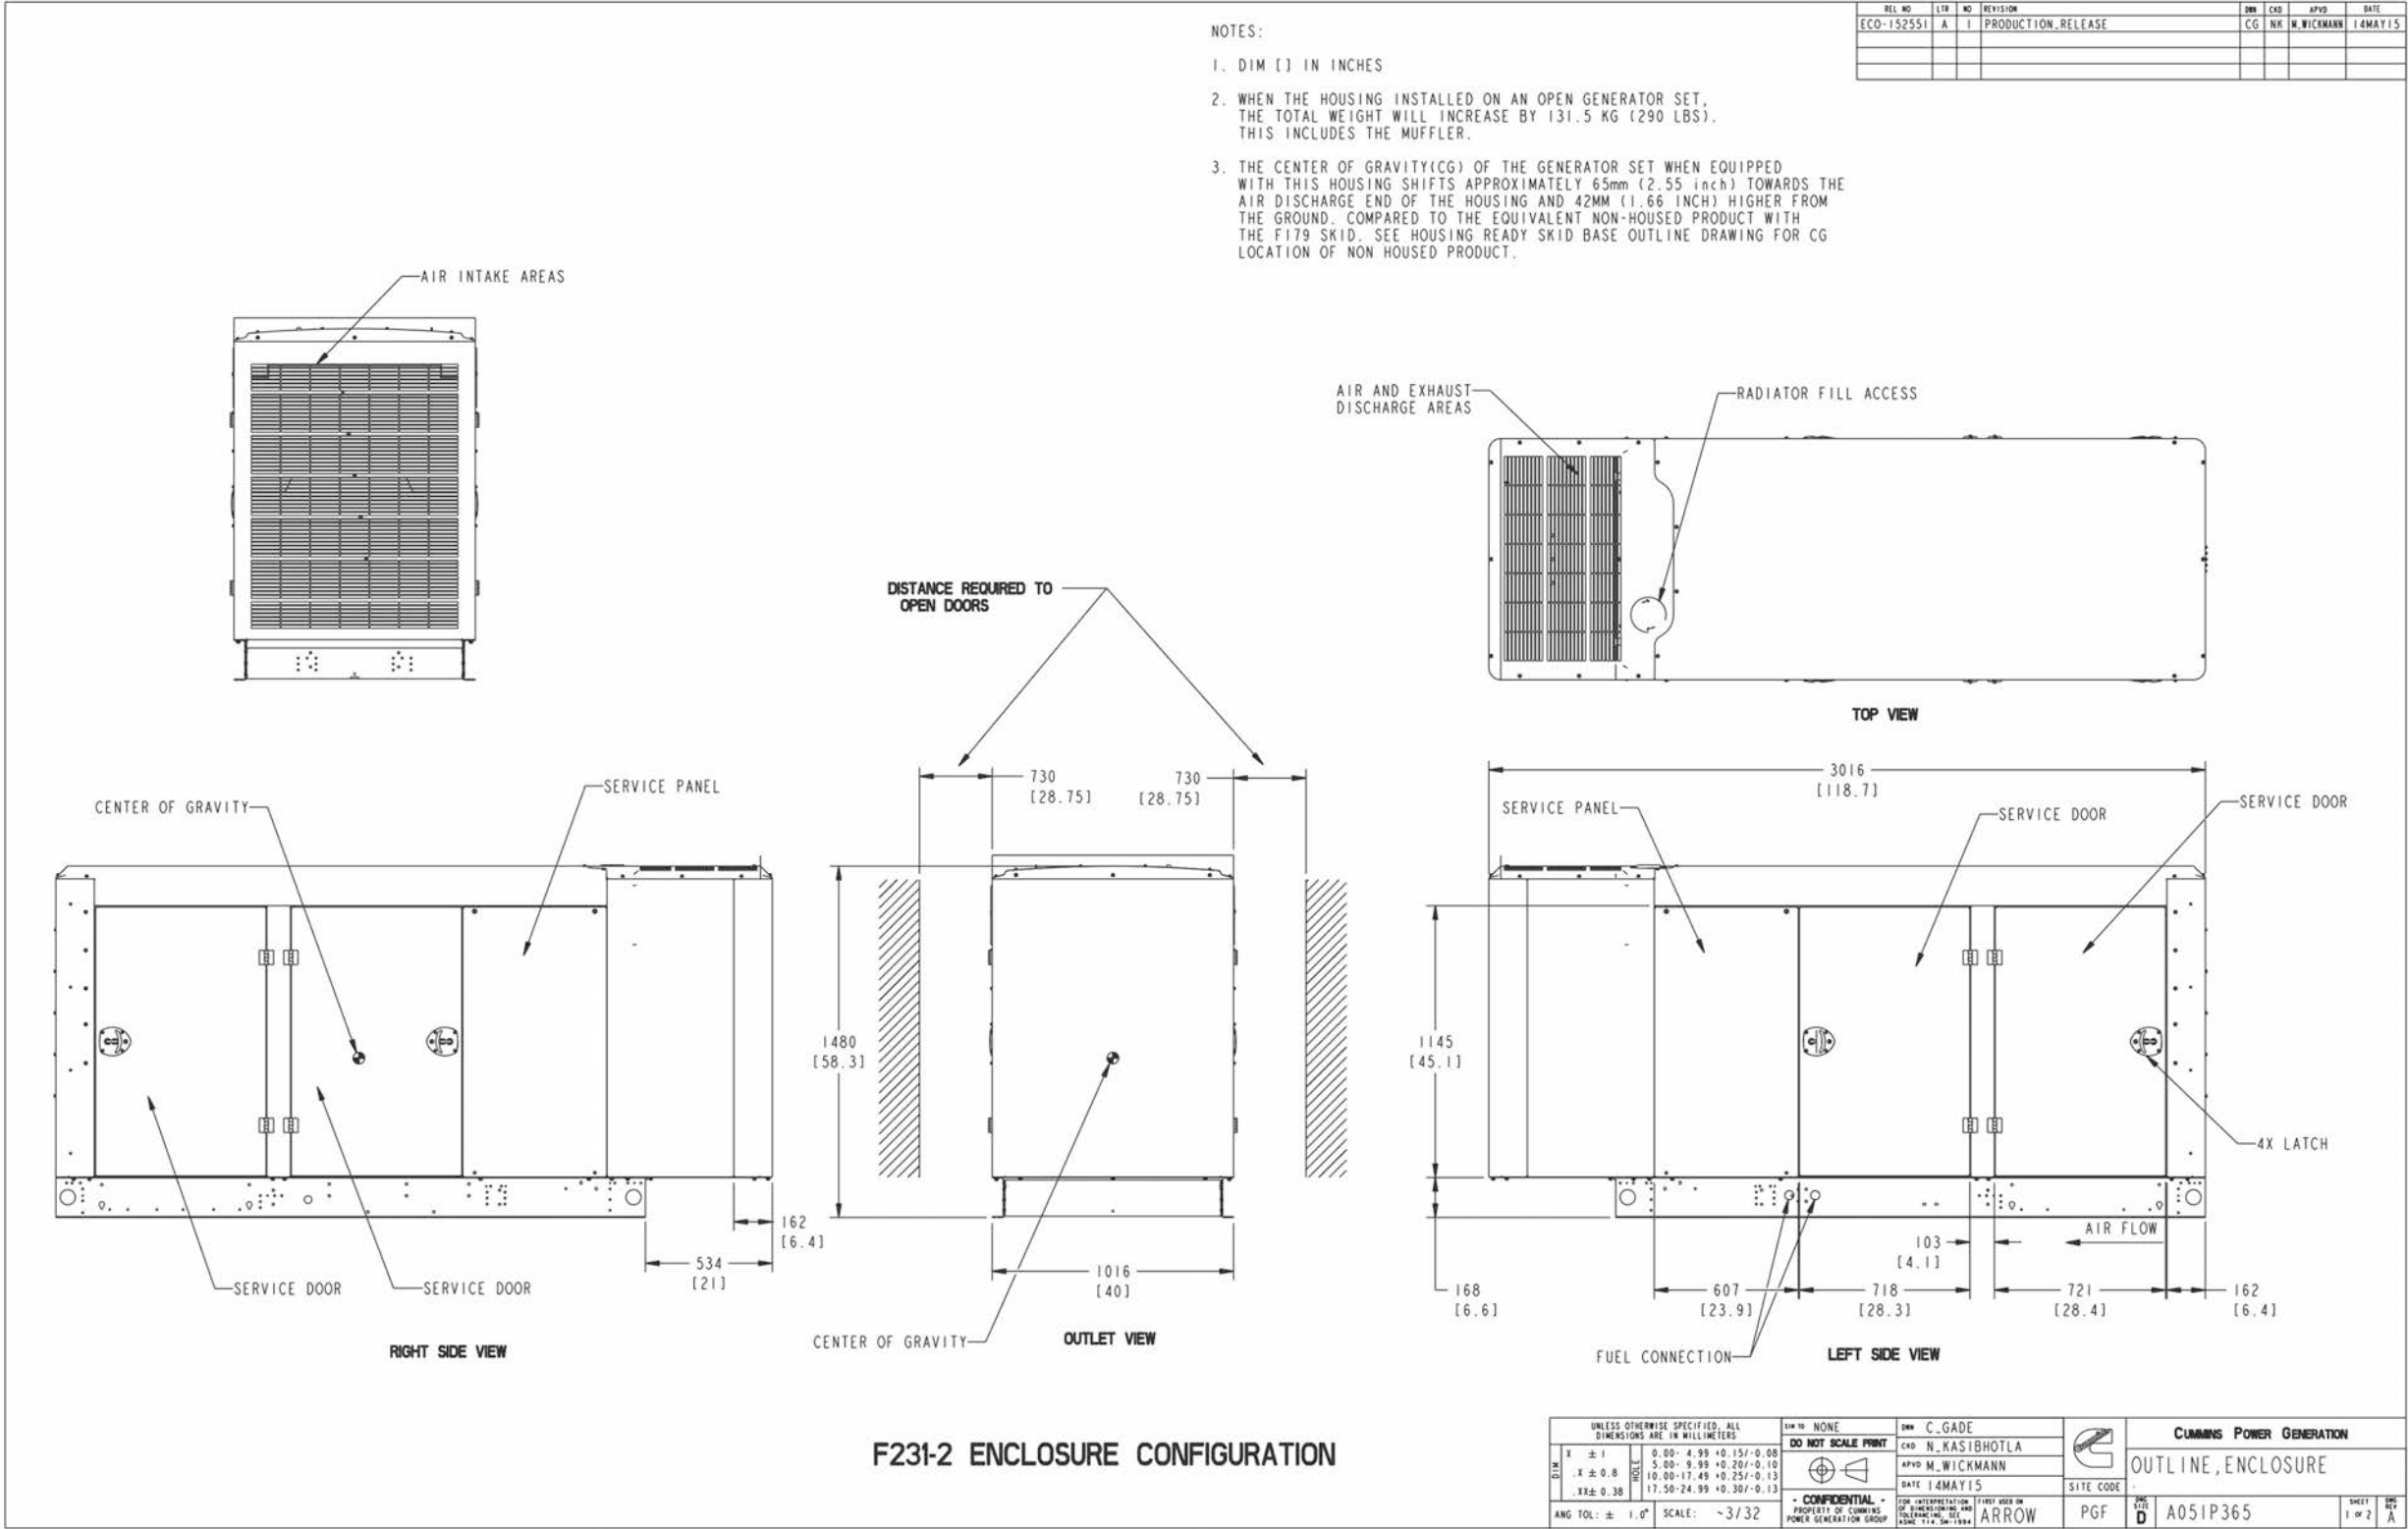


FIGURE 35. ENCLOSURE OUTLINE, SOUND ATTENTION LEVEL 1 AND LEVEL 2 (SHEET 1 OF 2)

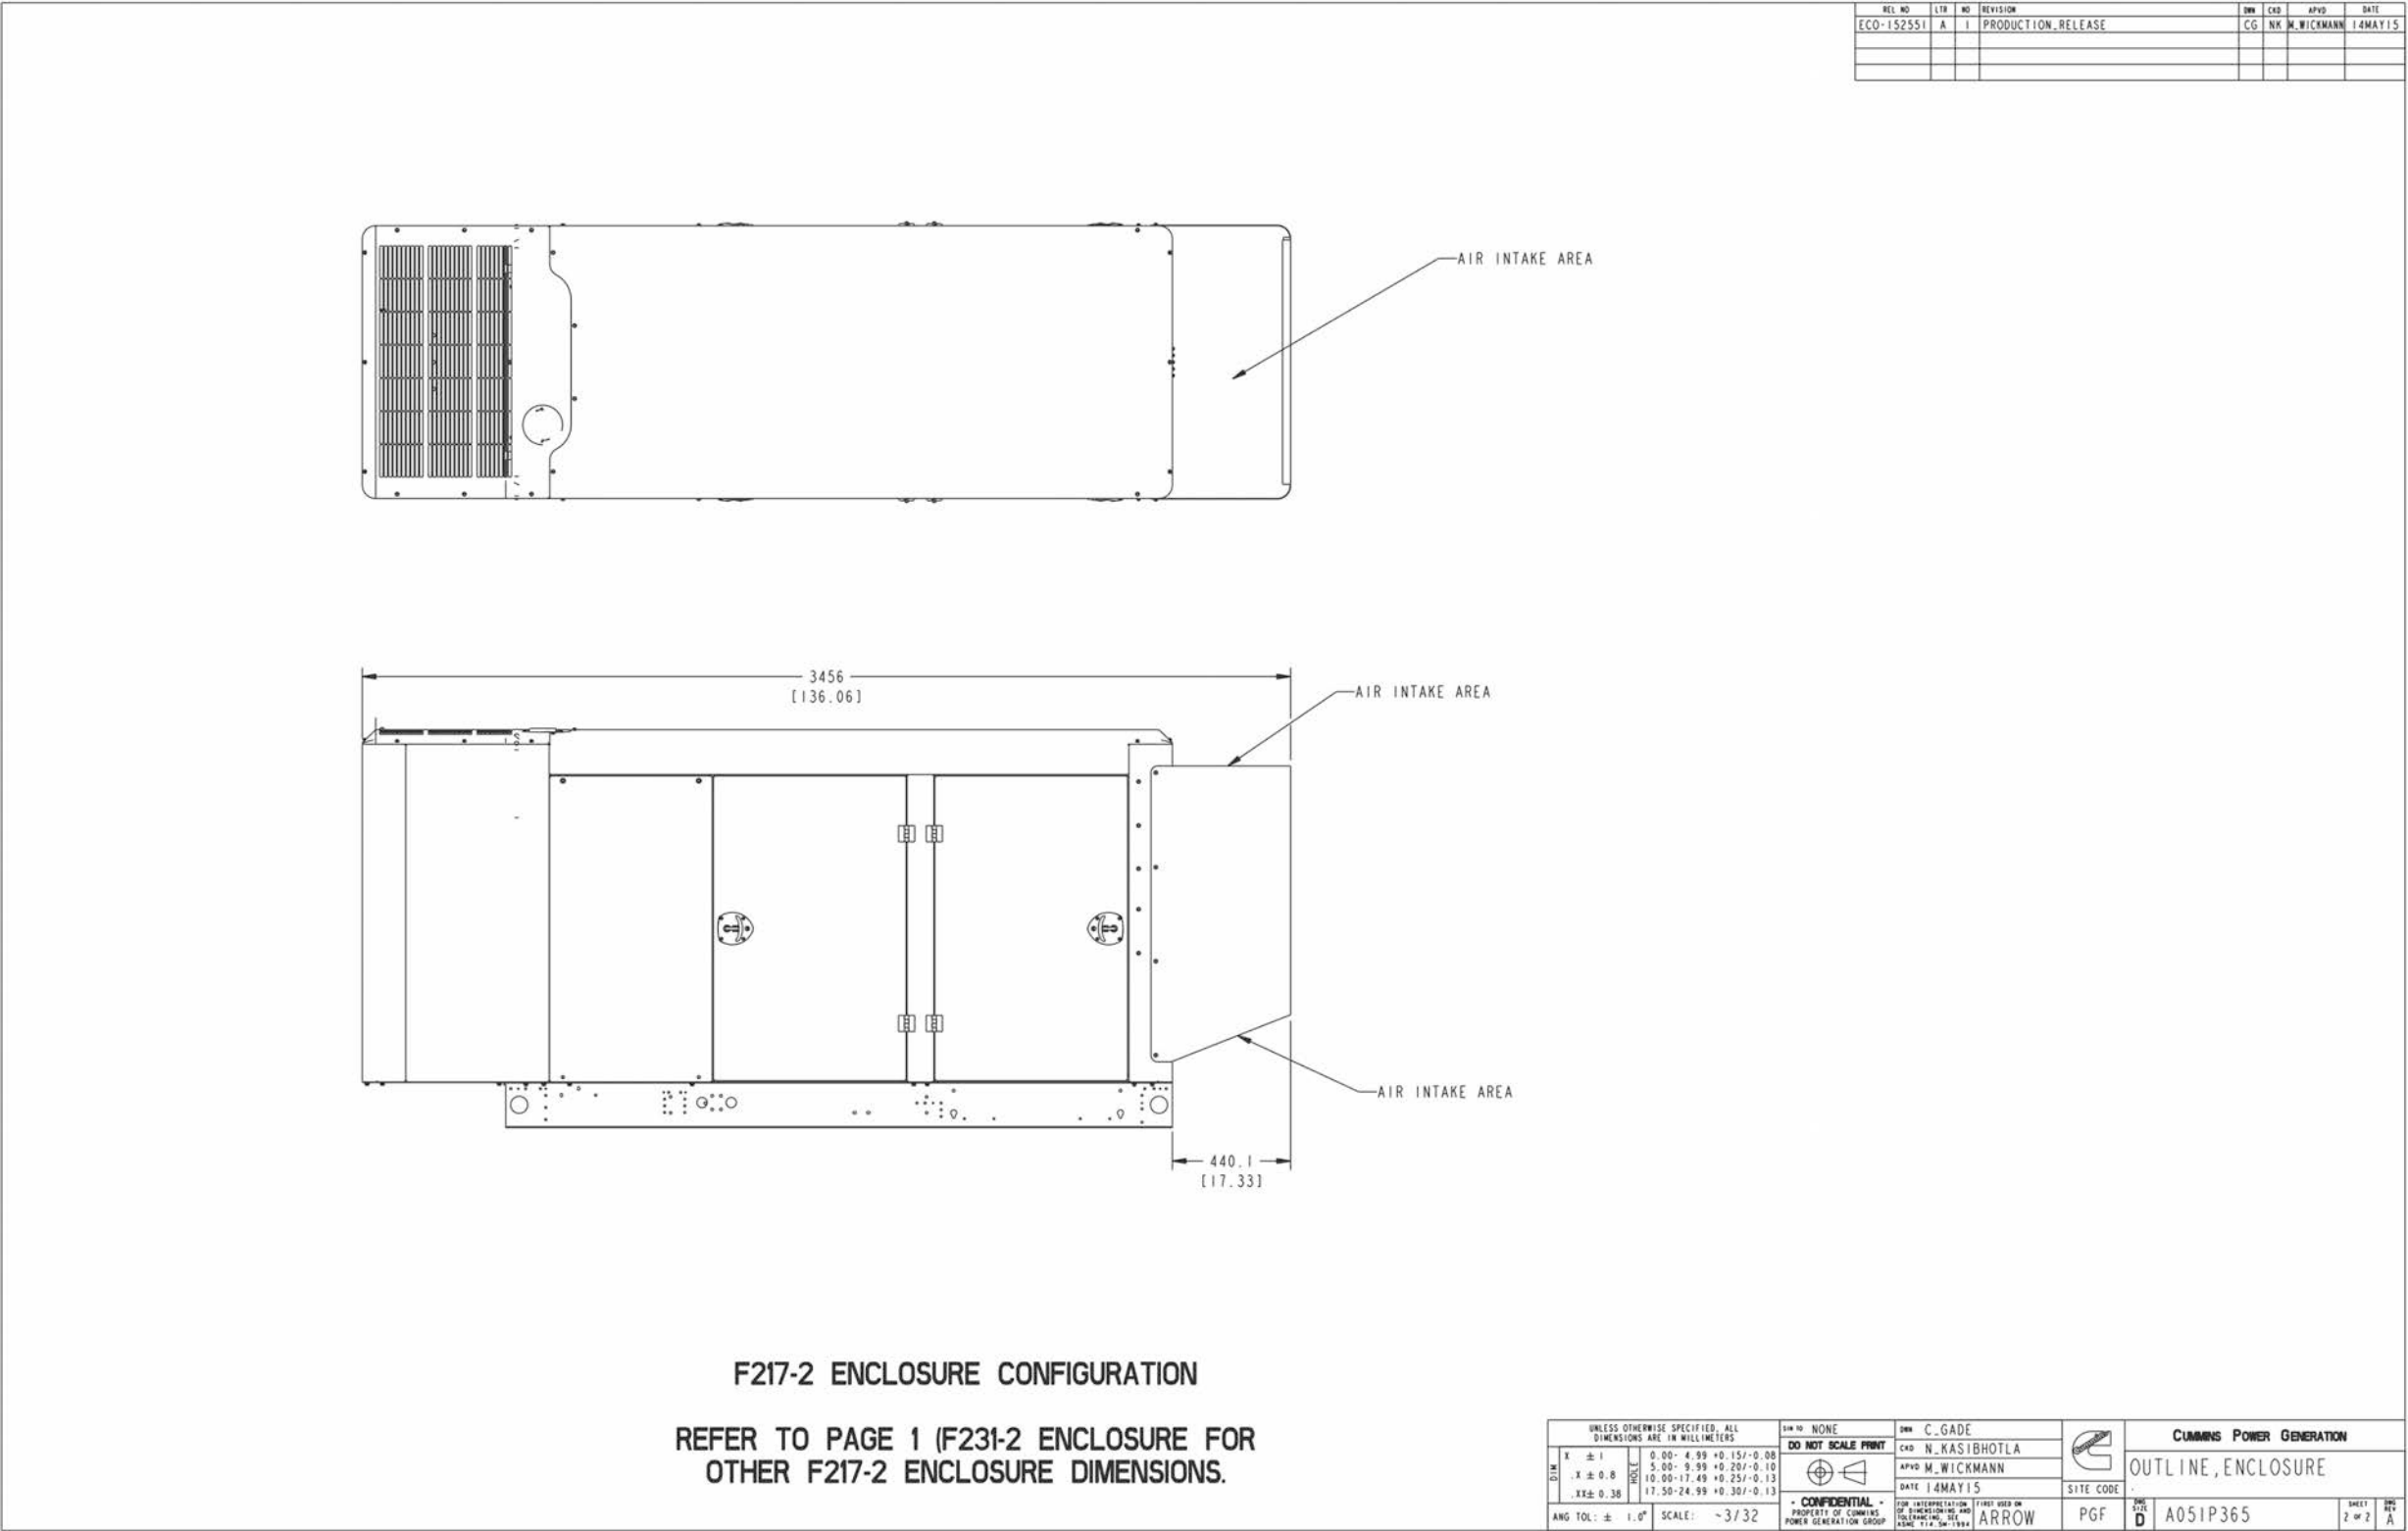


FIGURE 36. ENCLOSURE OUTLINE, SOUND ATTENTION LEVEL 1 AND LEVEL 2 (SHEET 2 OF 2)

Appendix C. Wiring Diagrams

Table of Contents

Figure 37. Wiring Diagram for PCC 1302 (56 Pin ECM) (Sheet 1 of 7)	95
Figure 38. Wiring Diagram for PCC 1302 (56 Pin ECM) (Sheet 2 of 7)	96
Figure 39. Wiring Diagram for PCC 1302 (56 Pin ECM) (Sheet 3 of 7)	97
Figure 40. Wiring Diagram for PCC 1302 (56 Pin ECM) (Sheet 4 of 7)	98
Figure 41. Wiring Diagram for PCC 1302 (56 Pin ECM) (Sheet 5 of 7)	99
Figure 42. Wiring Diagram for PCC 1302 (56 Pin ECM) (Sheet 6 of 7)	100
Figure 43. Wiring Diagram for PCC 1302 (56 Pin ECM) (Sheet 7 of 7)	101
Figure 44. Wiring Diagram for PCC 1302 (90 Pin ECM) (Sheet 1 of 7)	102
Figure 45. Wiring Diagram for PCC 1302 (90 Pin ECM) (Sheet 2 of 7)	103
Figure 46. Wiring Diagram for PCC 1302 (90 Pin ECM) (Sheet 3 of 7)	104
Figure 47. Wiring Diagram for PCC 1302 (90 Pin ECM) (Sheet 4 of 7)	105
Figure 48. Wiring Diagram for PCC 1302 (90 Pin ECM) (Sheet 5 of 7)	106
Figure 49. Wiring Diagram for PCC 1302 (90 Pin ECM) (Sheet 6 of 7)	107
Figure 50. Wiring Diagram for PCC 1302 (90 Pin ECM) (Sheet 7 of 7)	108
Figure 51. Wiring Diagram for PCC 2300 (56 Pin ECM) (Sheet 1 of 7)	109
Figure 52. Wiring Diagram for PCC 2300 (56 Pin ECM) (Sheet 2 of 7)	110
Figure 53. Wiring Diagram for PCC 2300 (56 Pin ECM) (Sheet 3 of 7)	111
Figure 54. Wiring Diagram for PCC 2300 (56 Pin ECM) (Sheet 4 of 7)	112
Figure 55. Wiring Diagram for PCC 2300 (56 Pin ECM) (Sheet 5 of 7)	113
Figure 56. Wiring Diagram for PCC 2300 (56 Pin ECM) (Sheet 6 of 7)	114
Figure 57. Wiring Diagram for PCC 2300 (56 Pin ECM) (Sheet 7 of 7)	115
Figure 58. Wiring Diagram for PCC 2300 (90 Pin ECM) (Sheet 1 of 7)	116
Figure 59. Wiring Diagram for PCC 2300 (90 Pin ECM) (Sheet 2 of 7)	117
Figure 60. Wiring Diagram for PCC 2300 (90 Pin ECM) (Sheet 3 of 7)	118
Figure 61. Wiring Diagram for PCC 2300 (90 Pin ECM) (Sheet 4 of 7)	119
Figure 62. Wiring Diagram for PCC 2300 (90 Pin ECM) (Sheet 5 of 7)	120
Figure 63. Wiring Diagram for PCC 2300 (90 Pin ECM) (Sheet 6 of 7)	121
Figure 64. Wiring Diagram for PCC 2300 (90 Pin ECM) (Sheet 7 of 7)	122
Figure 65. Circuit Breaker Outline (Sheet 1 of 3)	123
Figure 66. Circuit Breaker Outline (Sheet 2 of 3)	124
Figure 67. Circuit Breaker Outline (Sheet 3 of 3)	125
Figure 68. PCC 1302/2300 (Sheet 1 of 3)	126
Figure 69. PCC 1302/2300 (Sheet 2 of 3)	127
Figure 70. PCC 1302/2300 (Sheet 3 of 3)	128

Figure 71. Circuit Card Harness (Sheet 1 of 1)	129
Figure 72. Relay Harness (Sheet 1 of 1)	130
Figure 73. Generator Electrical Harness (Sheet 1 of 1)	131

The drawings included in this section are representative. For current complete information, refer to the drawing package that was shipped with the unit.

This page is intentionally blank.

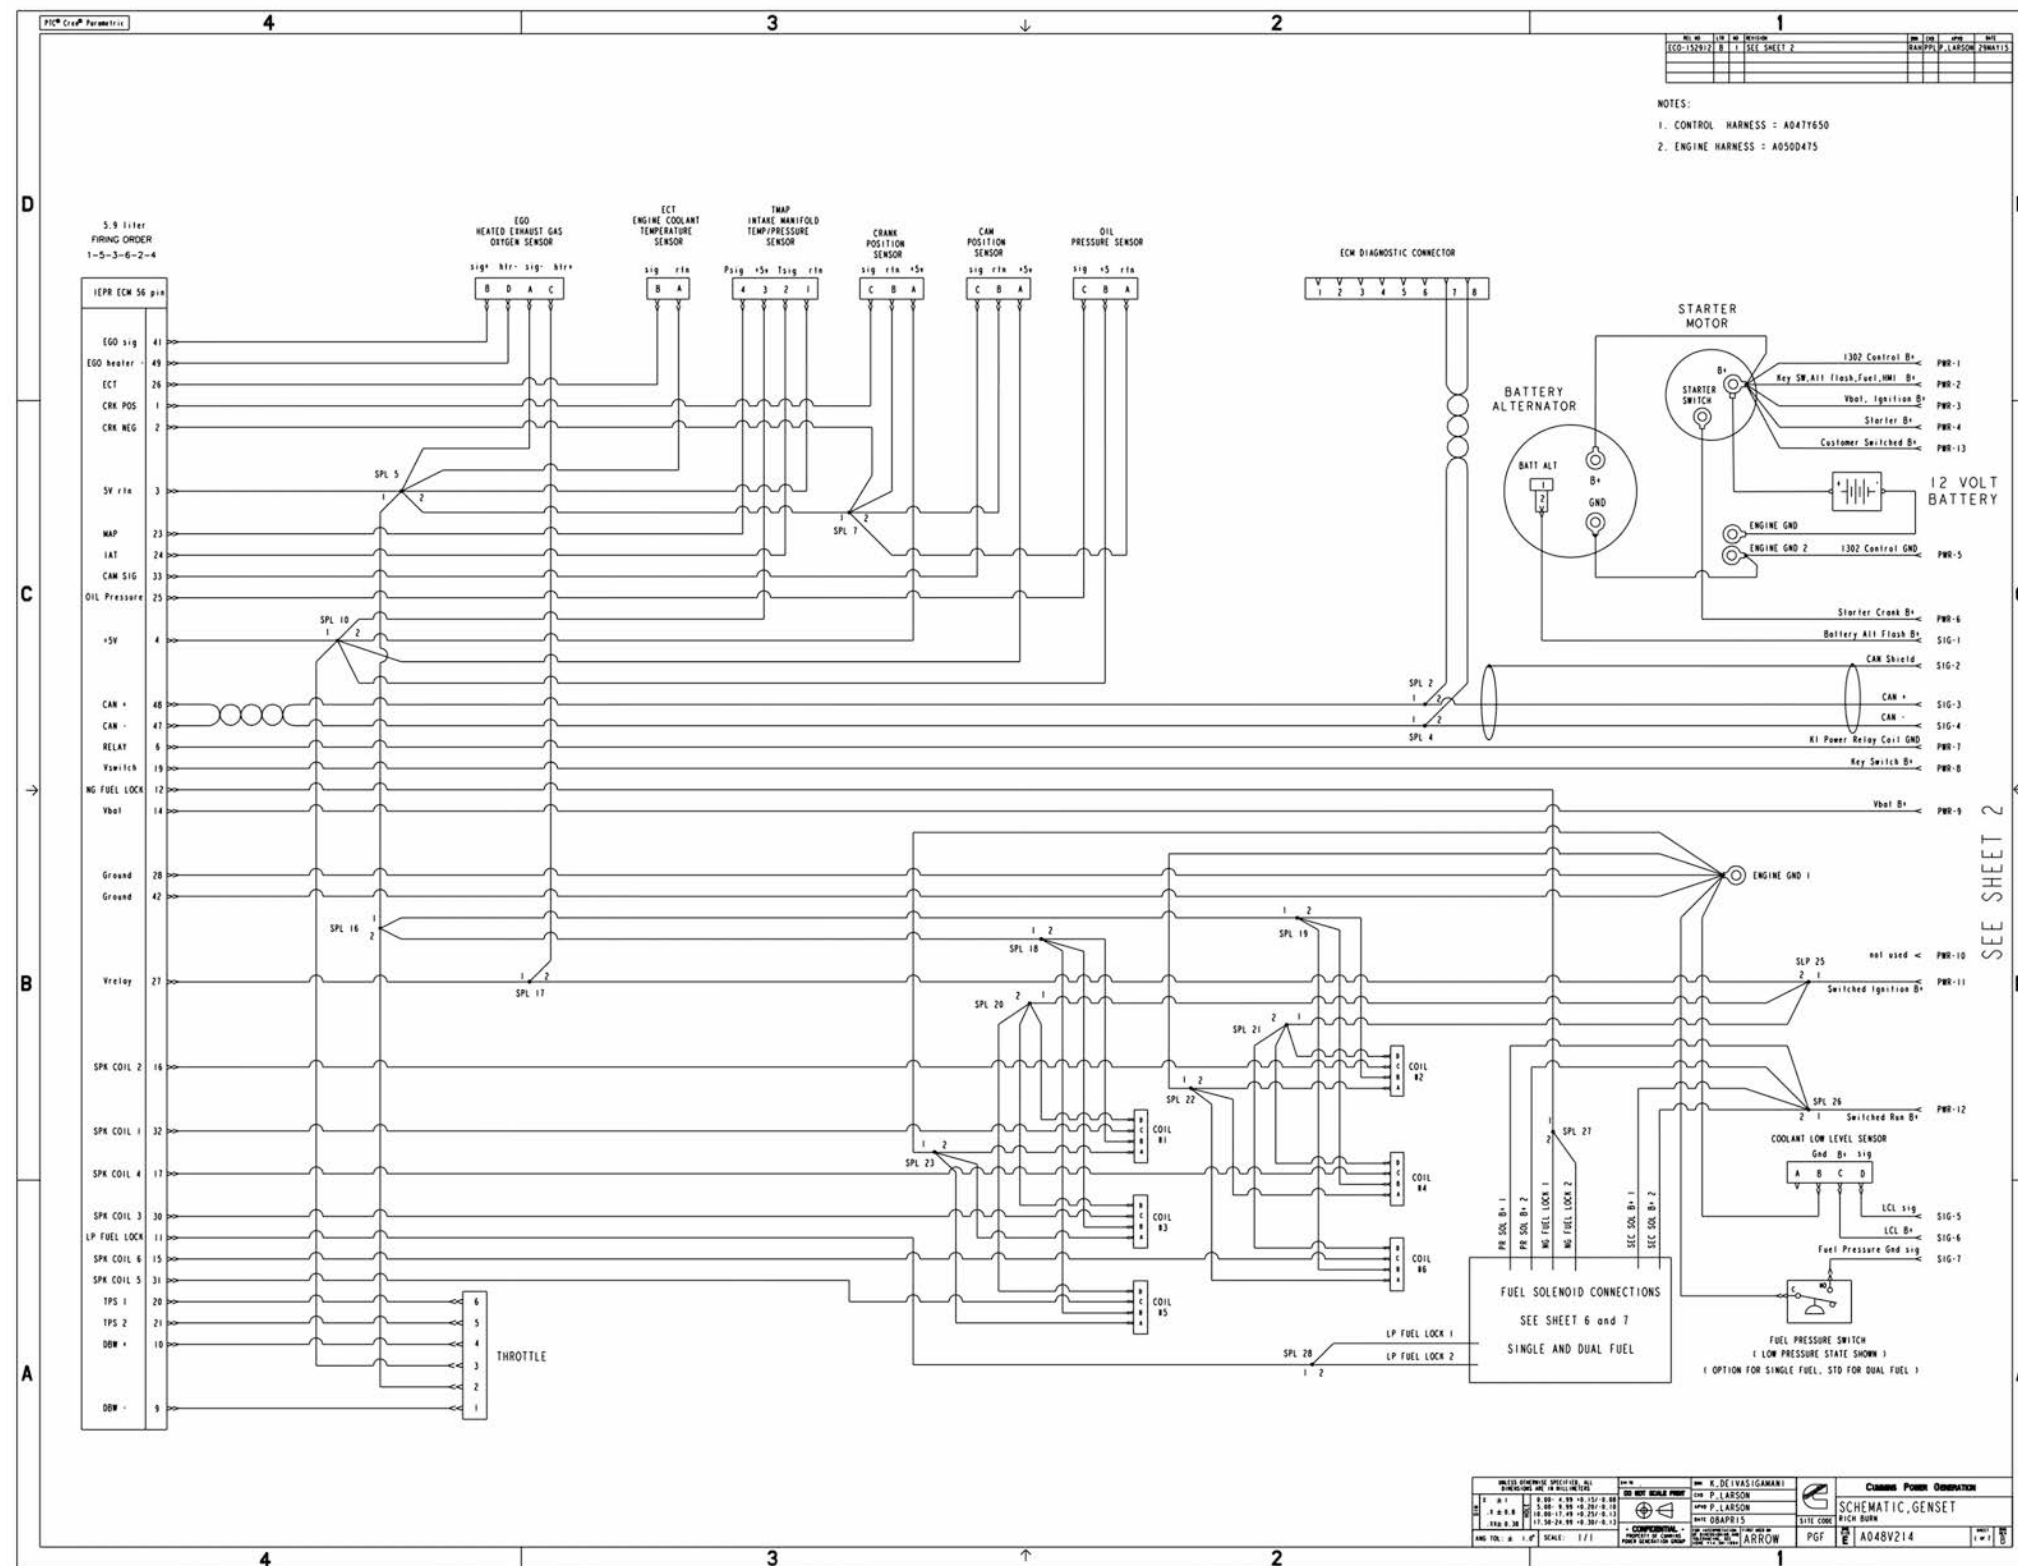


FIGURE 37. WIRING DIAGRAM FOR PCC 1302 (56 PIN ECM) (SHEET 1 OF 7)

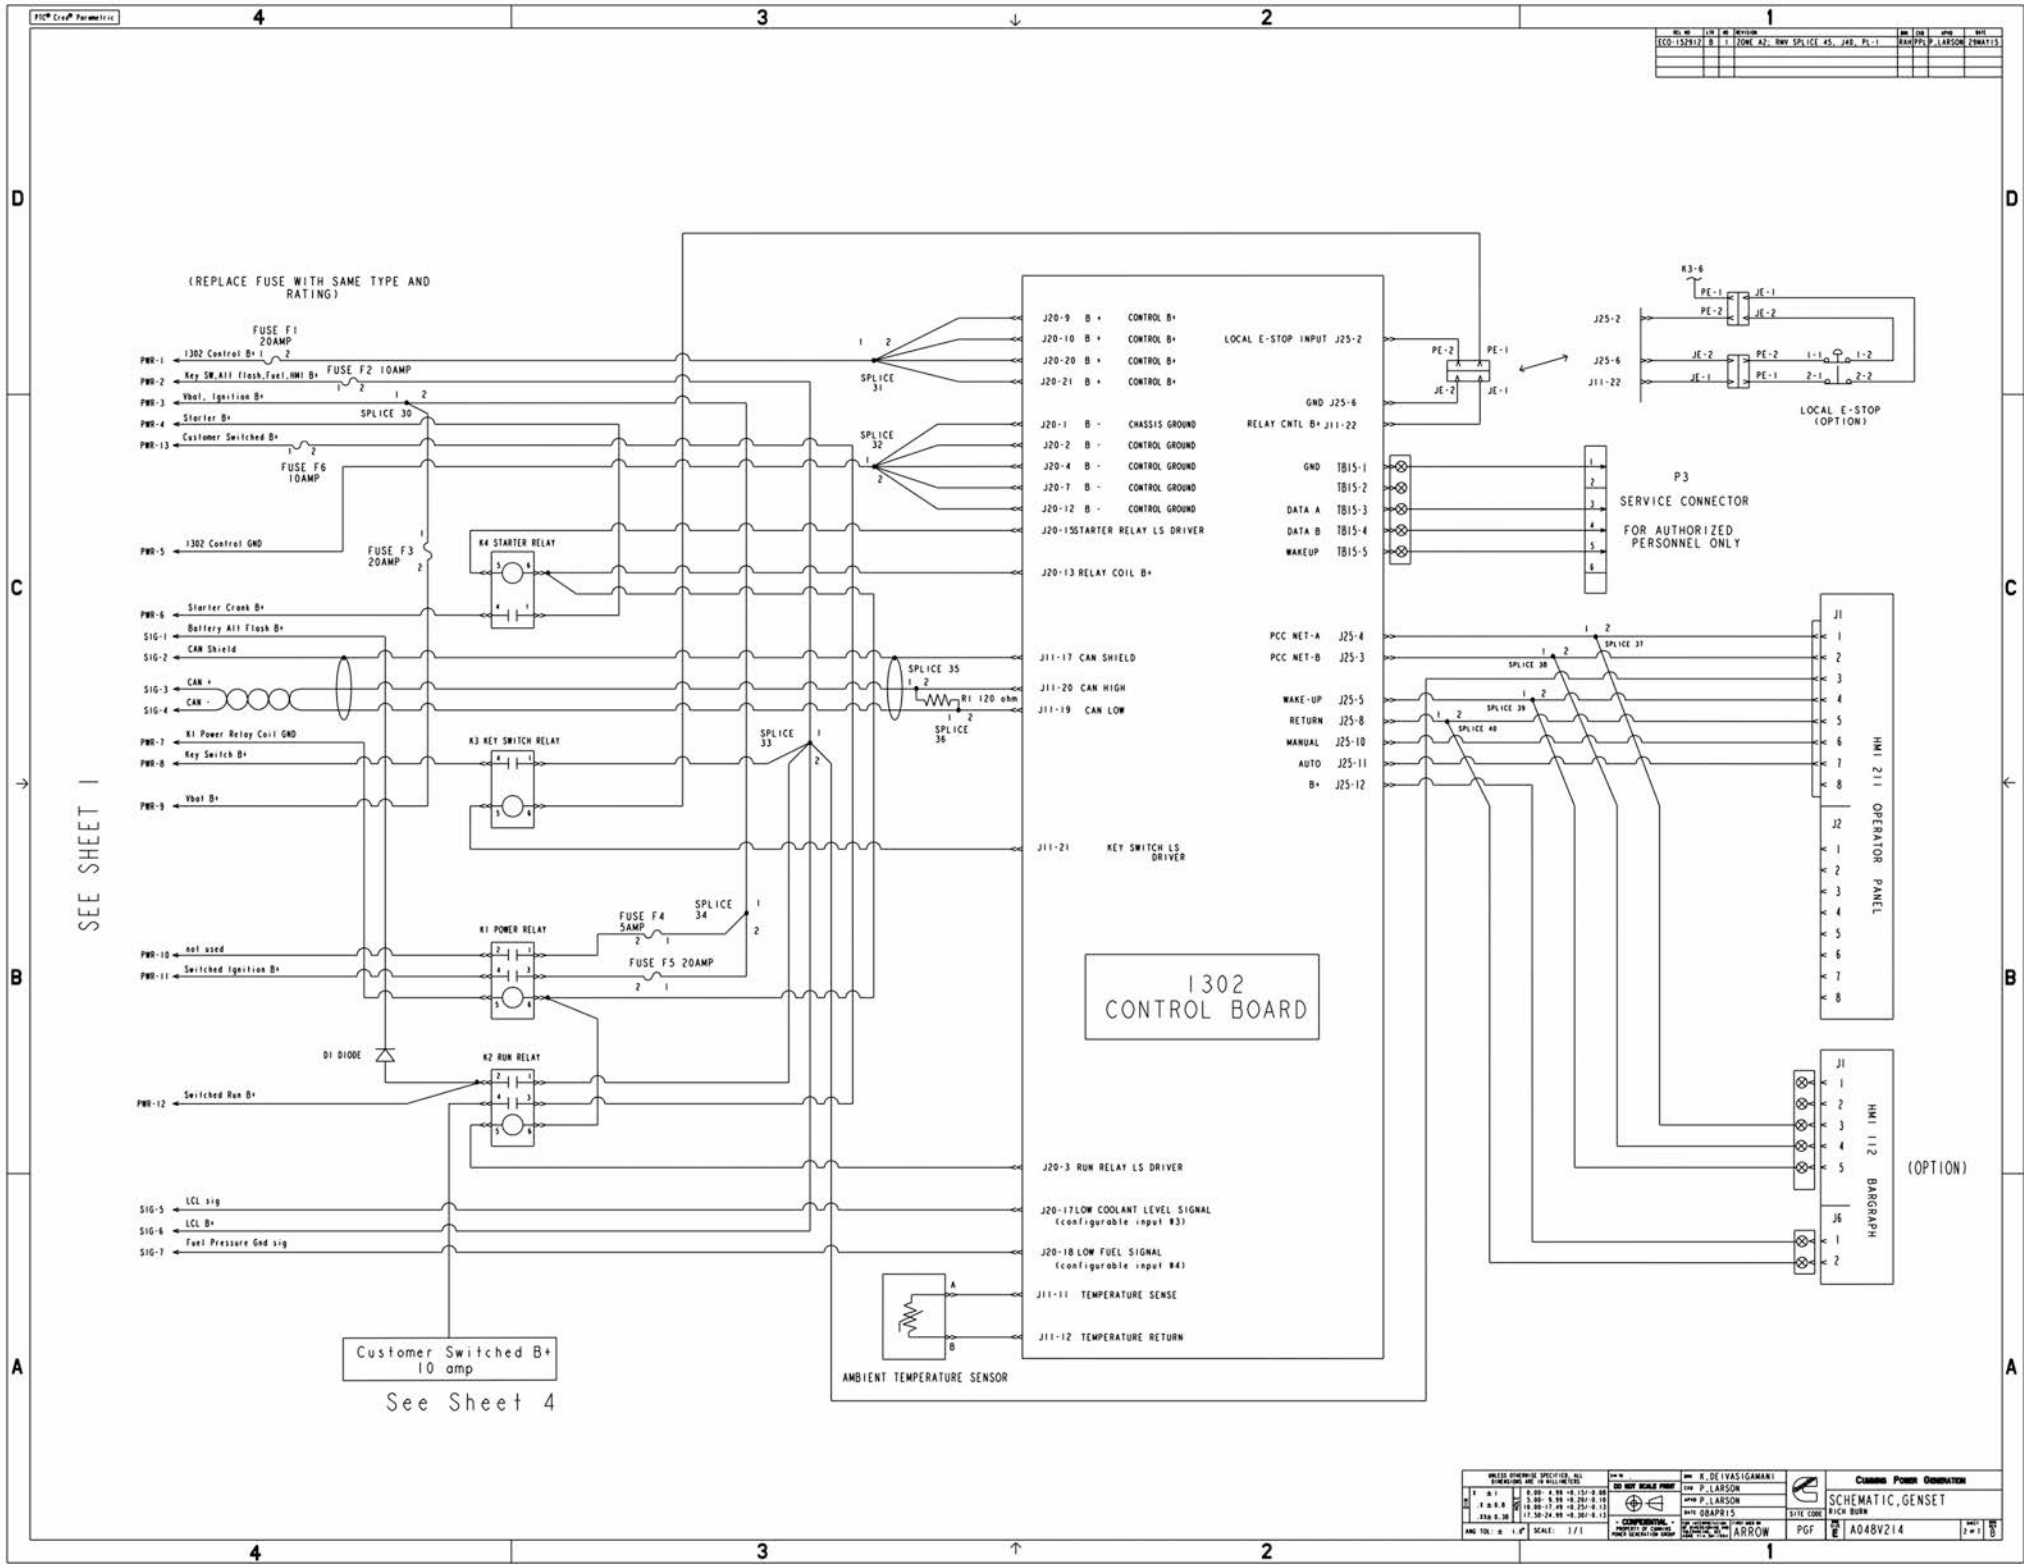


FIGURE 38. WIRING DIAGRAM FOR PCC 1302 (56 PIN ECM) (SHEET 2 OF 7)

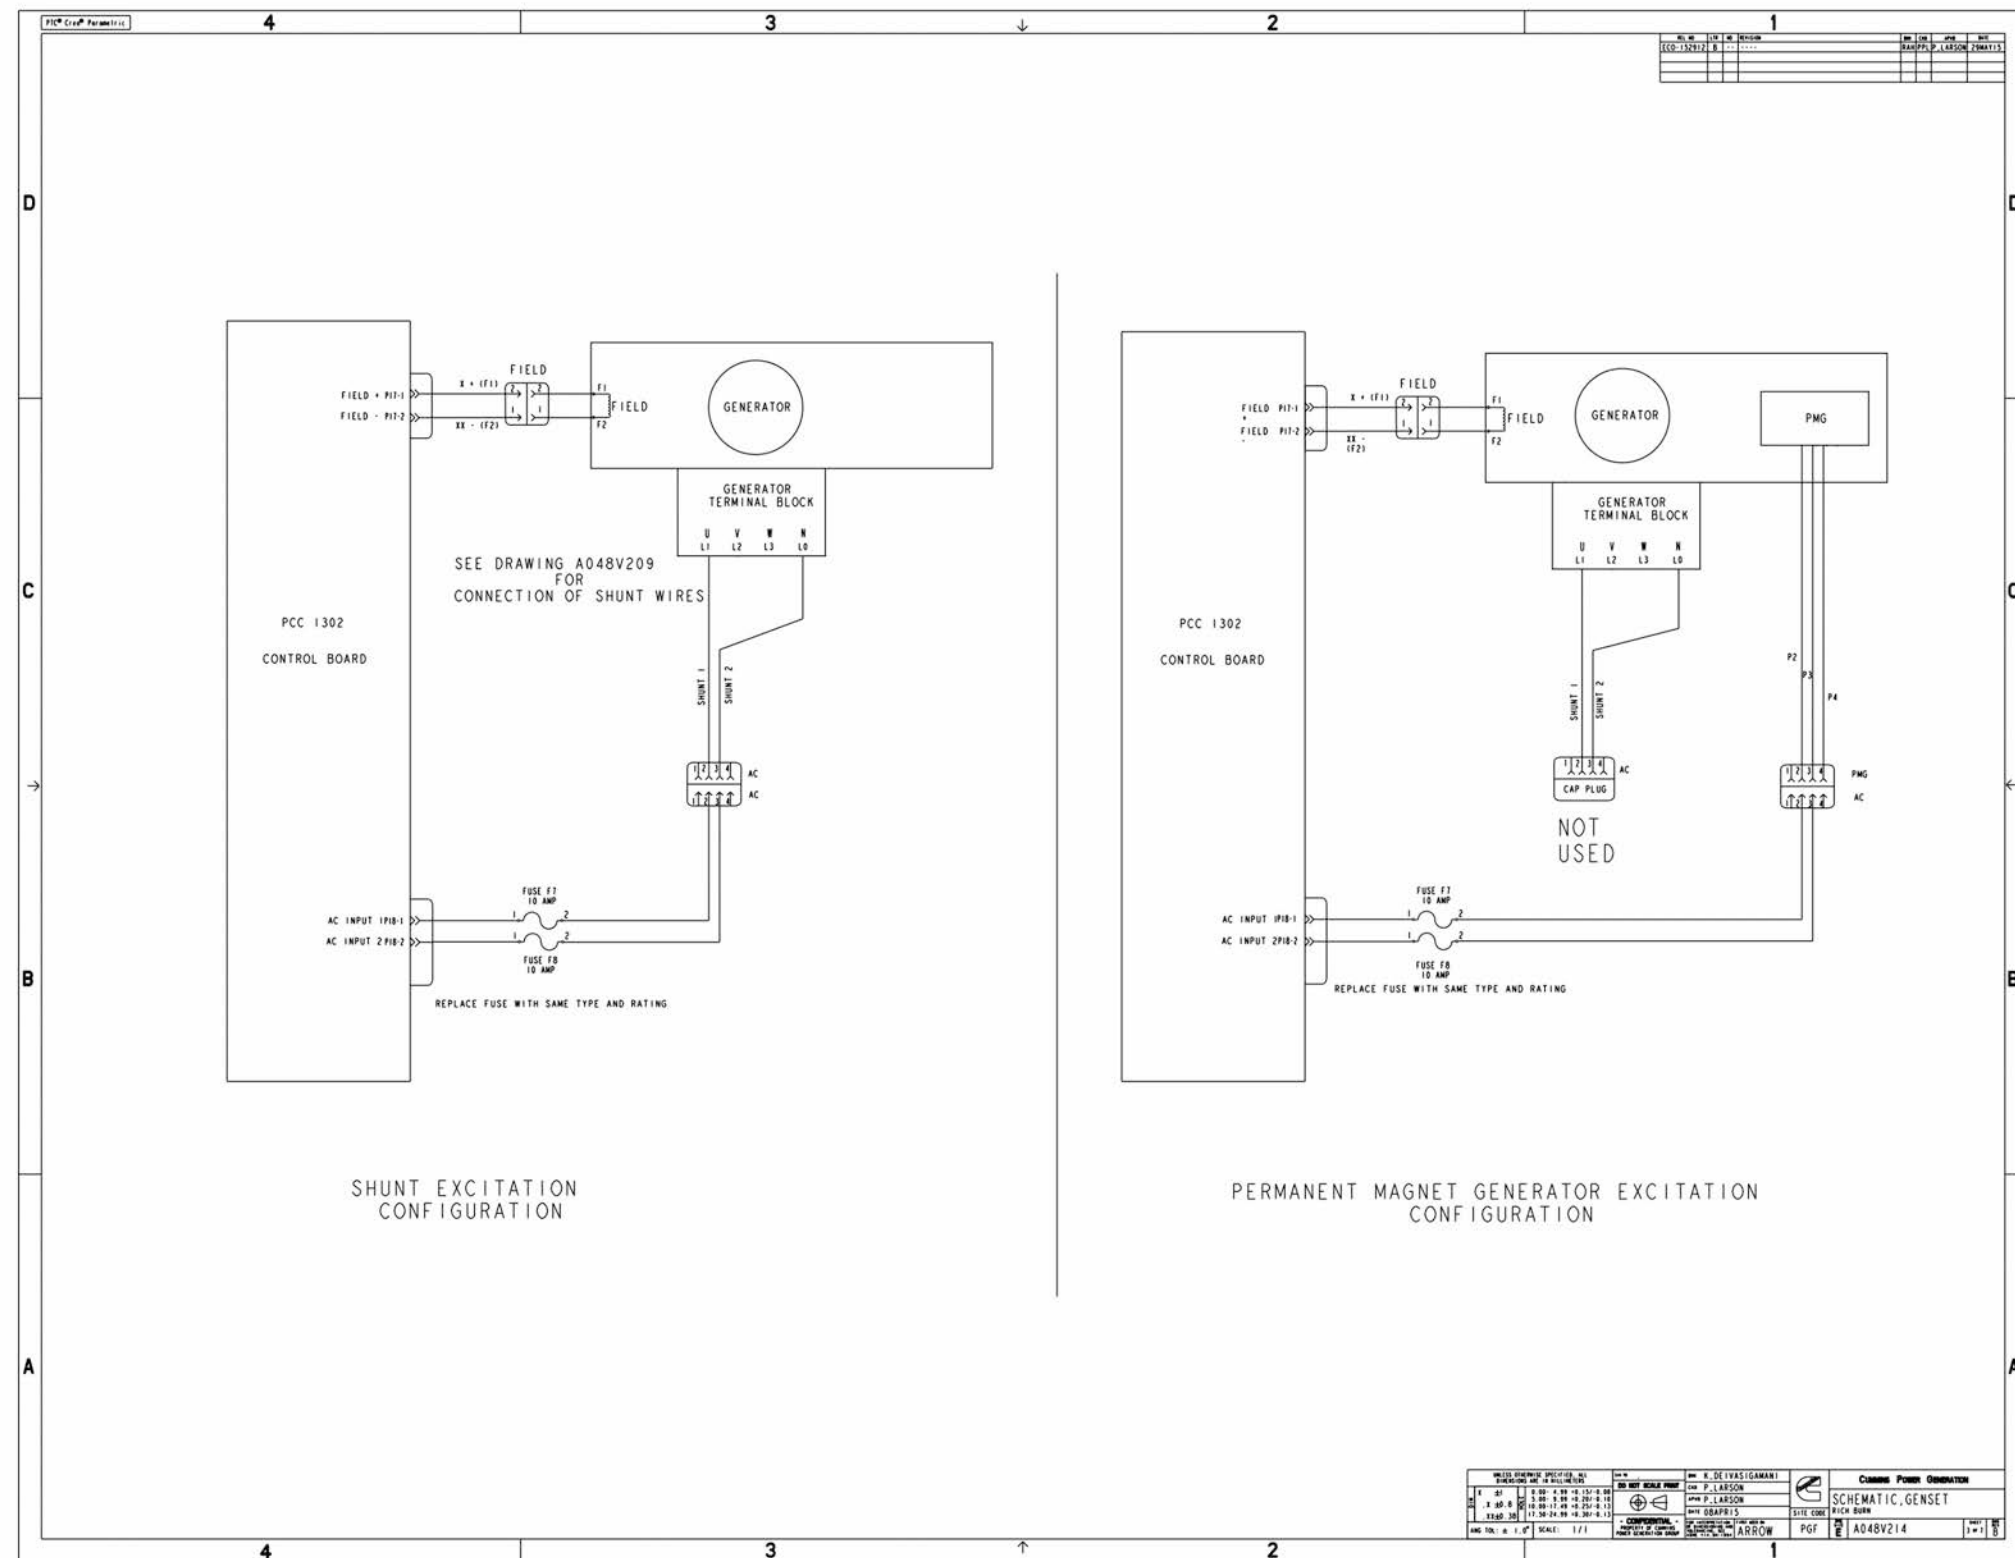


FIGURE 39. WIRING DIAGRAM FOR PCC 1302 (56 PIN ECM) (SHEET 3 OF 7)

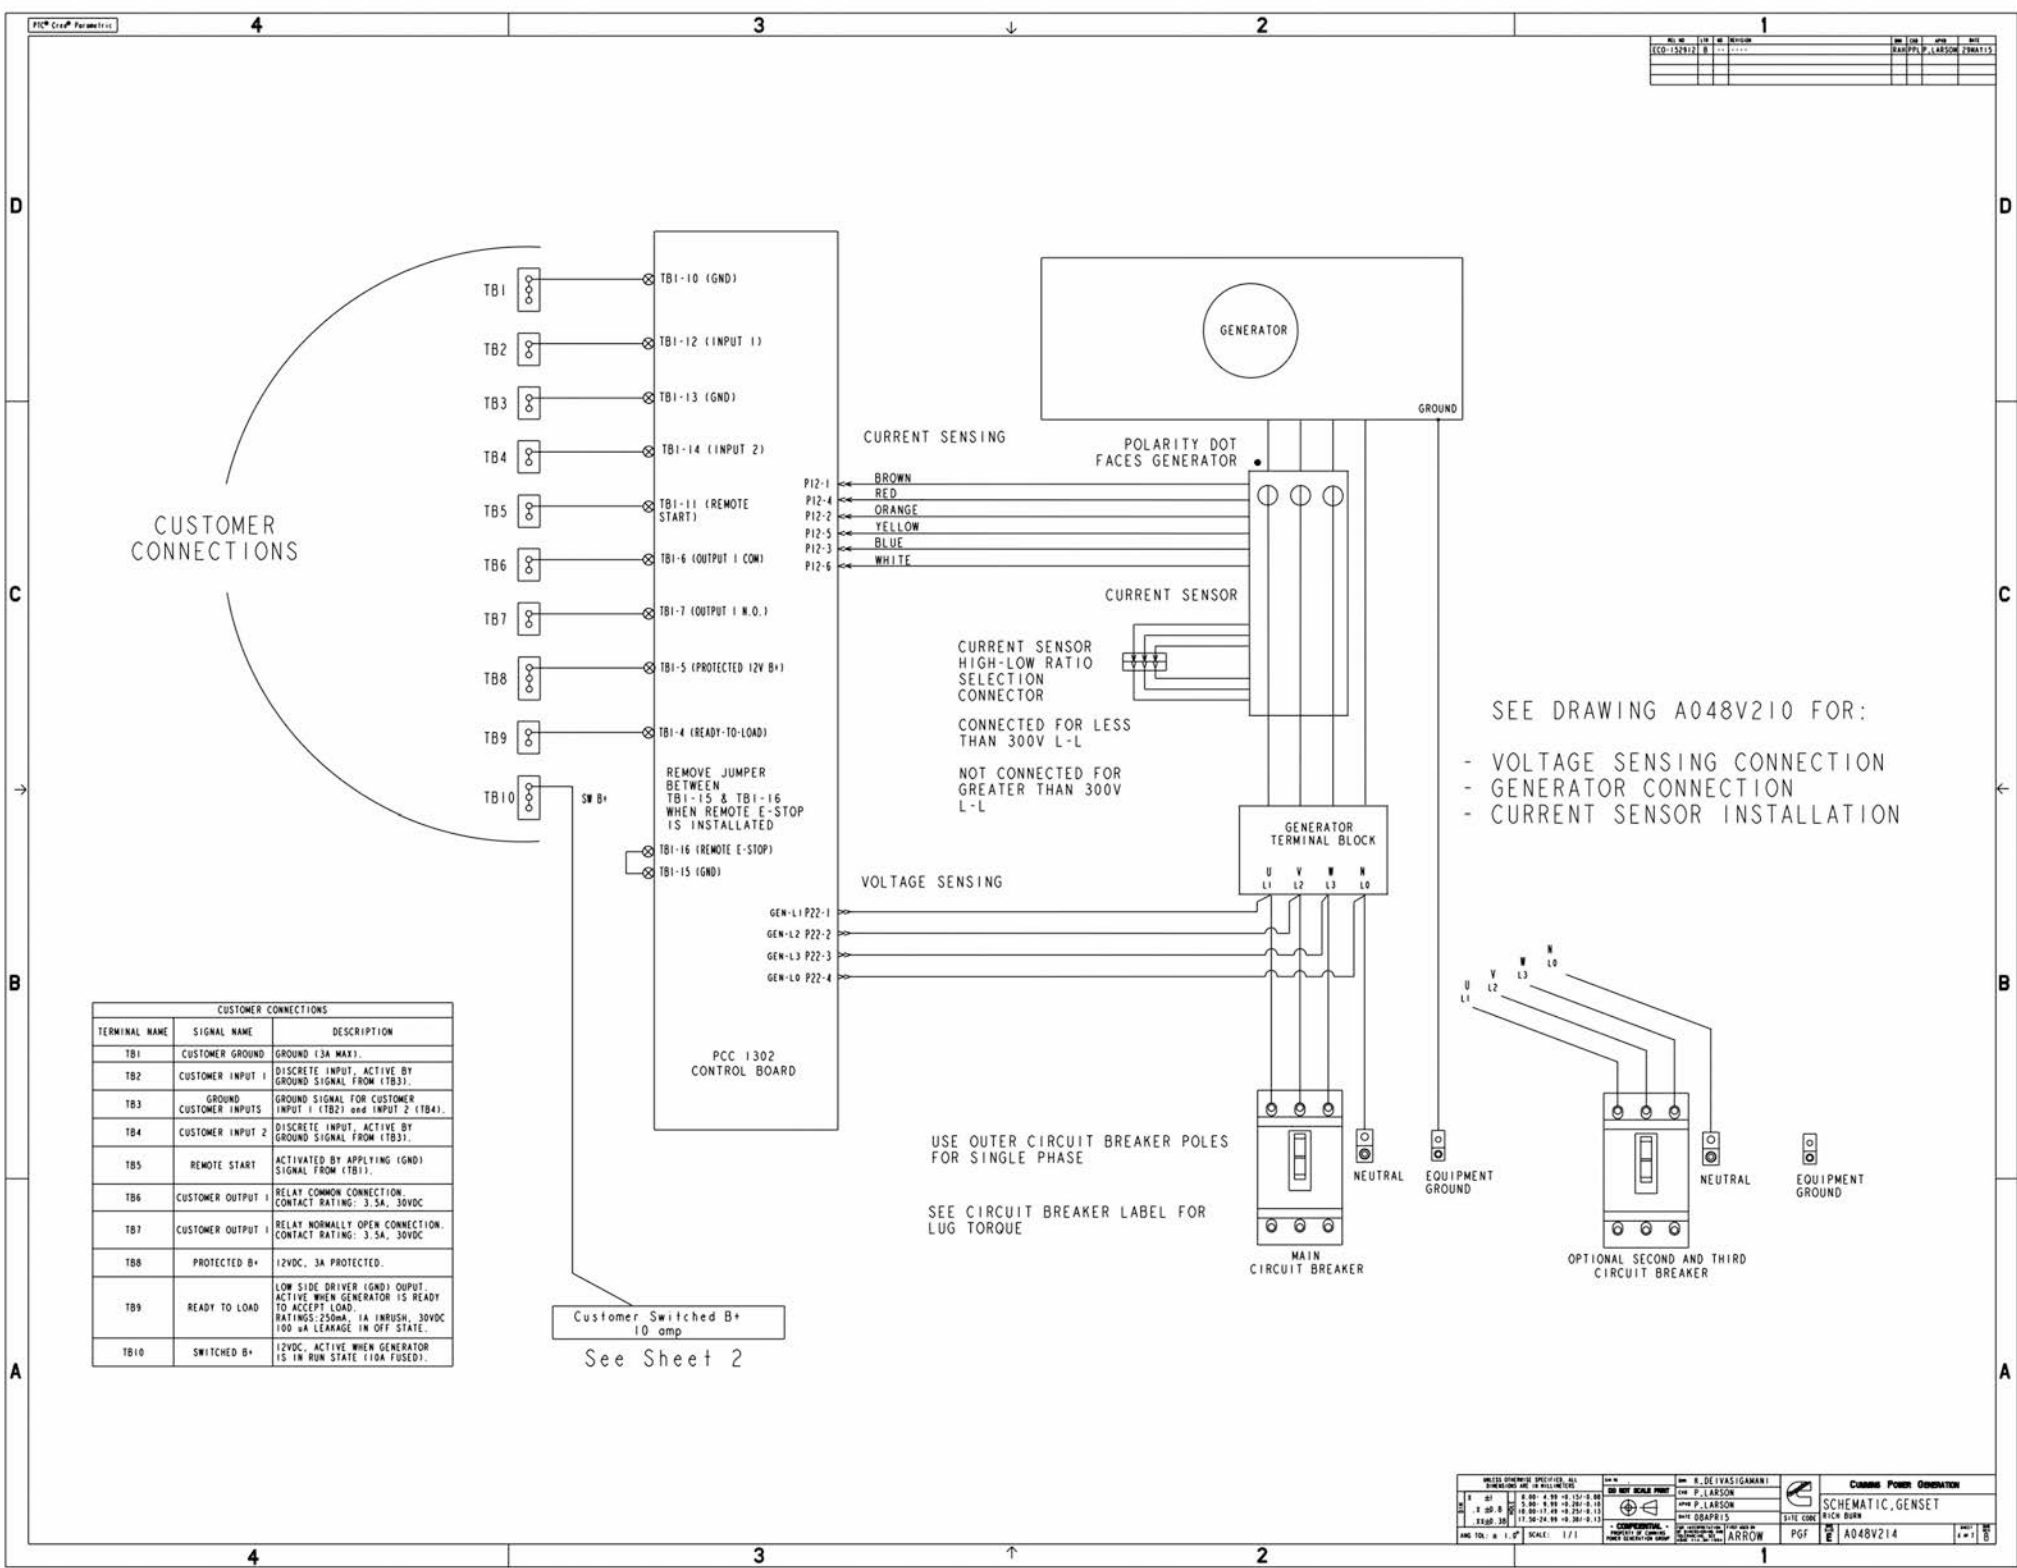


FIGURE 40. WIRING DIAGRAM FOR PCC 1302 (56 PIN ECM) (SHEET 4 OF 7)

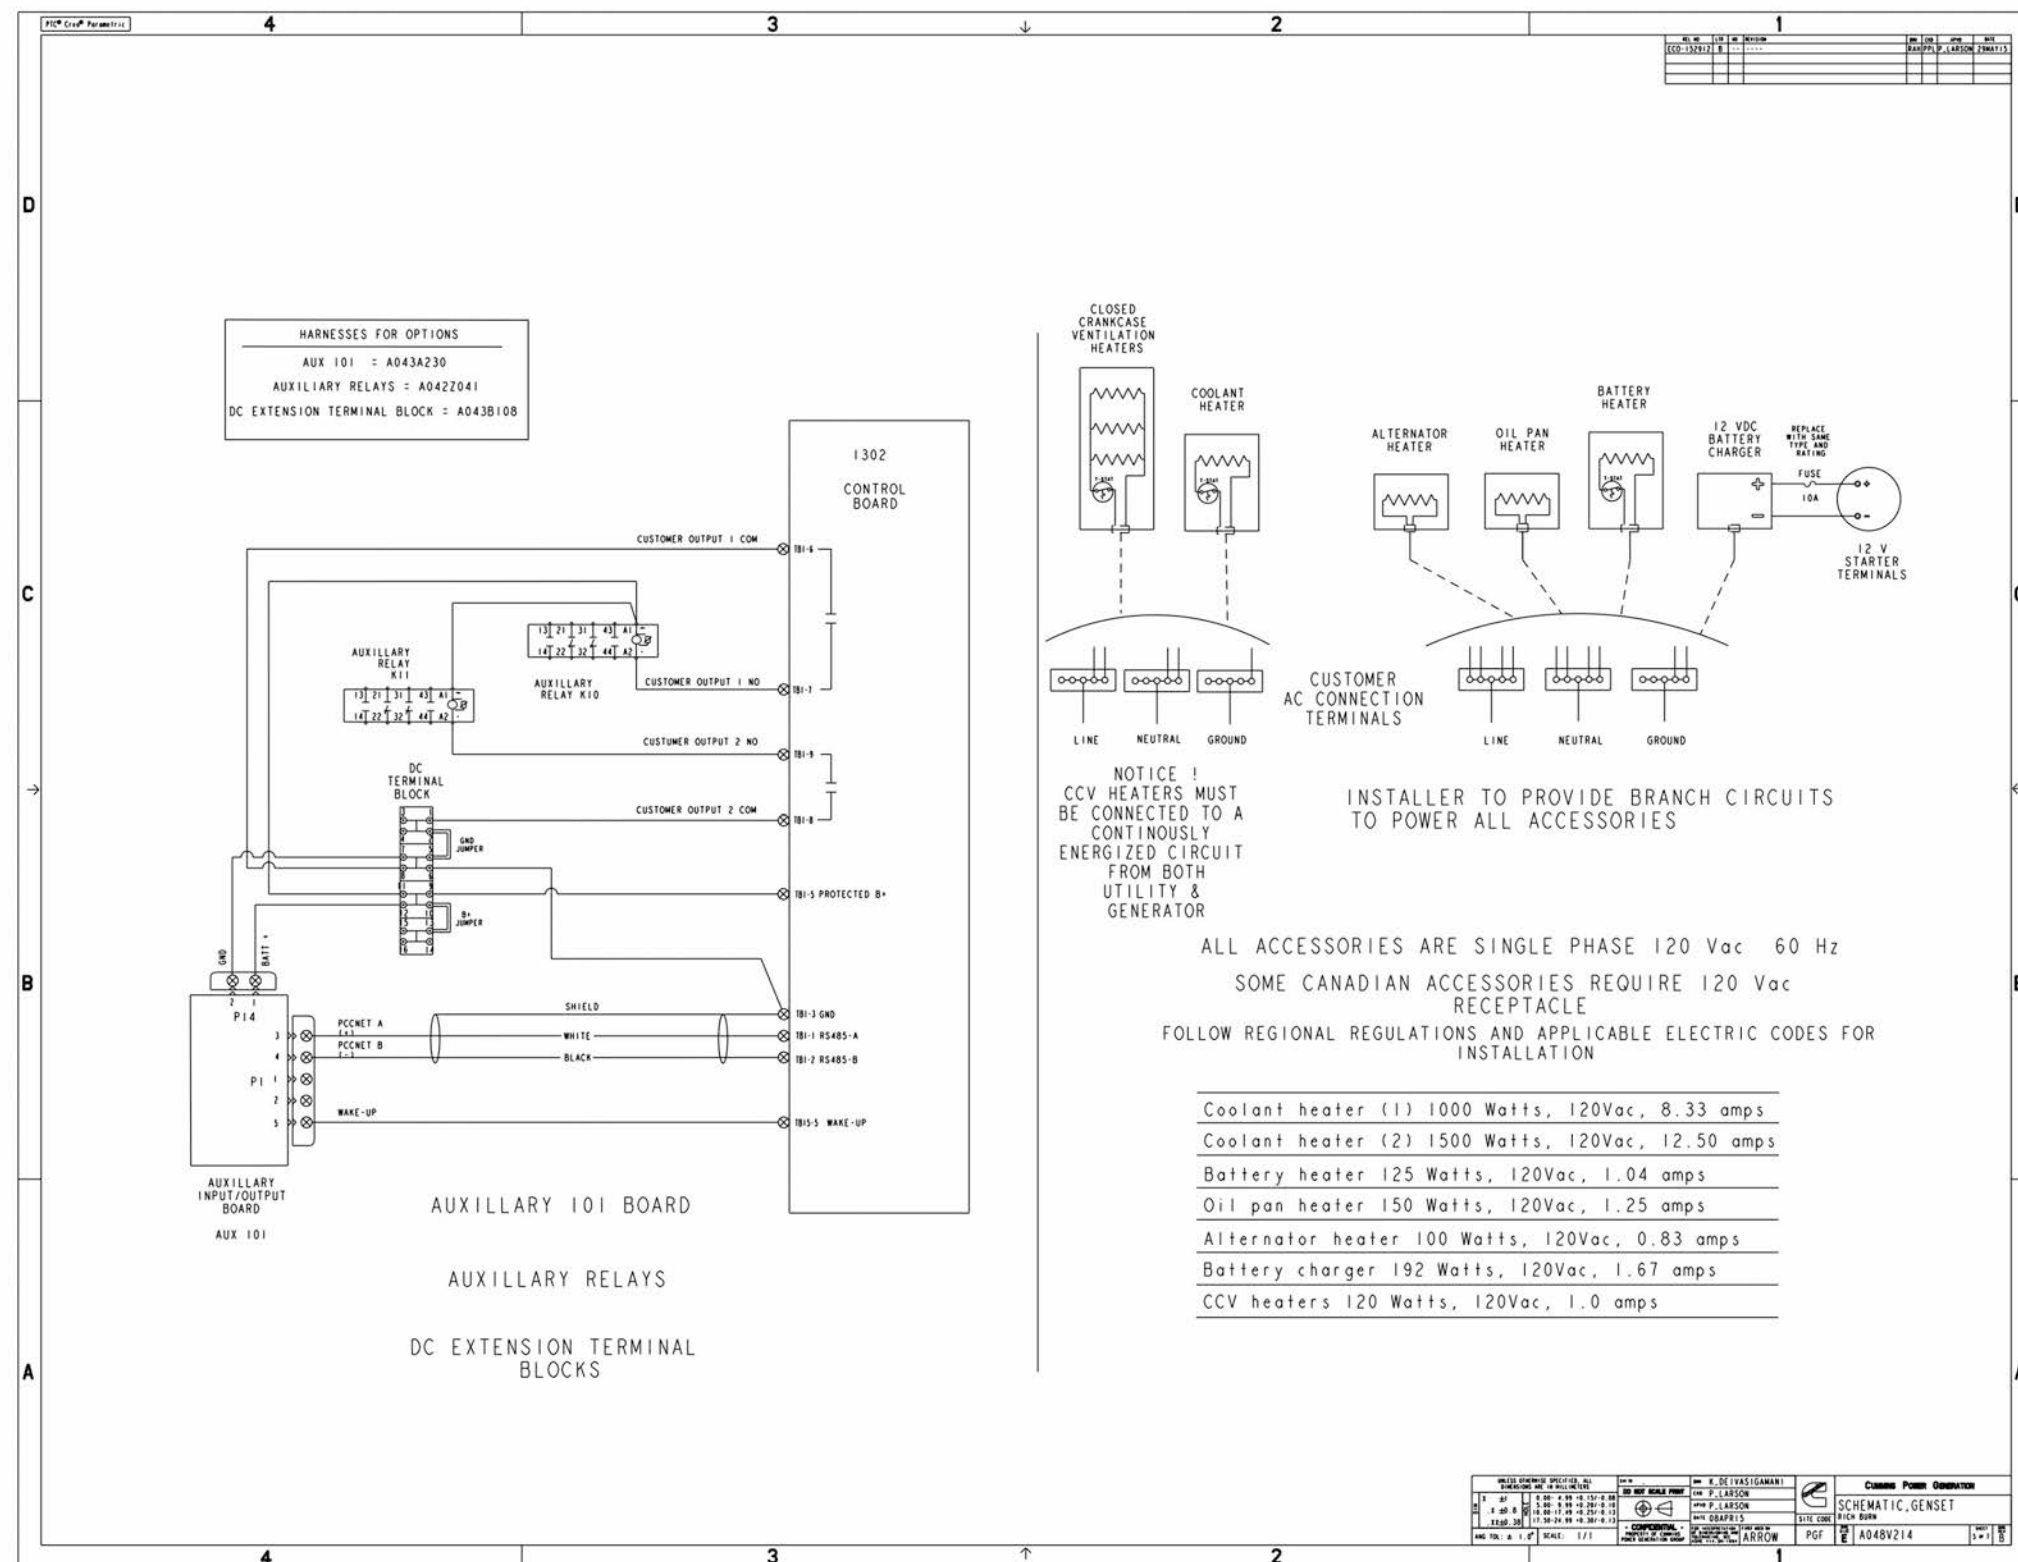
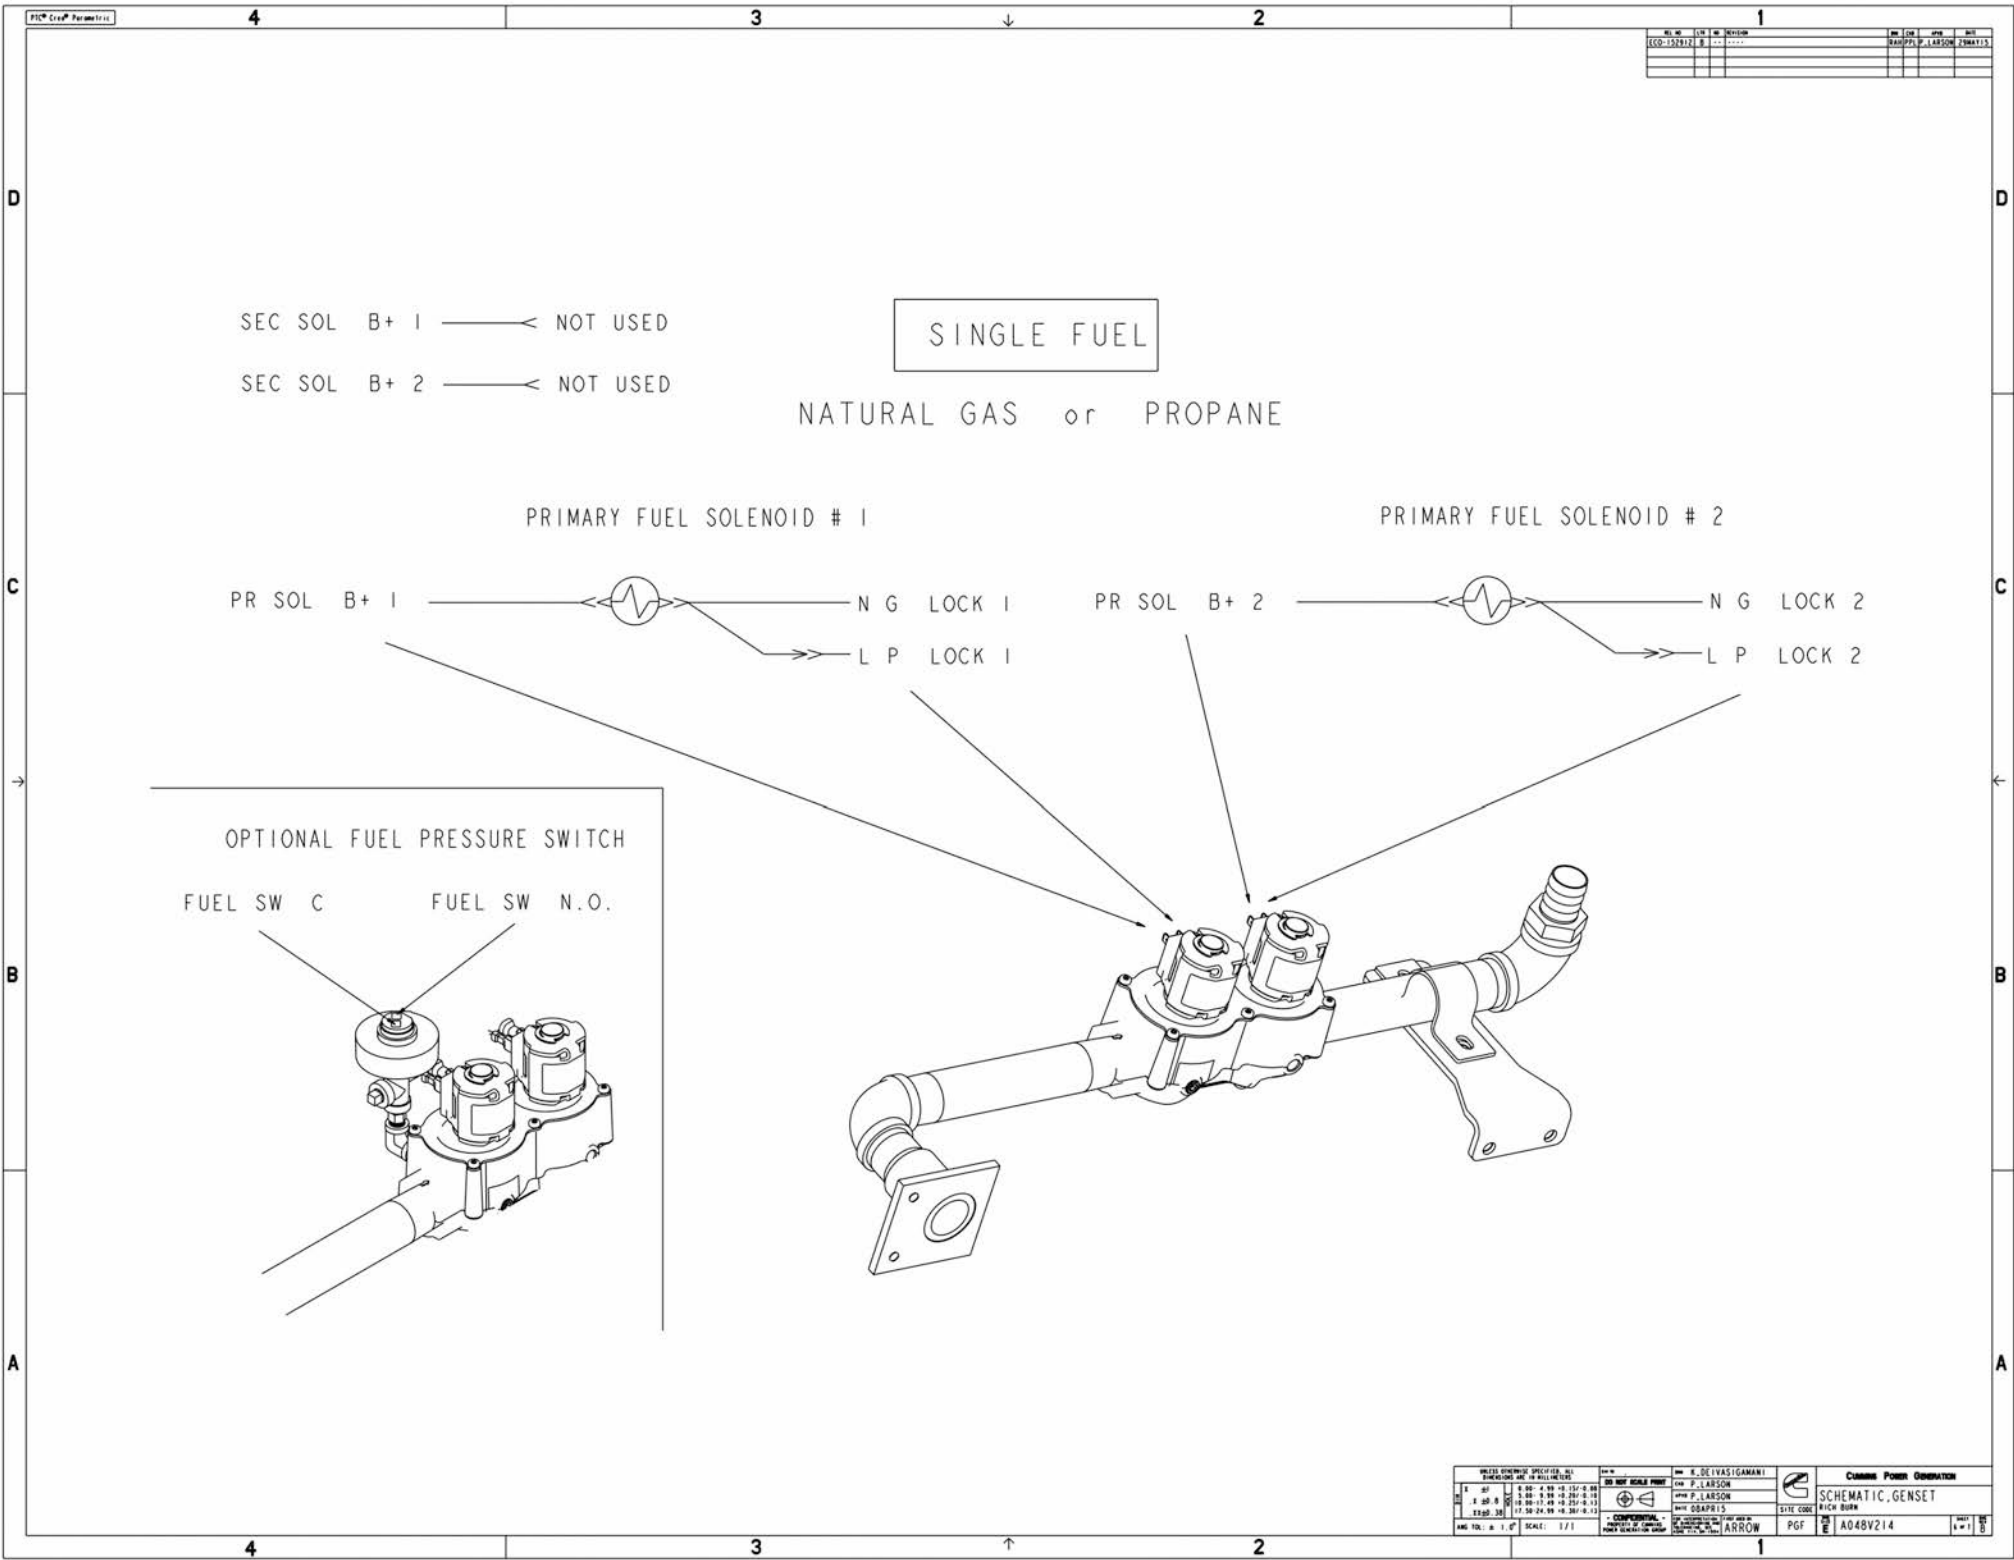


FIGURE 41. WIRING DIAGRAM FOR PCC 1302 (56 PIN ECM) (SHEET 5 OF 7)



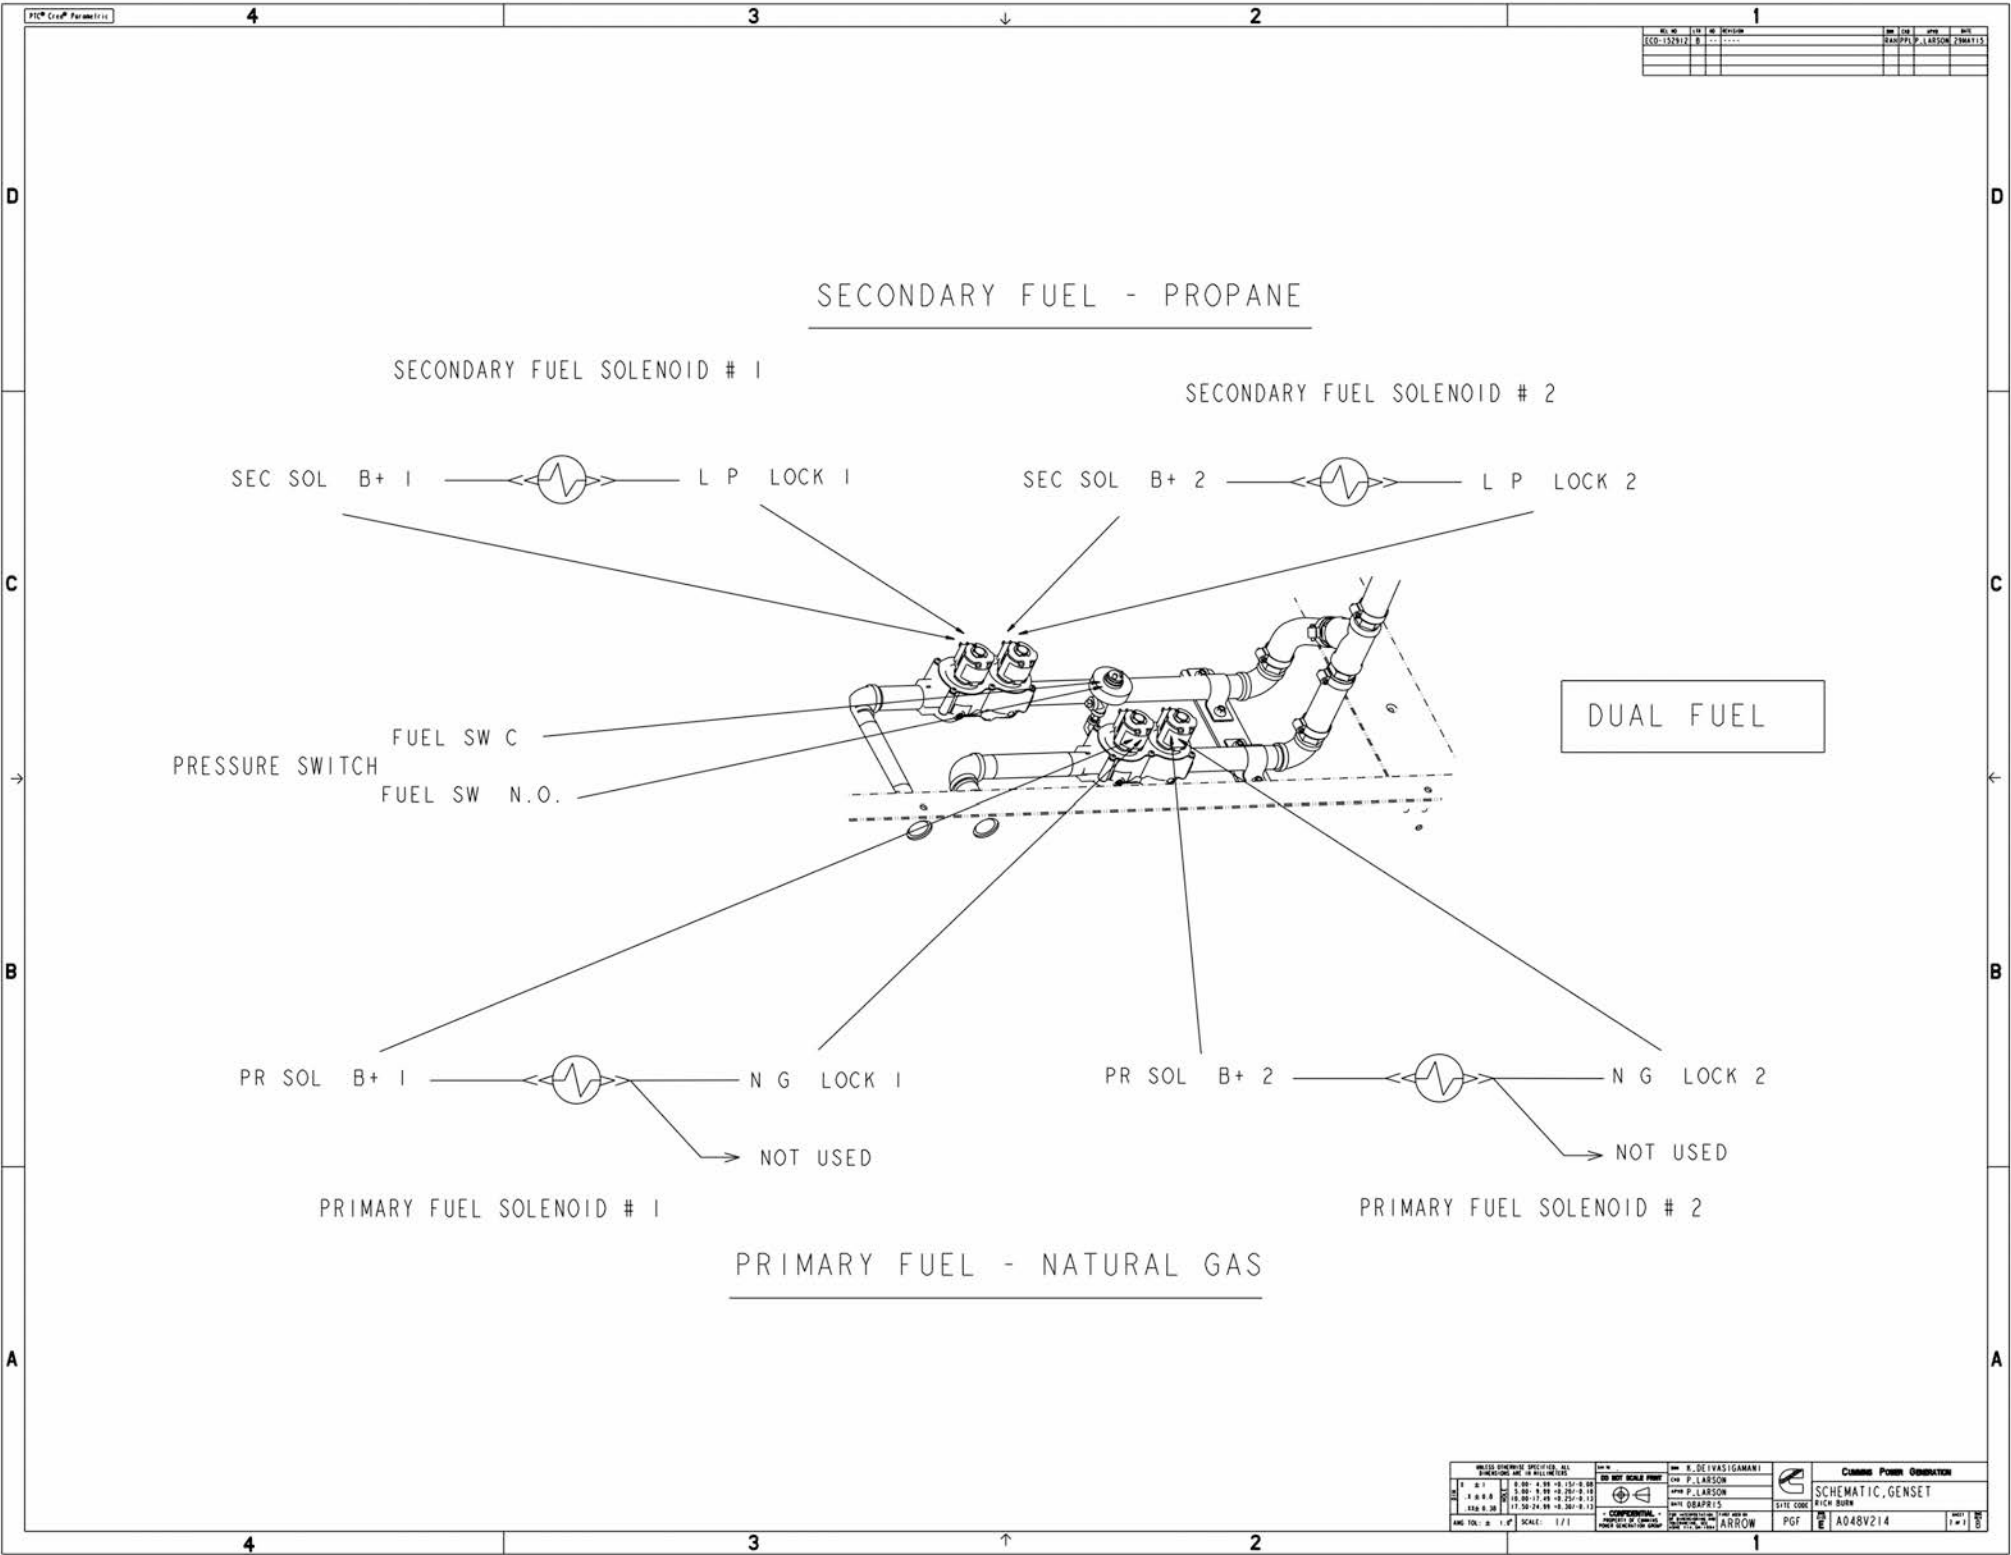


FIGURE 43. WIRING DIAGRAM FOR PCC 1302 (56 PIN ECM) (SHEET 7 OF 7)

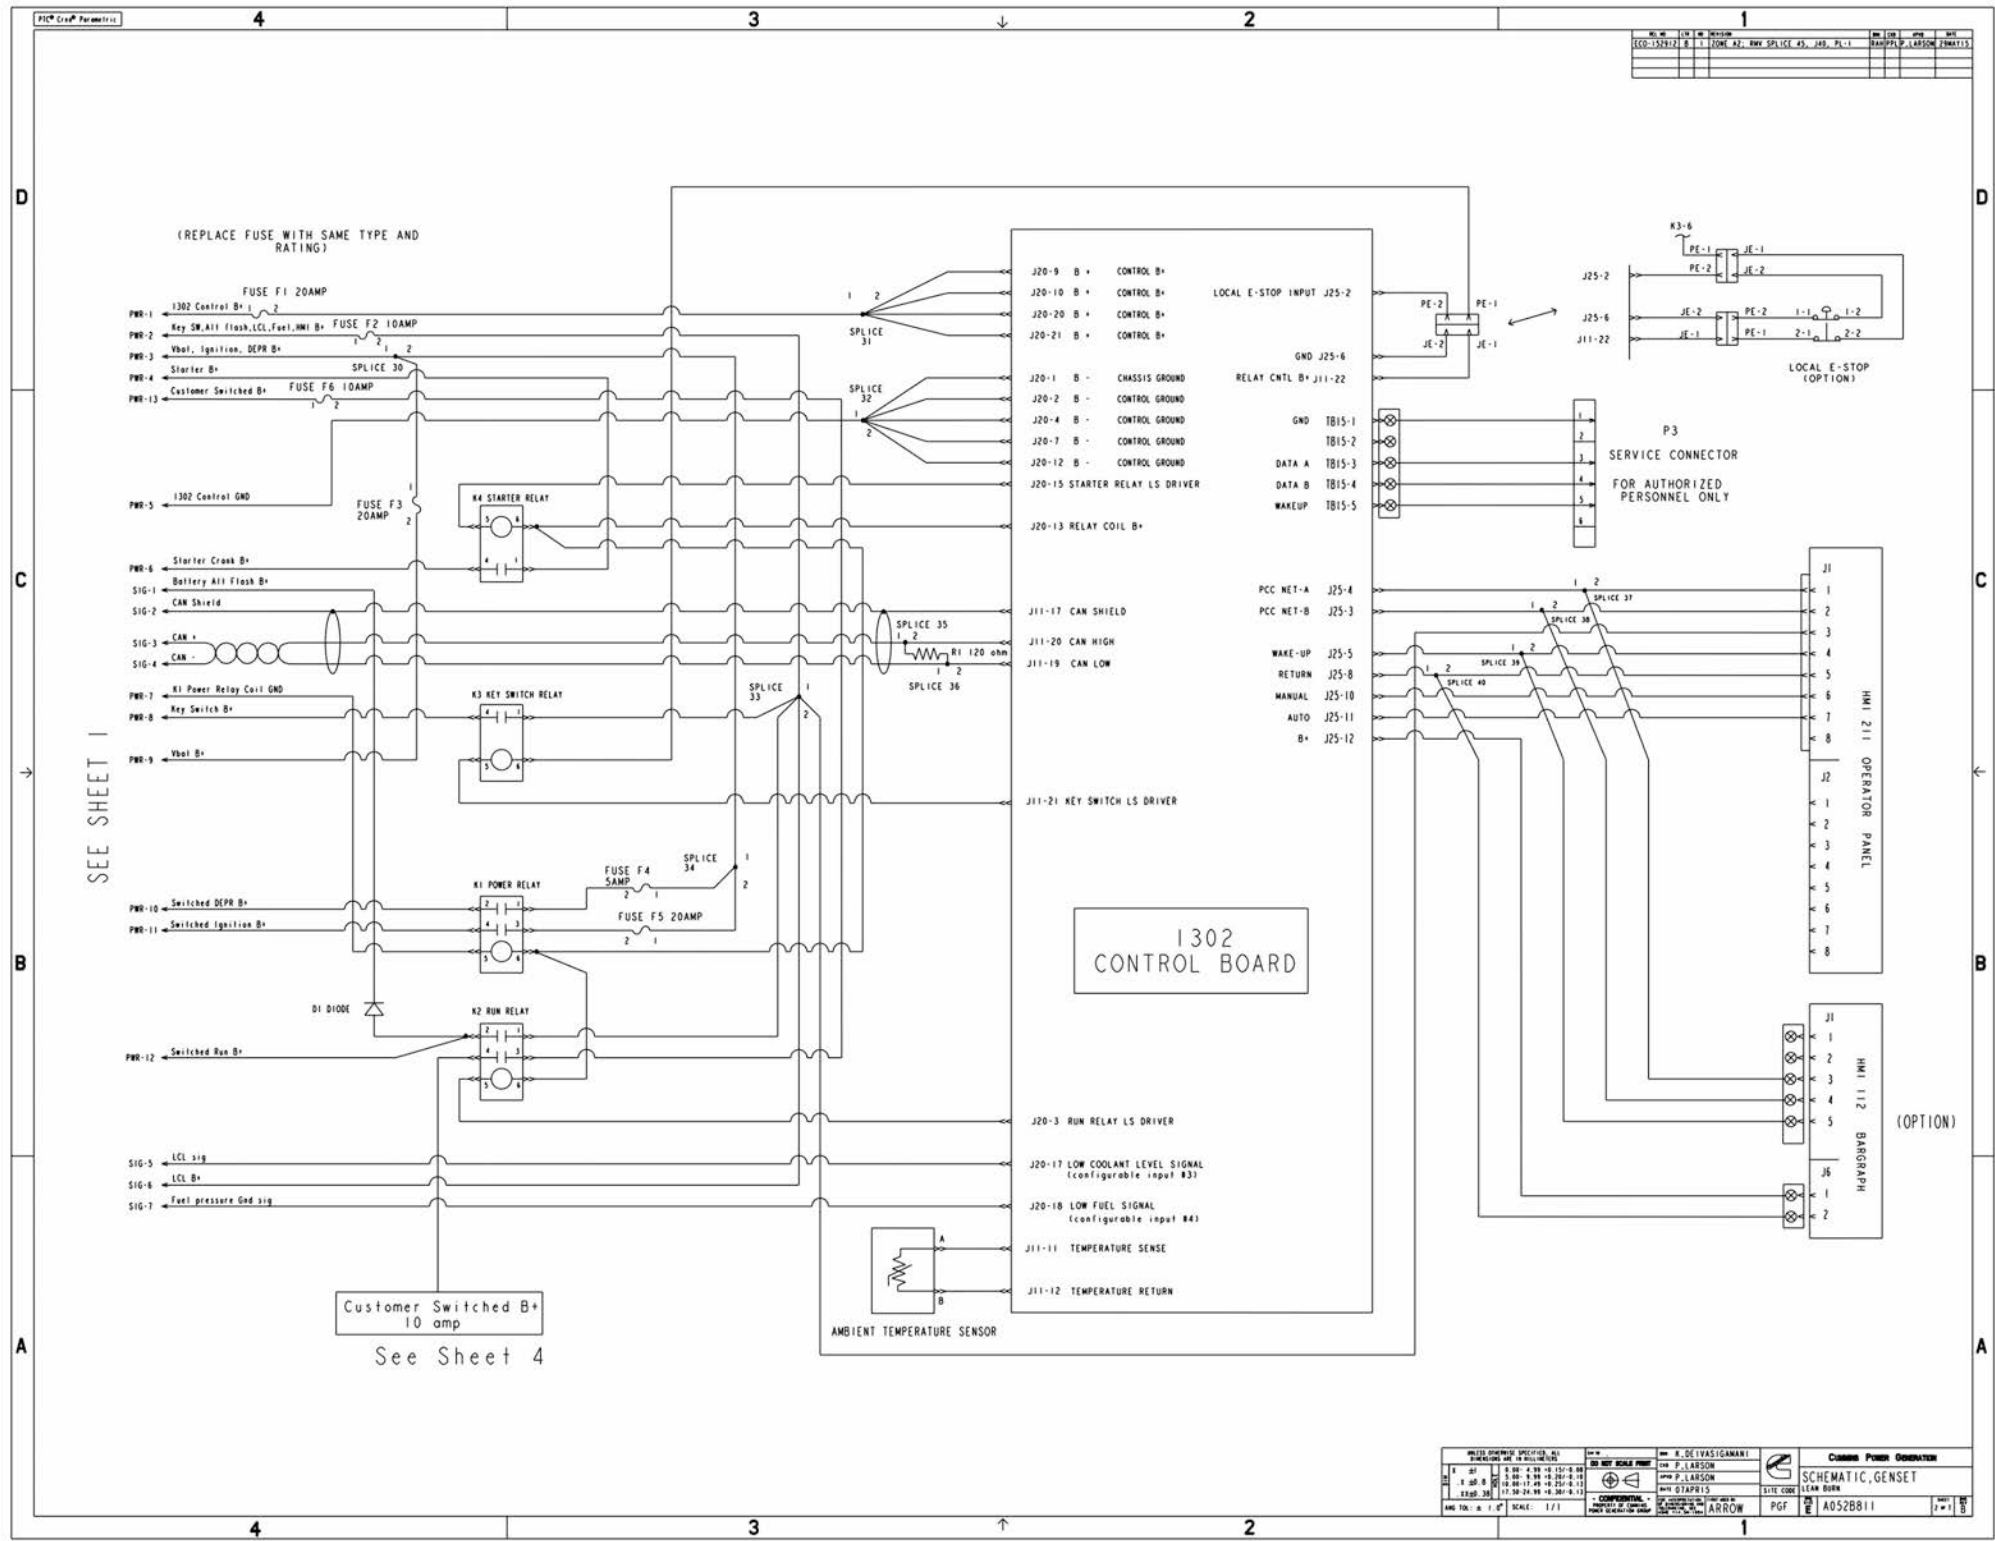


FIGURE 45. WIRING DIAGRAM FOR PCC 1302 (90 PIN ECM) (SHEET 2 OF 7)

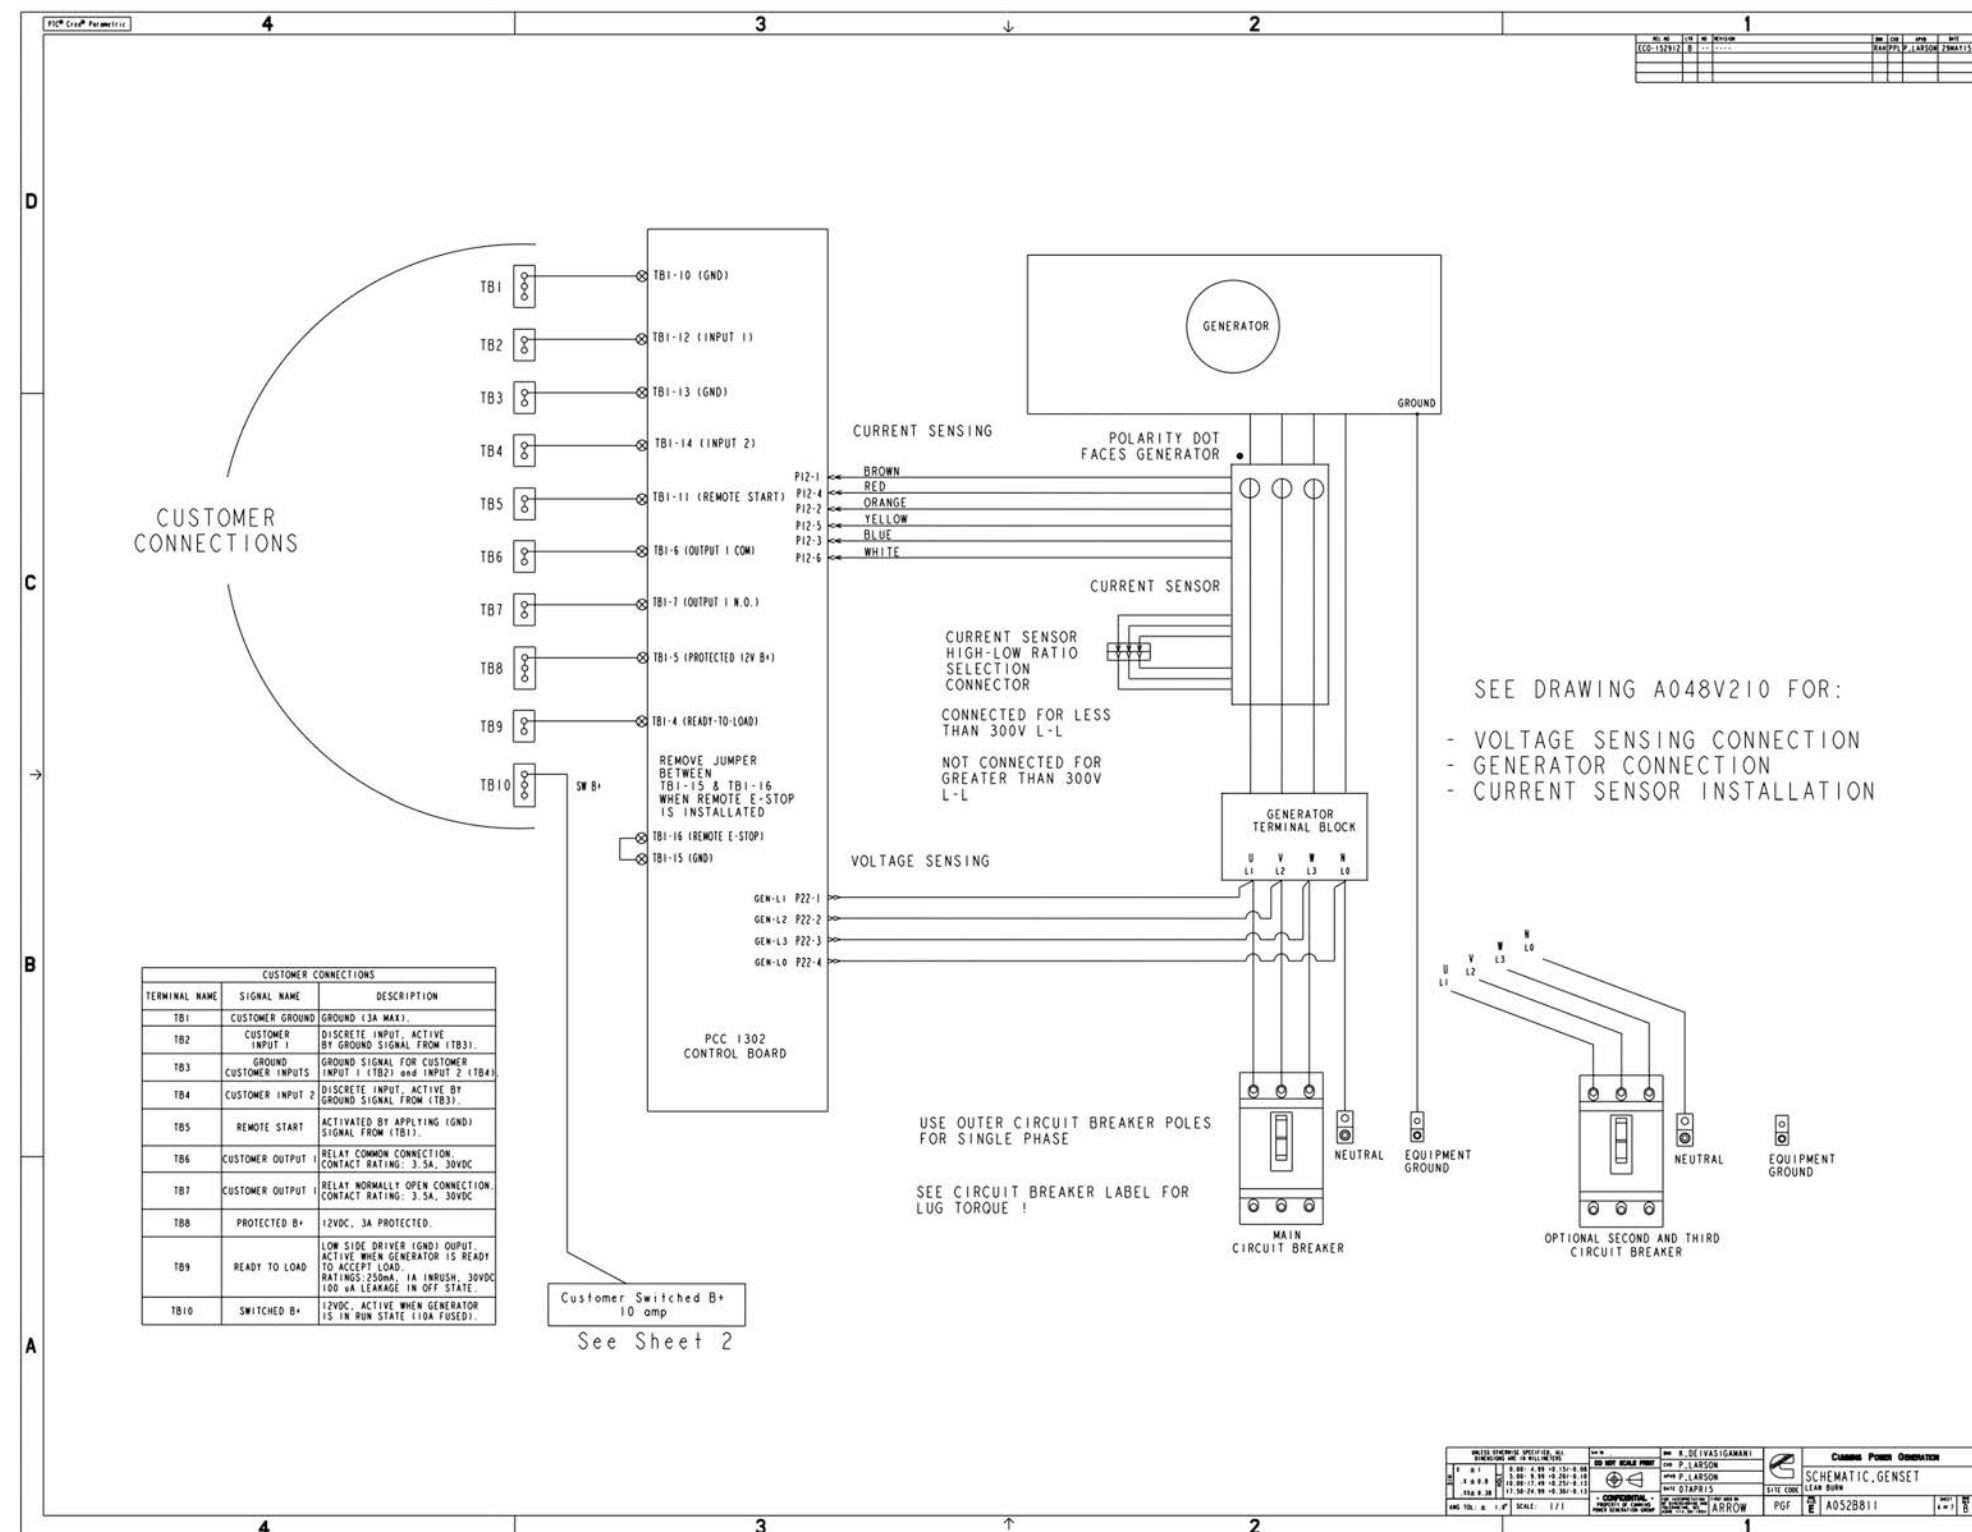


FIGURE 47. WIRING DIAGRAM FOR PCC 1302 (90 PIN ECM) (SHEET 4 OF 7)

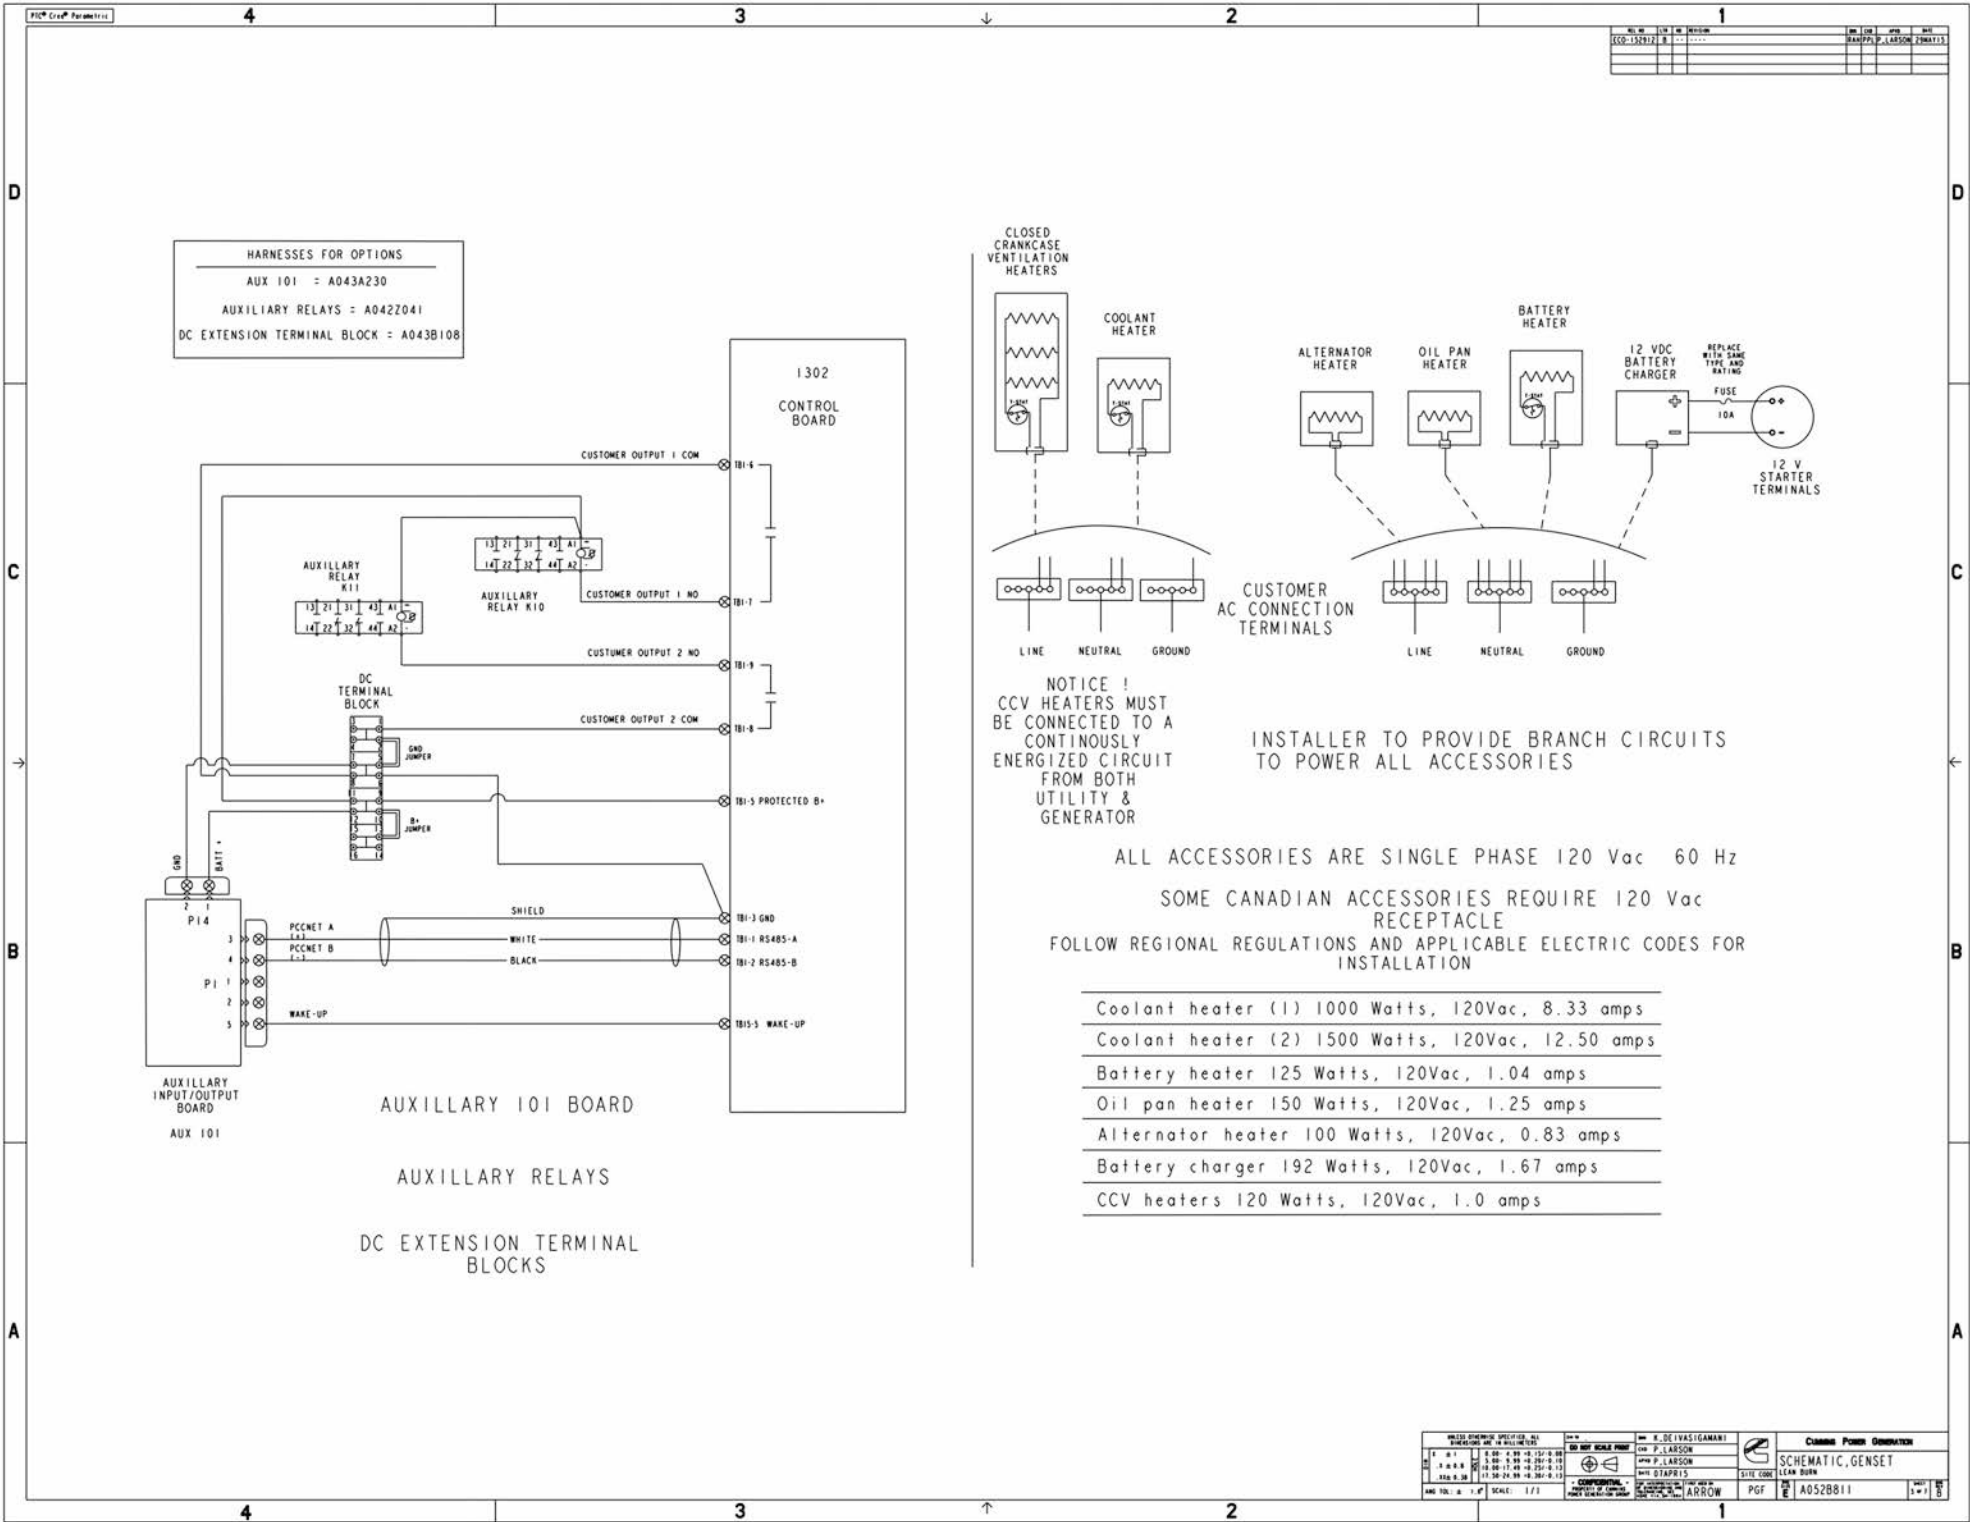


FIGURE 48. WIRING DIAGRAM FOR PCC 1302 (90 PIN ECM) (SHEET 5 OF 7)

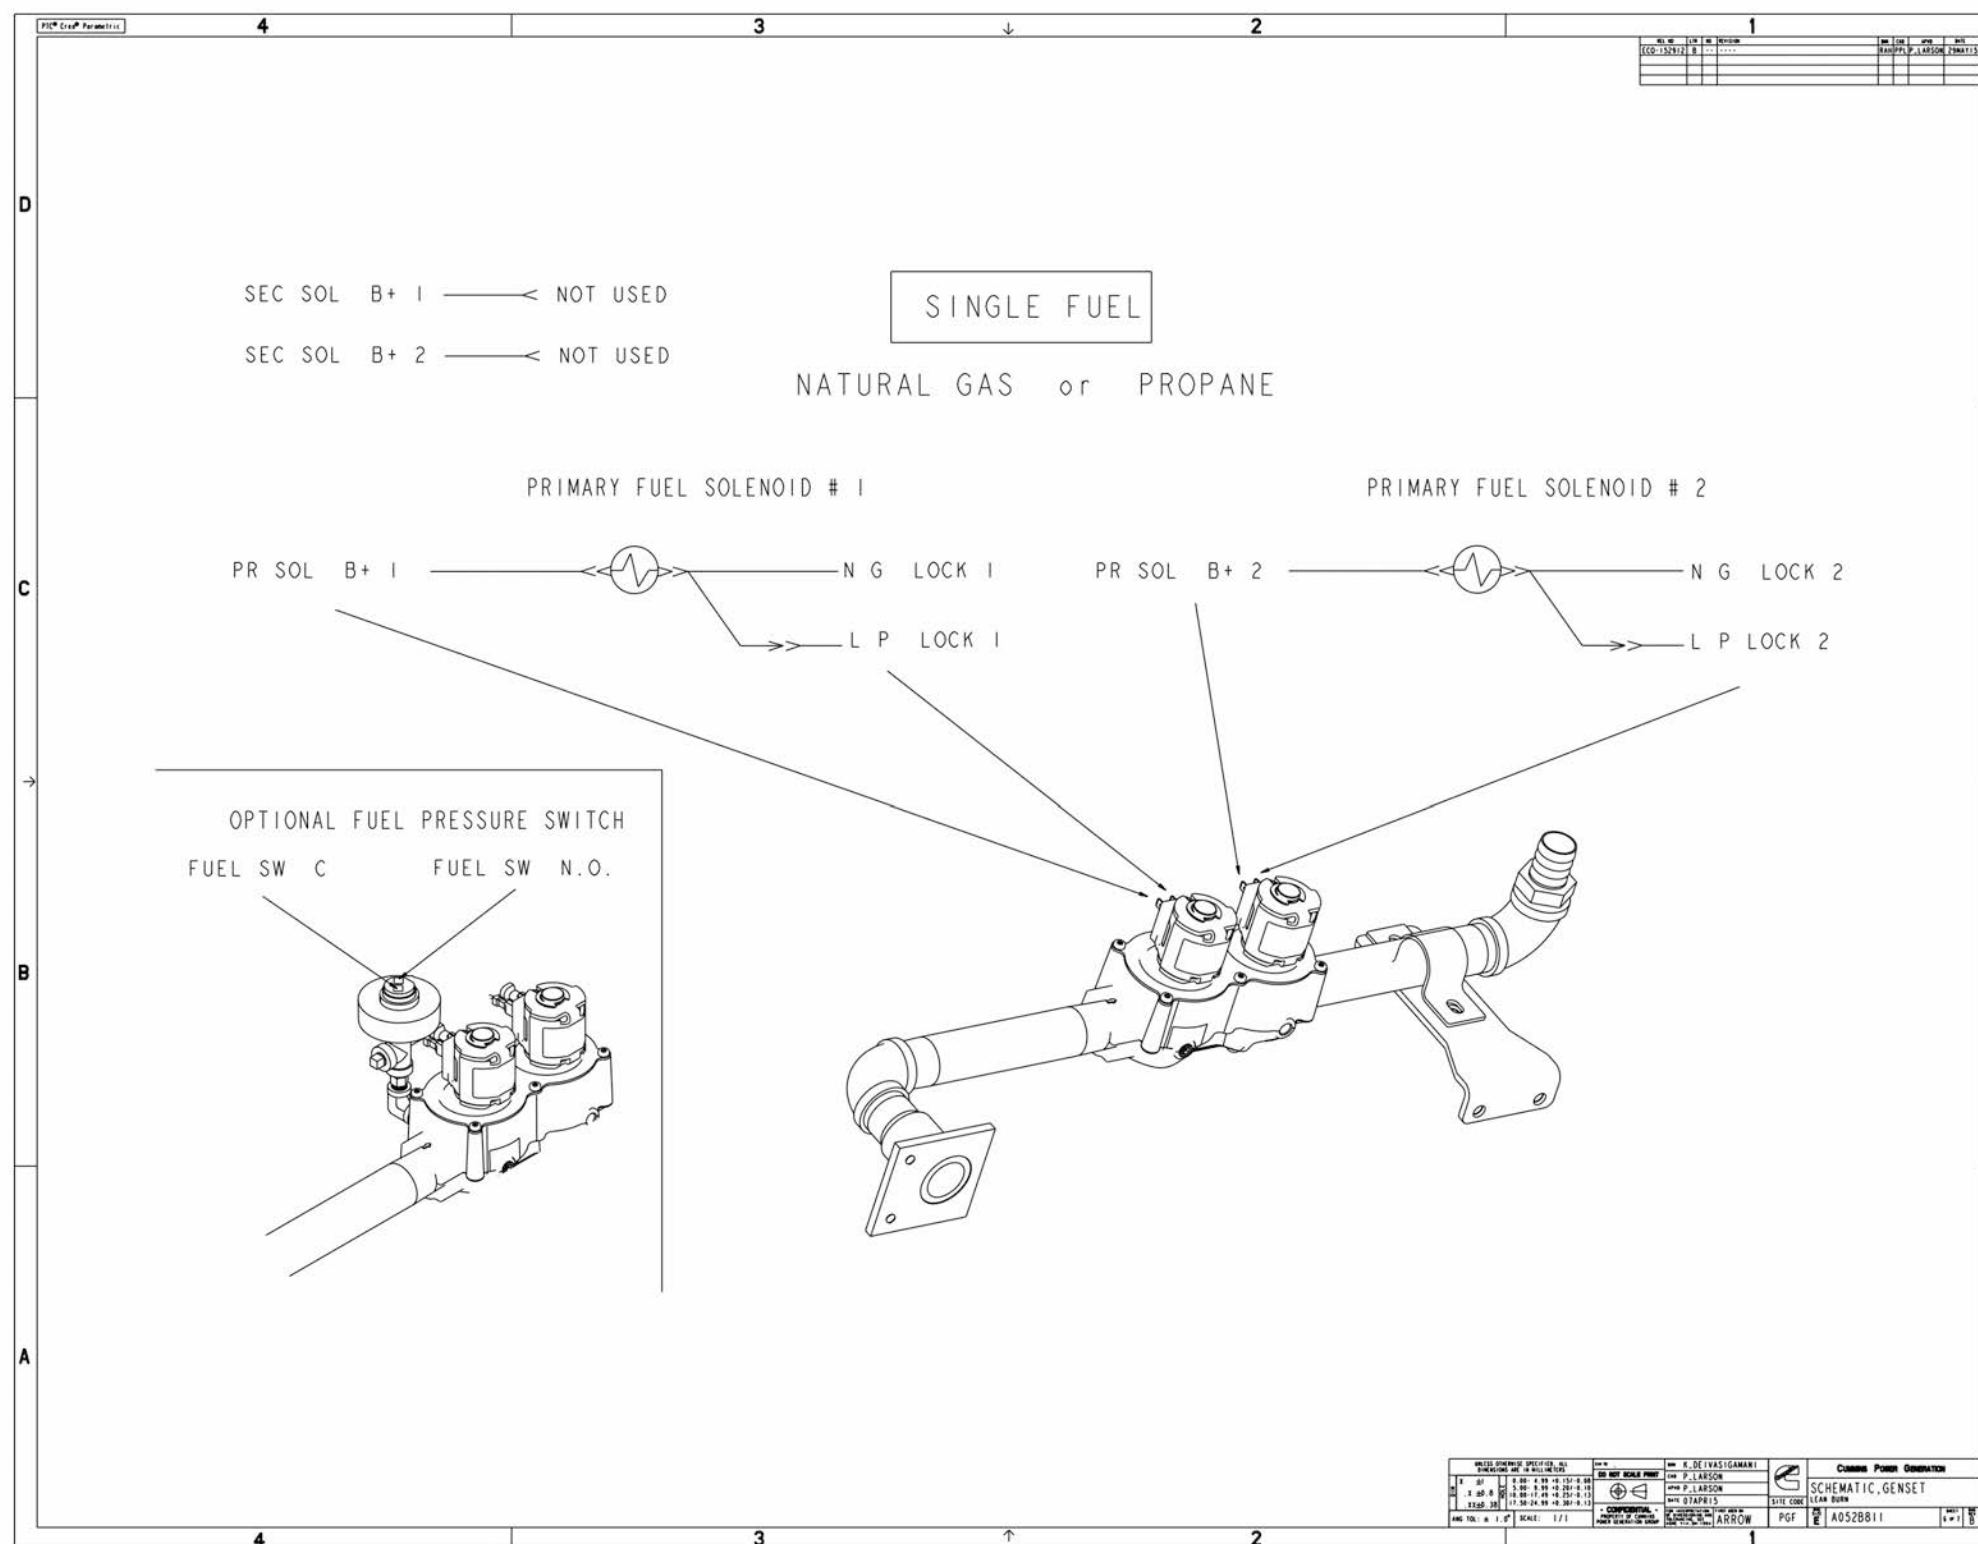


FIGURE 49. WIRING DIAGRAM FOR PCC 1302 (90 PIN ECM) (SHEET 6 OF 7)

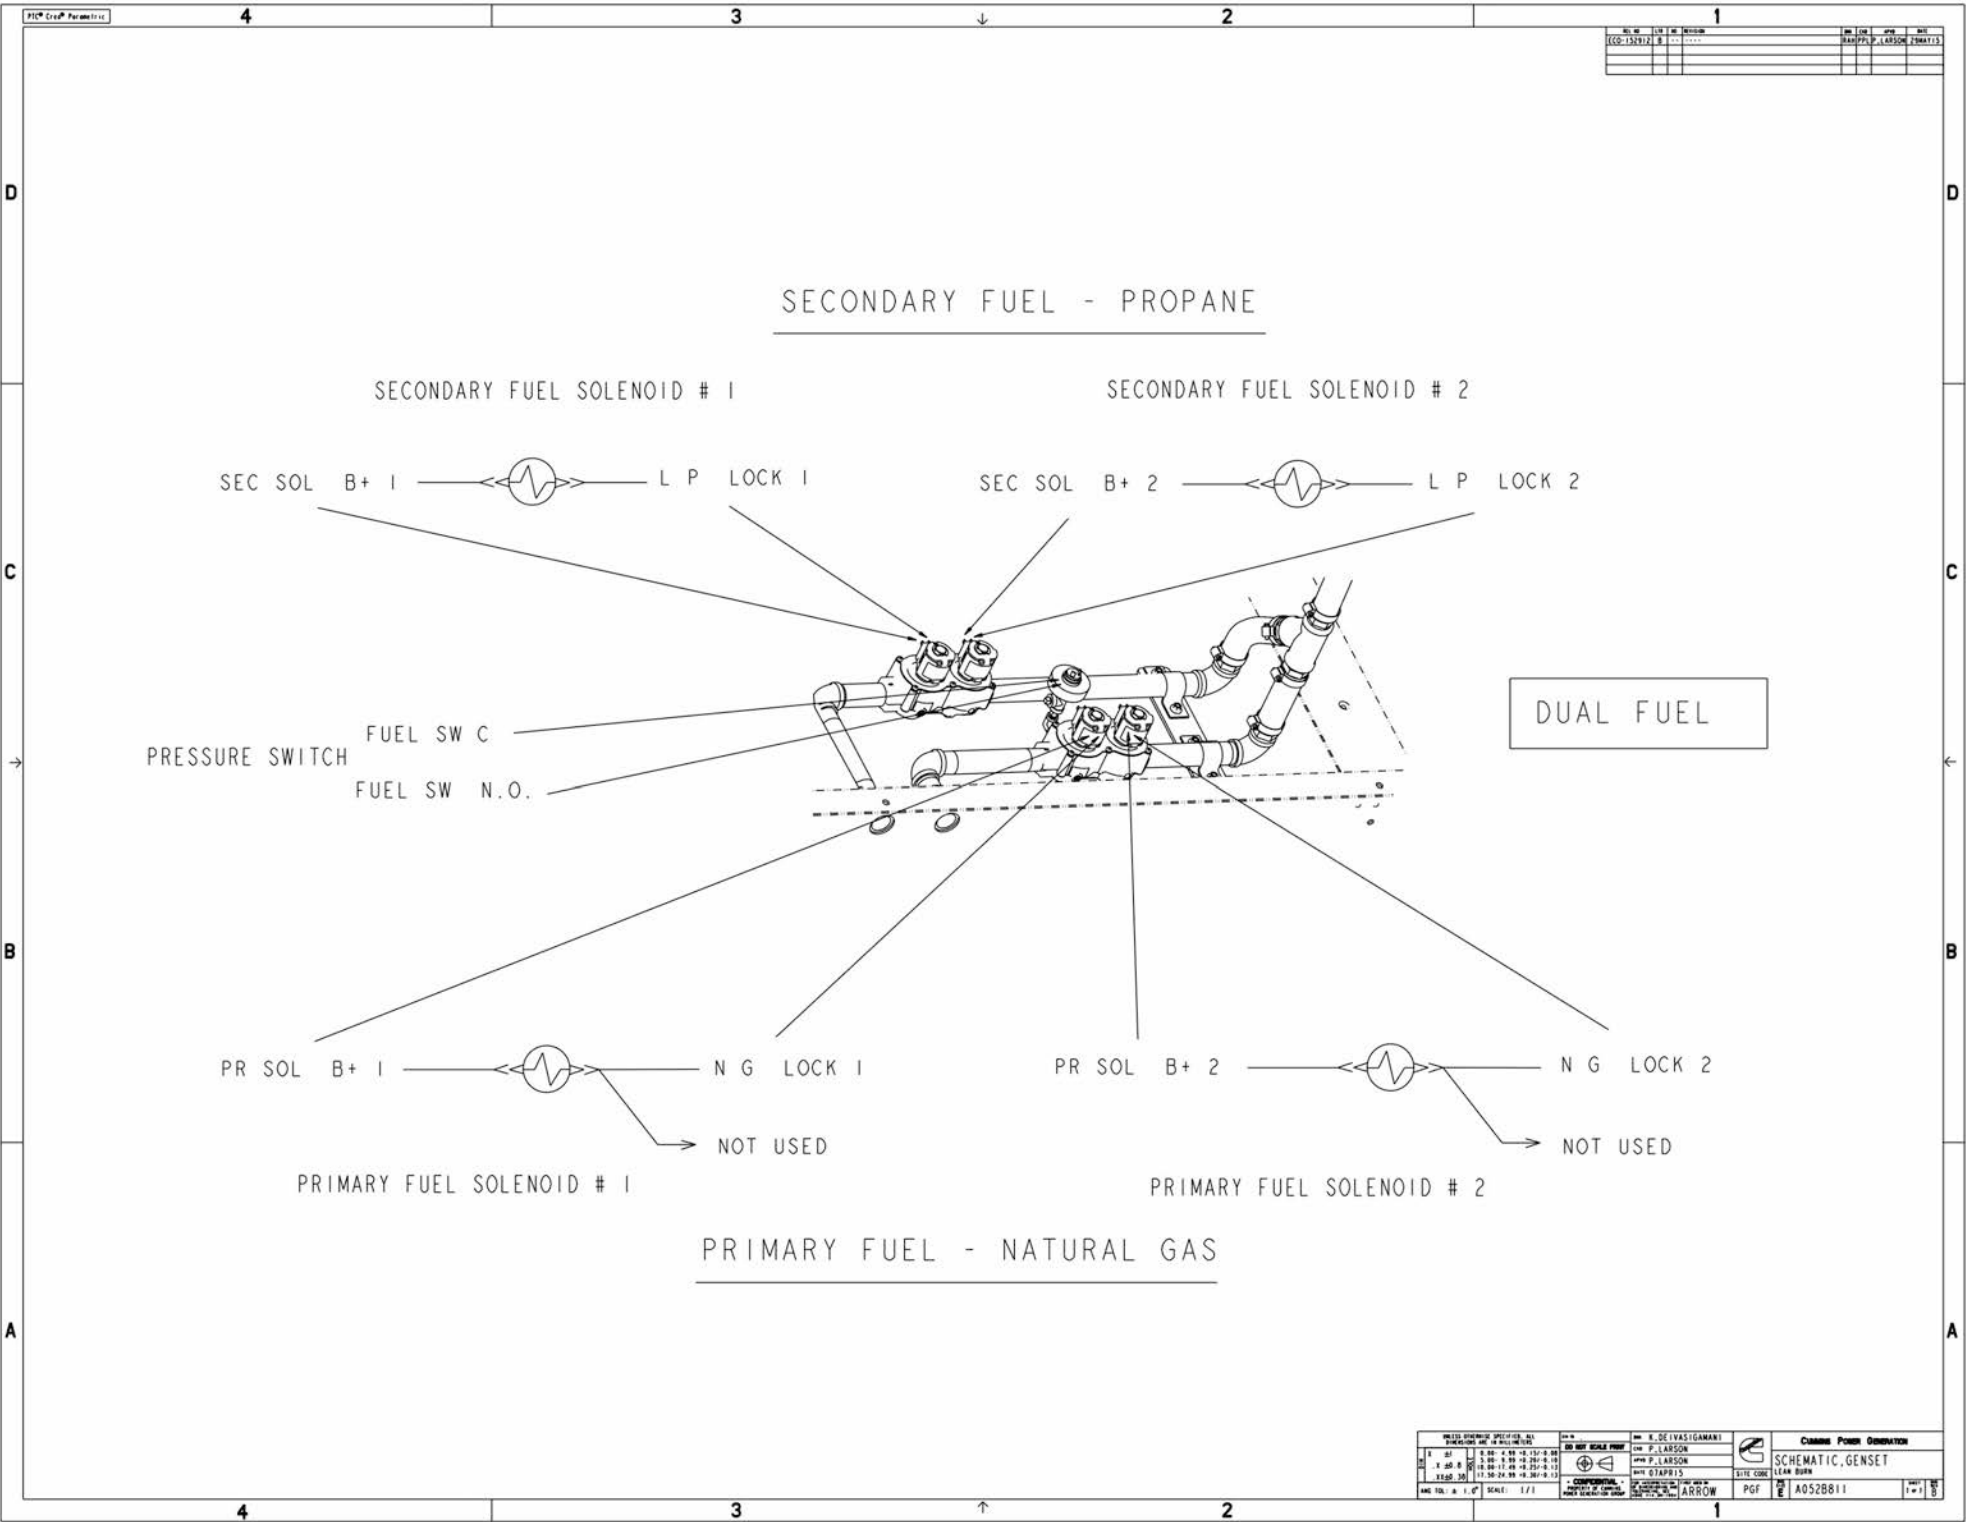


FIGURE 50. WIRING DIAGRAM FOR PCC 1302 (90 PIN ECM) (SHEET 7 OF 7)

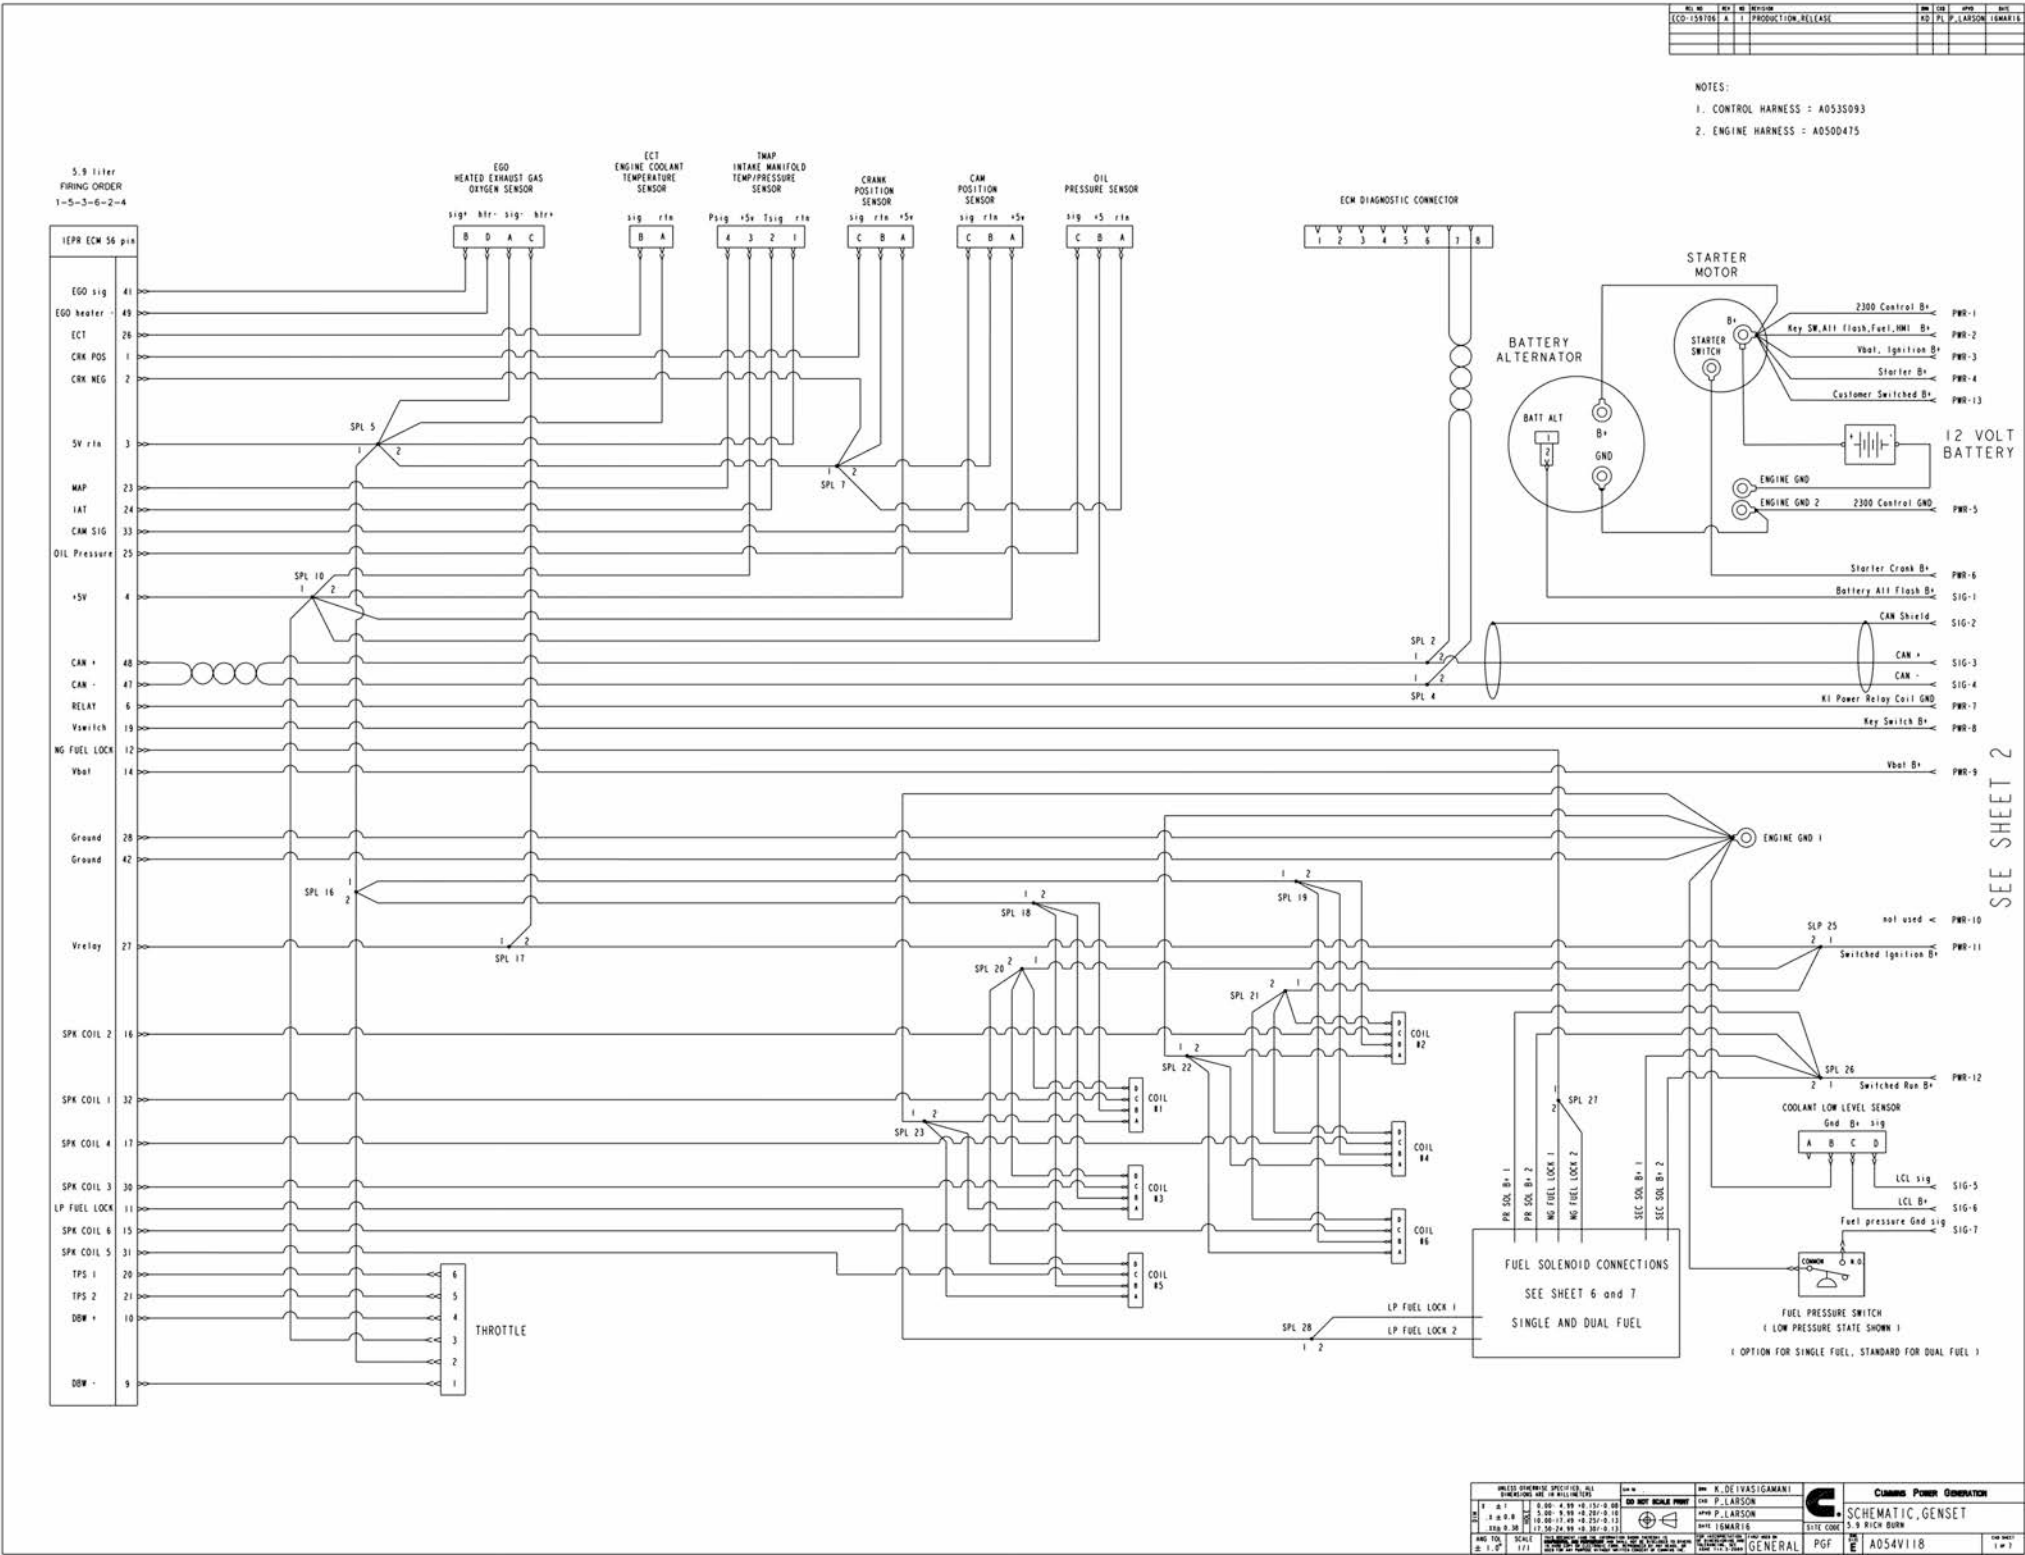


FIGURE 51. WIRING DIAGRAM FOR PCC 2300 (56 PIN ECM) (SHEET 1 OF 7)

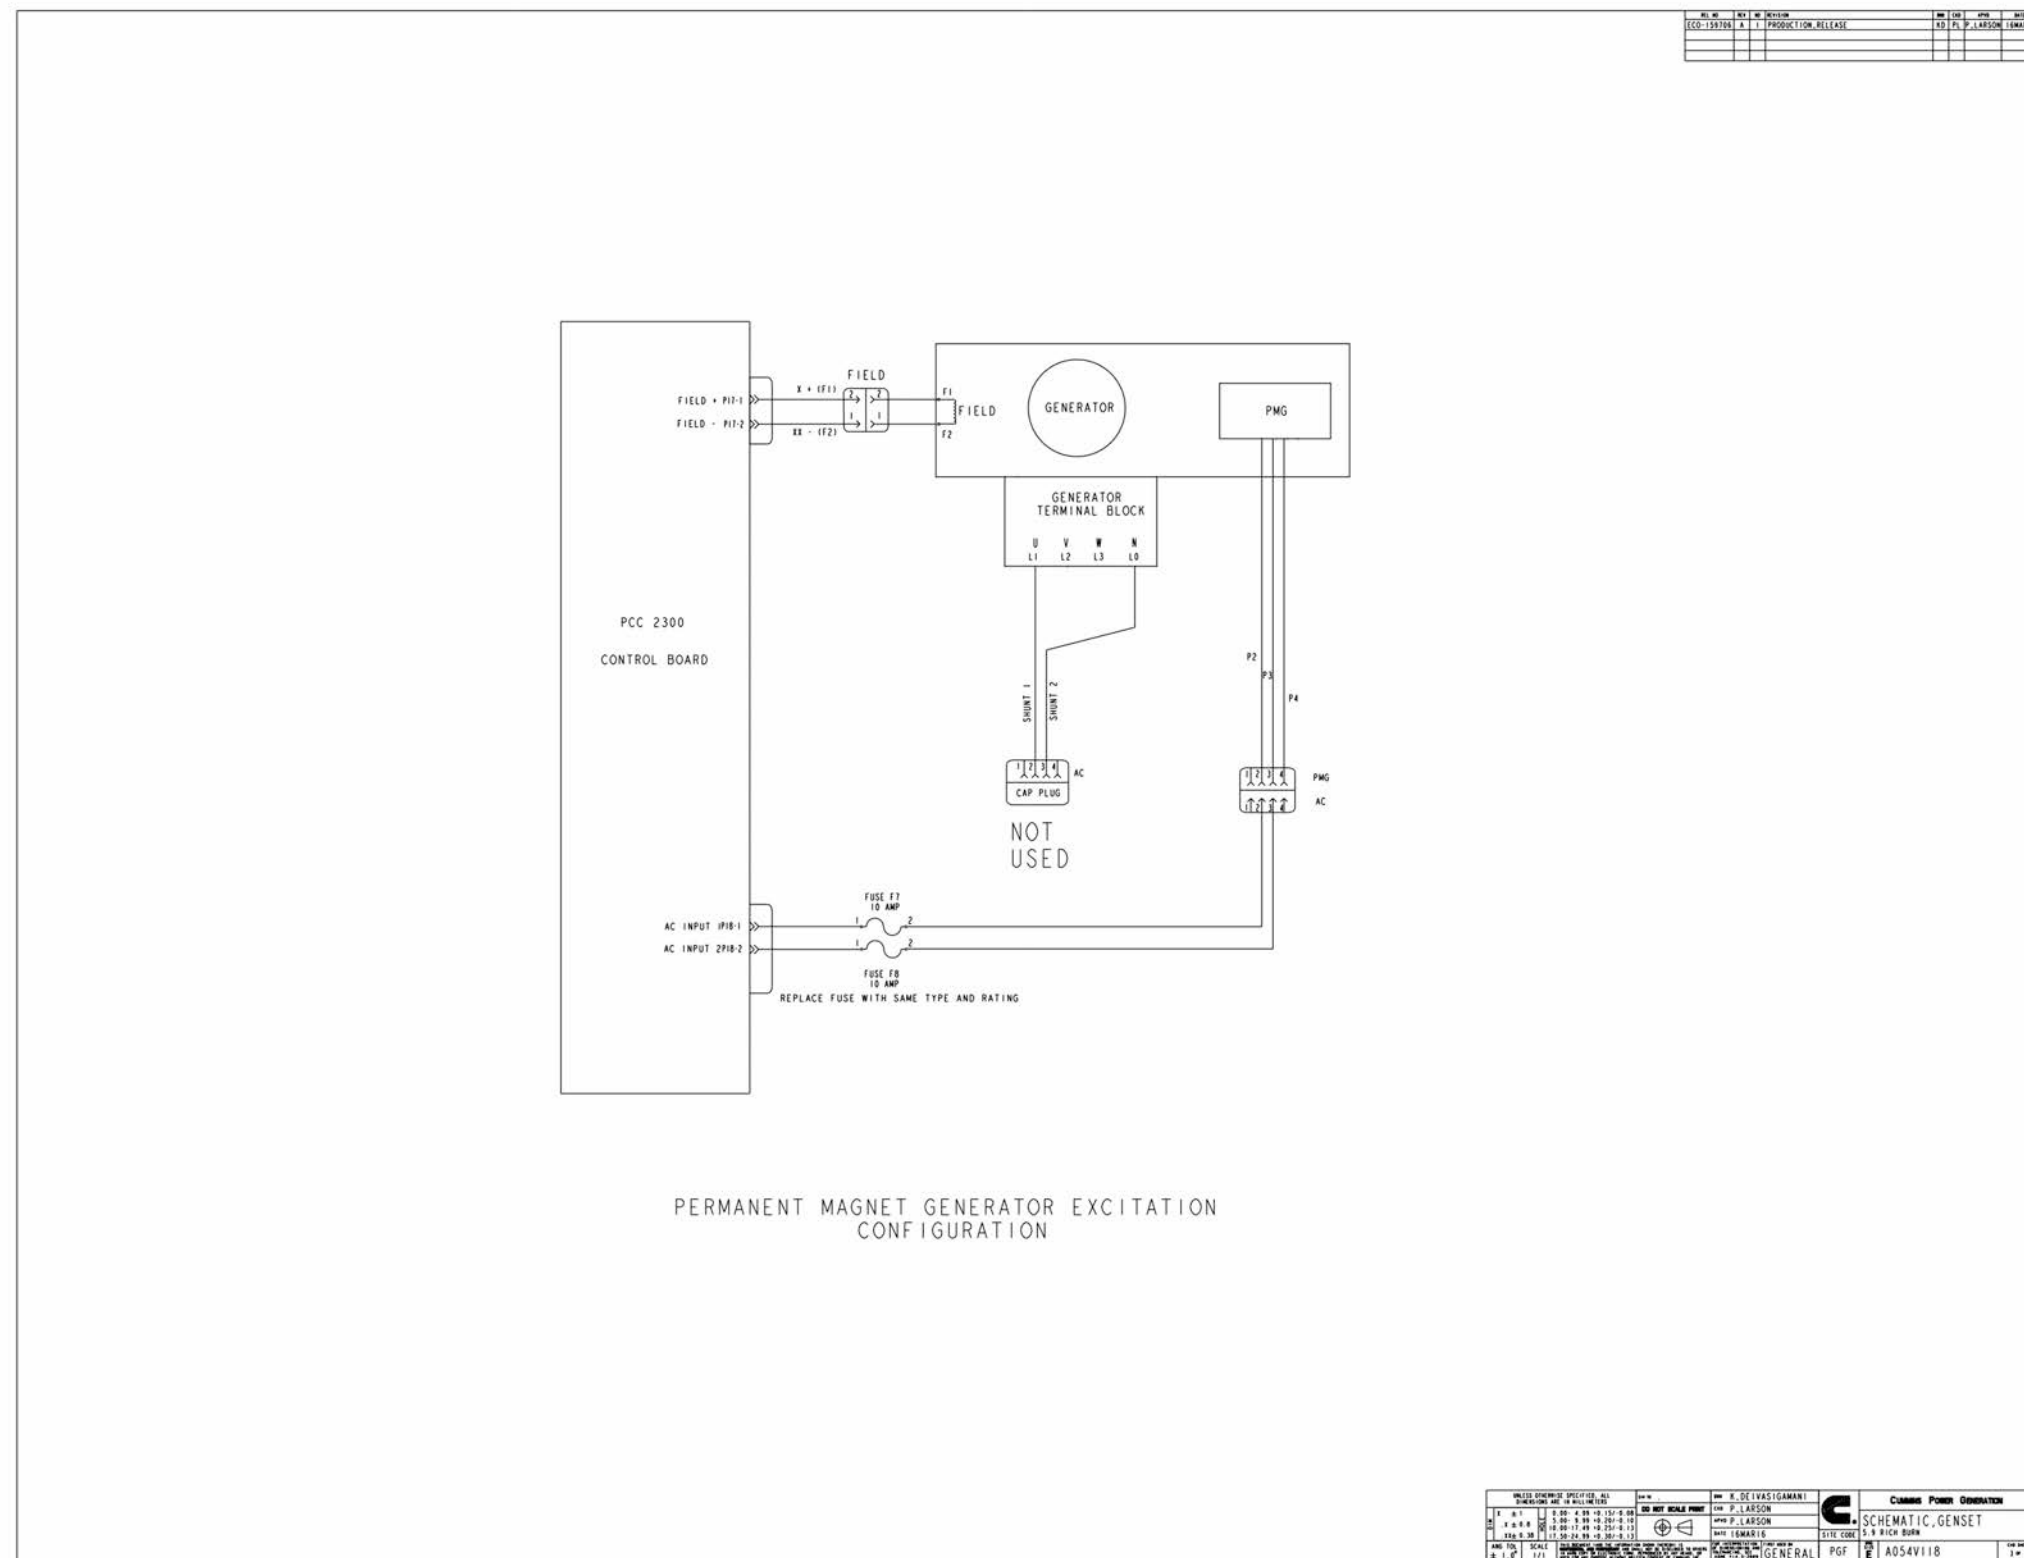


FIGURE 53. WIRING DIAGRAM FOR PCC 2300 (56 PIN ECM) (SHEET 3 OF 7)

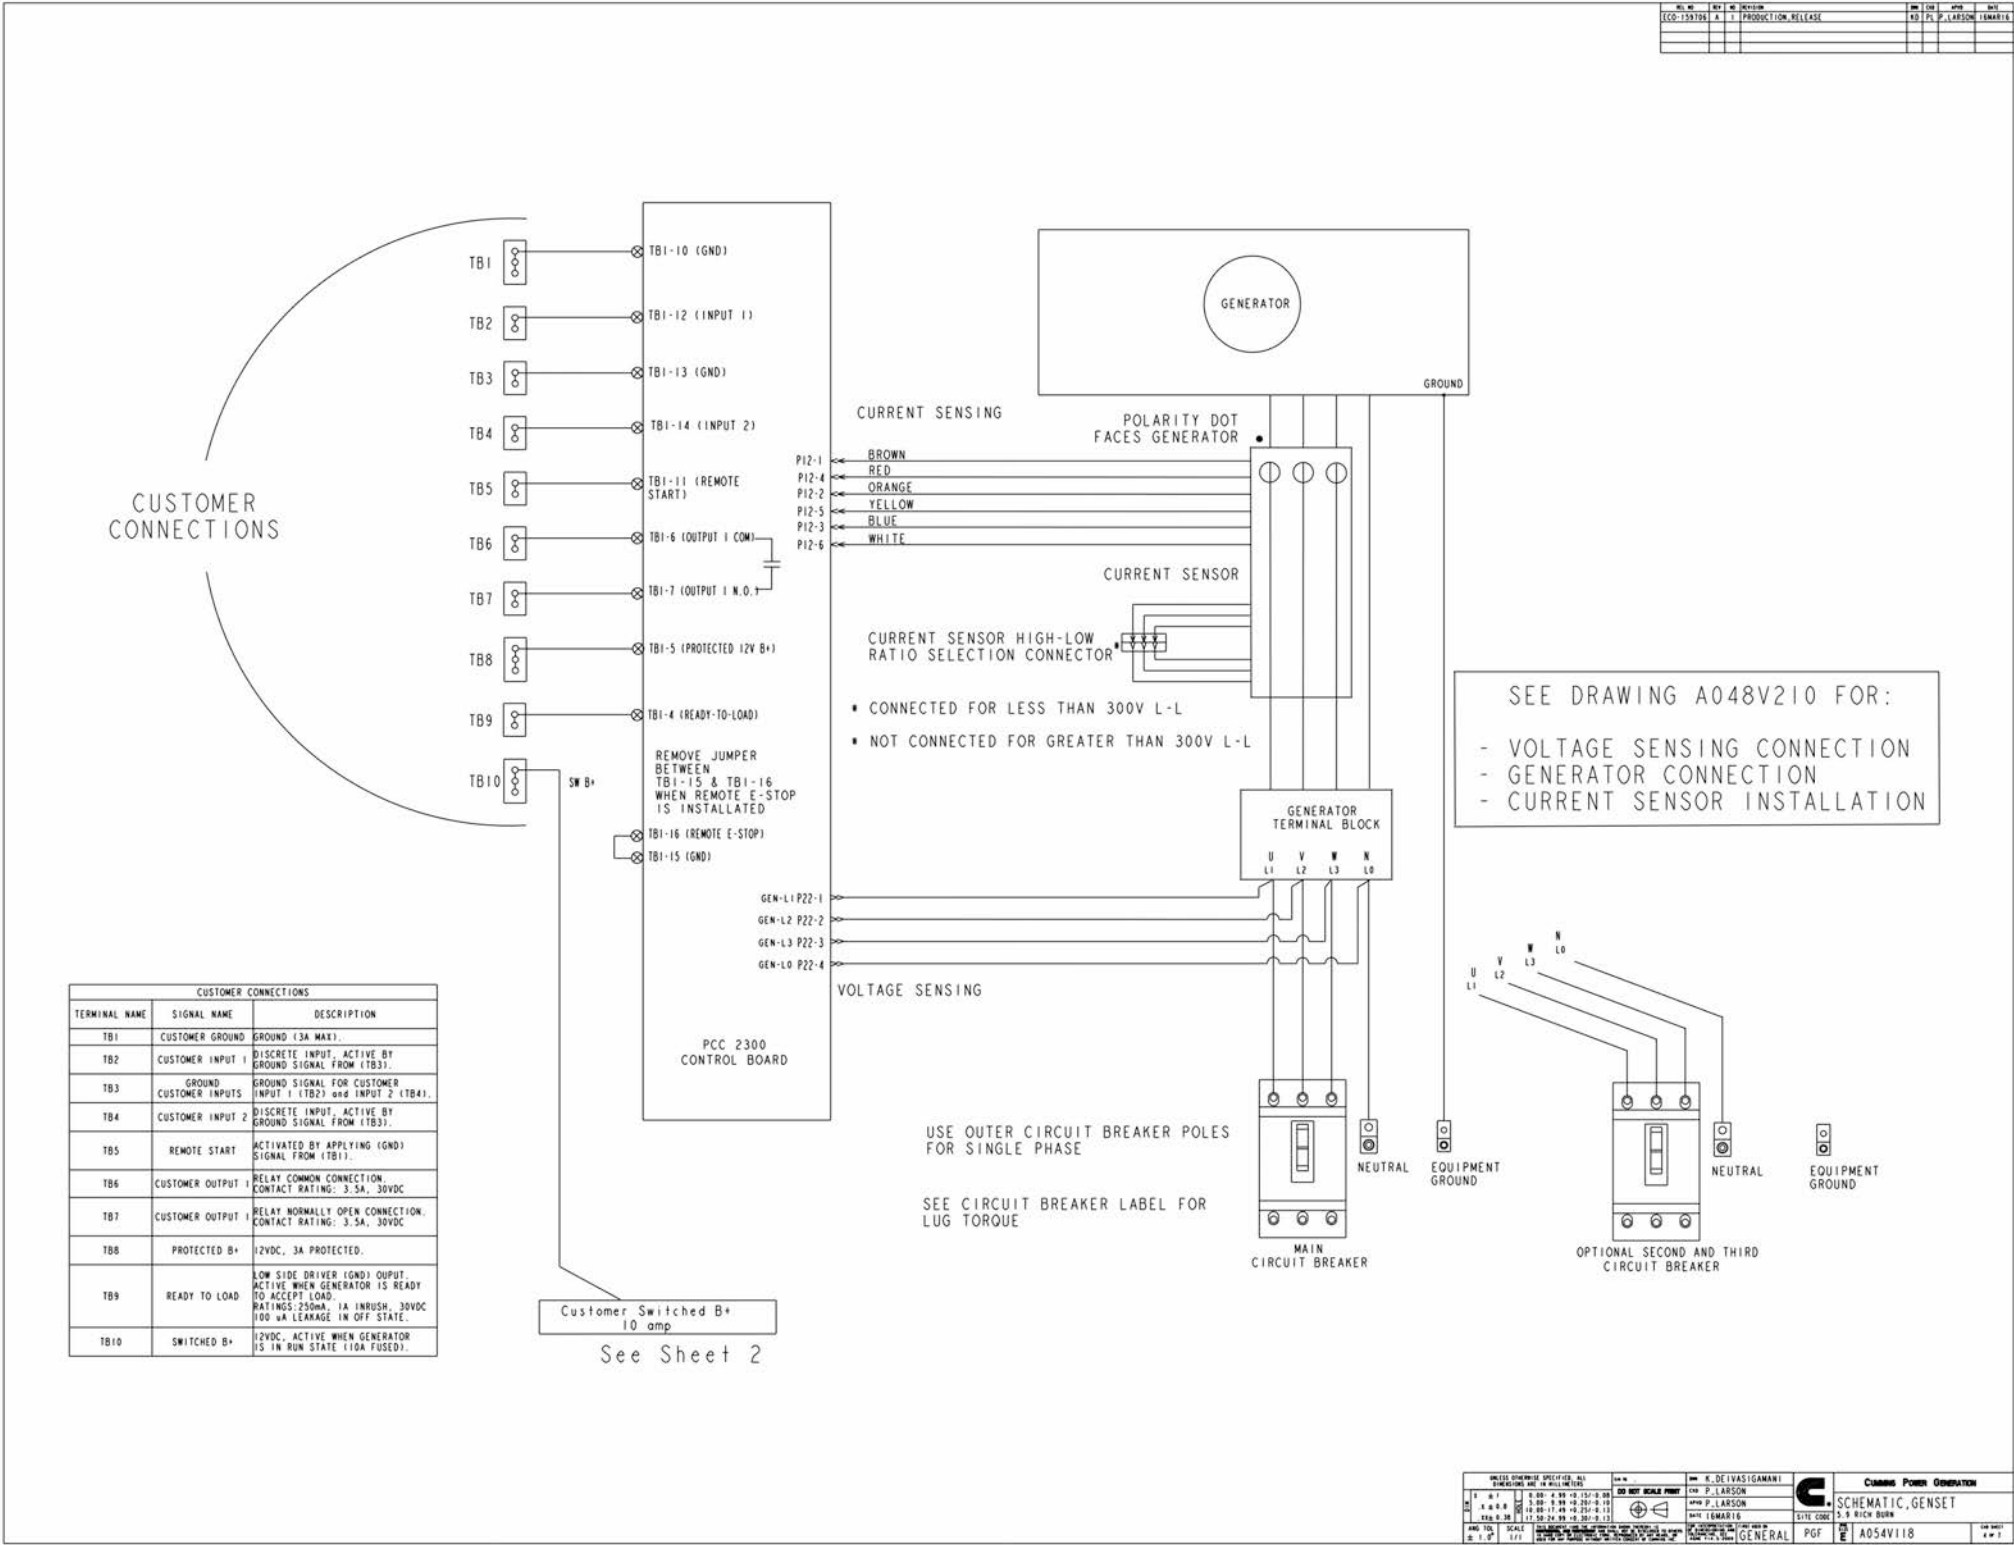


FIGURE 54. WIRING DIAGRAM FOR PCC 2300 (56 PIN ECM) (SHEET 4 OF 7)

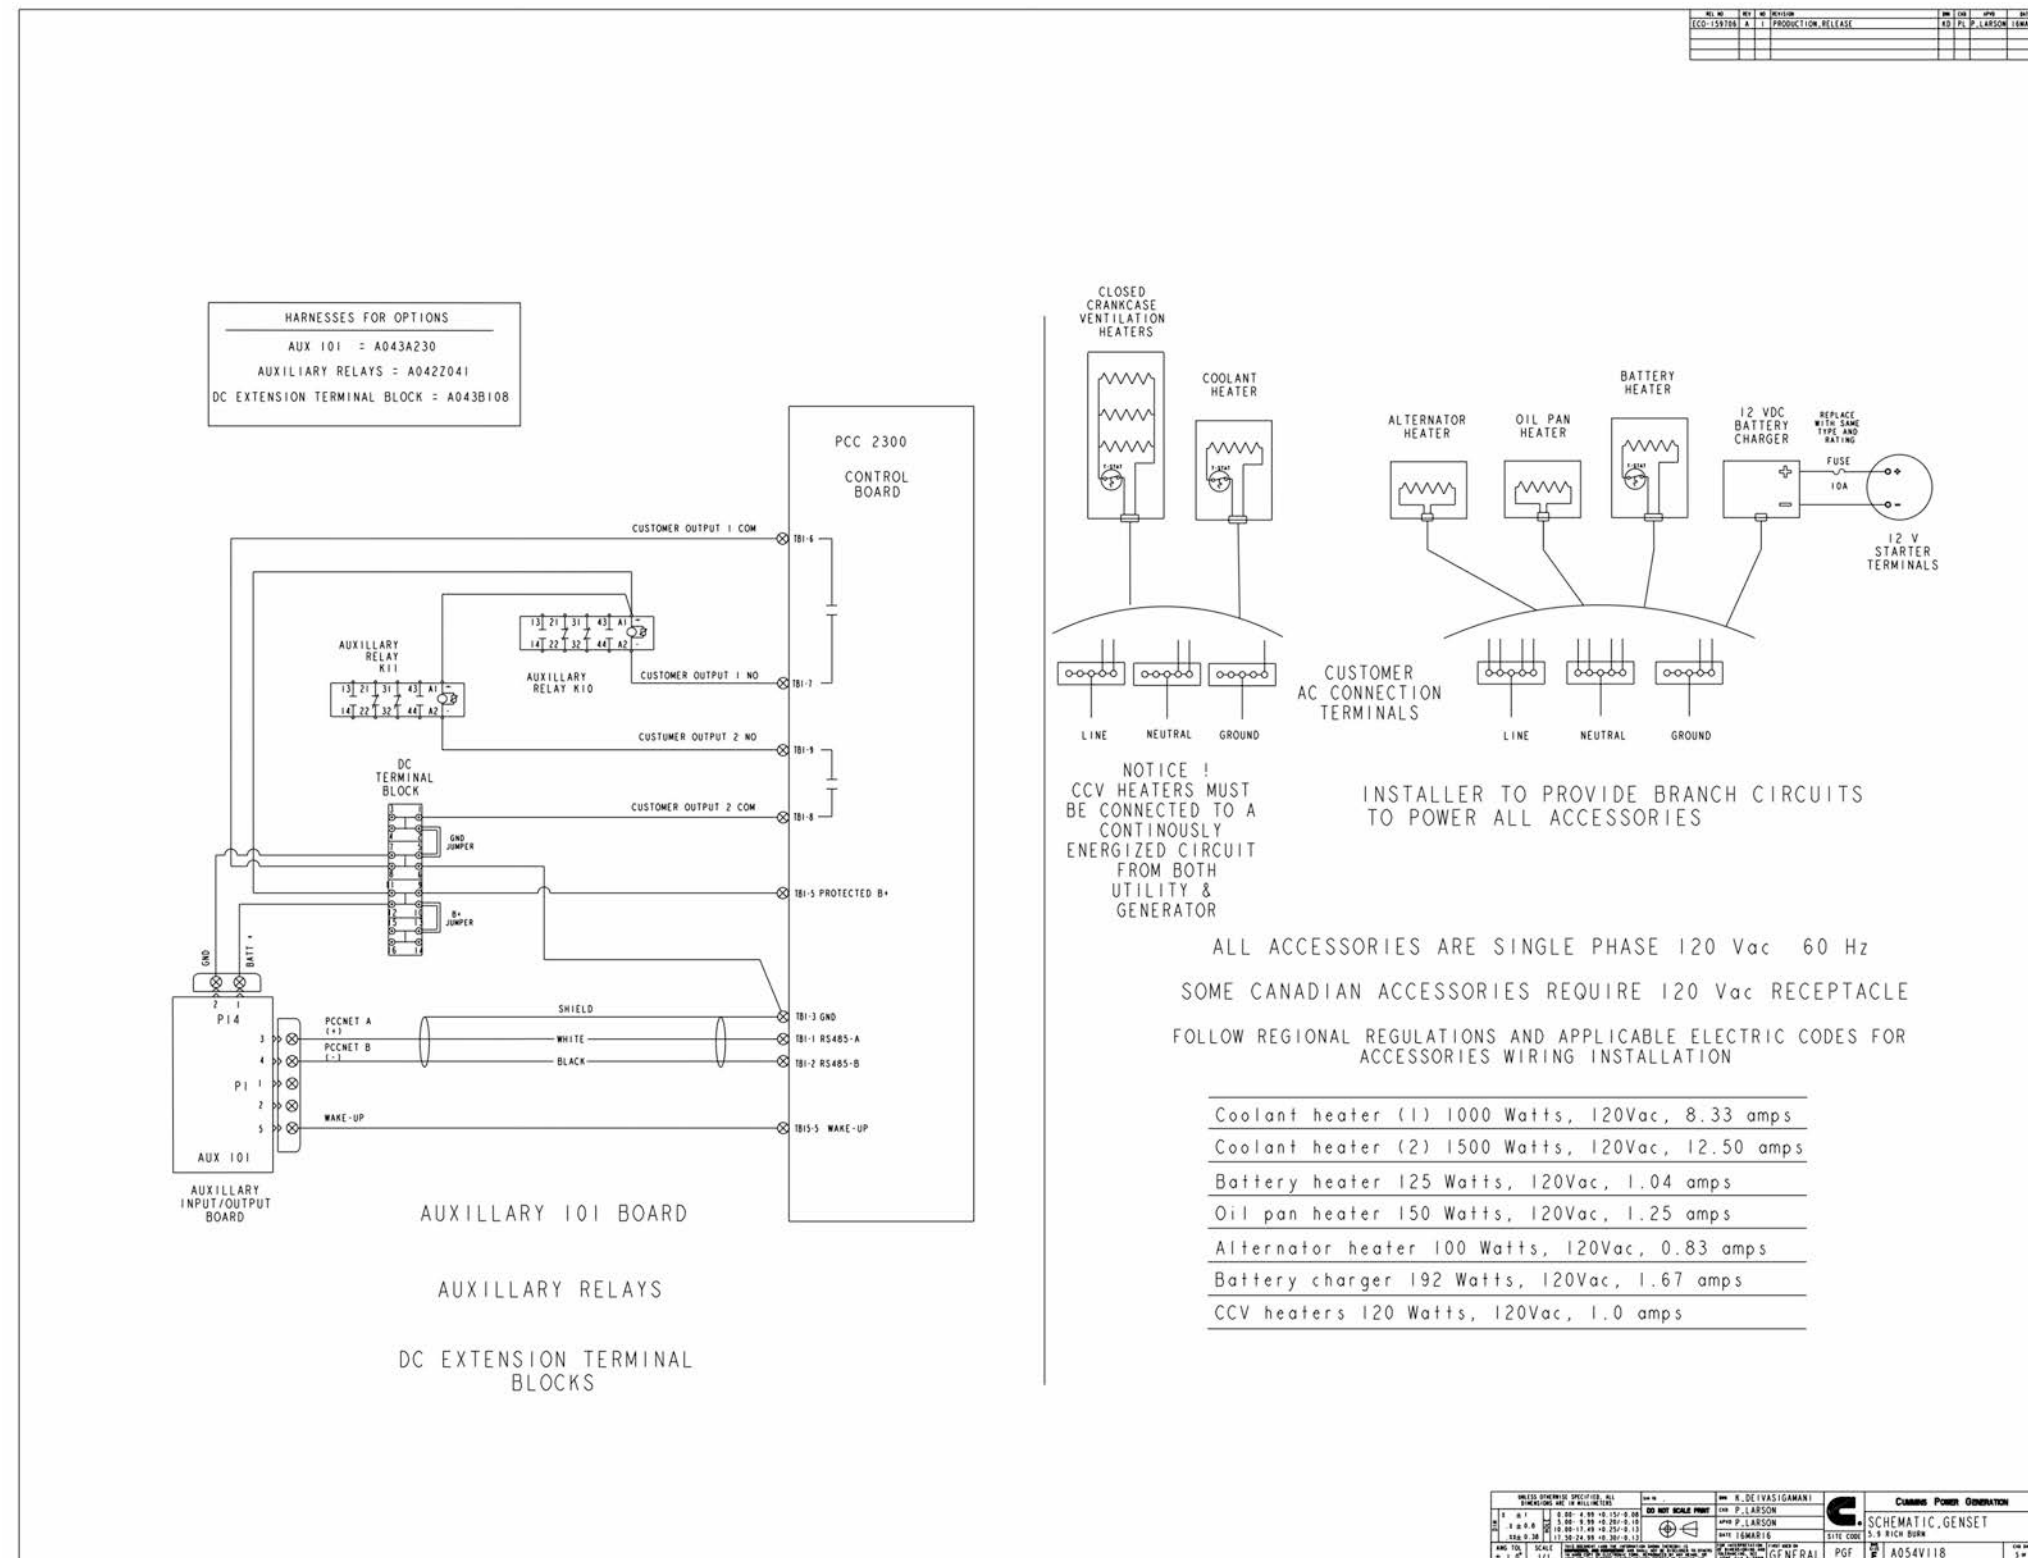


FIGURE 55. WIRING DIAGRAM FOR PCC 2300 (56 PIN ECM) (SHEET 5 OF 7)

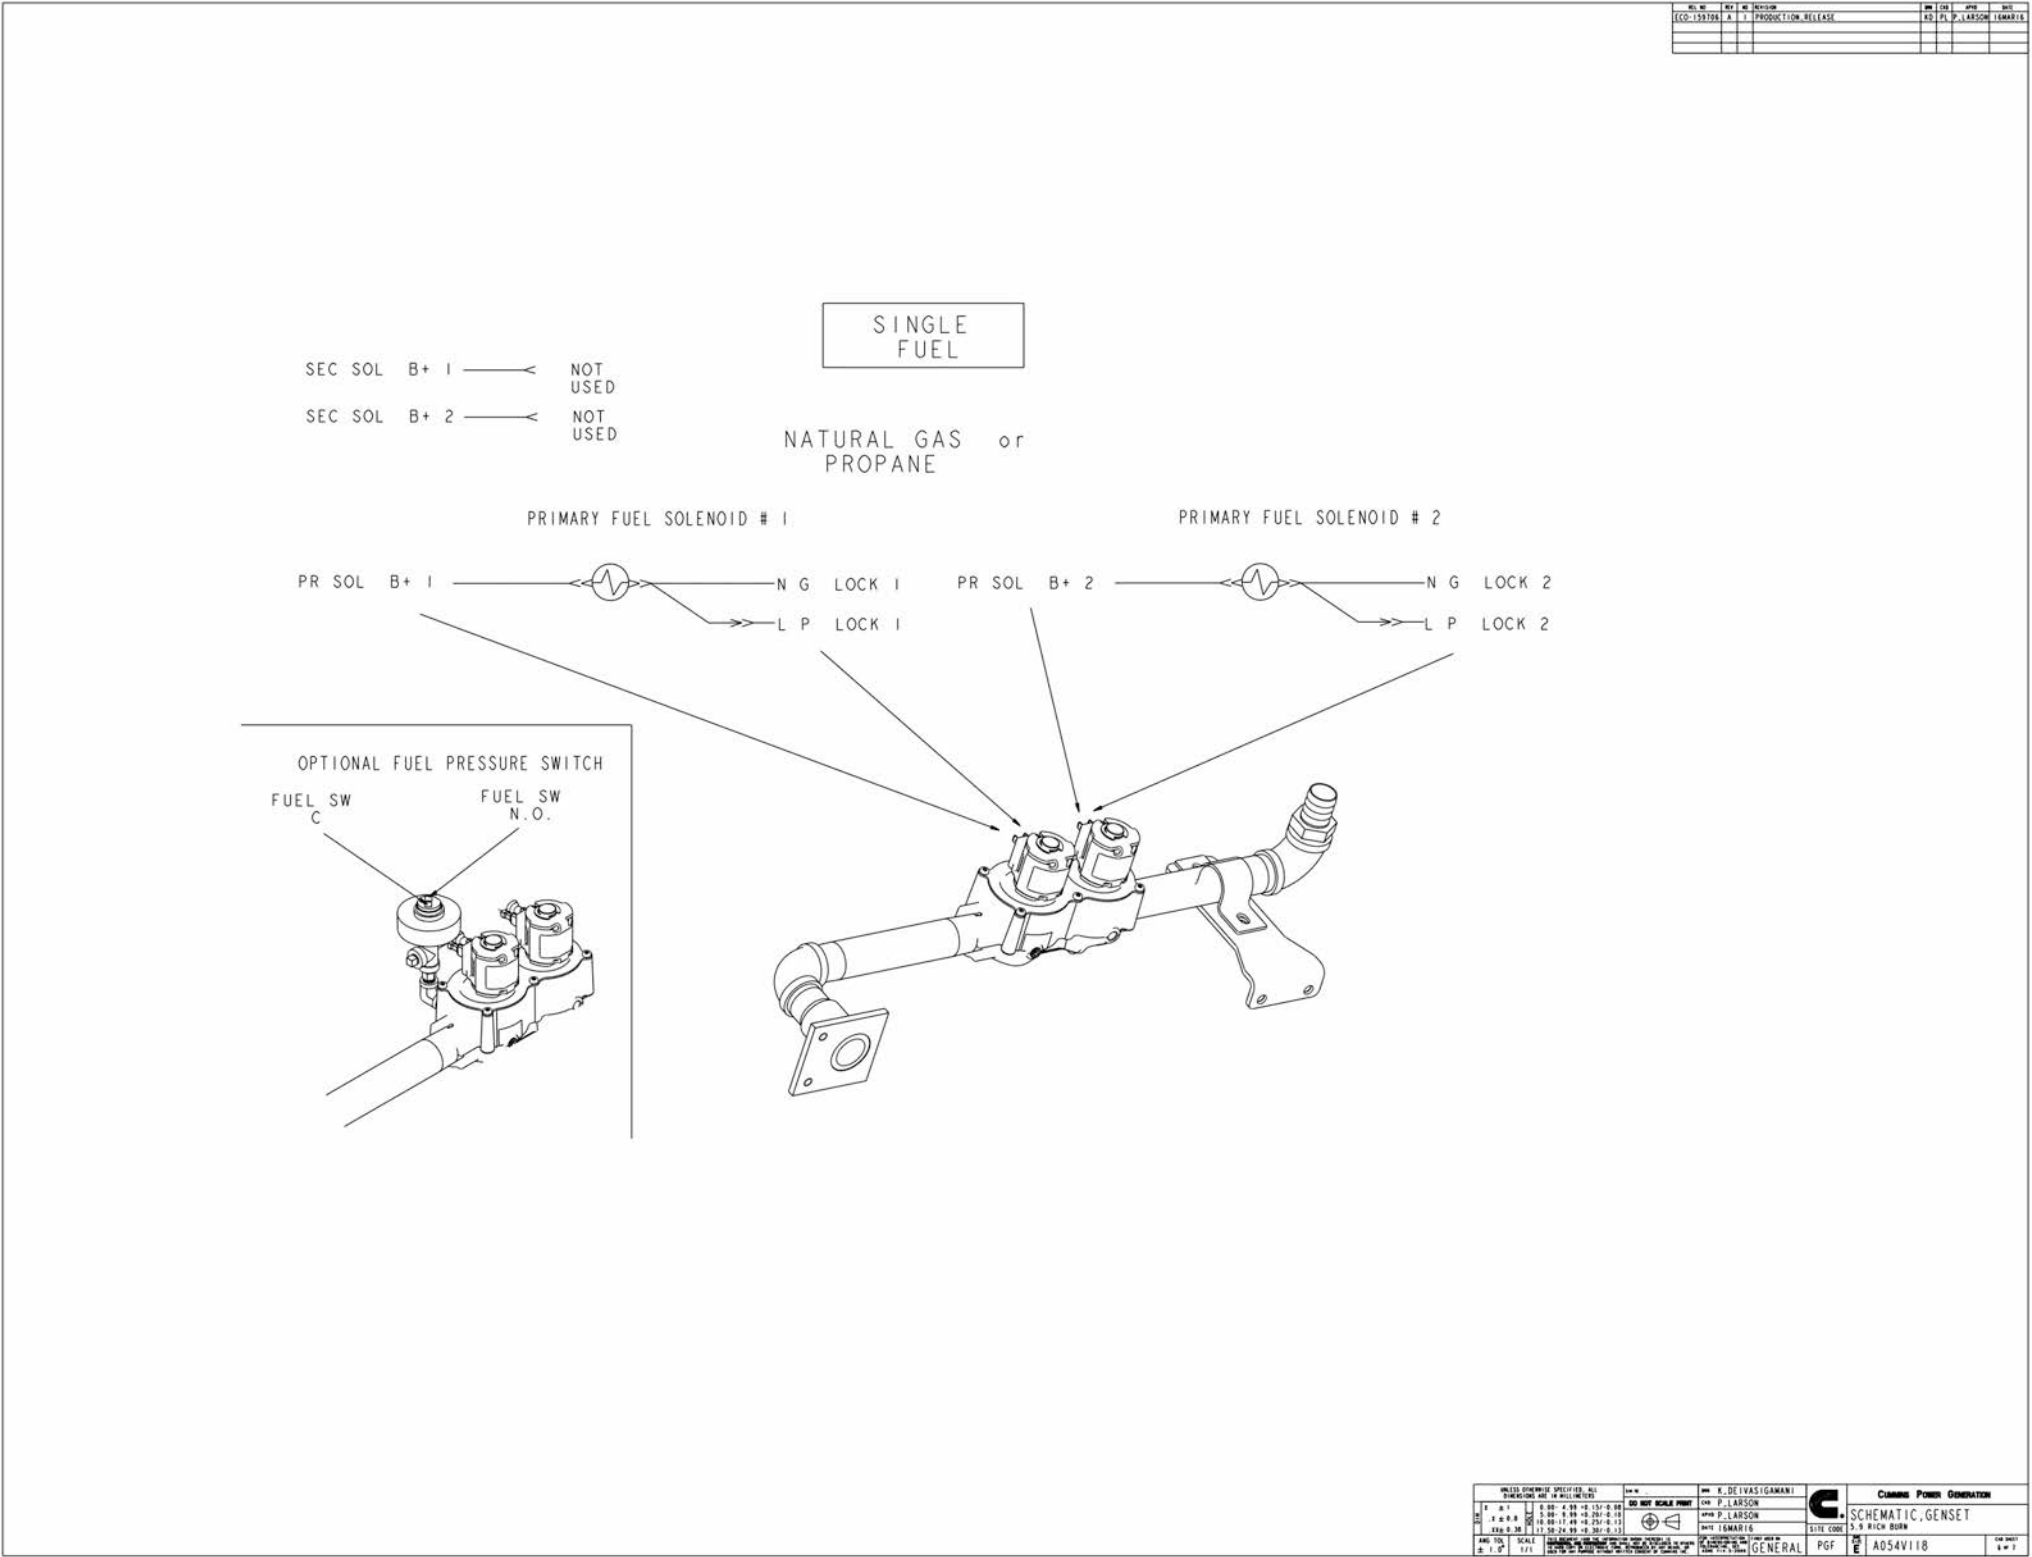


FIGURE 56. WIRING DIAGRAM FOR PCC 2300 (56 PIN ECM) (SHEET 6 OF 7)

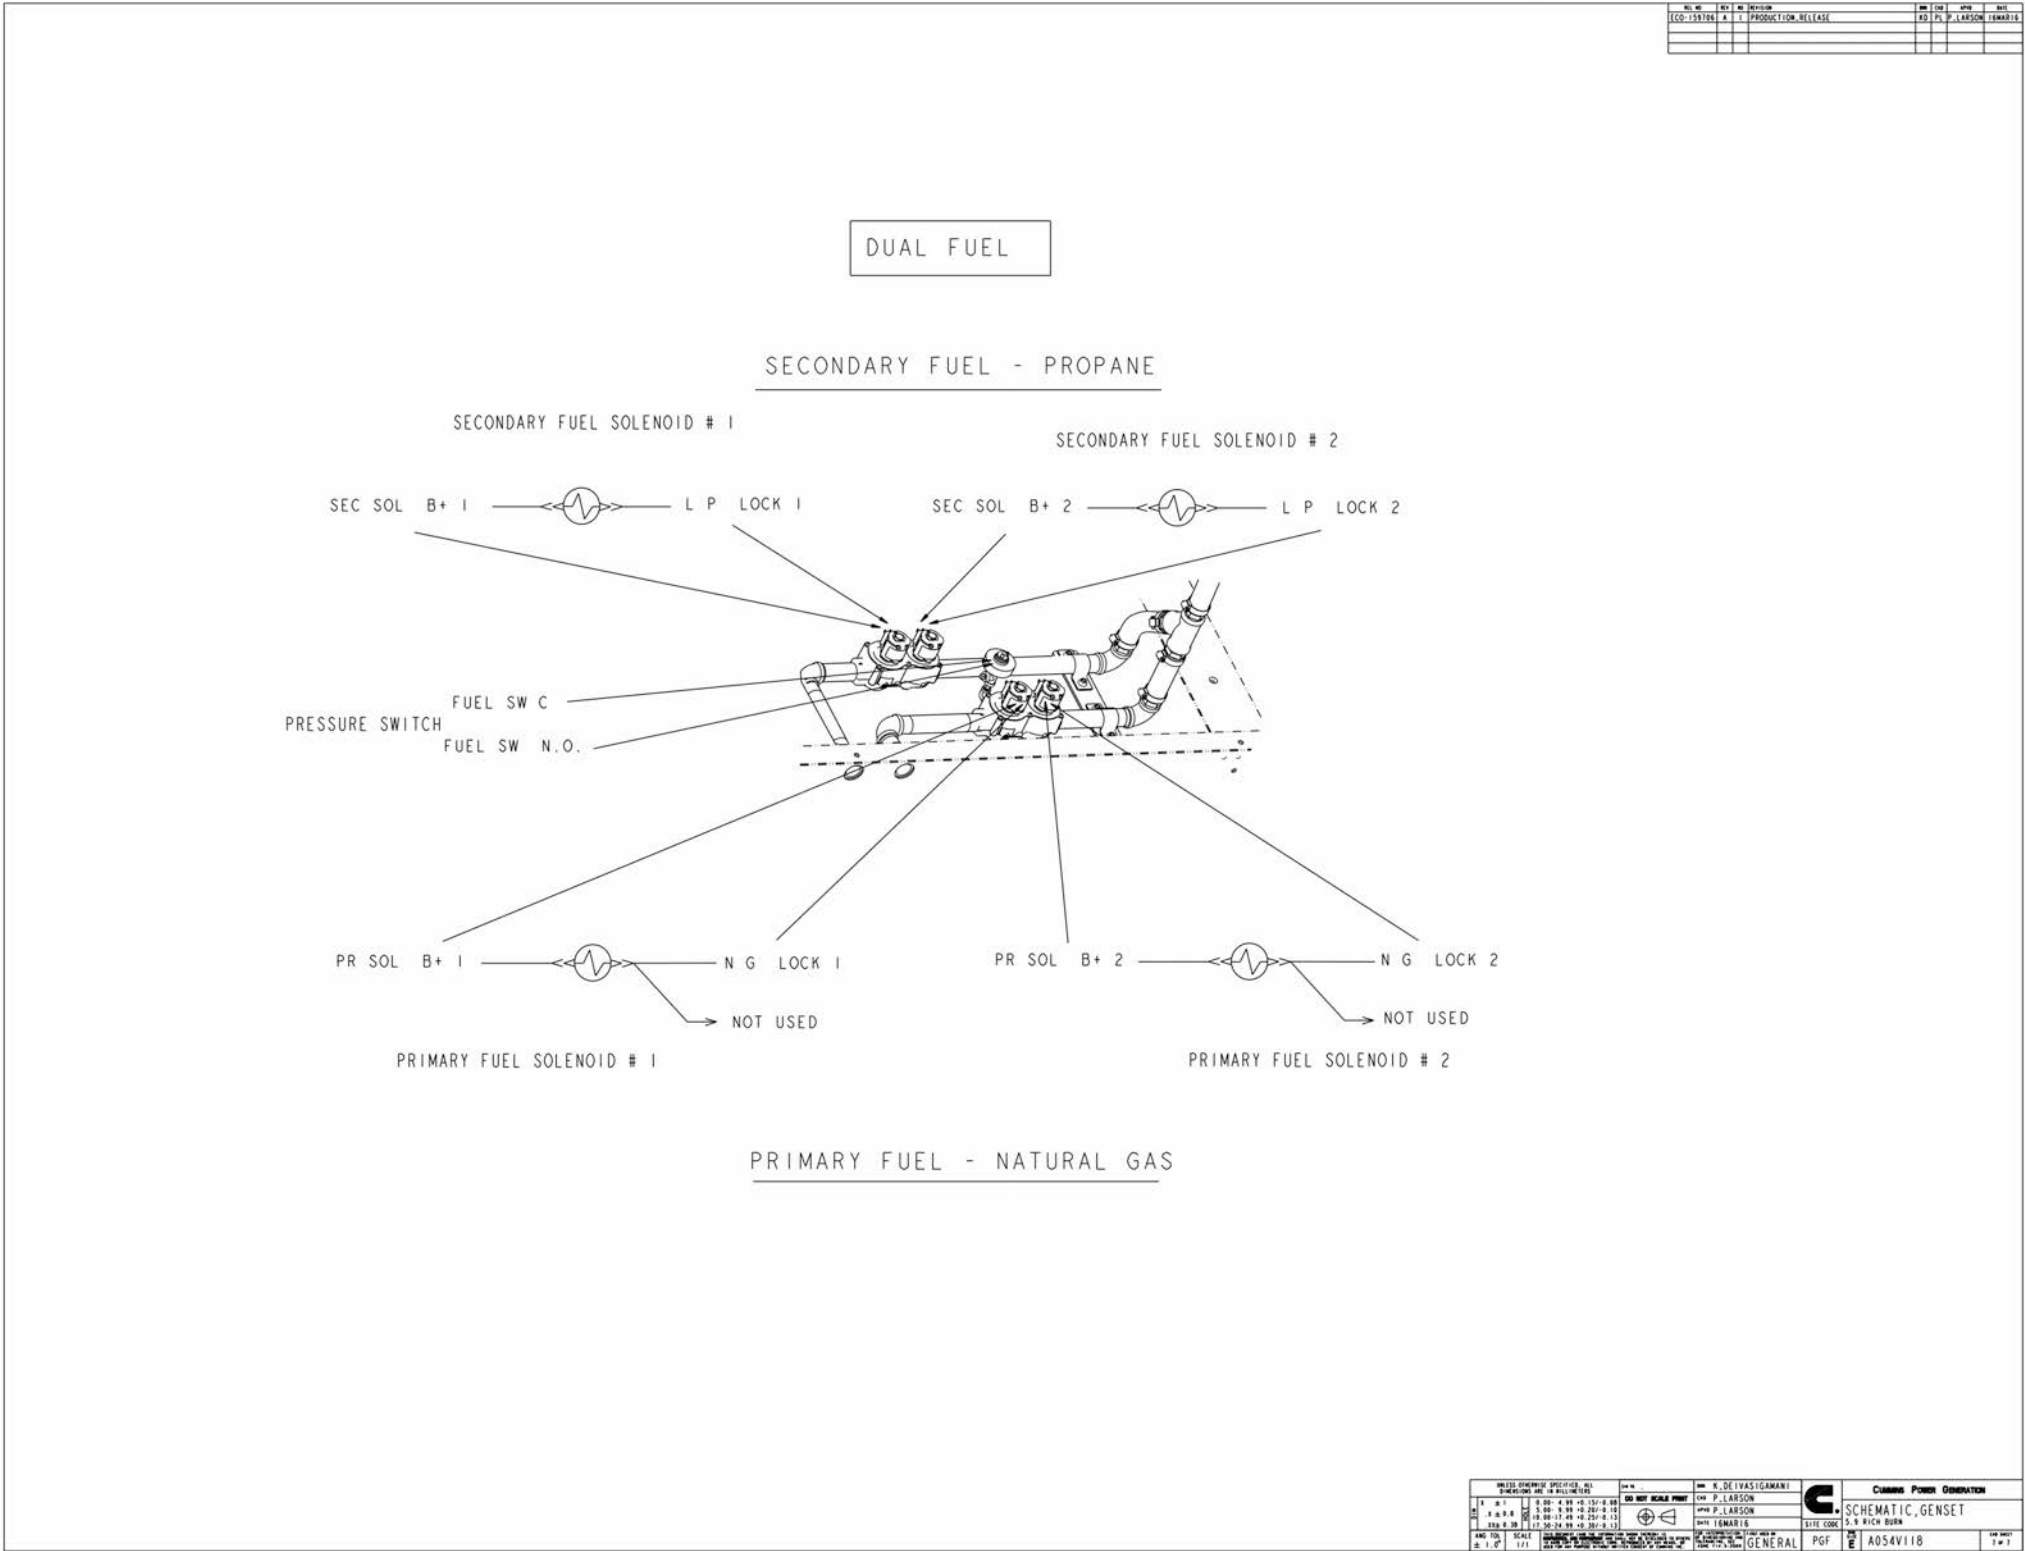


FIGURE 57. WIRING DIAGRAM FOR PCC 2300 (56 PIN ECM) (SHEET 7 OF 7)

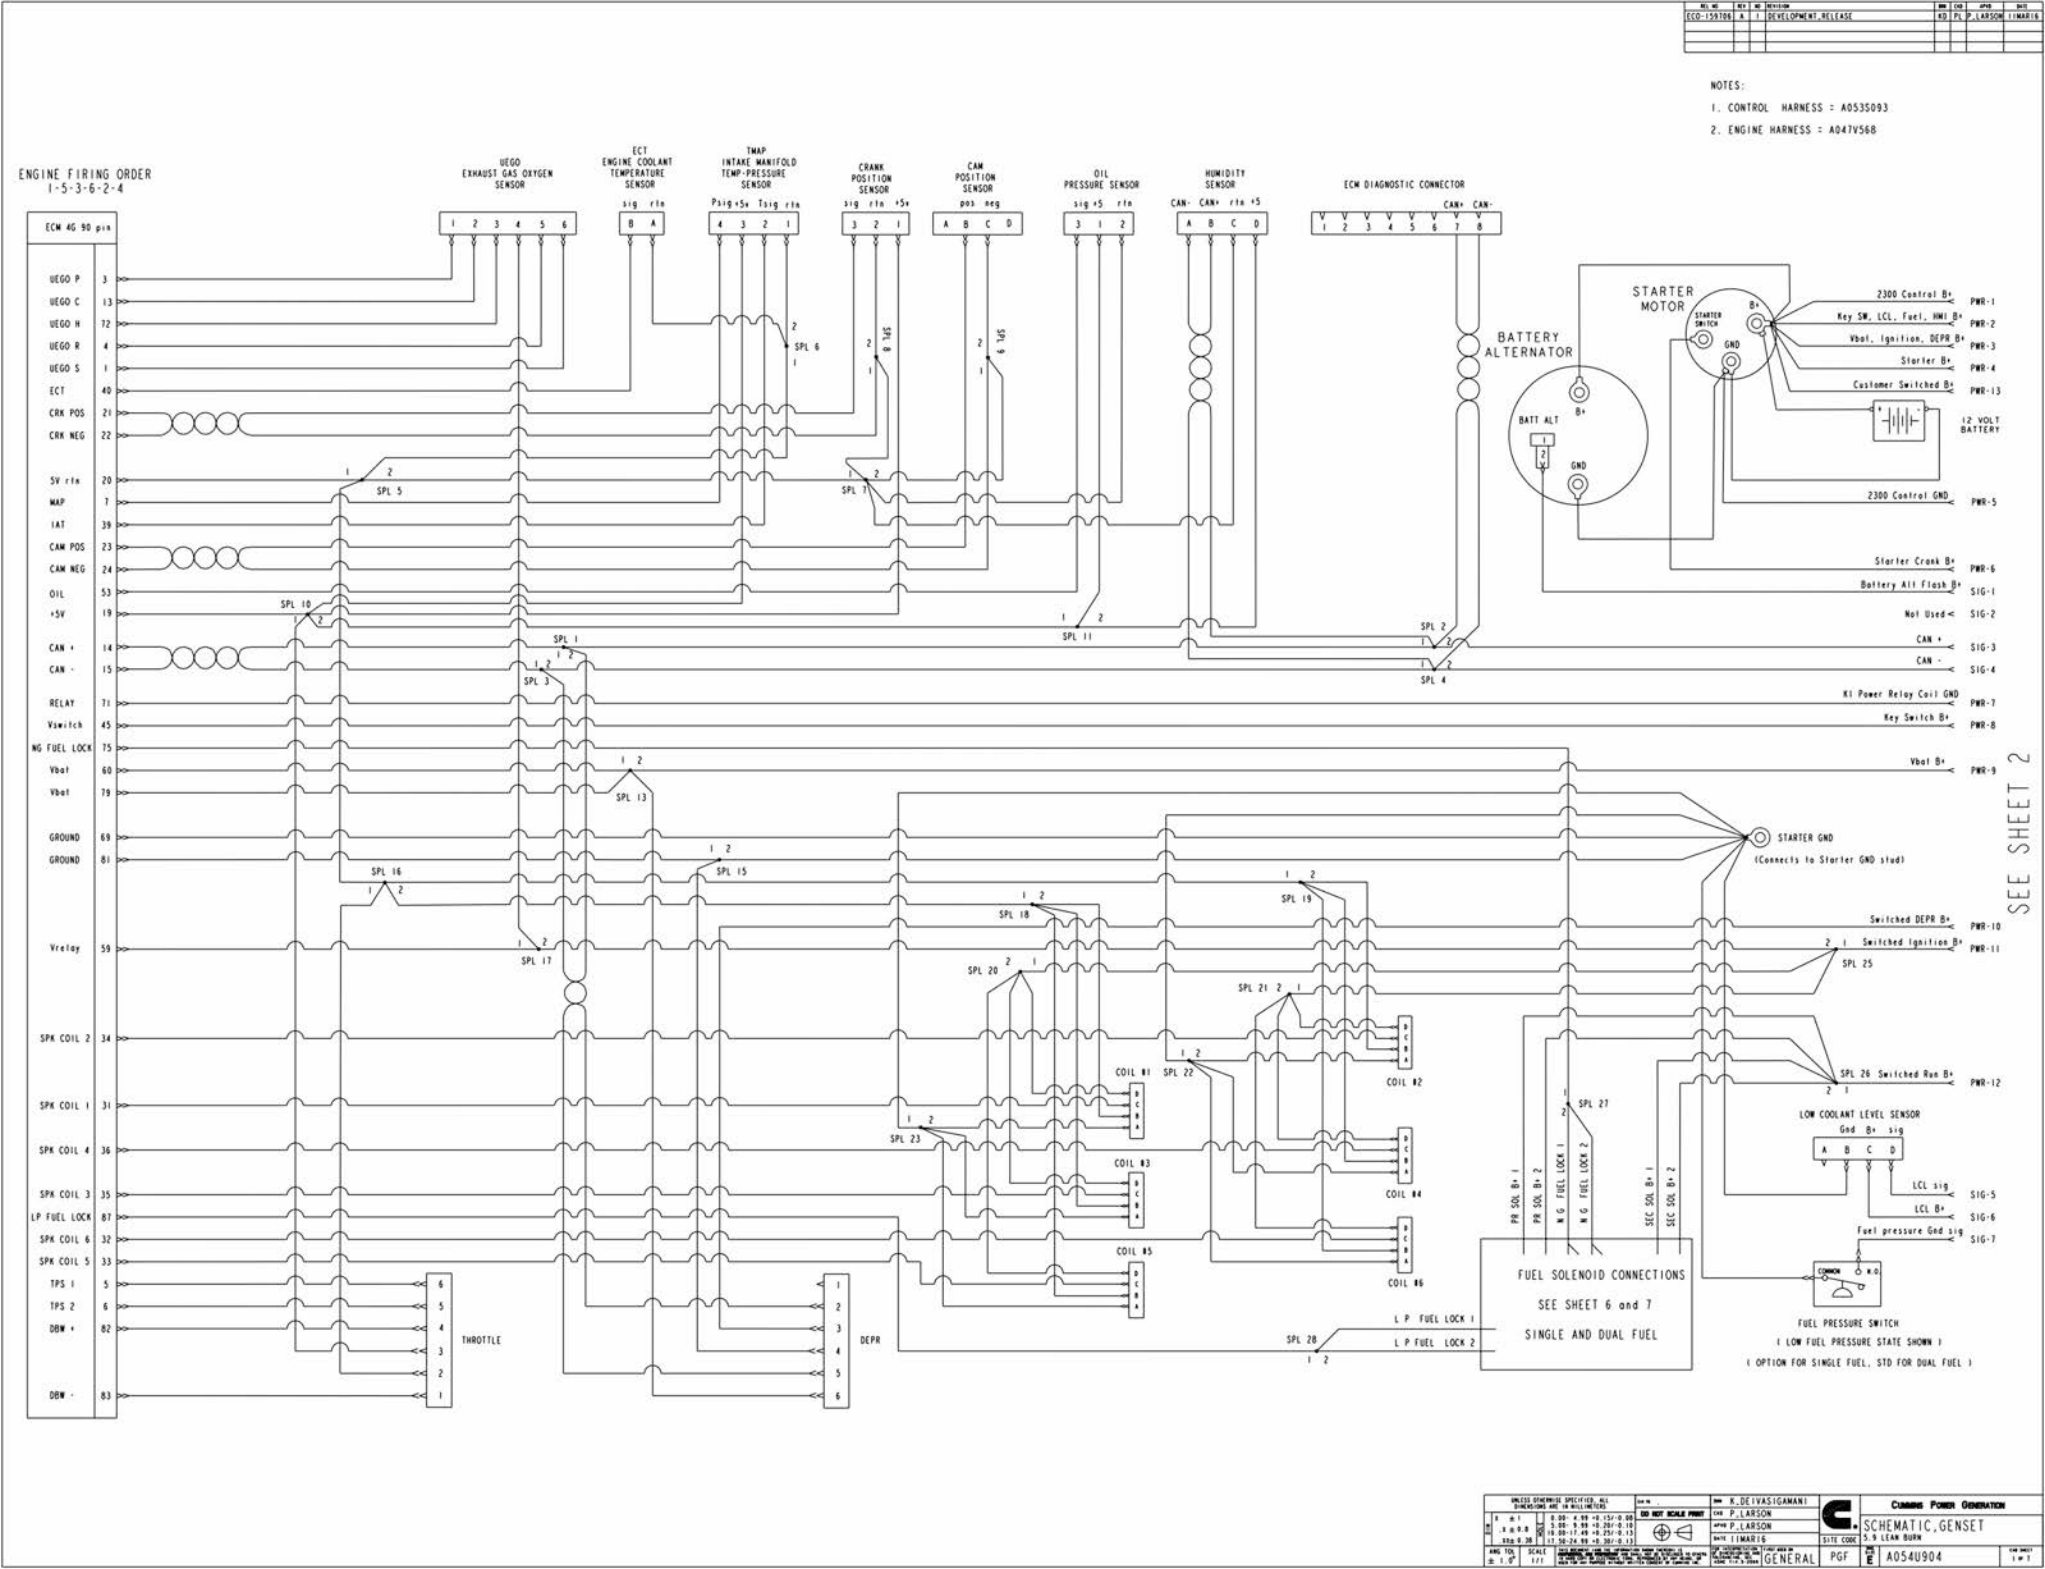


FIGURE 58. WIRING DIAGRAM FOR PCC 2300 (90 PIN ECM) (SHEET 1 OF 7)

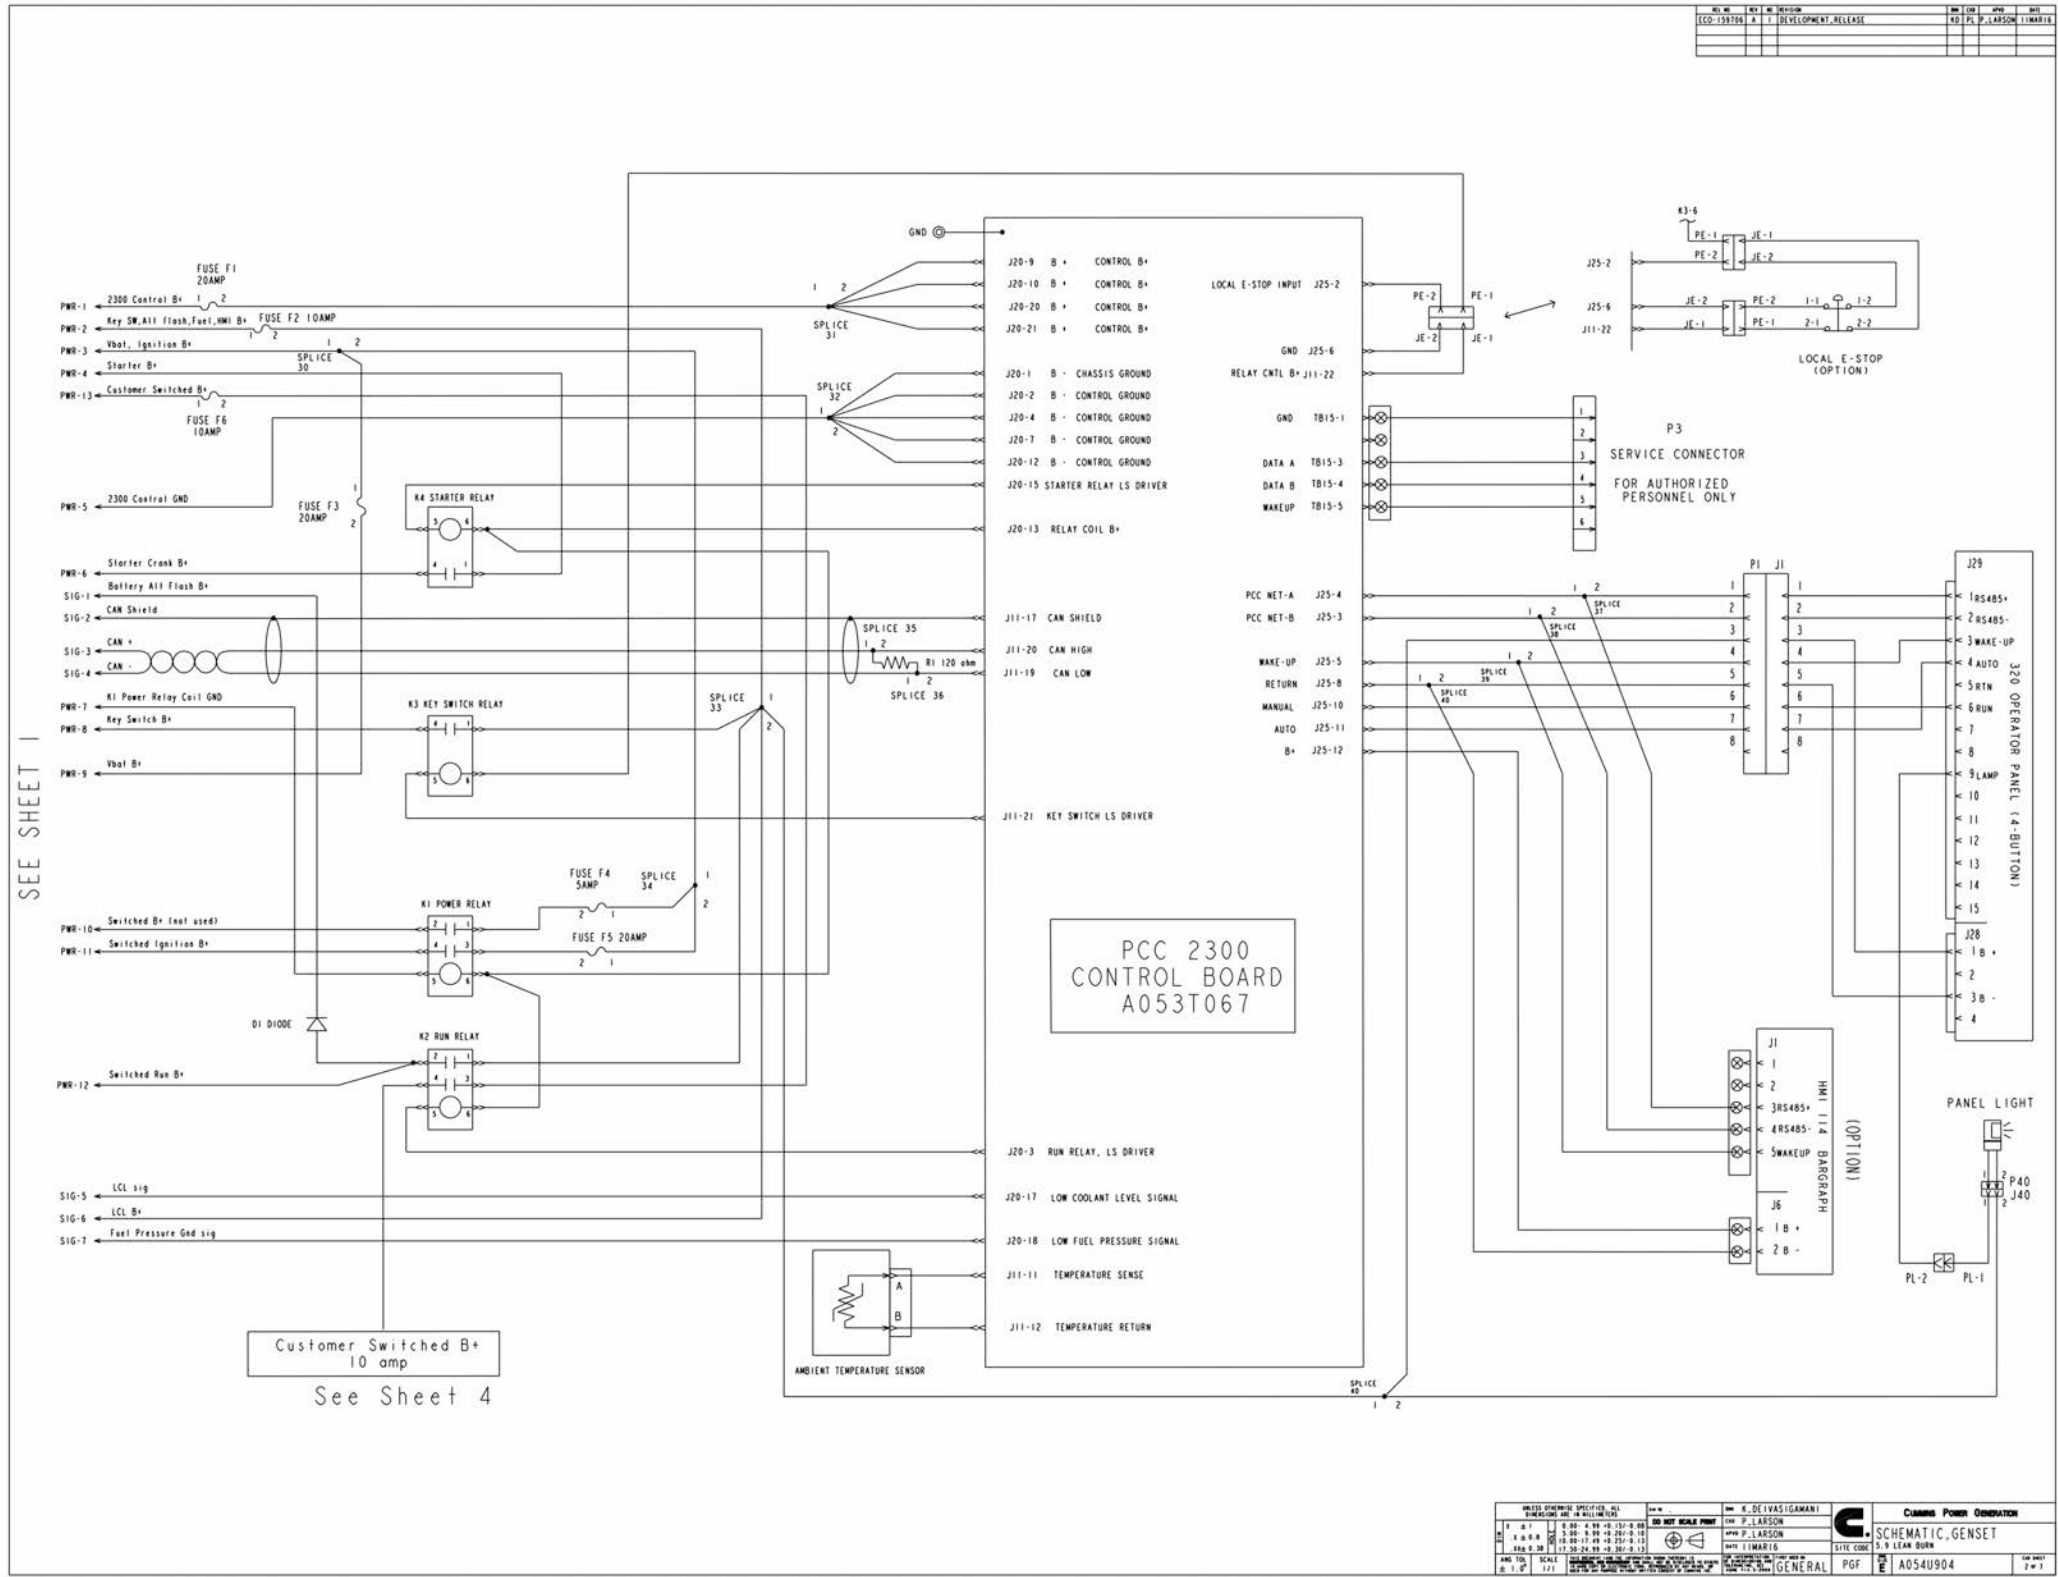
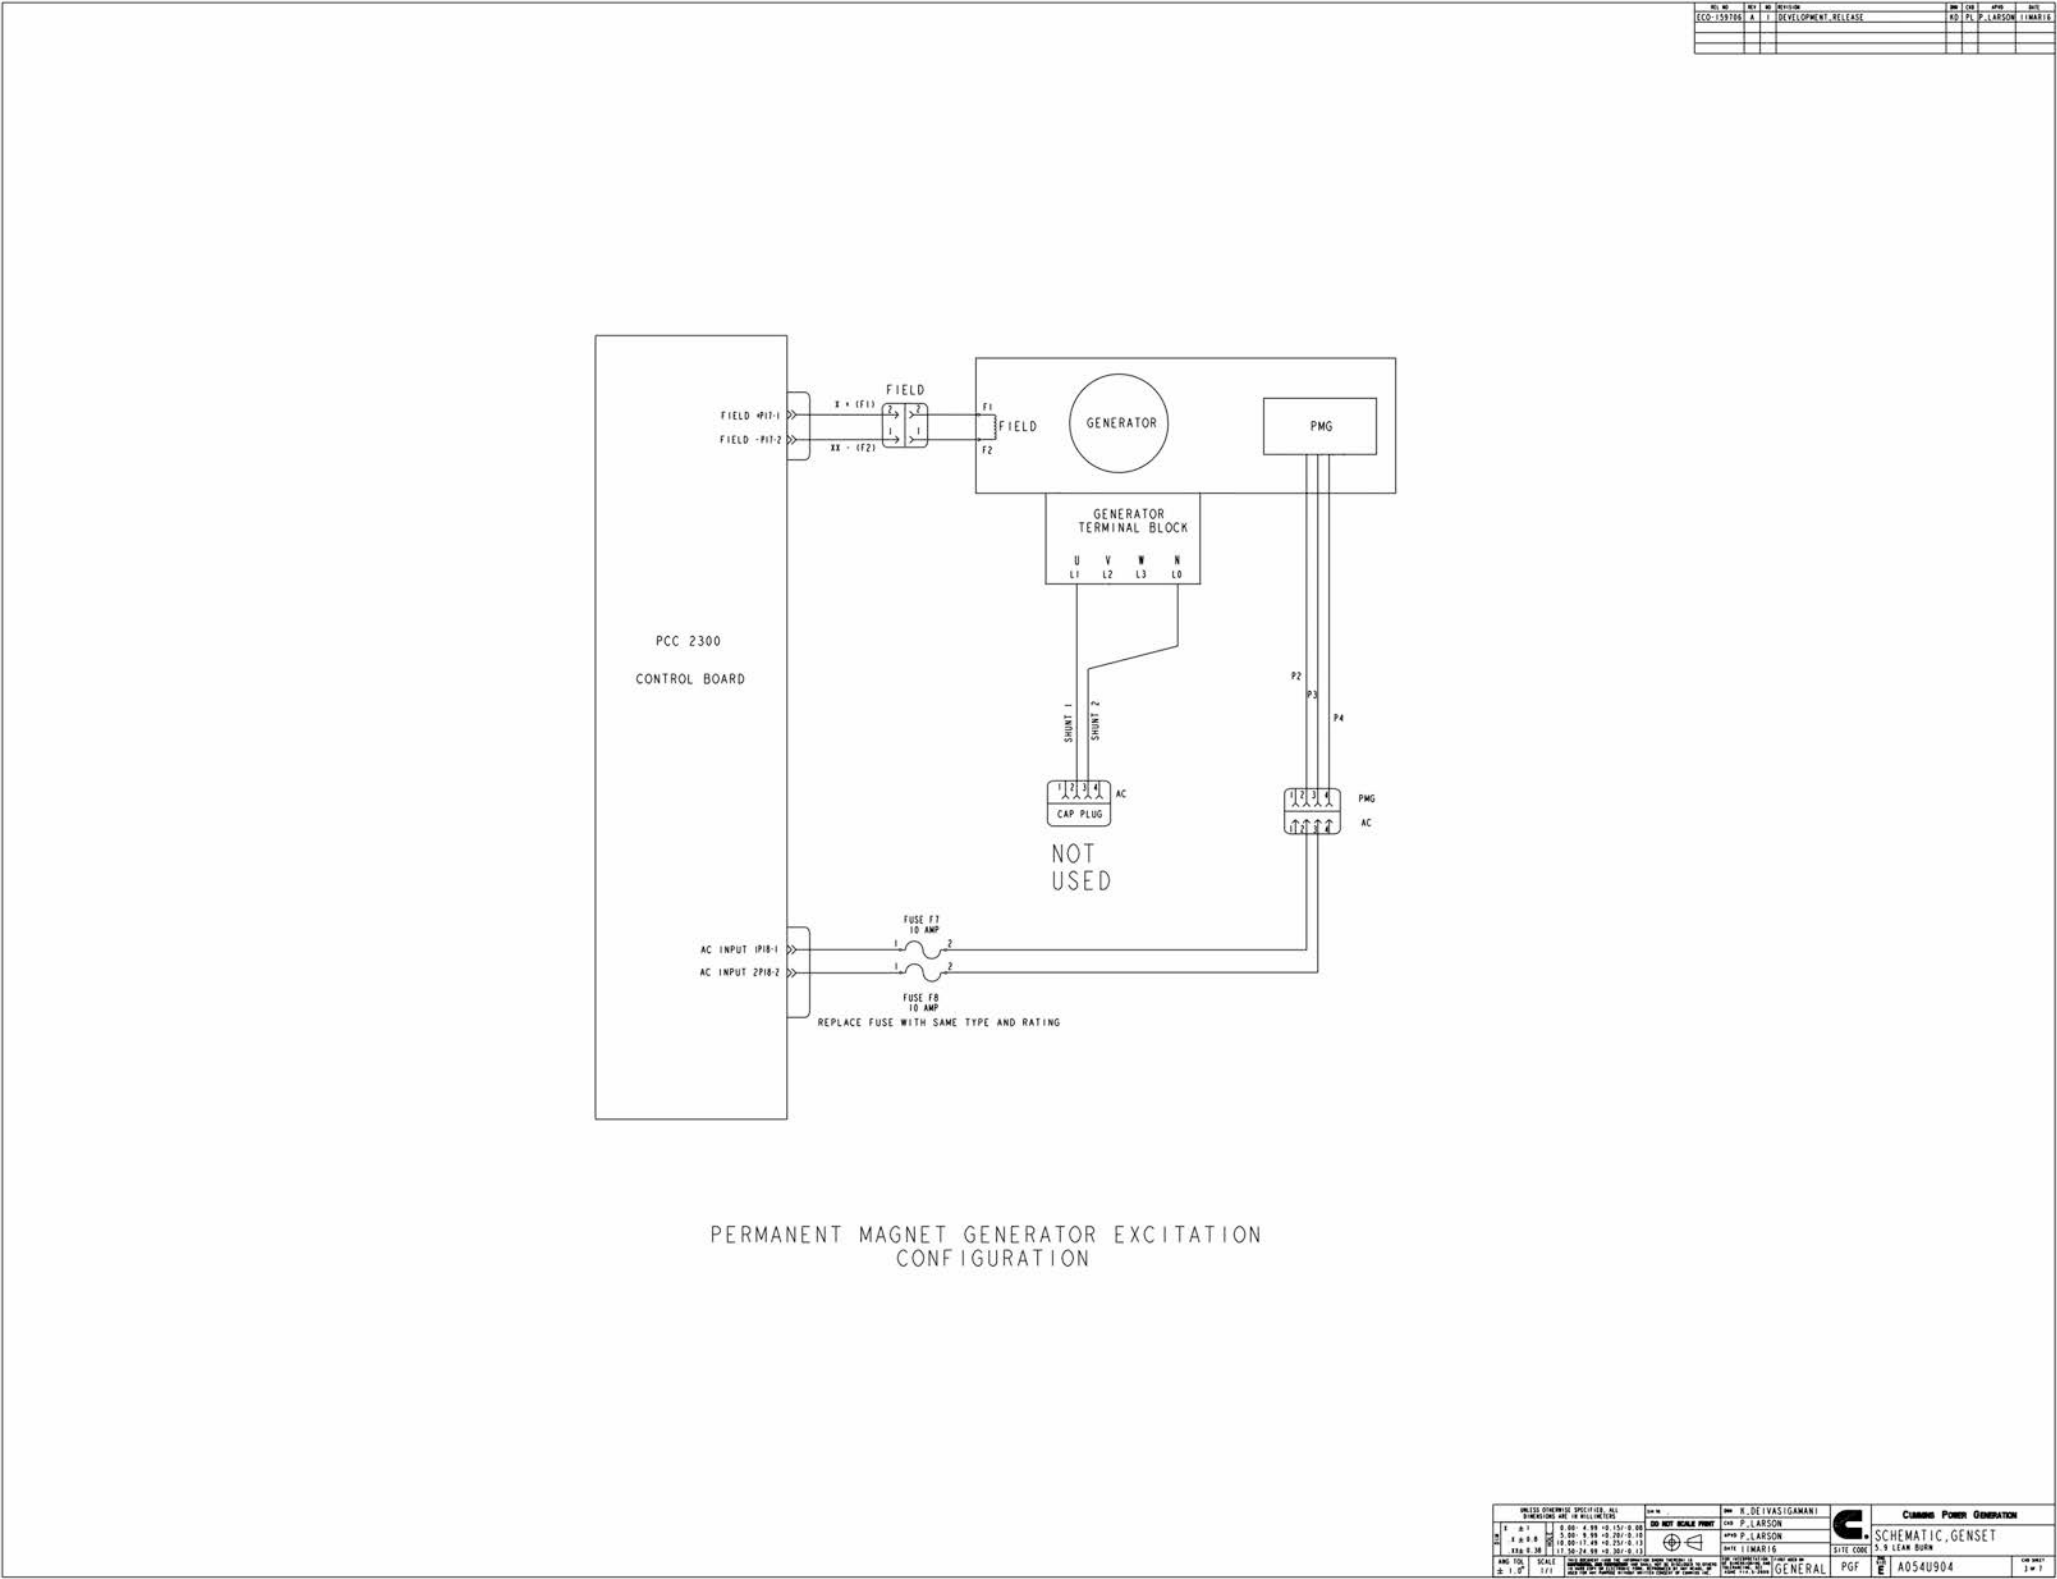


FIGURE 59. WIRING DIAGRAM FOR PCC 2300 (90 PIN ECM) (SHEET 2 OF 7)



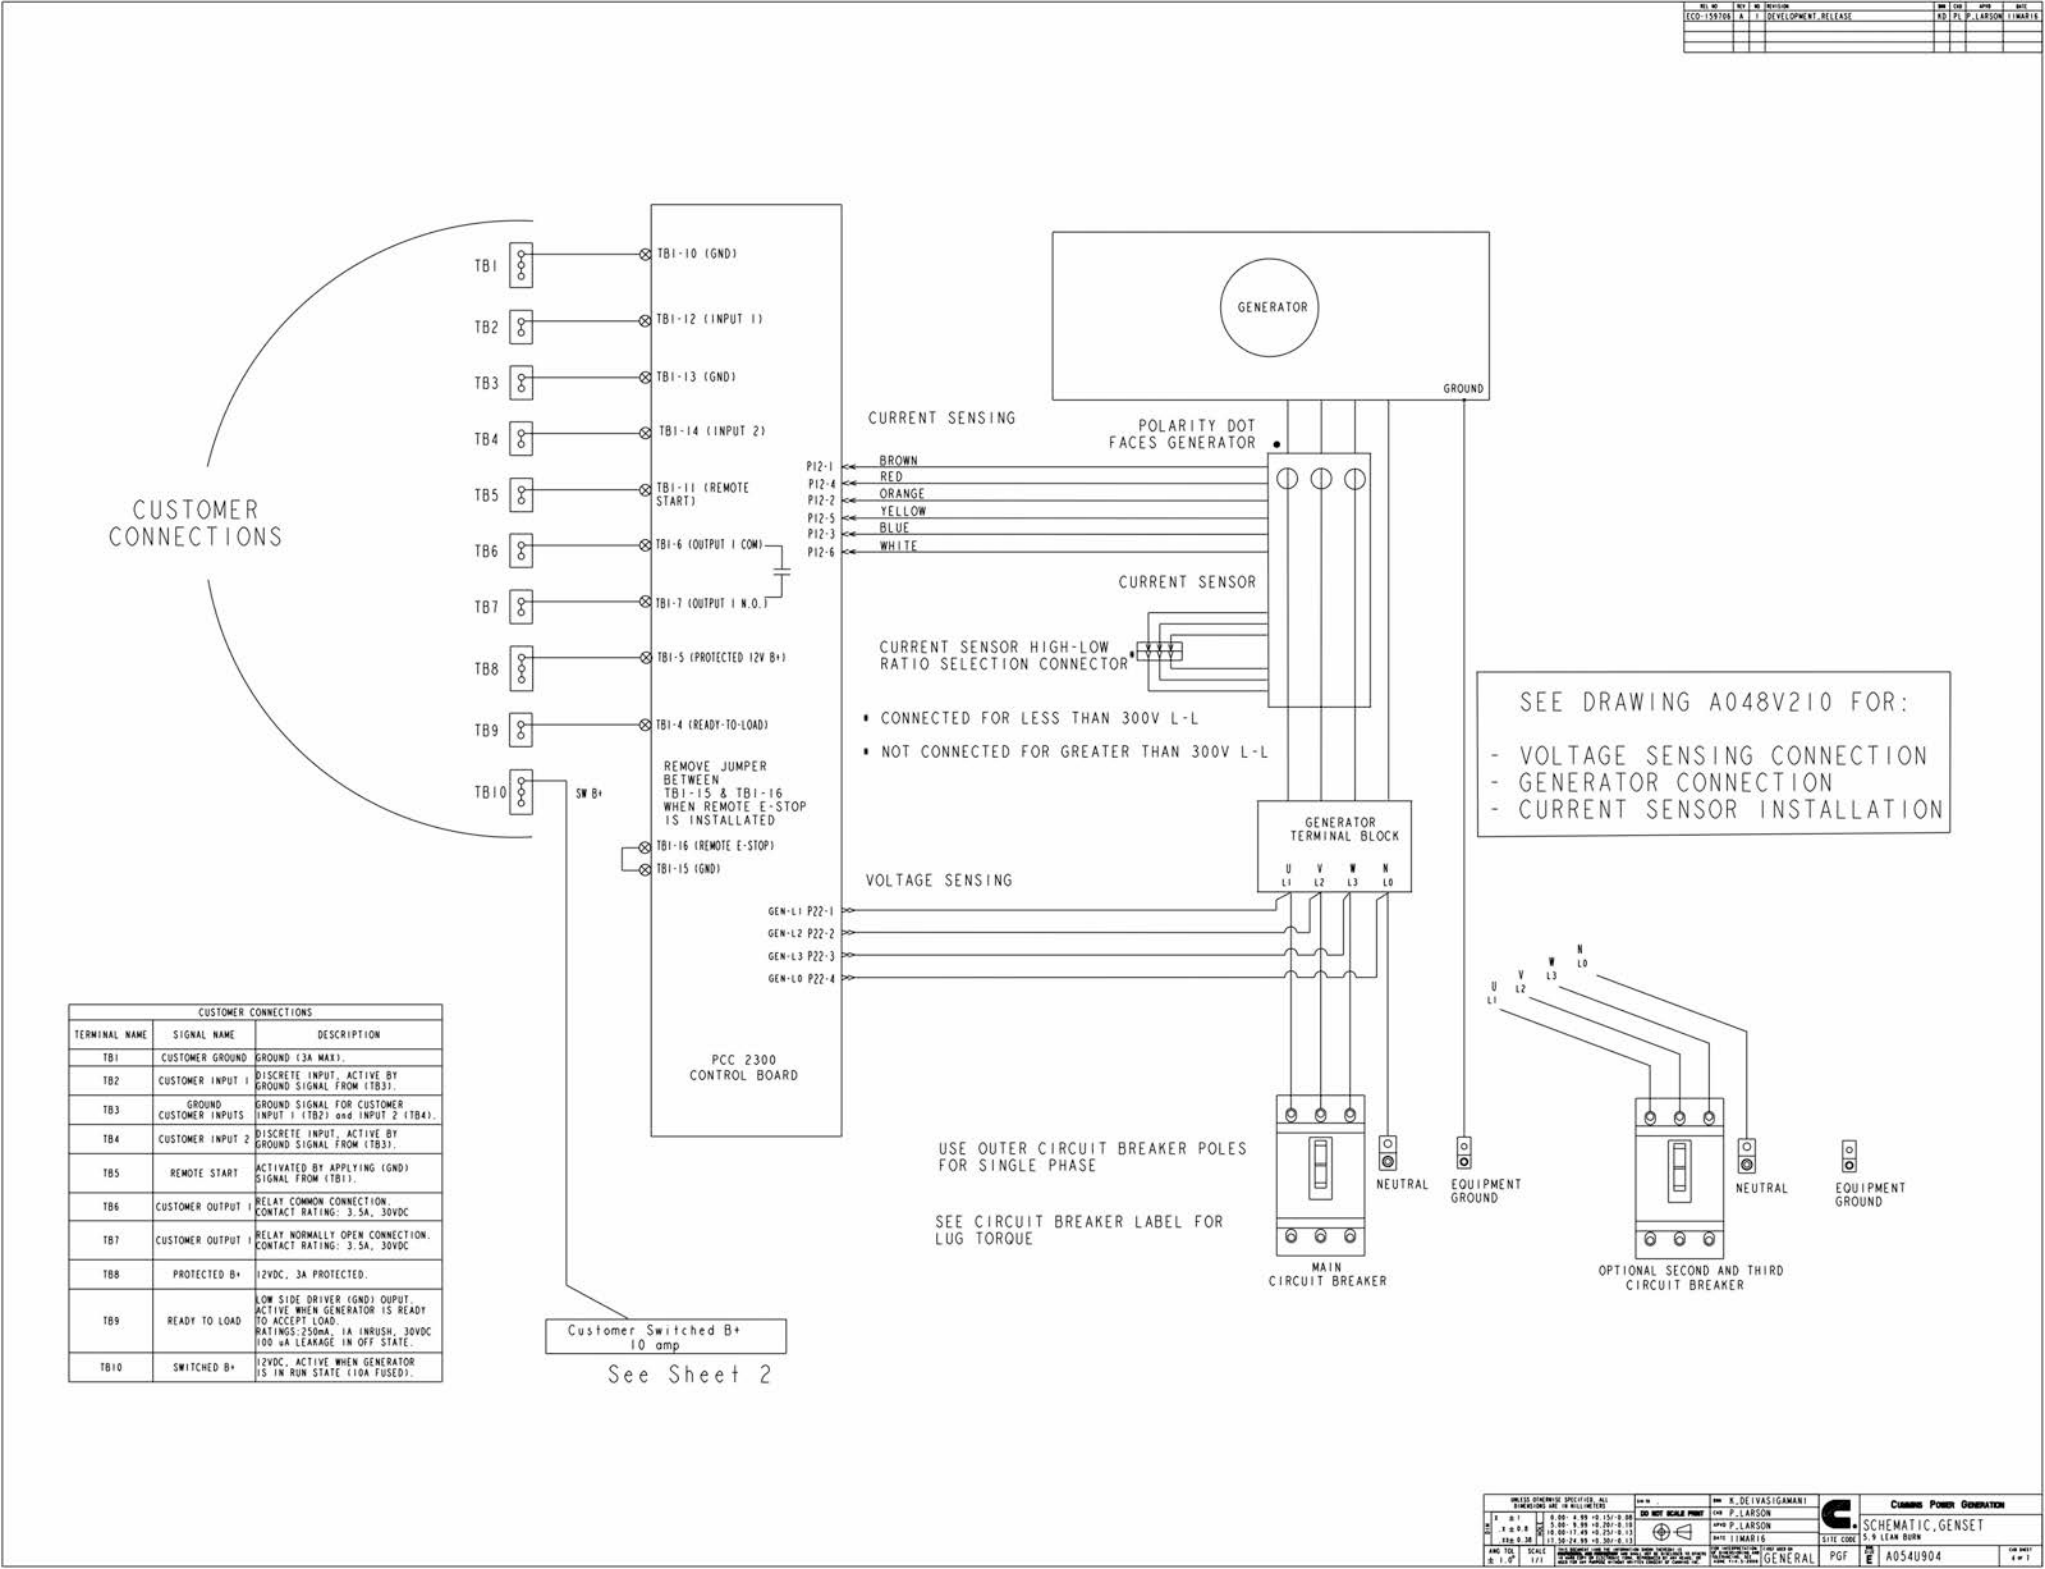


FIGURE 61. WIRING DIAGRAM FOR PCC 2300 (90 PIN ECM) (SHEET 4 OF 7)

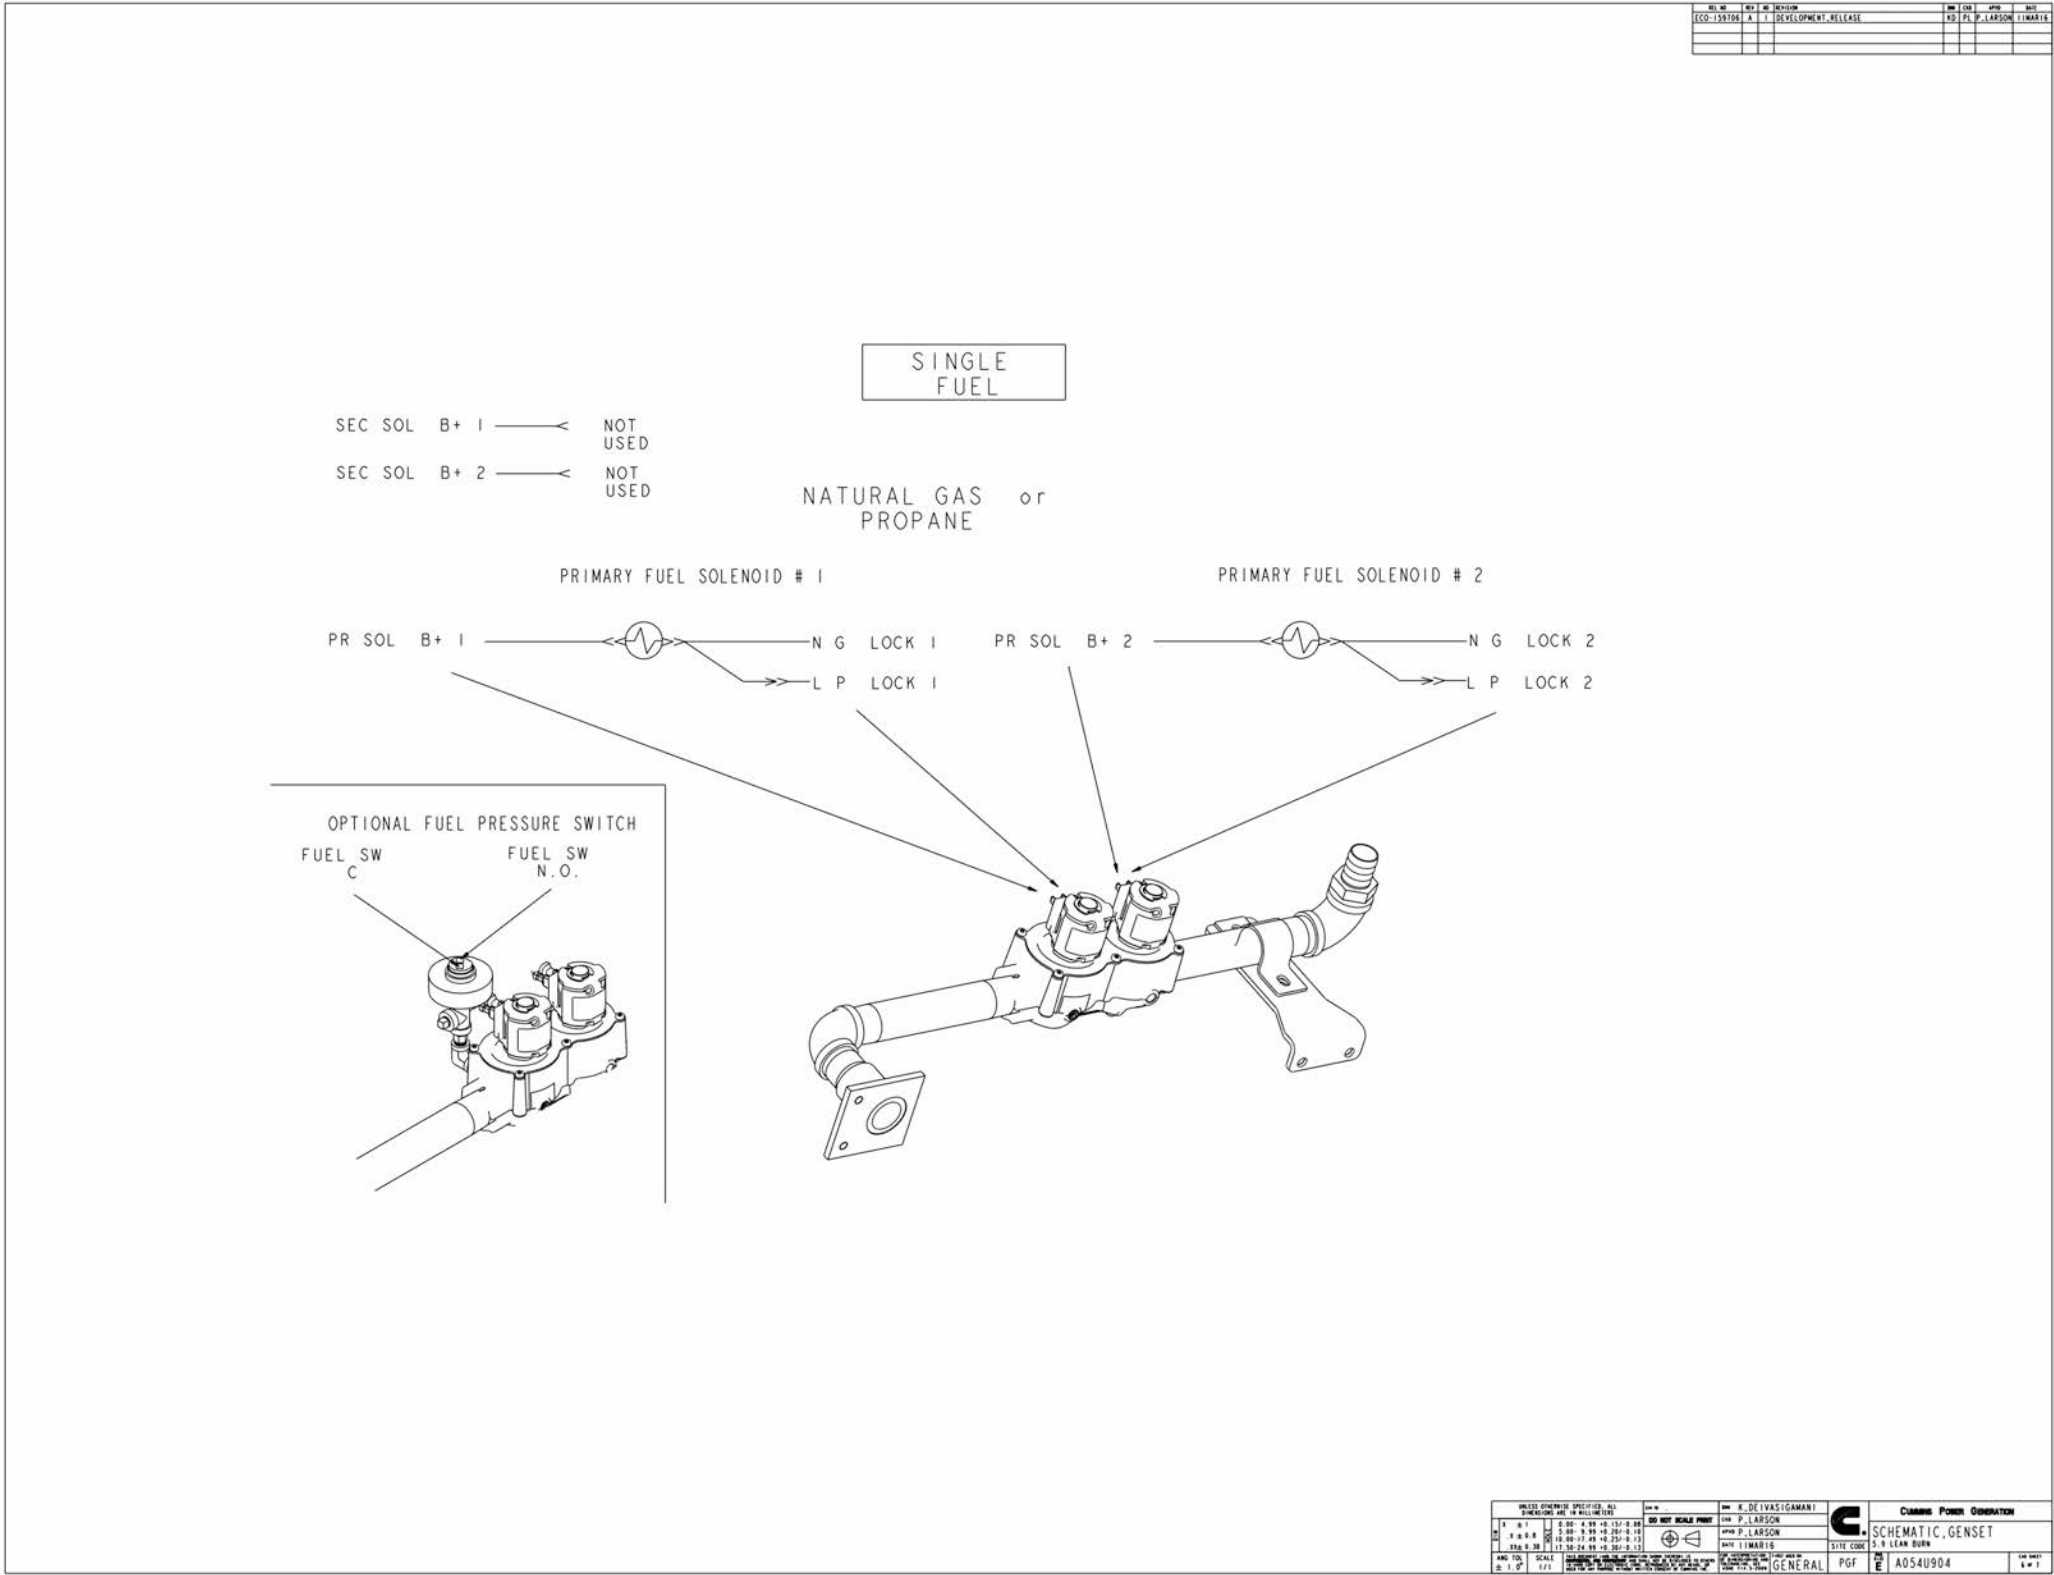


FIGURE 63. WIRING DIAGRAM FOR PCC 2300 (90 PIN ECM) (SHEET 6 OF 7)

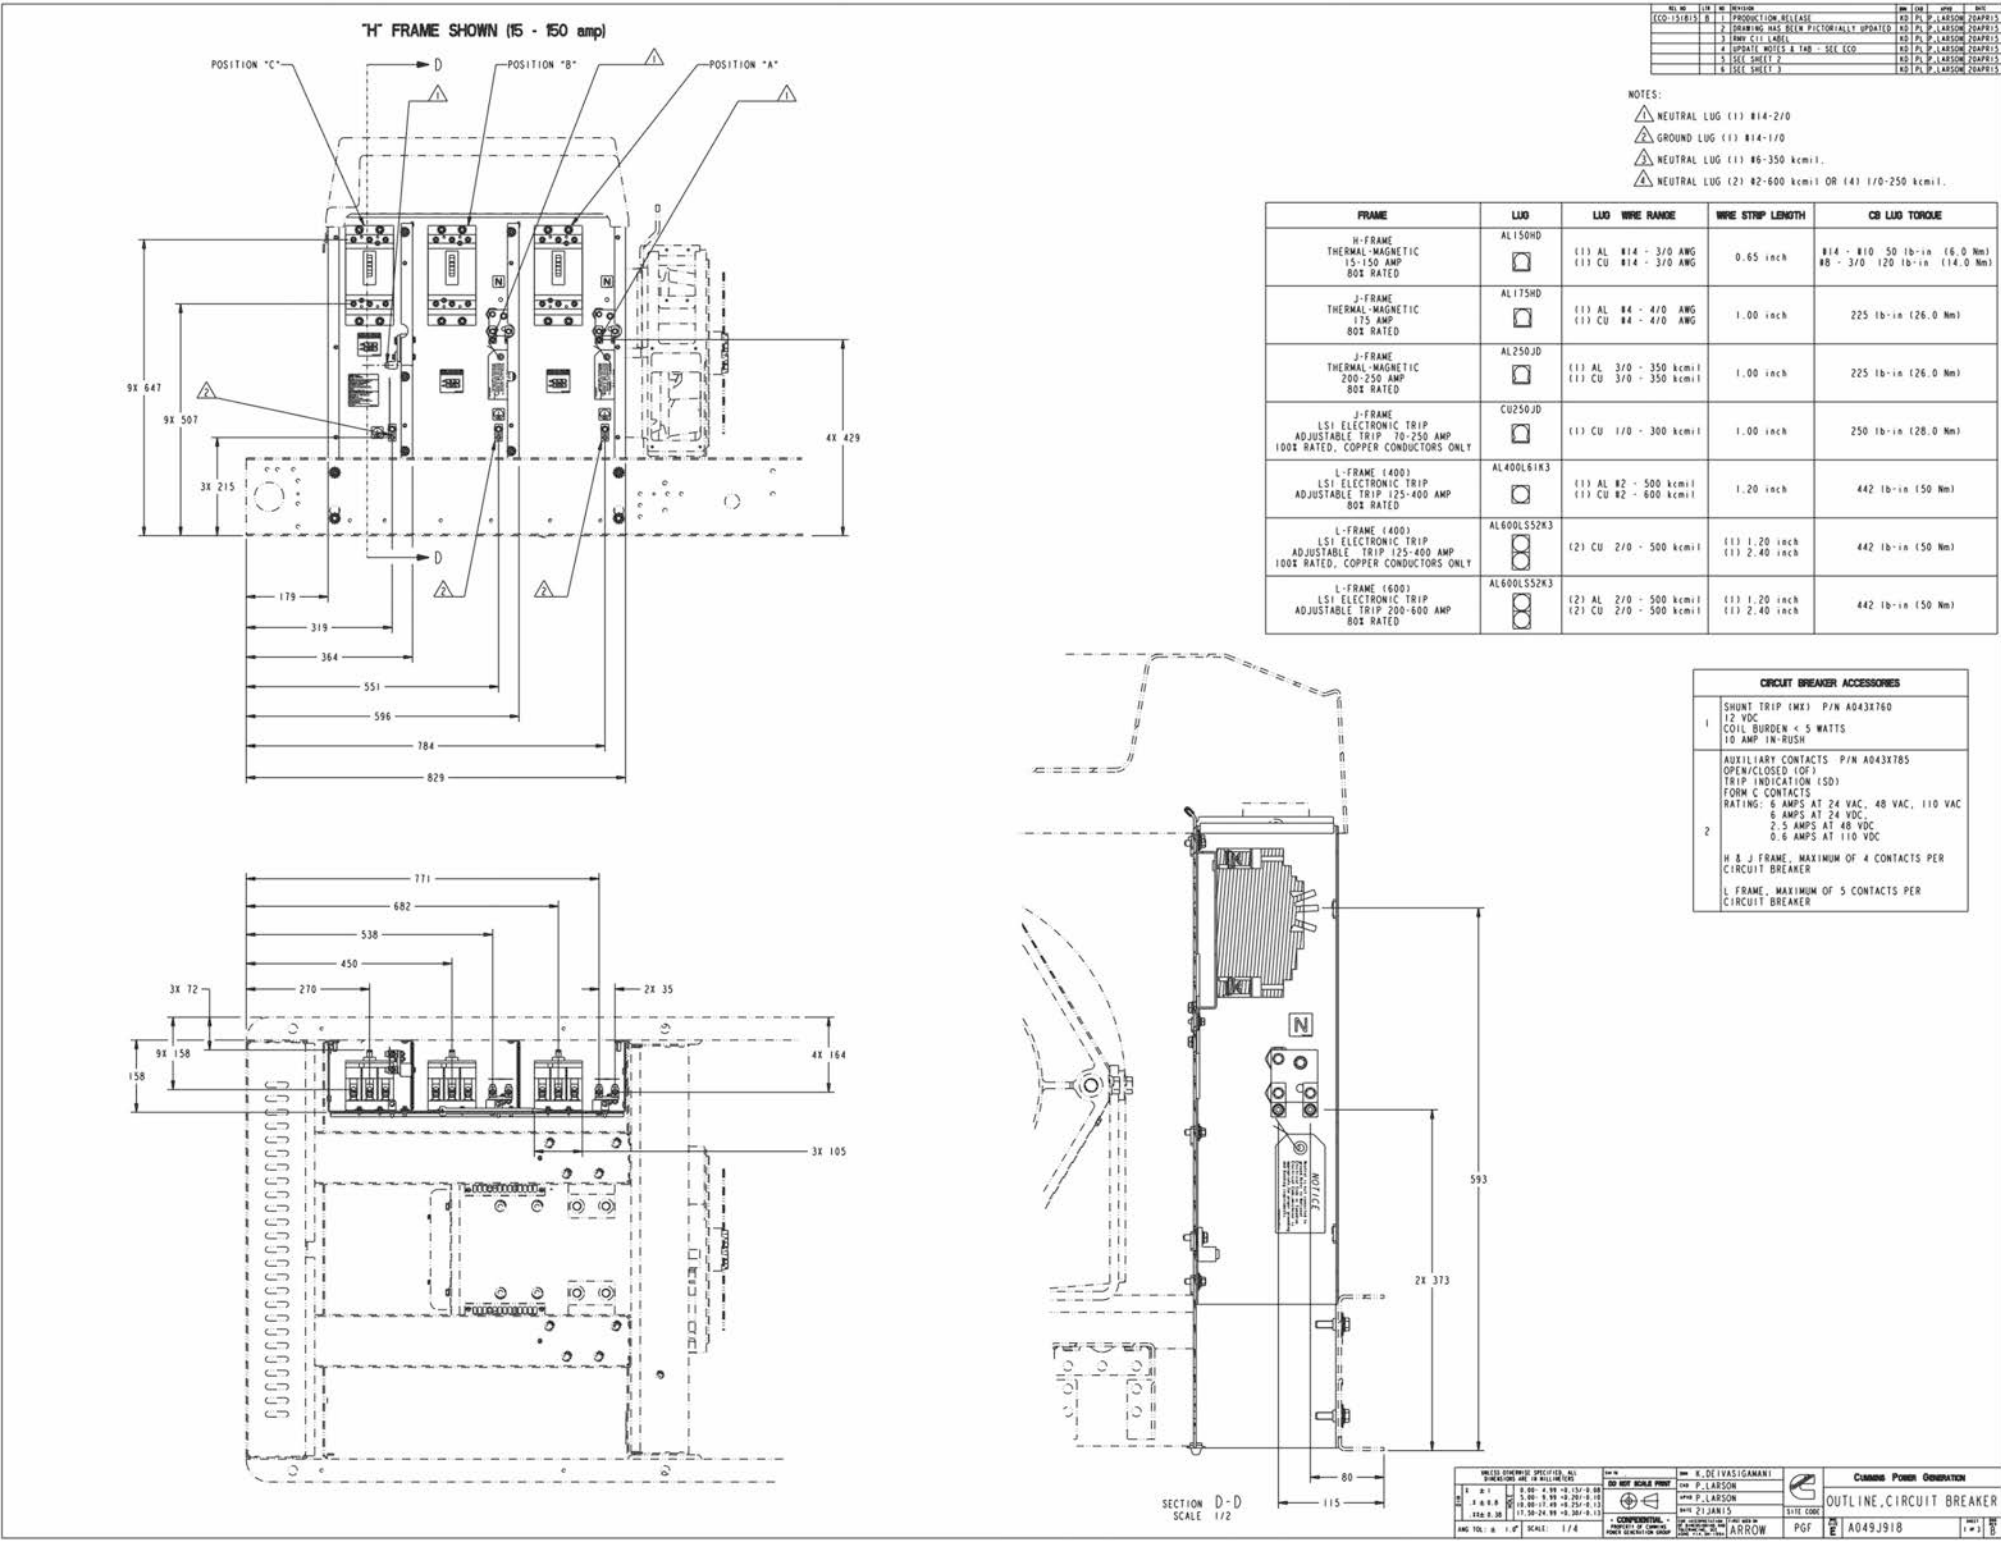


FIGURE 65. CIRCUIT BREAKER OUTLINE (SHEET 1 OF 3)



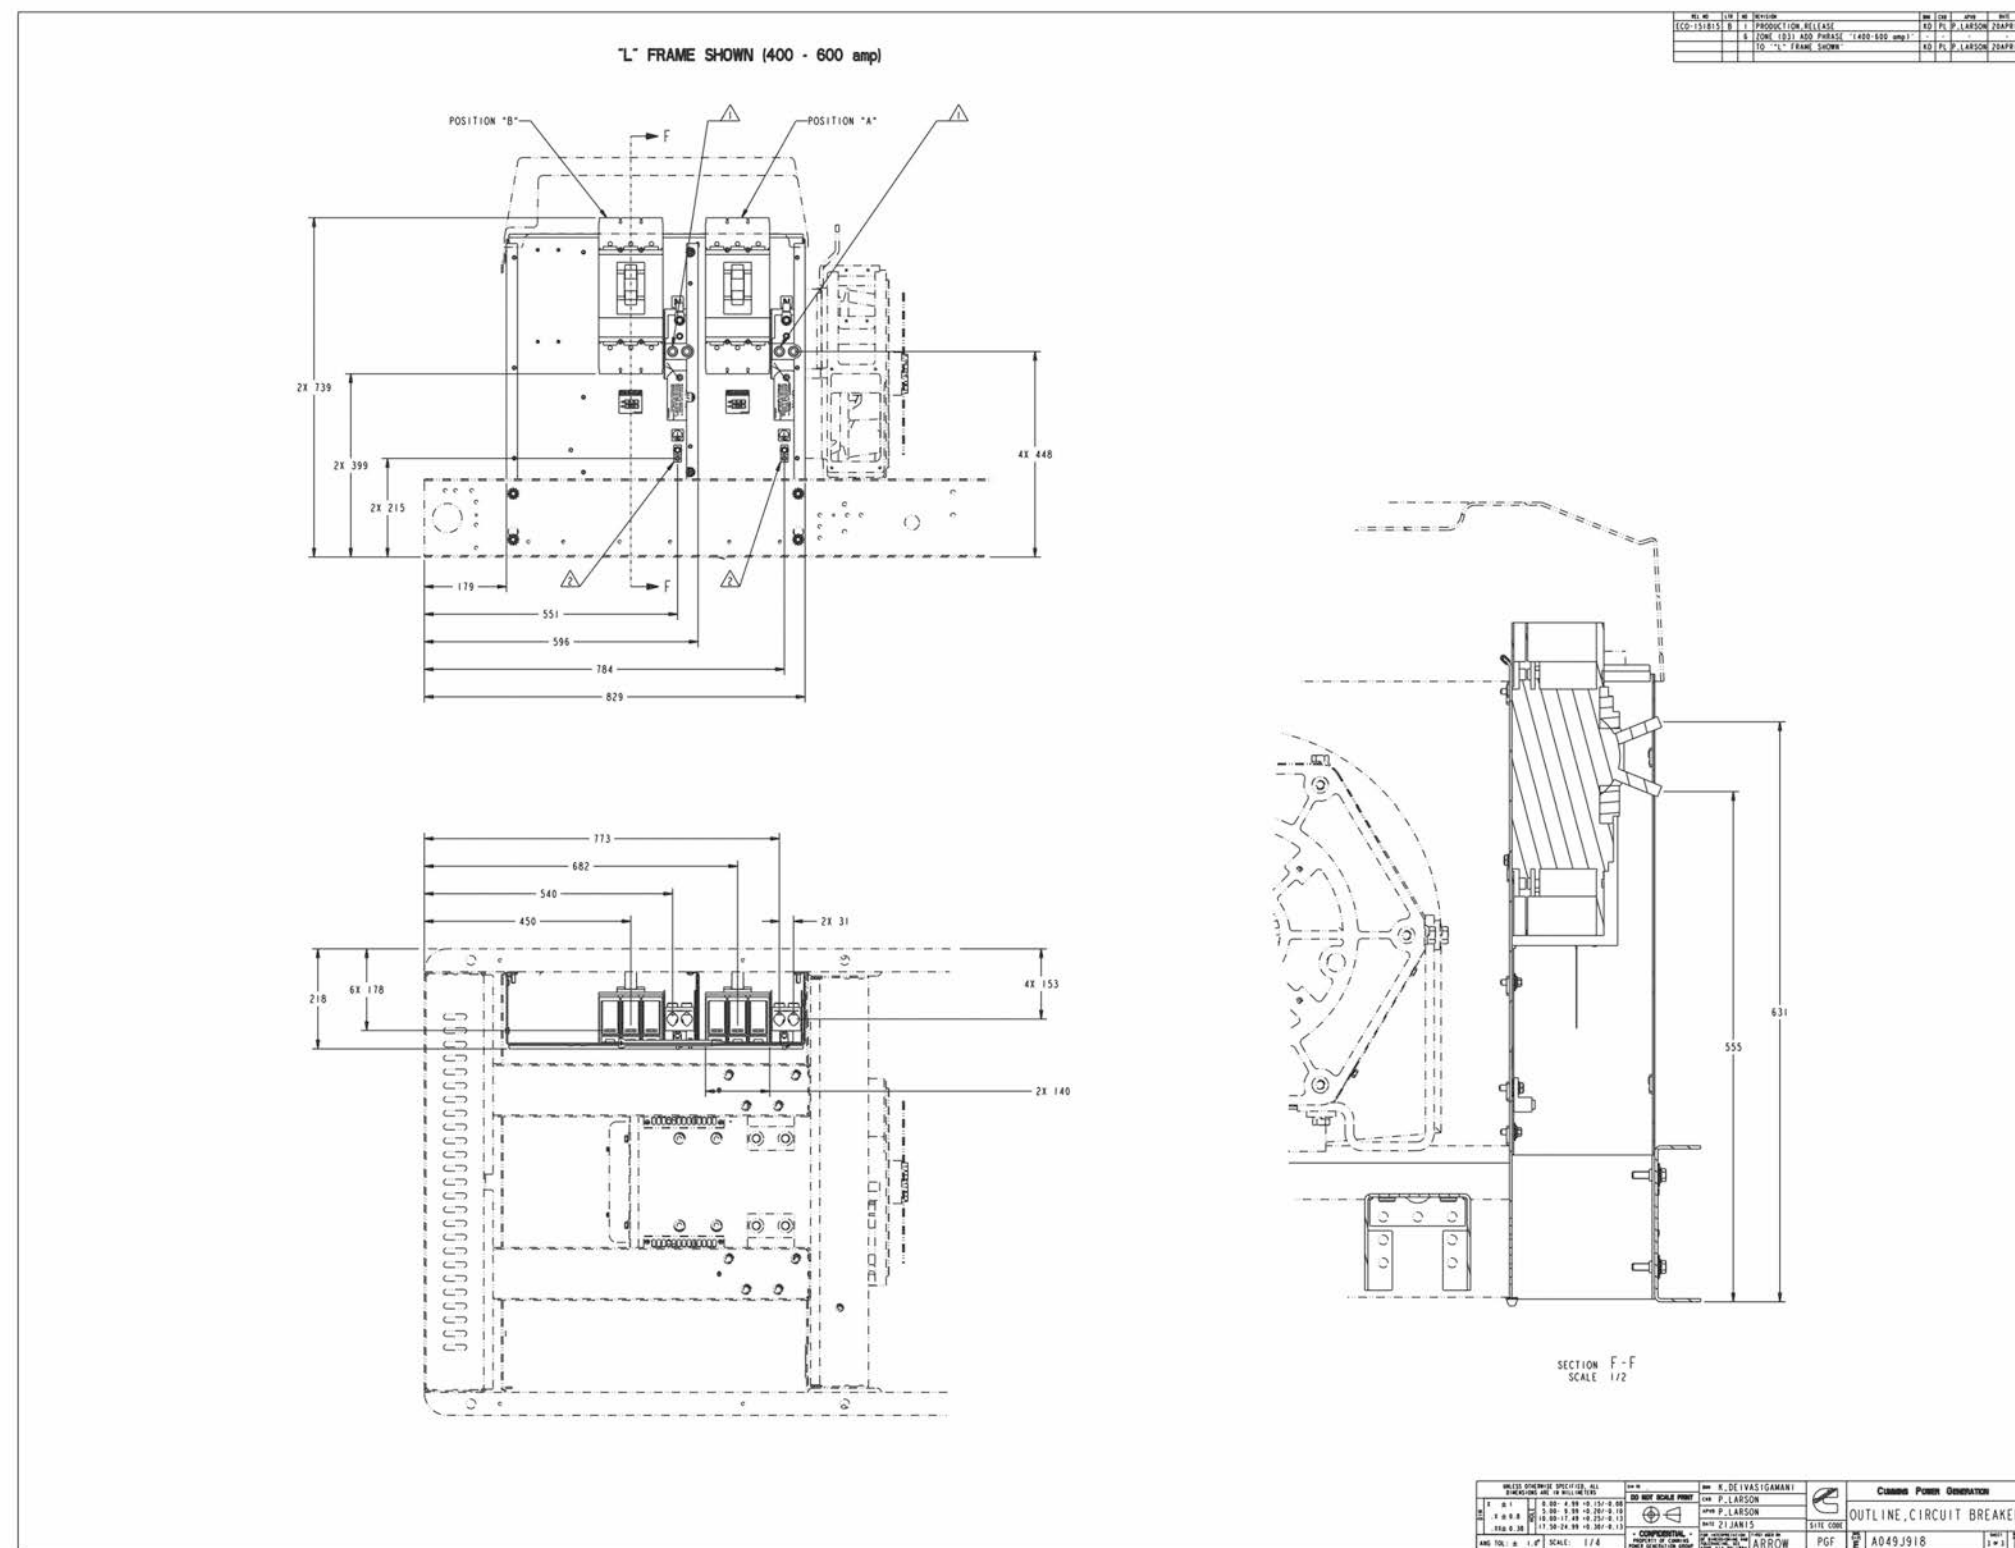


FIGURE 67. CIRCUIT BREAKER OUTLINE (SHEET 3 OF 3)

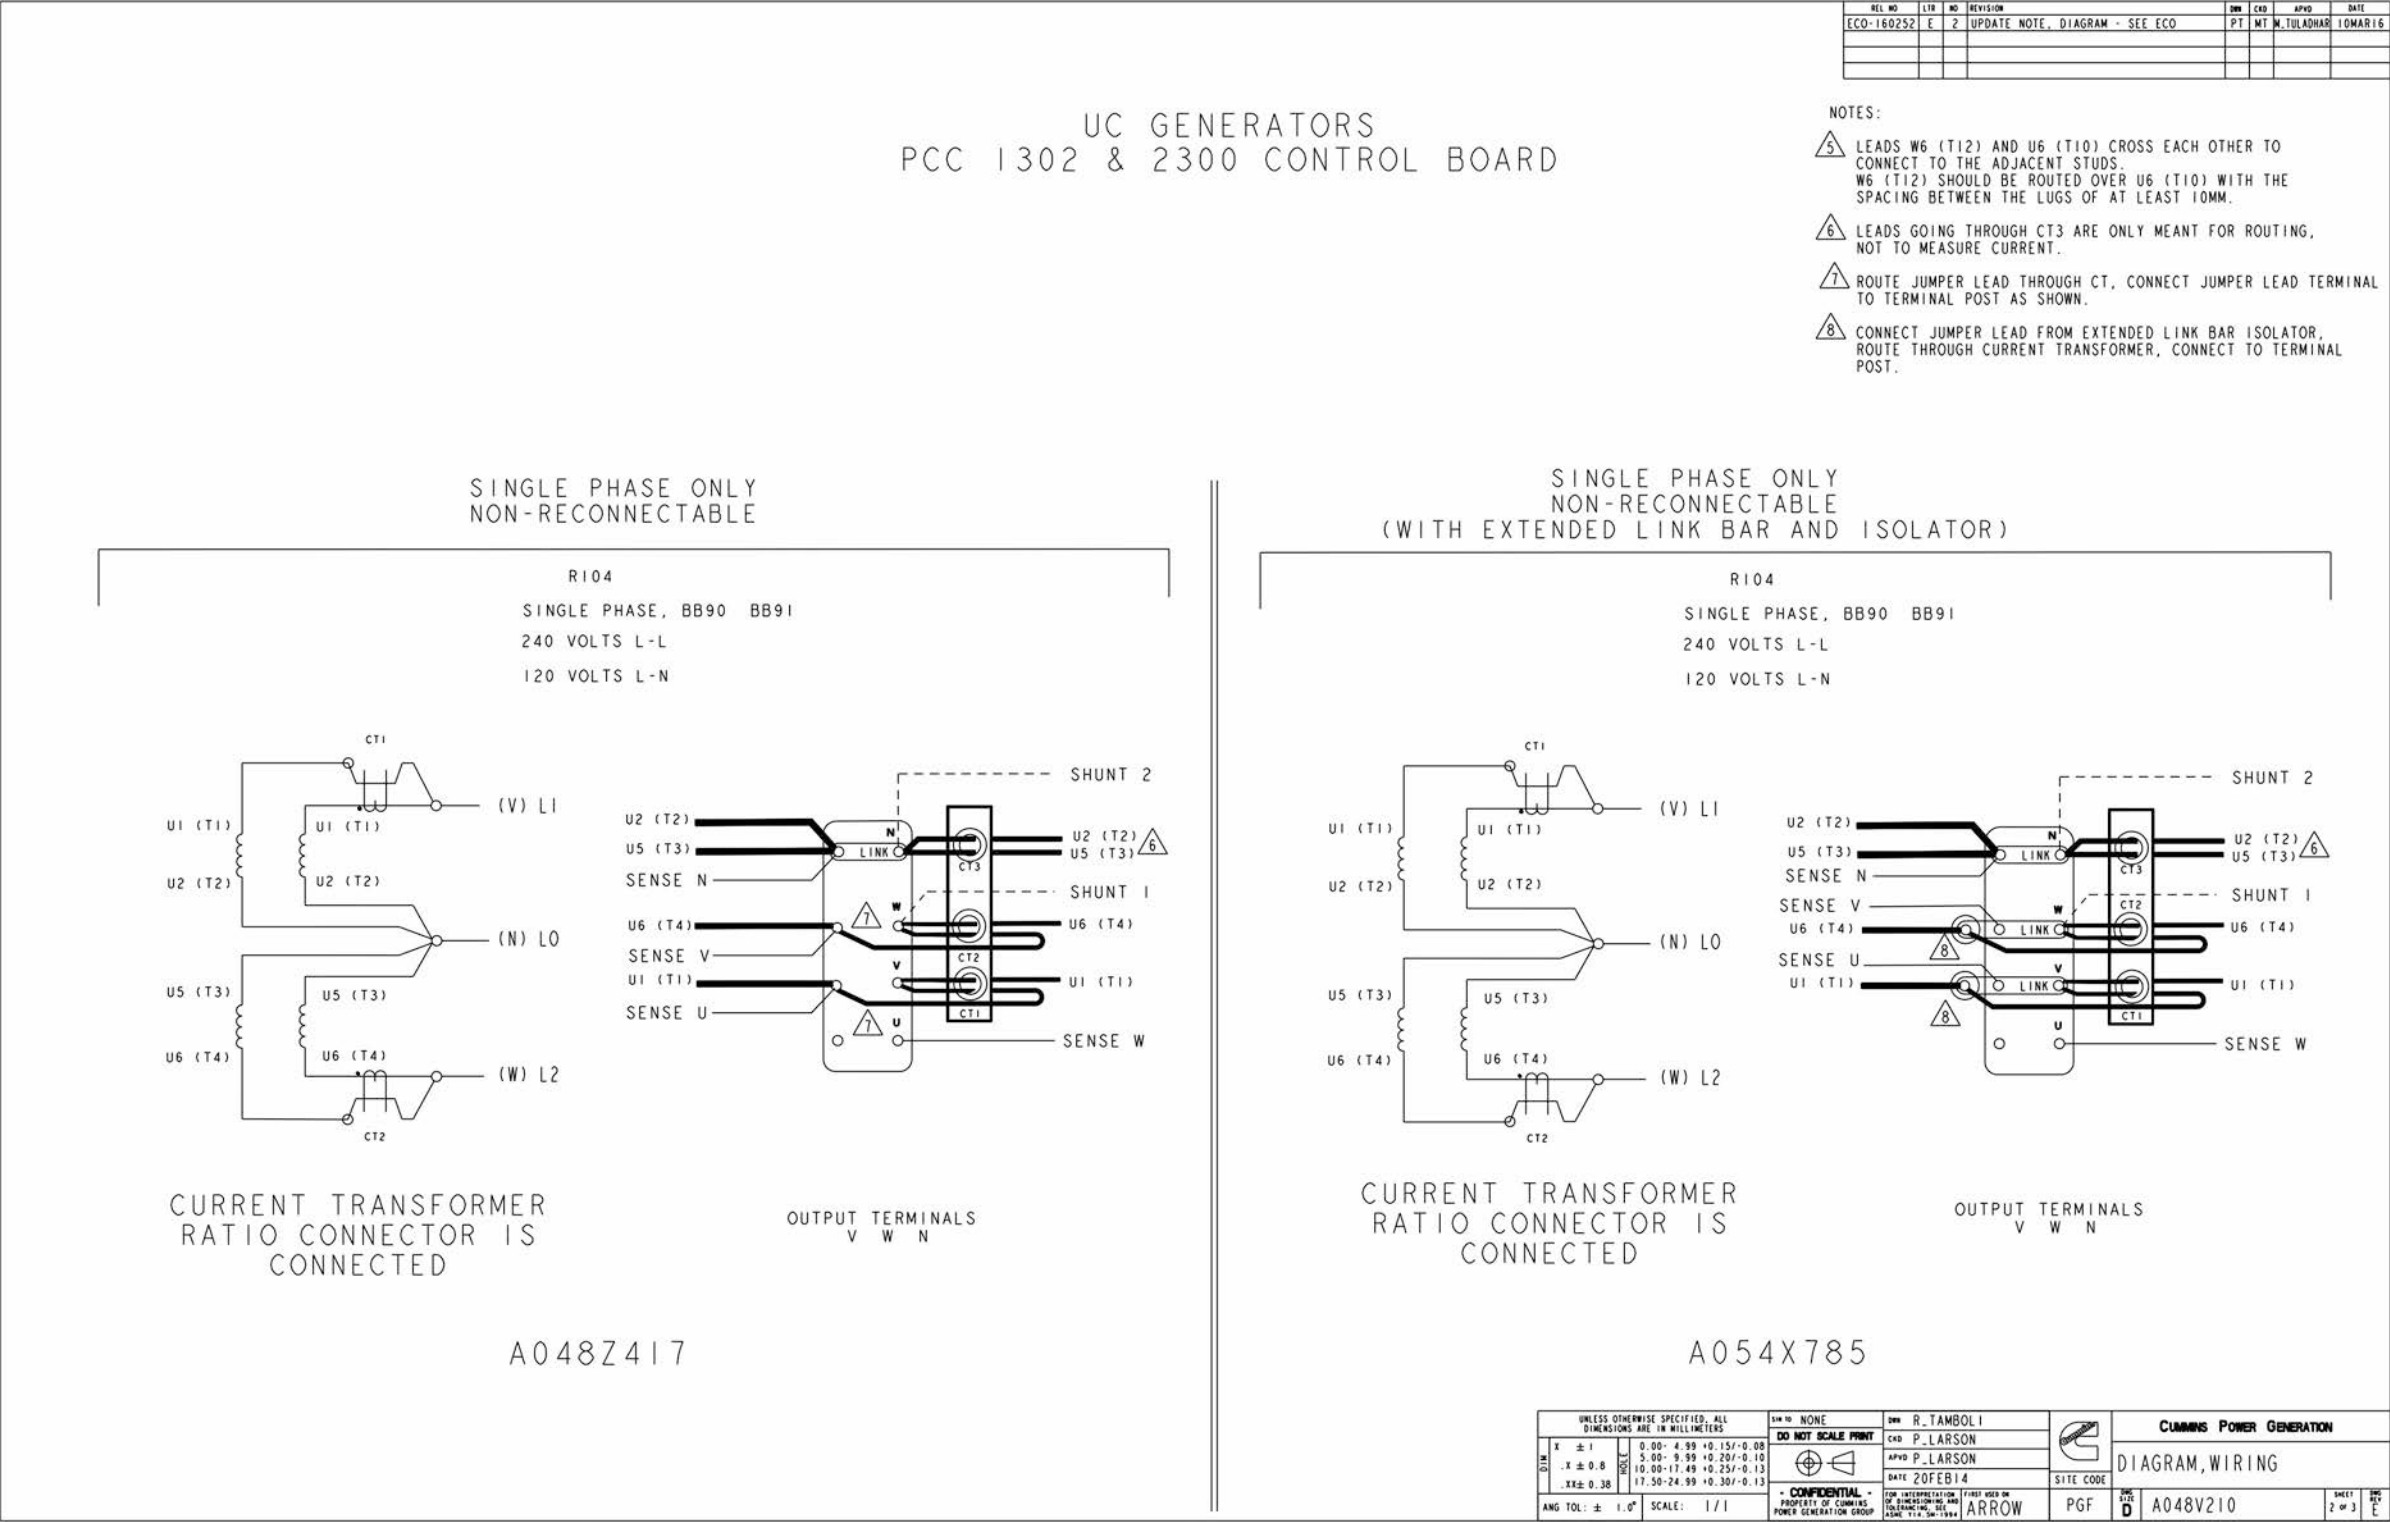

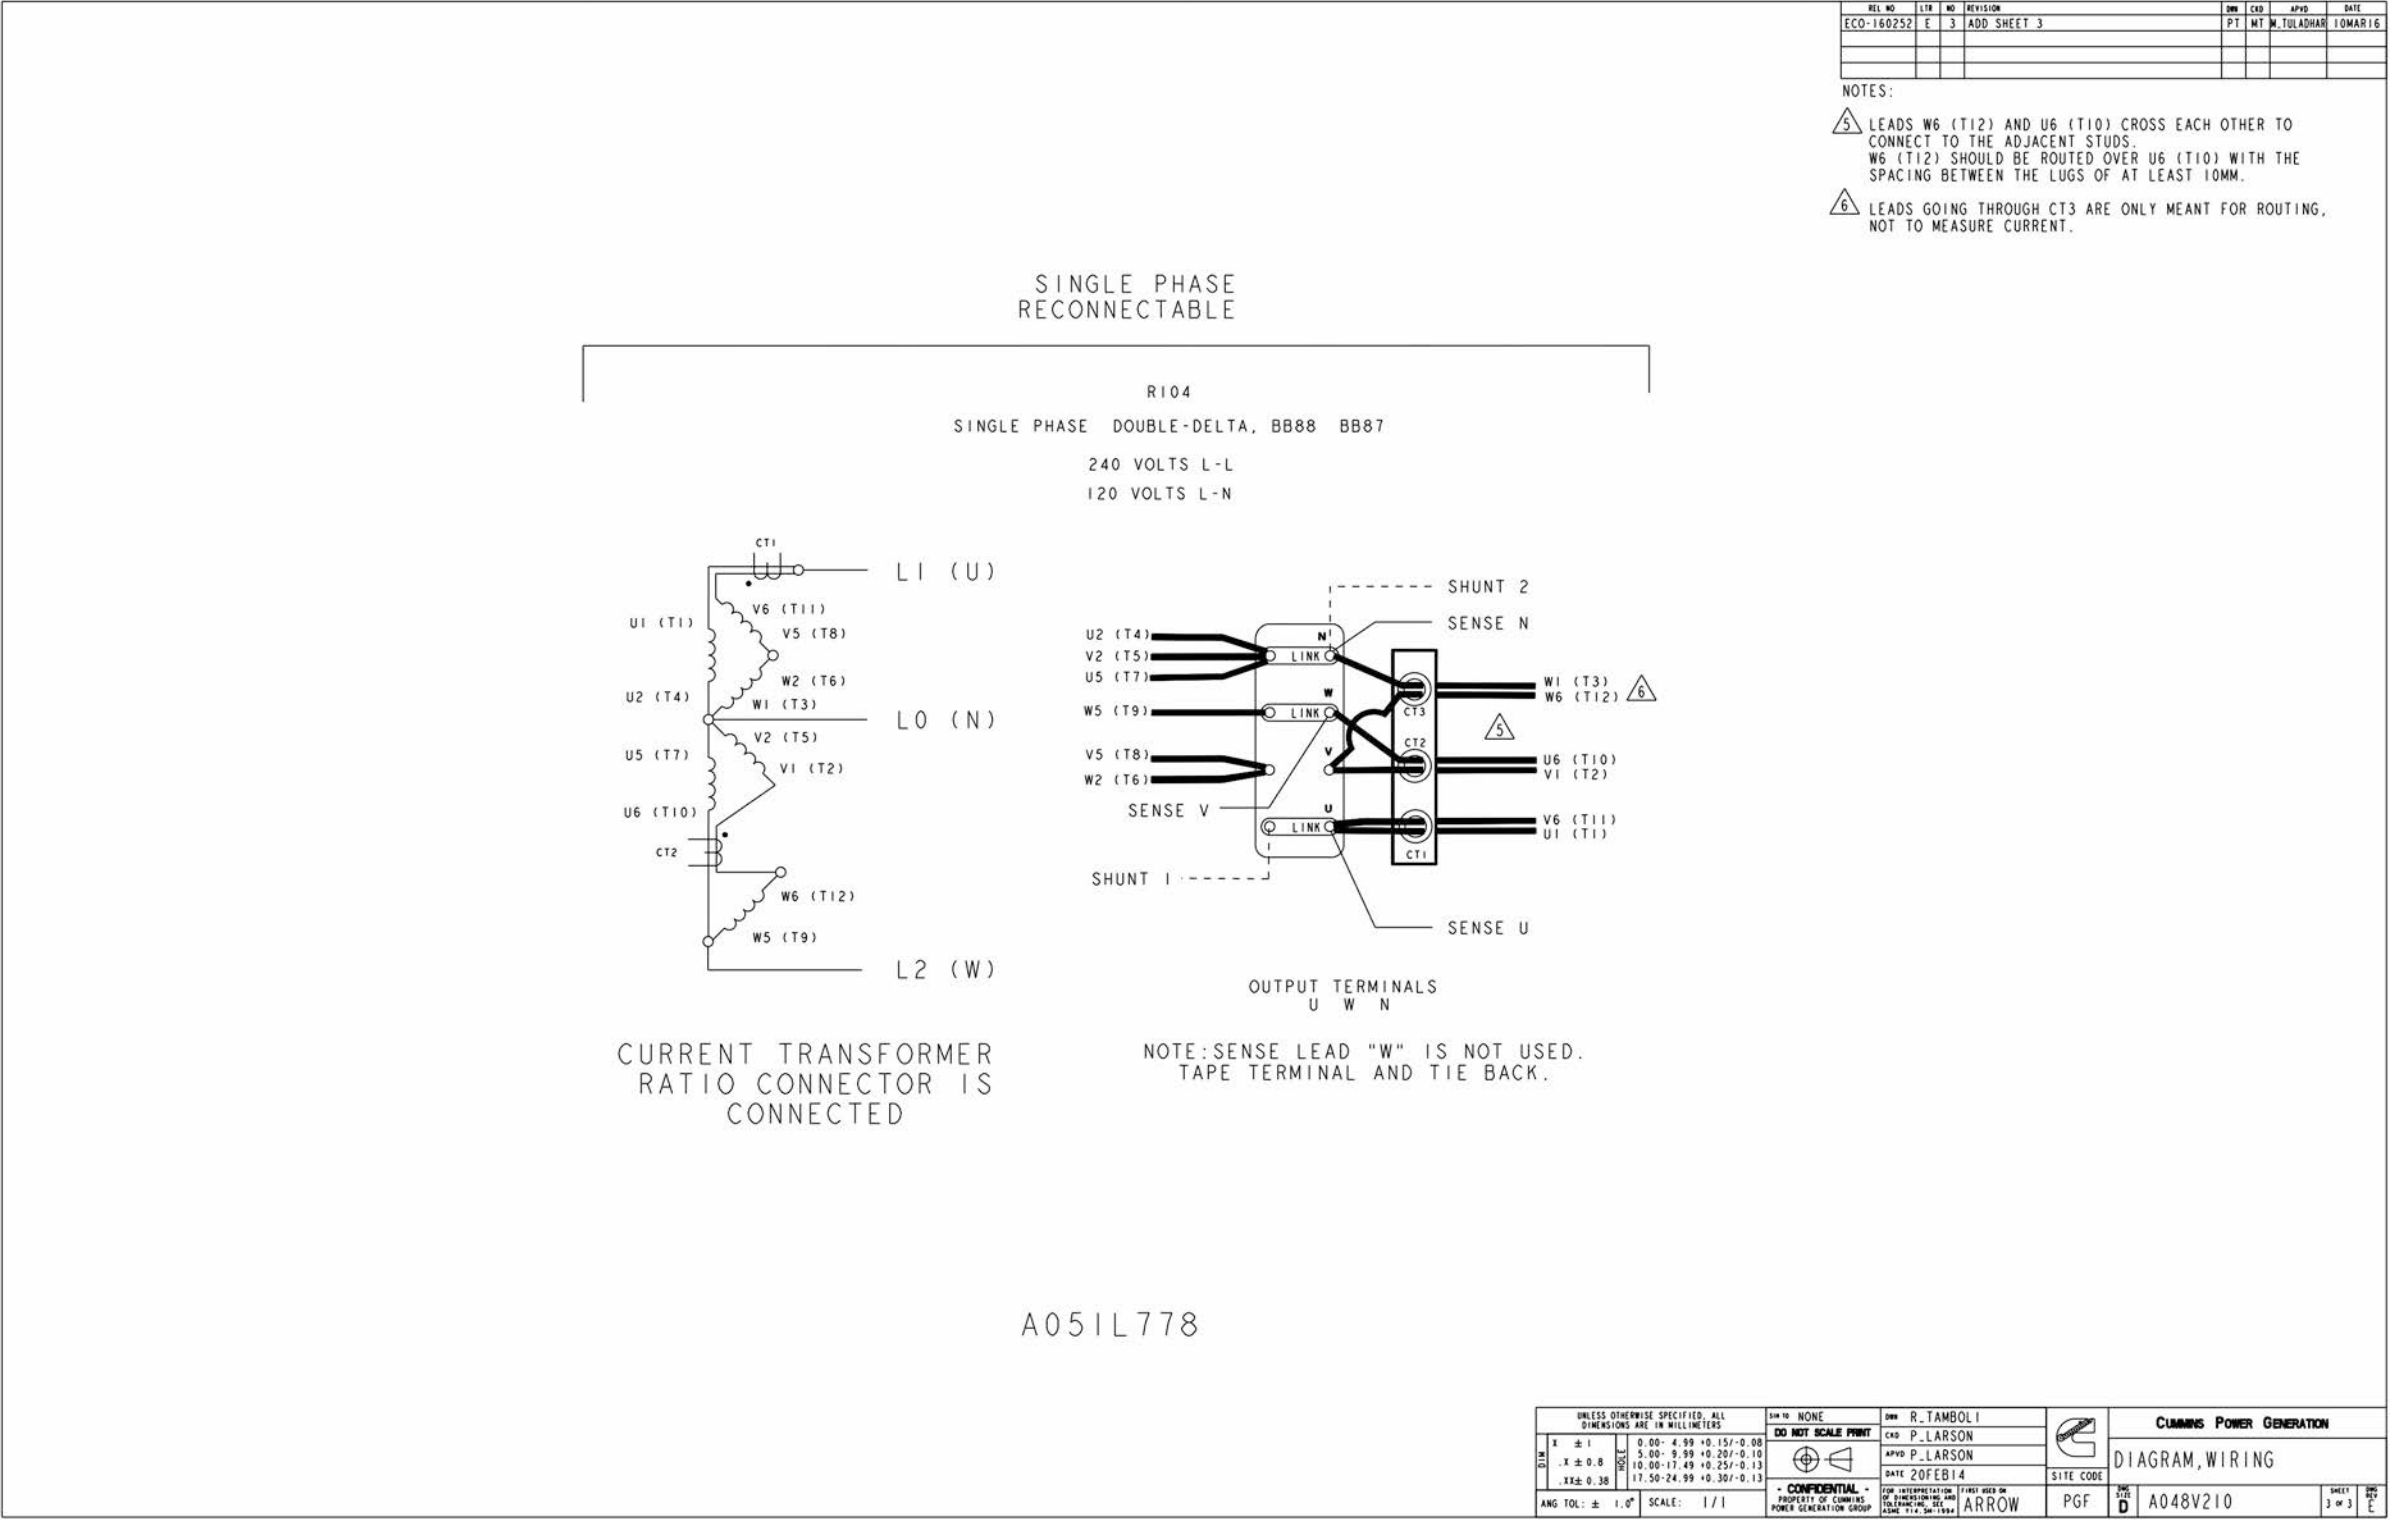

SINGLE PHASE
RECONNECTABLE

R104

SINGLE PHASE DOUBLE-DELTA, BB88 BB87

240 VOLTS L-L

120 VOLTS L-N

CT1

U1 (T1)

V6 (T11)

V5 (T8)

U2 (T4)

W1 (T3)

U5 (T7)

V2 (T5)

U6 (T10)

CT2

W6 (T12)

W5 (T9)

L1 (U)

L0 (N)

L2 (W)

CURRENT TRANSFORMER
RATIO CONNECTOR IS
CONNECTED

SHUNT 2

SENSE N

U2 (T4)

V2 (T5)

U5 (T7)

W5 (T9)

V5 (T8)

W2 (T6)

SENSE V

SHUNT 1

U

W

N

OUTPUT TERMINALS
U W N

NOTE: SENSE LEAD "W" IS NOT USED.
TAPE TERMINAL AND TIE BACK.

A051L778

UNLESS OTHERWISE SPECIFIED, ALL
DIMENSIONS ARE IN MILLIMETERS

X
± 1

0.00- 4.99 +0.15/-0.08

.X
± 0.8

5.00- 9.99 +0.20/-0.10

.XX
± 0.38

10.00-17.49 +0.25/-0.13

17.50-24.99 +0.30/-0.13

ANG TOL: ± 1.0°

SCALE: 1/1

DO NOT SCALE PRINT

CONFIDENTIAL

PROPERTY OF CUMMINS
POWER GENERATION GROUP

DRW
R. TAMBOLI

CAD
P. LARSON

APVD
P. LARSON

DATE
20FEB14

FOR INTERPRETATION
CUMMINS POWER
GENERATION GROUP

FIRST USED ON
20FEB14

ARROW

CUMMINS POWER GENERATION

DIAGRAM, WIRING

SITE CODE

PGF

SHEET
3 of 3

DATE
10MAR16

FIGURE 70. PCC 1302/2300 (SHEET 3 OF 3)

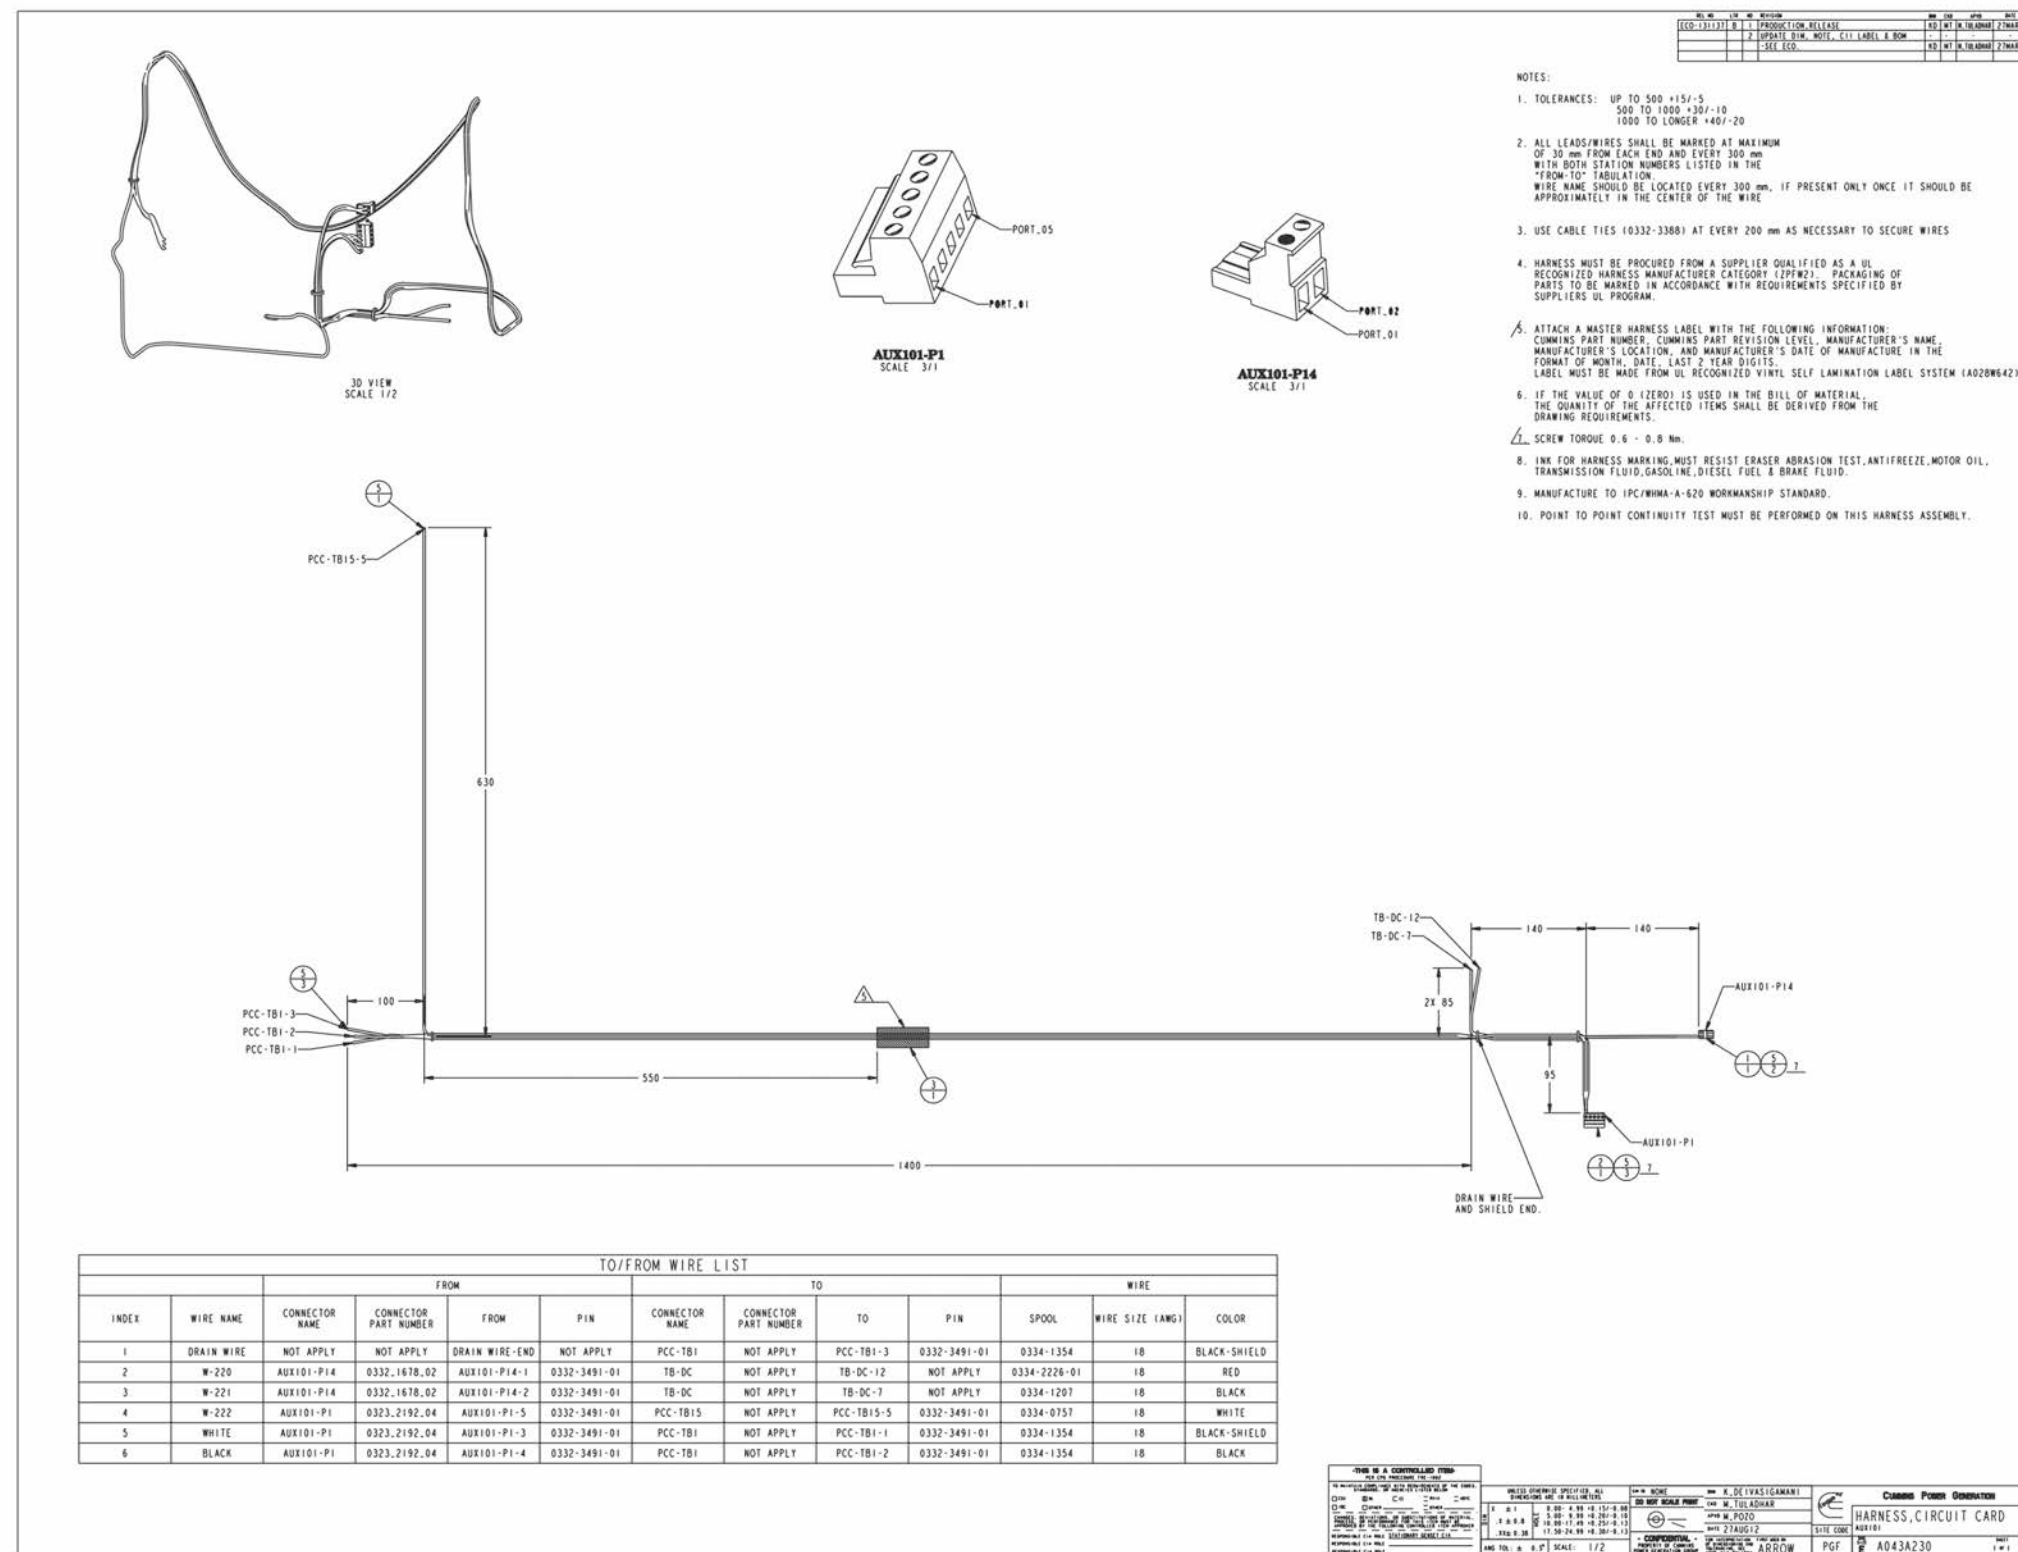


FIGURE 71. CIRCUIT CARD HARNESS (SHEET 1 OF 1)

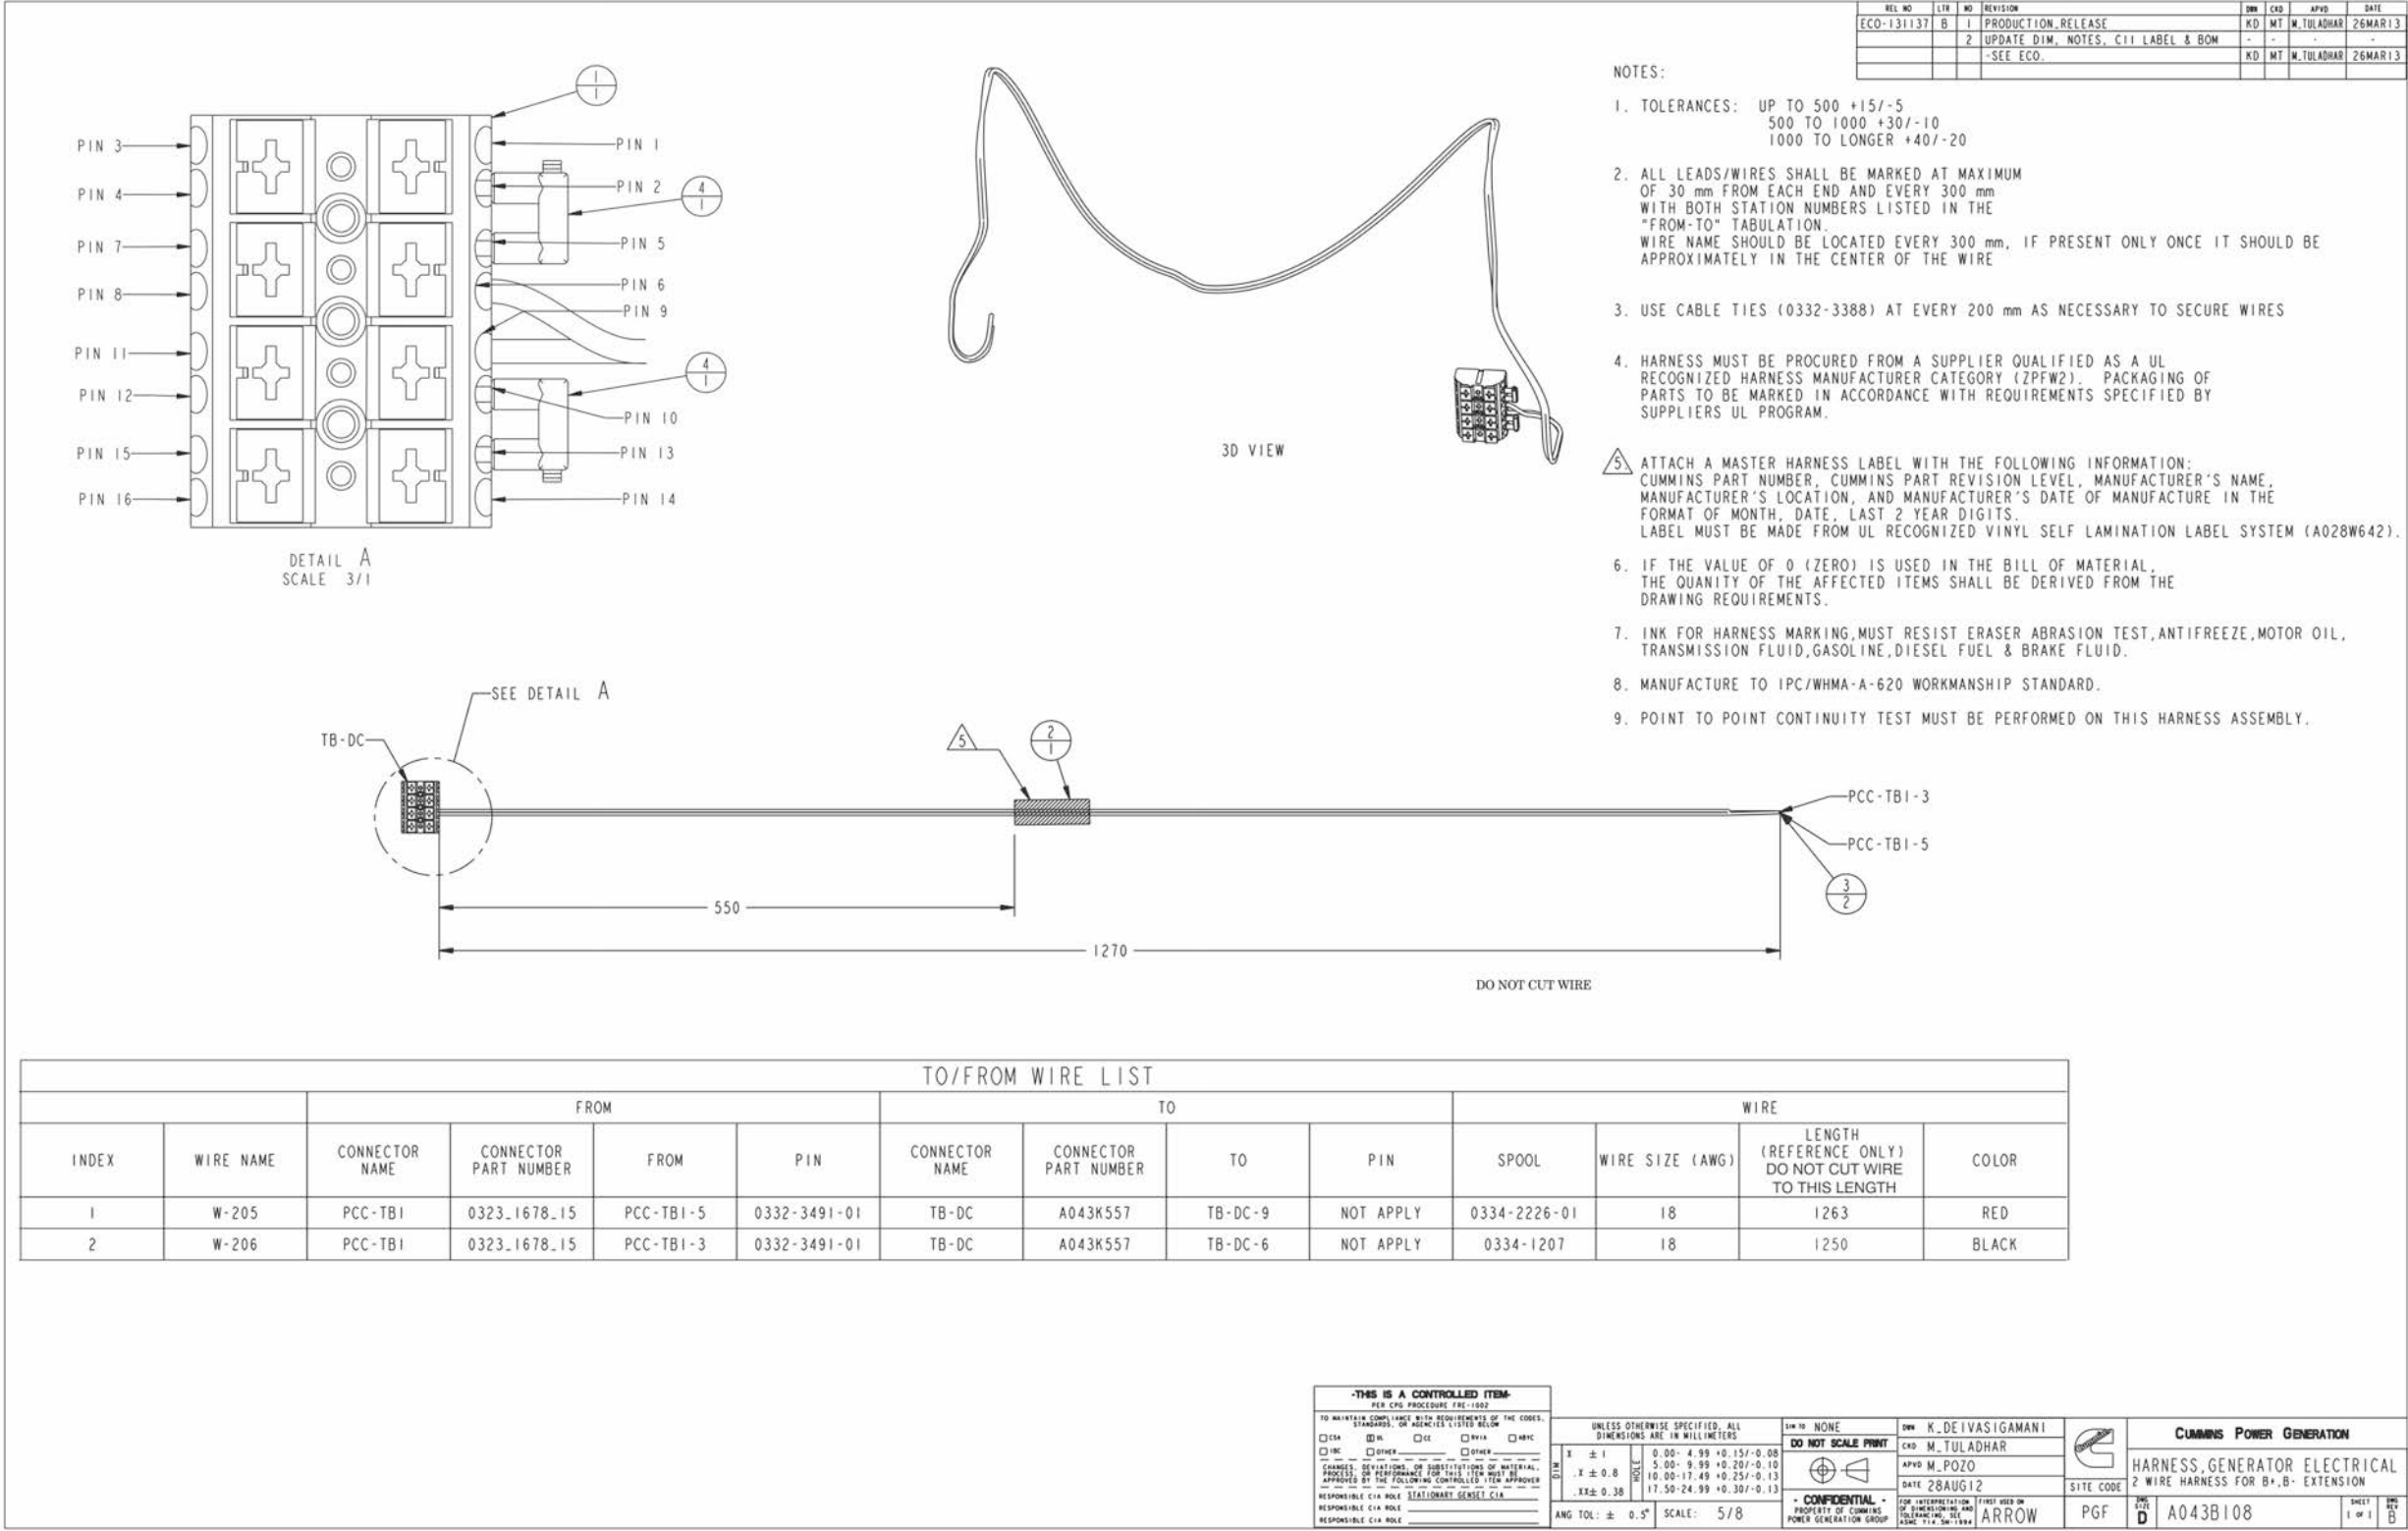


FIGURE 73. GENERATOR ELECTRICAL HARNESS (SHEET 1 OF 1)

This page is intentionally blank.

Appendix D. Seismic Requirements

Table of Contents

Figure 74. Seismic Installation Requirements (Sheet 1 of 4) 135

Figure 75. Seismic Installation Requirements (Sheet 2 of 4) 136

Figure 76. Seismic Installation Requirements (Sheet 3 of 4) 137

Figure 77. Seismic Installation Requirements (Sheet 4 of 4) 138

The drawings included in this section are representative. For current complete information, refer to the drawing package that was shipped with the unit.

D.1 Seismic Installation Instructions

[illegible]

FIGURE 74. SEISMIC INSTALLATION REQUIREMENTS (SHEET 1 OF 4)

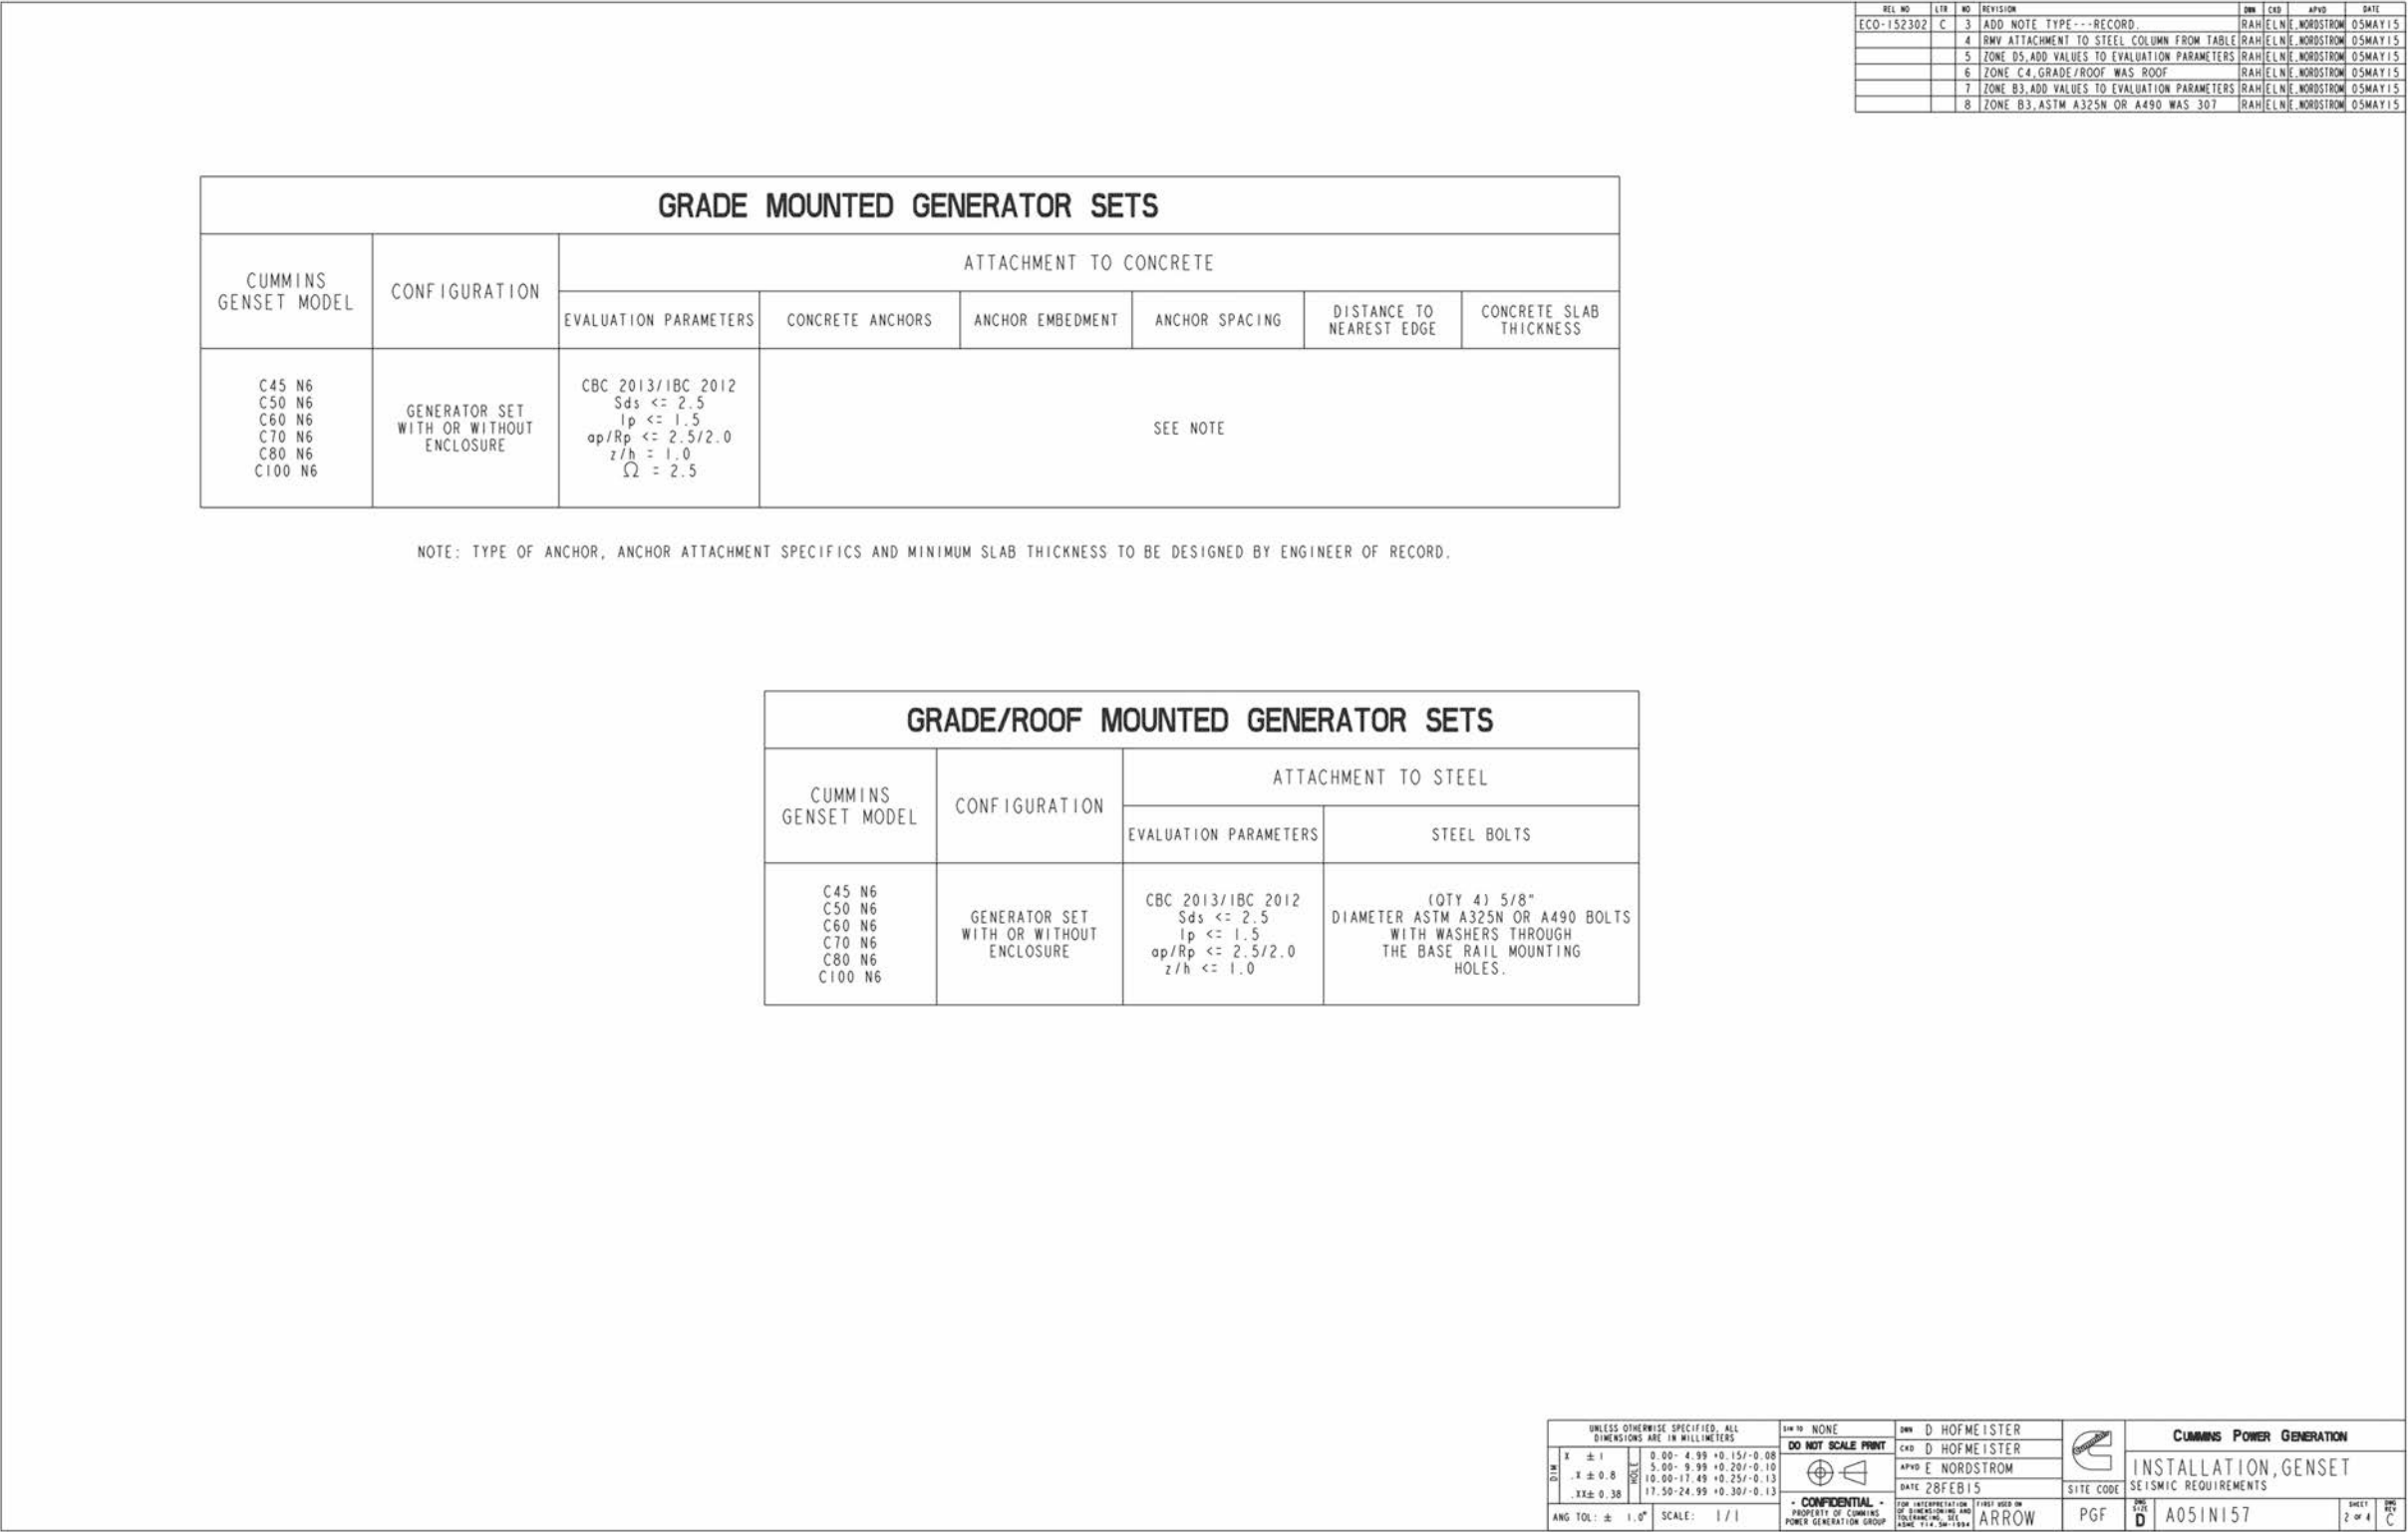


FIGURE 75. SEISMIC INSTALLATION REQUIREMENTS (SHEET 2 OF 4)

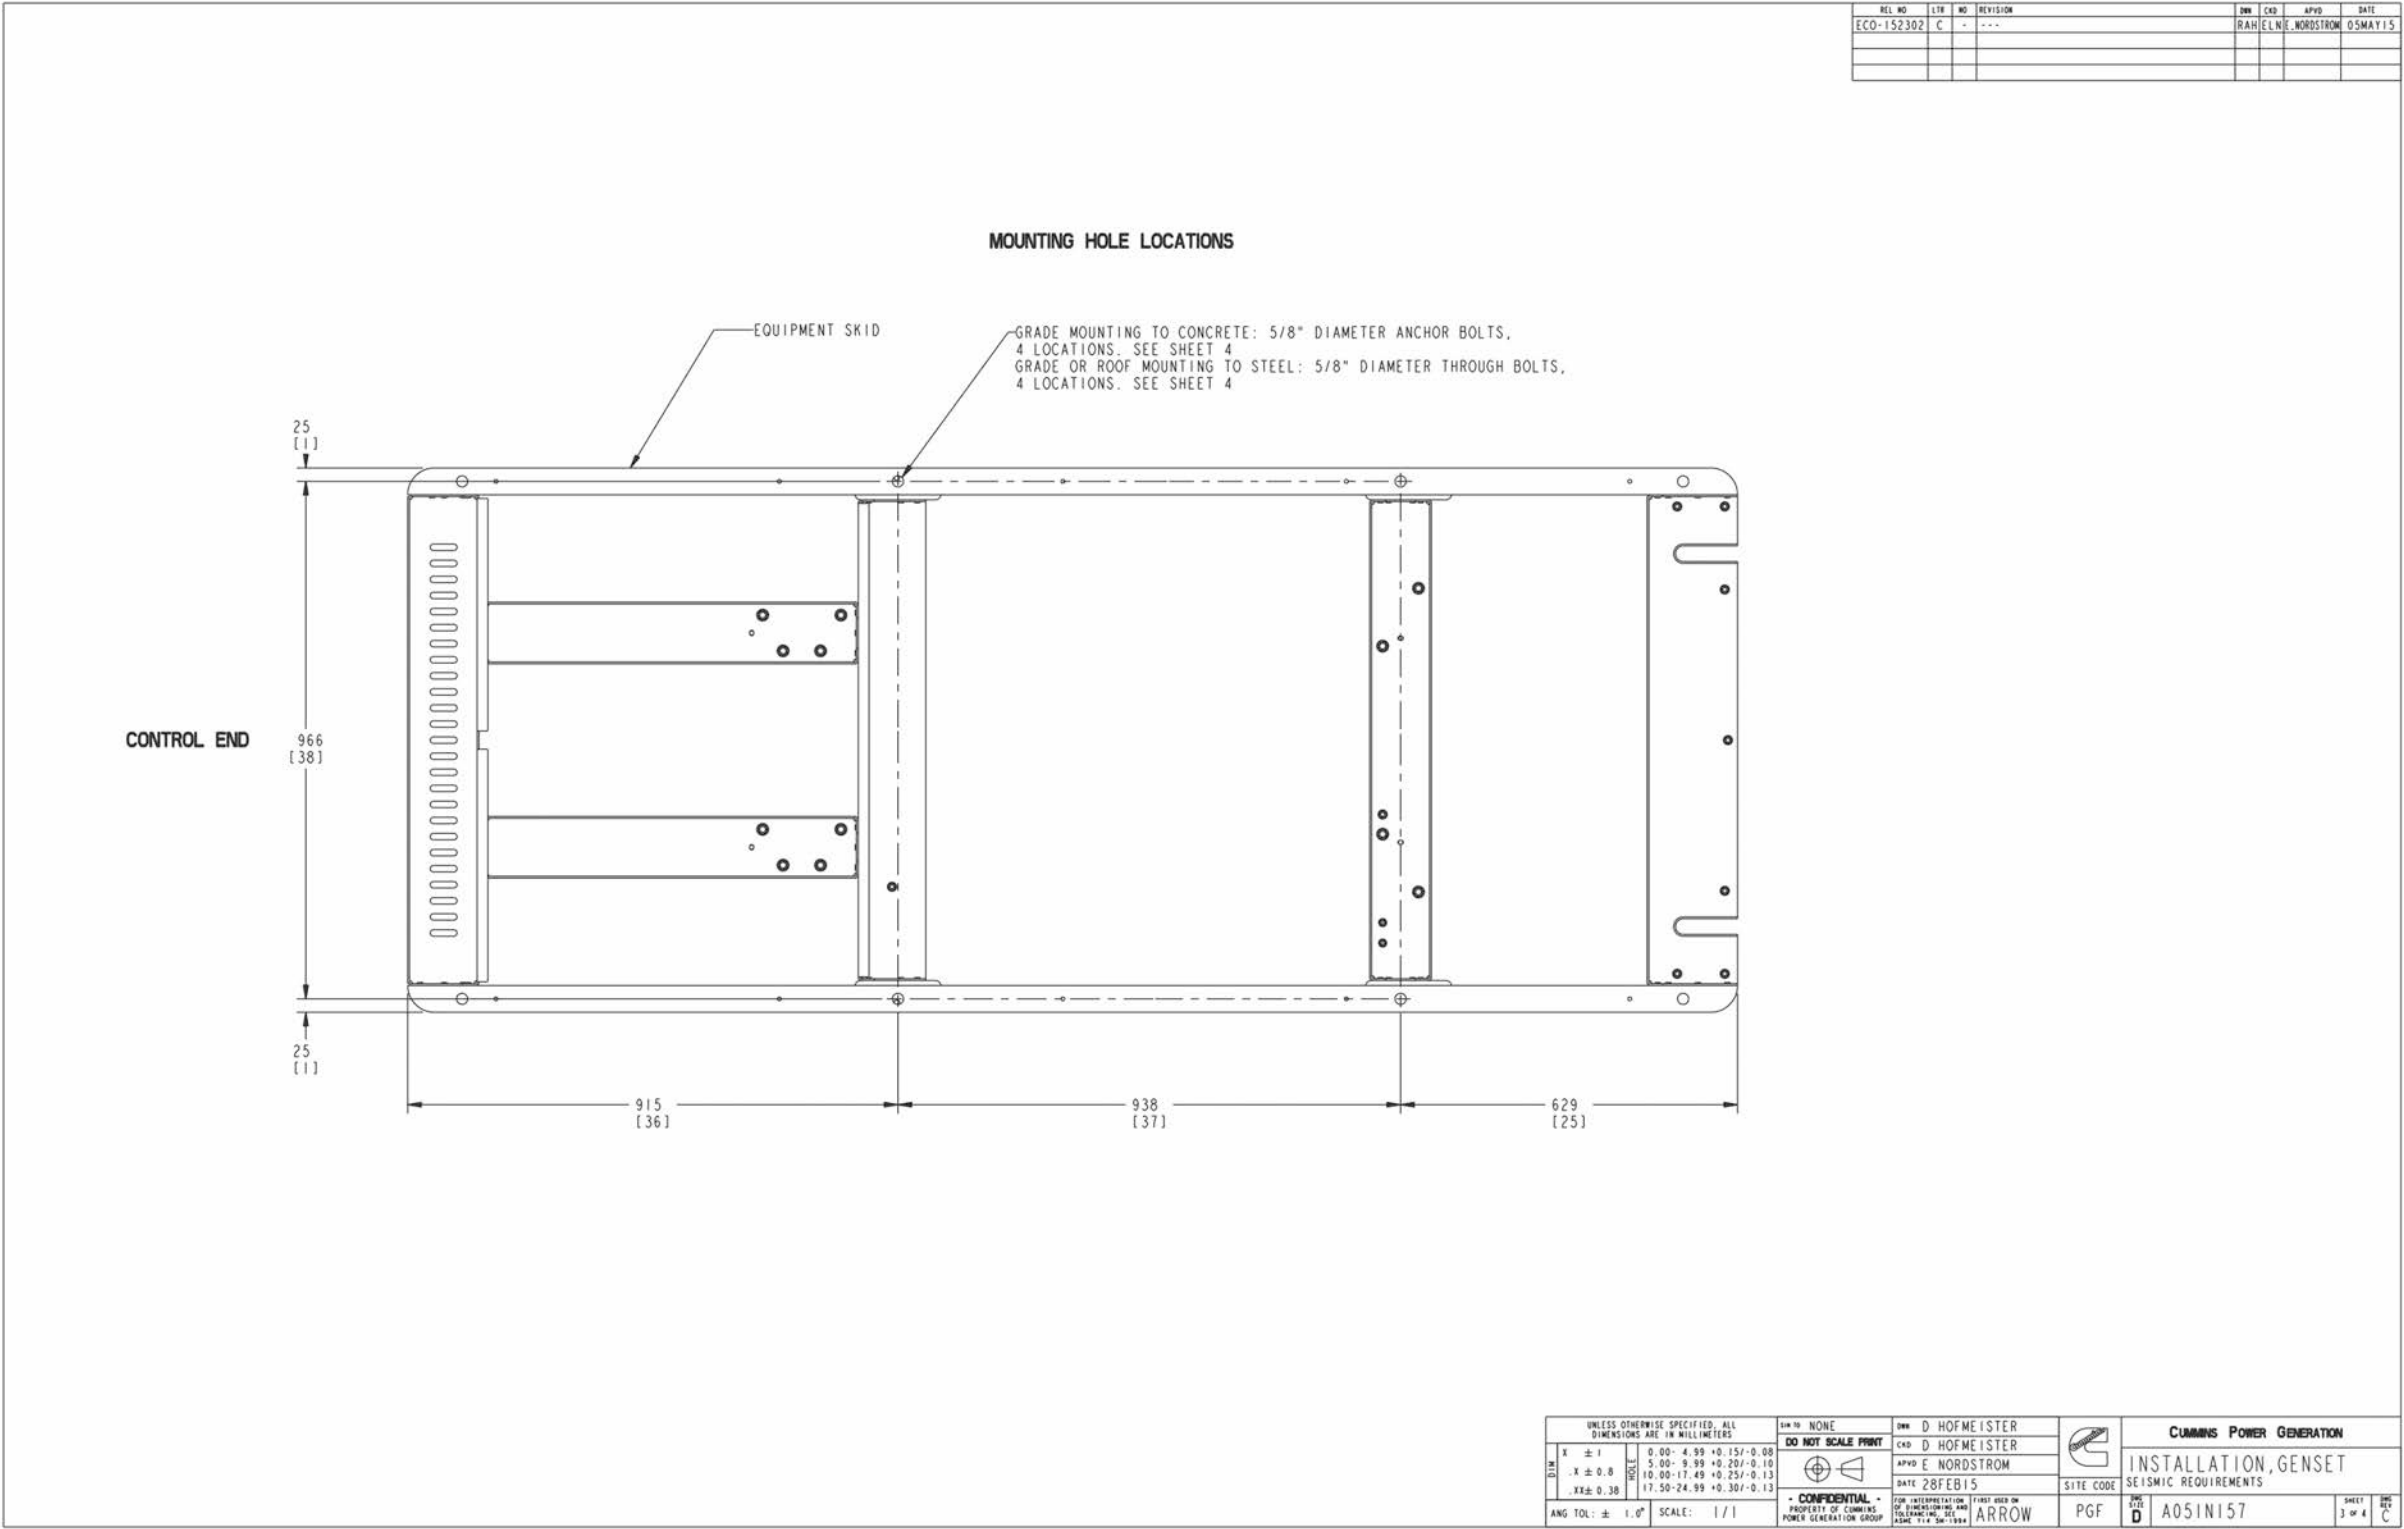


FIGURE 76. SEISMIC INSTALLATION REQUIREMENTS (SHEET 3 OF 4)

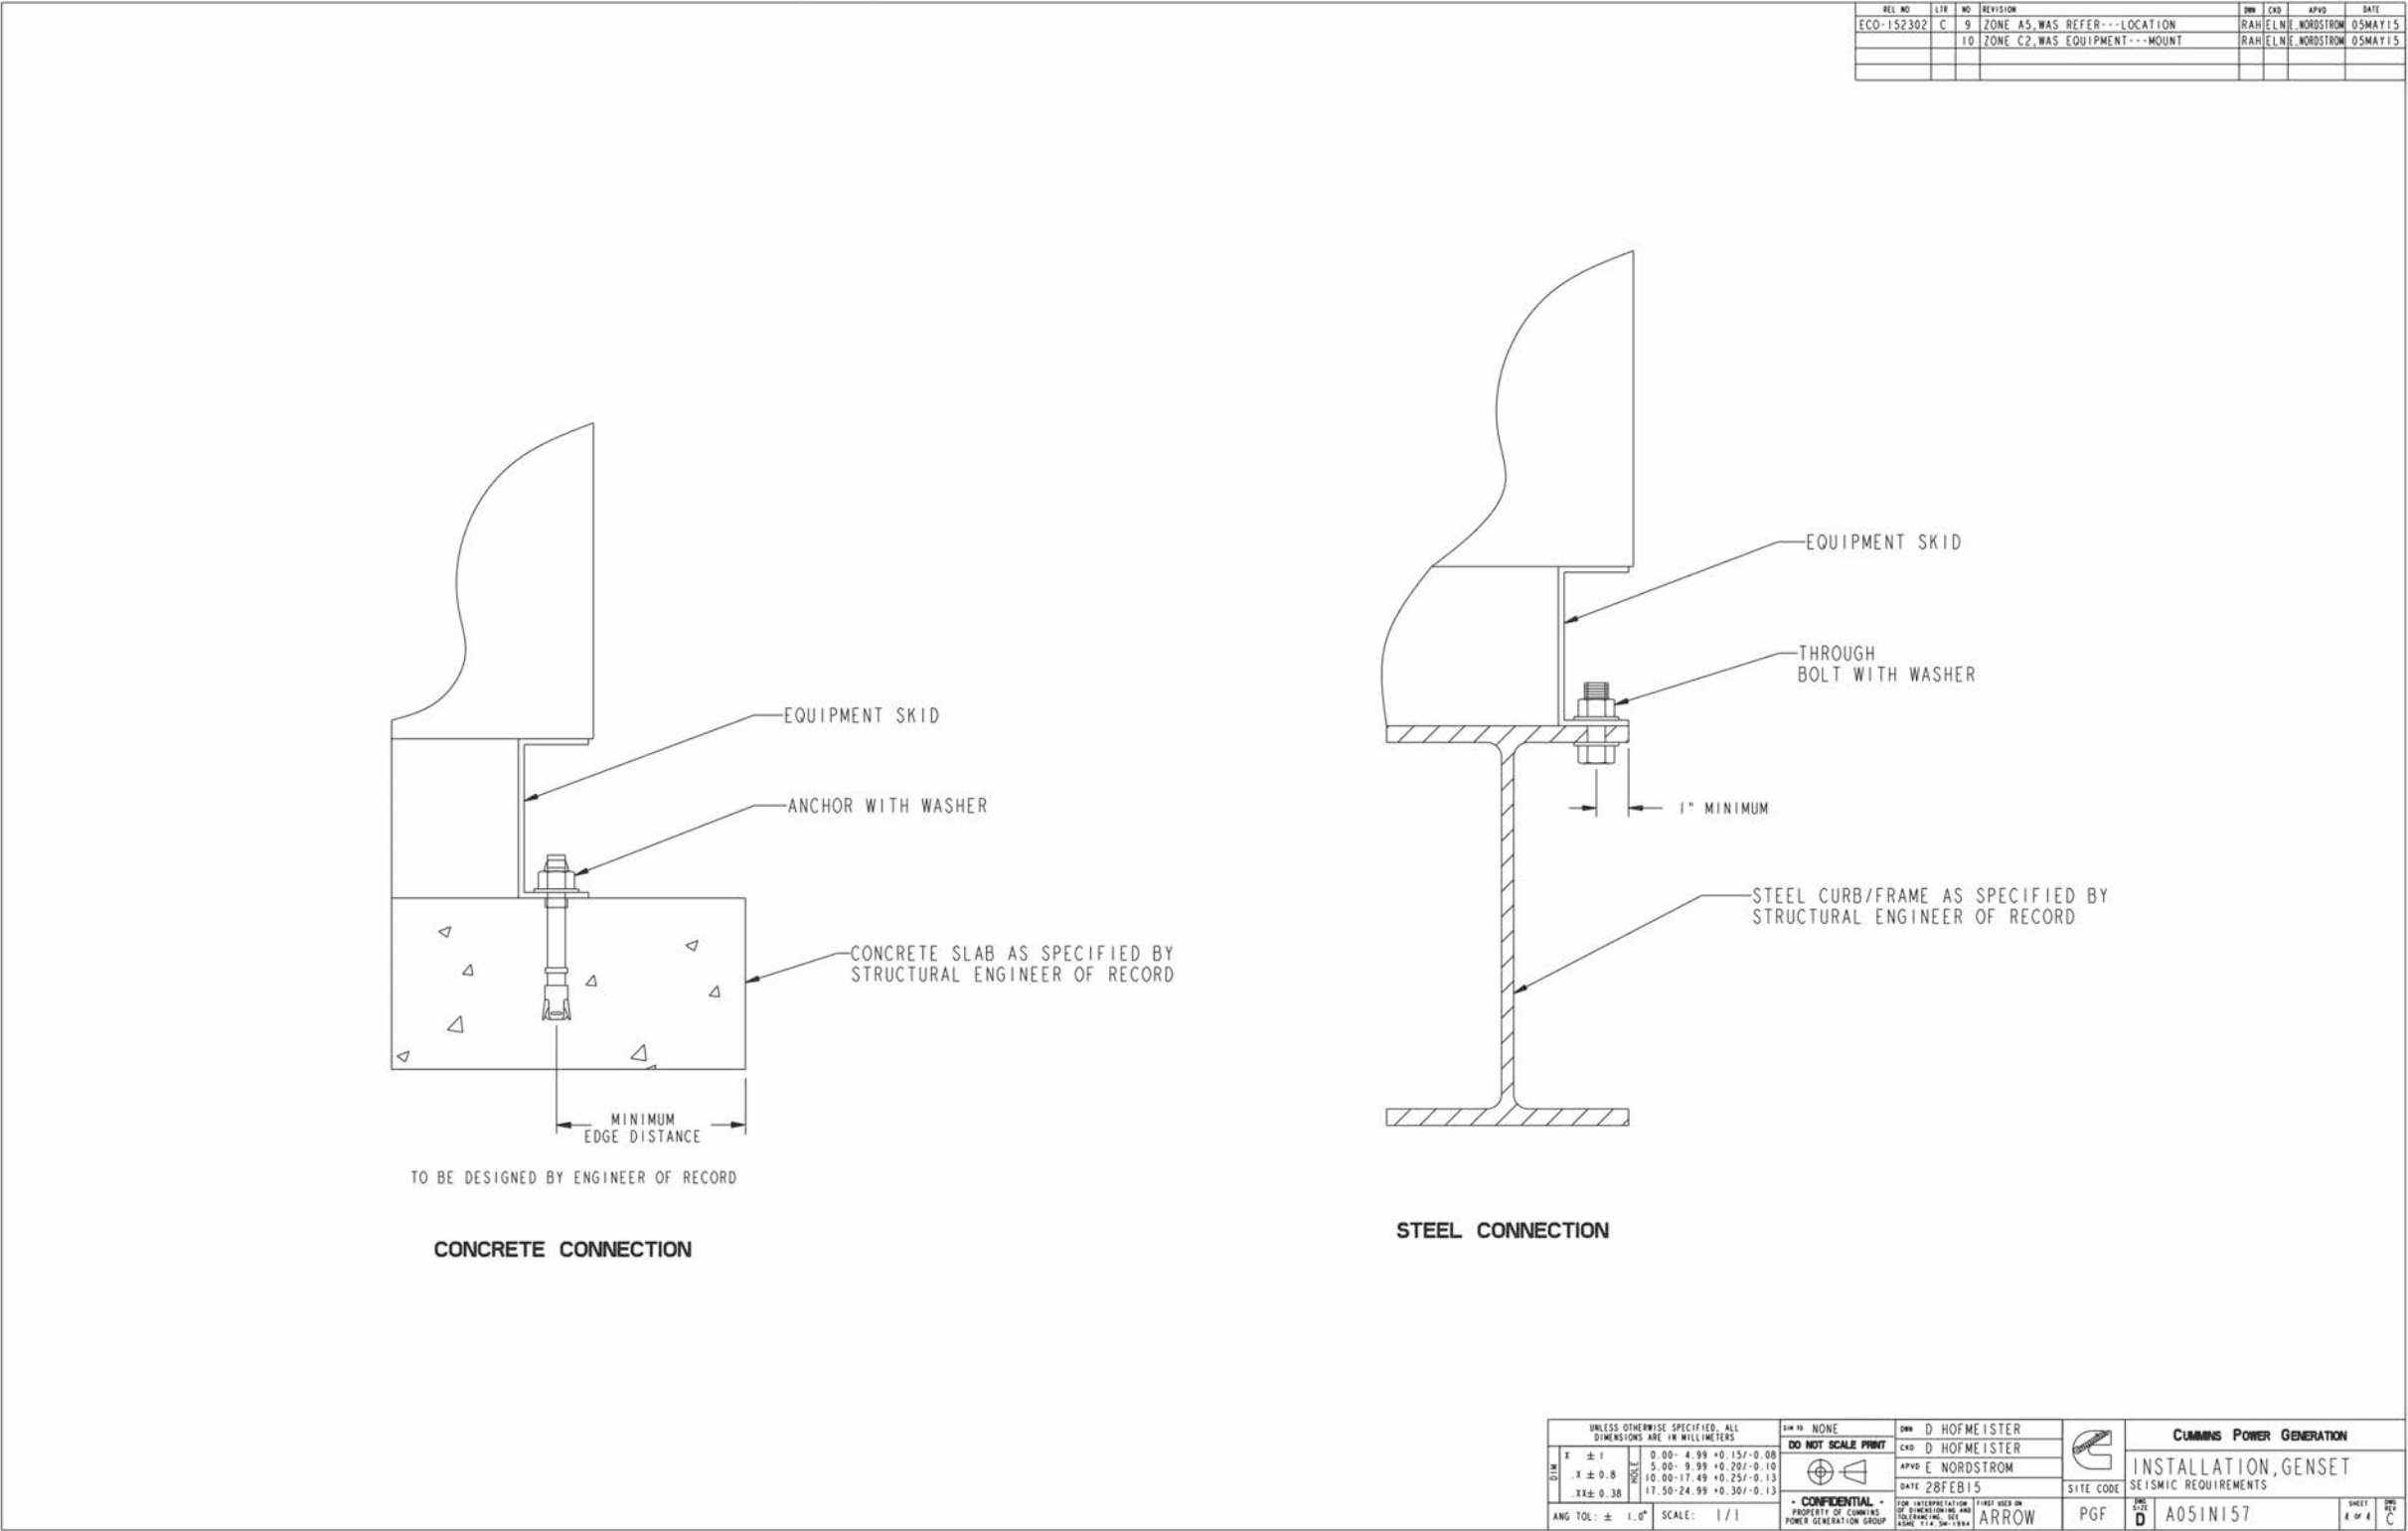


FIGURE 77. SEISMIC INSTALLATION REQUIREMENTS (SHEET 4 OF 4)

power.cummins.com

Copyright © 2016 Cummins Inc. All rights reserved.

Cummins Power Generation, the "C" logo, and Cummins are trademarks of Cummins Inc.

PowerCommand, AmpSentry, InPower and "Our energy working for you." are trademarks of Cummins Power Generation Inc.

Other company, product, or service names may be trademarks or service marks of others.

Specifications are subject to change without notice.

