


Pow R kraft®

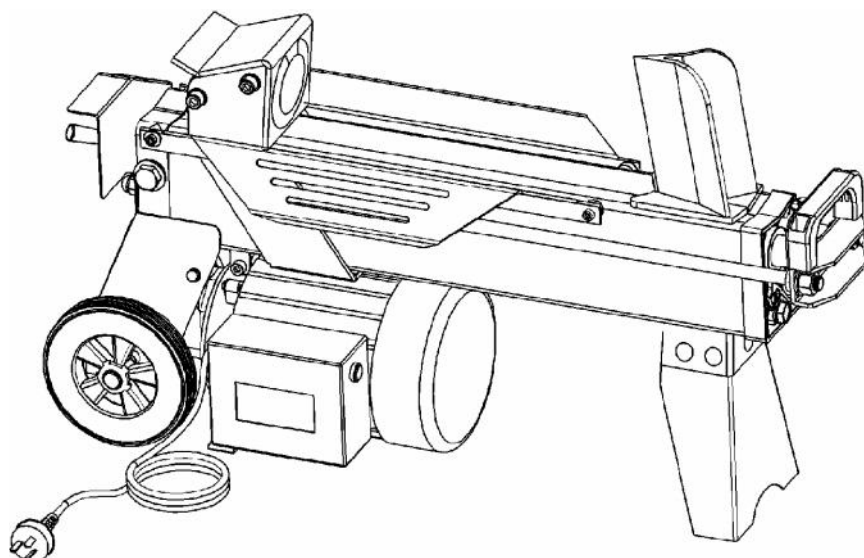

FOR YOUR SAFETY

**READ AND UNDERSTAND THE ENTIRE MANUAL
BEFORE OPERATING MACHINE**

MODLE NUMBER : 65556

SERIAL NUMBER : _____

Both model number and serial number may be found on the main label.
You should record both of them in a safe place for future use.

Support@Powrkraft.com

Save This Manual for Future Reference

4 TON LOG SPLITTER – Owner's Manual

SAFETY WARNINGS & CAUTIONS

SAFETY WARNINGS & INSTRUCTIONS

SYMBOL AFFIXED TO THE MACHINE

• UNDERSTAND YOUR LOGSPLITTER

Read and understand the owner's manual and labels affixed to the log splitter. Learn its application and limitations as well as the specific potential hazards particular to it.



• DRUGS, ALCOHOL AND MEDICATION

Do not operate the log splitter while under the influence of drugs, alcohol, or any medication that could affect your ability to use it properly.

• AVOID DANGEROUS CONDITIONS

Put the log splitter on a 23" – 30" high, stable, flat, and level work bench where there is plenty of room for handling, and help the operator stay alert. Bolt the log splitter to the work surface if it tends to slip, walk, or slide.

Keep your work area clean and well lit. A cluttered area invites injuries.

Do not use the log splitter in wet or damp areas or expose it to rain.

Do not use it in areas where fumes from paint, solvents or flammable liquids pose a potential hazard.

• INSPECT YOUR LOG SPLITTER

Check your log splitter before turning it on. Keep guards in place and in working order. Form a habit of checking to see that keys and adjusting wrenches are removed from tool area before turning it on. Replace damaged, missing or failed parts before using it.



• DRESS PROPERLY

Do not wear loose clothing, gloves, neckties or jewelry (rings, wrist watches). They can be caught in moving parts. Wear protective electrically non conductive gloves and non-skid footwear are recommended when working. Wear protective hair covering to contain long hair, preventing it from getting caught in machinery.



• PROTECT YOUR EYES AND FACE

Any log splitter may throw foreign objects into the eyes. This can cause permanent eye damage. Always wear safety goggles.

Everyday eyeglasses have only impact resistant lenses. They are not safety glasses.



Do not put the log splitter on the ground for operations. This is awkward operating position that the operator has to bring his face close to the machine, and thus risks being struck by wood chips or debris.

• EXTENSION CORDS

Improper use of extension cords may cause inefficient operation of the log splitter which can result in overheating.

18ga. @ 20ft, 16ga. @ 50ft, 12ga @ 100ft, 10ga @ 200ft

Avoid use of free and inadequately insulated connections. Connections must be made with protected material suitable for outdoor use.

• AVOID ELECTRICAL SHOCK

Check that the electric circuit is adequately protected and that it corresponds with the power, voltage and frequency of the motor. Check that there is a ground connection, and a regulation differential switch upstream.

Prevent body contact with grounded surfaces: pipes, radiators, ranges, and refrigerator enclosures.

Never open the pushbutton box on the motor. Should this be necessary, contact a qualified electrician.

Make sure your fingers do not touch the plug's metal prongs when plugging or unplugging the log splitter.

• KEEP VISITORS AND CHILDREN AWAY

The log splitter must be always operated by one person only. Other people should keep a safe distance from the work area, especially when the log splitter is under operations. Never have another person help you with freeing jammed log.



• INSPECT YOUR LOG

Make sure there are no nails or foreign objects in log to be split. The ends of the logs must be cut square. Branches must be cut off flush with the trunk.

• DON'T OVERREACH

Floor must not be slippery.

Keep proper footing and balance at all times.

Never stand on log splitter. Serious injury could occur if the tool is tipped or if the cutting tool is unintentionally contacted. Do not store anything above or near the log splitter where anyone might stand on the tool to reach them.

• AVOID INJURY FROM UNEXPECTED ACCIDENT

Always pay full attention to the movement of the log pusher.

Do not attempt to load the log on until the log pusher has stopped.

Keep hands out of the way of all moving parts.



• PROTECT YOUR HANDS

Keep your hands away from splits and cracks which open in the log; They may close suddenly and crush or amputate an appendage. Do not remove jammed logs with you hands.



• DON'T FORCE TOOL

It will do a better and safer job at its design rate. Never try to split logs larger than those indicated in the specifications table. This could be dangerous and may damage the machine. Don't use log splitter for a purpose for which it was not intended.

• NEVER LEAVE TOOL RUNNING UNATTENDED

Don't leave tool until it has come to a complete stop and unplugged.

• DISCONNECT POWER

Unplug when not in use, before making adjustments, changing parts, cleaning, or working on the log splitter; Consult technical manual before servicing.



• PROTECT THE ENVIRONMENT

Take used oil to an authorized collection point or follow the stipulations in the country where the log splitter is used. Do not discharge into drains, soil or water.



• MAINTAIN YOUR LOG SPLITTER WITH CARE

Keep the log splitter clean for best and safest performance.

• MAKE THE WORKSHOP CHILDPROOF

Lock the shop. Disconnect master switches. Store the log splitter away from children and others not qualified to use it.

TABLE OF CONTENTS

Front Page.....	1
Safety Warnings & Cautions	2-4
Application Conditions	5
Specifications	5
Electrical Requirements	5
Set up and Preparation for Operation	6-7
Wiring Diagram	7
Plumbing Diagram	7
Log Splitter Operation	8-9
Freeing a Jammed Log	9
Replacing Hydraulic Oil	10
Sharpening Wedge	10
Trouble Shooting	11
Parts Schematic	12
Parts List.....	13-16

APPLICATION CONDITIONS

This log splitter is a home use model. It is designed for operating under ambient temperatures between 41°F and 104°F. The surrounding humidity should be less than 50% at 104°F. It can be stored or transported under ambient temperatures between -13°F and 131°F.

SPECIFICATIONS

Model Number		65556
Motor		1500W 110 Volt
Log Capacity	Diameter*	10" / Most Wood 12"
	Length	20"
Splitting Force		4 ton
Hydraulic Pressure		2320 PSI
Hydraulic Oil Capacity		3.7 qt.
Overall Size	Length	37"
	Width	12"
	Height	20"
Weight		97 lb.

* The diameter of the log is indicative – a small log can be difficult to split when it has knobs or a particularly tough fiber. On the other hand, it may not be difficult to split logs with regular fibers even if its diameter exceeds the max figure indicated above.



ELECTRICAL REQUIREMENTS

Connect the main leads to a standard 110 volt electrical supply which has protection devices of under-voltage, over-voltage, over-current as well as a residual current device (RCD) with a maximum residual current rated at 0.03A.

SET UP AND PREPARATION FOR OPERATION

1. Bolt the Support Leg to the Log Splitter, lift the log splitter by the handles at both ends and place it on a 2' – 2.5 ft. high, stable, flat and level work surface.
2. Familiarize yourself with the controls and features of this log splitter in the illustrations.

1. Log Pusher
2. Work Table
3. Wedge
4. Lift Handle
5. Support Leg
6. Log Retaining Plates
7. Switch
8. Motor
9. Pushbutton Box
10. Wheels for Minor Moving ONLY.
11. Hydraulic Control Lever
12. Control Lever Guard
13. Bleed Screw
14. Oil Drain Bolt w/ Dipstick

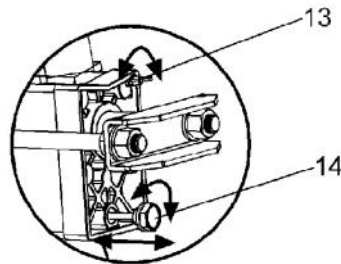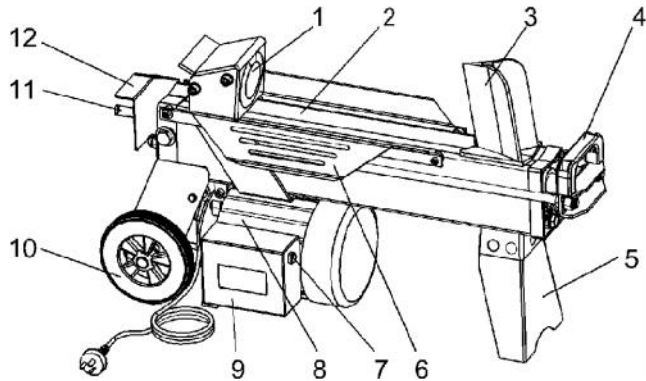

Before operating the log splitter, the Bleed Screw should be loosened by a few rotations until air can go in and out of the oil tank smoothly.

Air flow thru the Bleed Screw hole should be detectable while the log splitter is under operations.

Before moving the log splitter, make sure the Bleed Screw is tightened to avoid oil leaking from this point.



FAILURE TO LOOSEN THE BLEED SCREW WILL KEEP THE SEALED AIR IN HYDRAULIC SYSTEM BEING COMPRESSED AFTER BEING DECOMPRESSED. SUCH CONTINUOUS AIR COMPRESSION AND DECOMPRESSION WILL BLOW OUT THE SEALS OF THE HYDRAULIC SYSTEM AND CAUSE PERMANENT DAMAGE TO THE LOG SPLITTER.


15. Max Pressure Limiting Screw




**DO NOT ADJUST THE MAX
PRESSURE LIMITING SCREW !**

Max pressure was set by the manufacturer and the max pressure limiting screw is sealed with glue to ensure the log splitter works under pressure no more than 4 tons. The setting was done by qualified mechanic with professional instruments.


Unauthorized resetting will void warranty and cause hydraulic pump to fail. *RESULTING IN SERIOUS INJURY AS WELL AS DAMAGE TO THE MACHINE.*

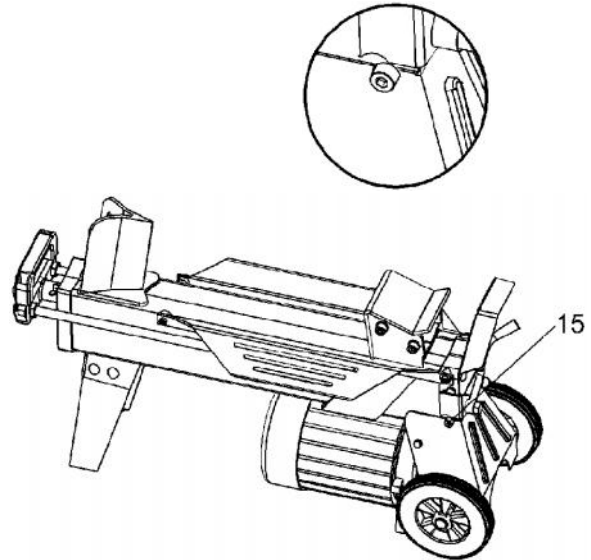


WIRING DIAGRAM

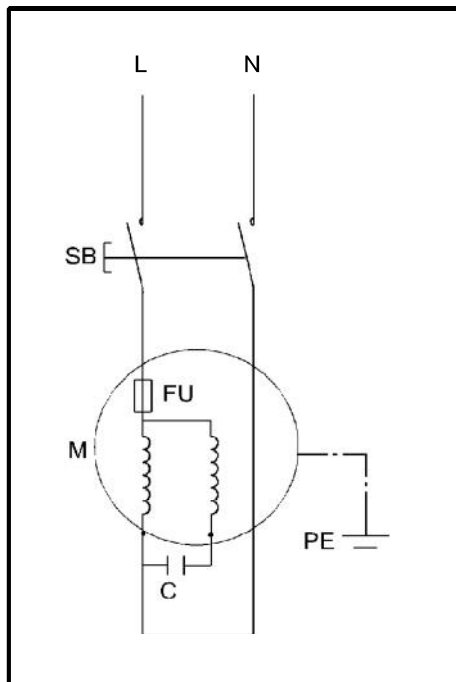

PLUMBING DIAGRAM

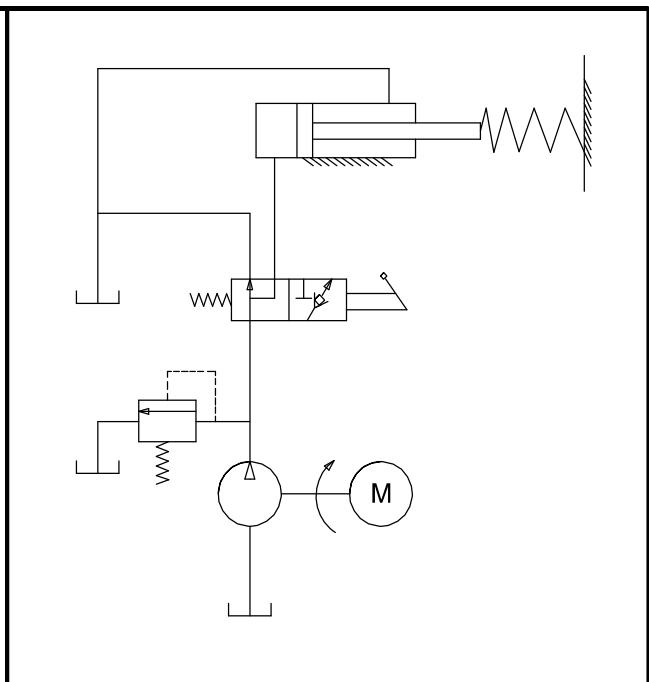

LOG SPLITTER OPERATION

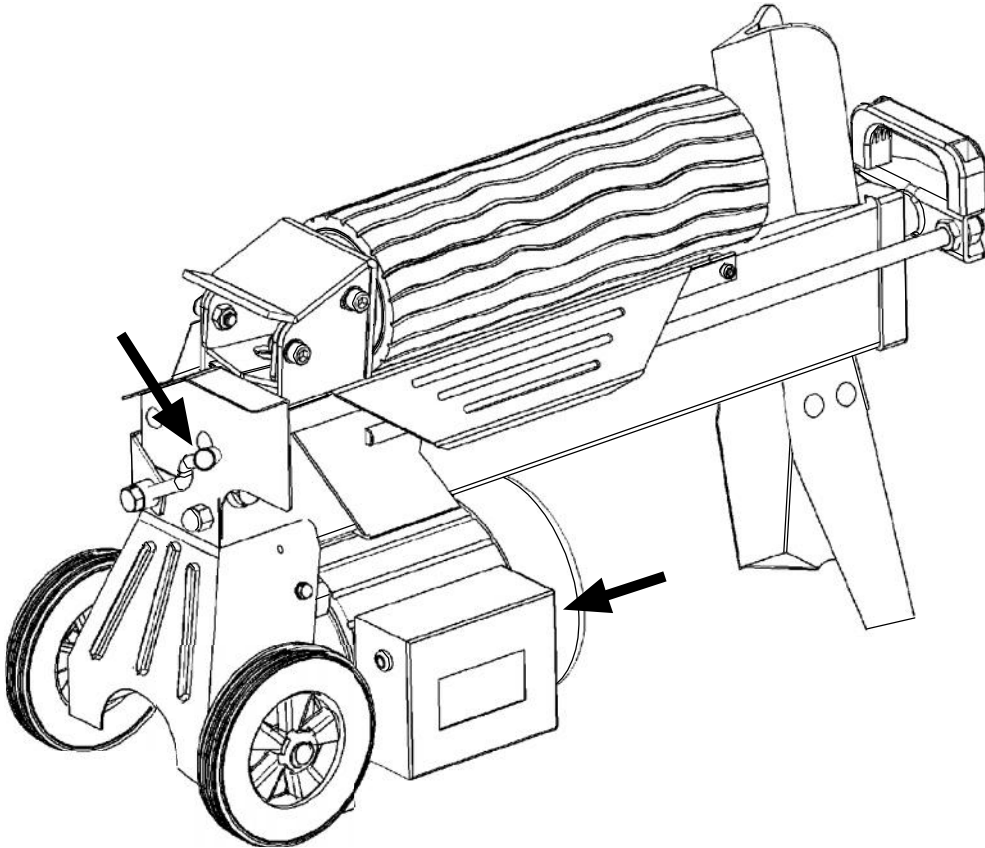

This log splitter is equipped with “ZHB” control system that requires to be operated by both hands of the user – Left hand controls the hydraulic control lever while right hand controls the pushbutton switch. The log splitter will freeze upon absence of either hand. Only after both hands release the controls, the log pusher starts to return backward to the starting position.


Trigger type lock-out device is adopted to avoid accidental Hydraulic Control Lever pushdown. To operate the Hydraulic Control Lever, draw the Trigger backward with the index finger before push the Hydraulic Control Lever forward.



Never force the log splitter for more than 5 seconds by keeping pressure on it to split excessively hard wood. Excessive Force Will Void Warranty.

After this time interval, the oil under pressure will be overheated and the machine could be damaged. For such extremely hard log, rotate it by 90° to see whether it can be split in a different direction. In any case, if you are not able to split the log, this means that its hardness exceeds the capacity of the machine and thus that log should be discarded to protect the log splitter.


Always set logs firmly on the log retaining plates and work table. Make sure logs will not twist, rock or slip while being split. Do not force the blade by splitting the log on the upper part. This will break the blade or damage the machine.

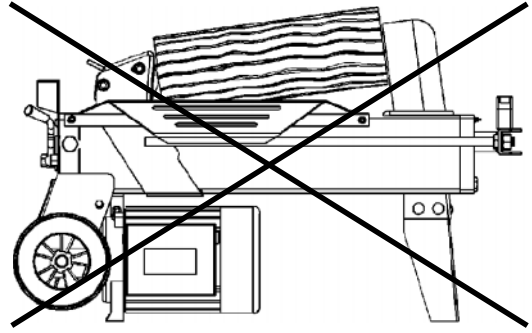


Break log in the direction of its growing grain. Do not place log across the log splitter for splitting. It may be dangerous and may seriously damage the machine.
Do not attempt to split 2 pieces of logs at the same time. One of them may fly up and hit you.

FREEING A JAMMED LOG

- ♦ Release both controls.
- After the log pusher moves back and completely stops at its starting position, insert a wedge wood under the jammed log.
- Start the log splitter to push the wedge wood to go completely under the jammed one.
- ♦ Repeat above procedure with sharper slope wedge woods until the log is completely freed.

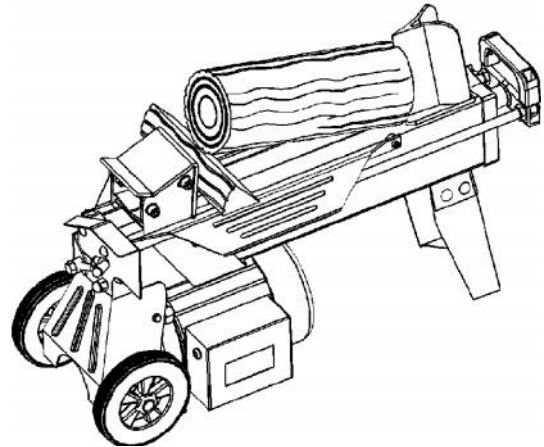

Do not try to knock the jammed log off. Knocking about will damage the machine or may launch the log and cause accident.

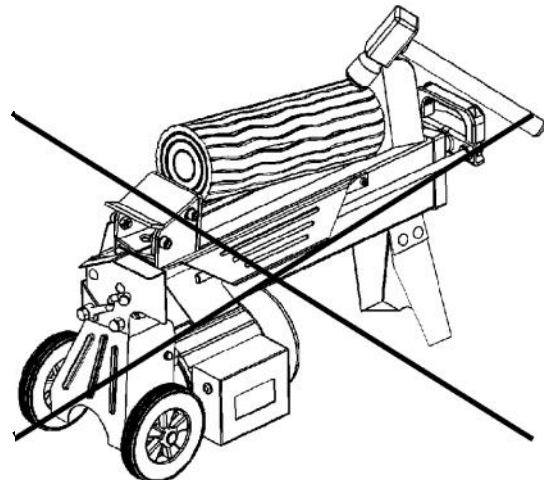


REPLACING HYDRAULIC OIL

Replace the Hydraulic oil in the log splitter after every 150 hours of use. Take following steps to replace it.

- Make sure all moving parts stop and the log splitter is unplugged.
- Unscrew Oil Drain Bolt with Dipstick to remove it.
- Turn the log splitter on the Support Leg side over a 1gal capacity container to drain the hydraulic oil off.
- Turn the log splitter on the the motor side.
- Refill fresh hydraulic oil at the volume as per the hydraulic oil capacity of a particular model indicated in above specifications table.
- Clean the surface of Dipstick on the Oil Drain Bolt and put it back into the oil tank while keep the log splitter vertically.
- Make sure the level of the refilled oil is just between 2 grooves around the Dipstick.
- Clean the Oil Drain Bolt before thread them back. Make sure they are tightened to avoid leakage before place the log splitter horizontally.

Periodically check oil level to ensure it is between 2 grooves around the Dipstick. Upon Lower oil level, oil refilling is required.

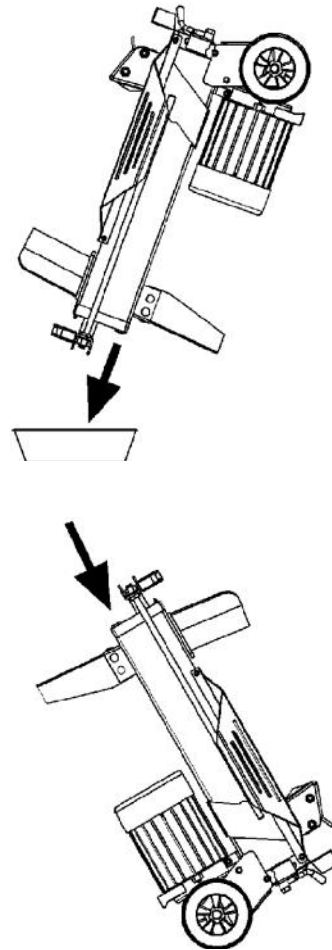

log splitter's hydraulic

Following hydraulic oils or equivalent are recommend for the transmission system:

SHELL Tellus 22

MOBIL DTE 11

BP Energol HLP-HM 22

10W (22-32 ISO Viscosity) Hydraulic Tractor Fluid / Heavy Duty Hydrostatic Oil


SHARPENING WEDGE

After using the logsplitters for some time, sharpen the wedge of the log splitter using a fine-toothed file and smooth any burrs or crushed area along the cutting edge.

TROUBLE SHOOTING

PROBLEM	PROBABLE CAUSE	REMEDY SUGGESTED
Fails to split logs	Log is improperly positioned	Refer to “Log Splitter Operation” section for perfect log loading
	The sizes or hardness of the log	Reduce the log sizes before splitting it on
	Wedge cutting edge is blunt	Refer to to sharpen the cutting edge
	Oil leaks	Locate leak(s) and contact the dealer
	Unauthorized adjustment made on Screw	Contact the dealer
The log pusher moves jerkily making unfamiliar noise or vibrating	Lack of hydraulic oil and excessive air in the hydraulic system	Check oil level for possible oil refilling Contact the dealer
Oil leaks around cylinder ram or from other points	Air sealed in hydraulic system while operating	Loosen Bleed Screw by 3 ~ 4 rotations before operating the log splitter
	Bleed Screw is not tightened before moving the log splitter	Tighten the Bleed Screw up before moving the log splitter
	Oil Drain Bolt with Dipstick is not tight	Tighten the Oil Drain Bolt with Dipstick
	Hydraulic Control Valve Assembly and / or seal(s) worn	Contact the dealer

PARTS SCHEMATIC

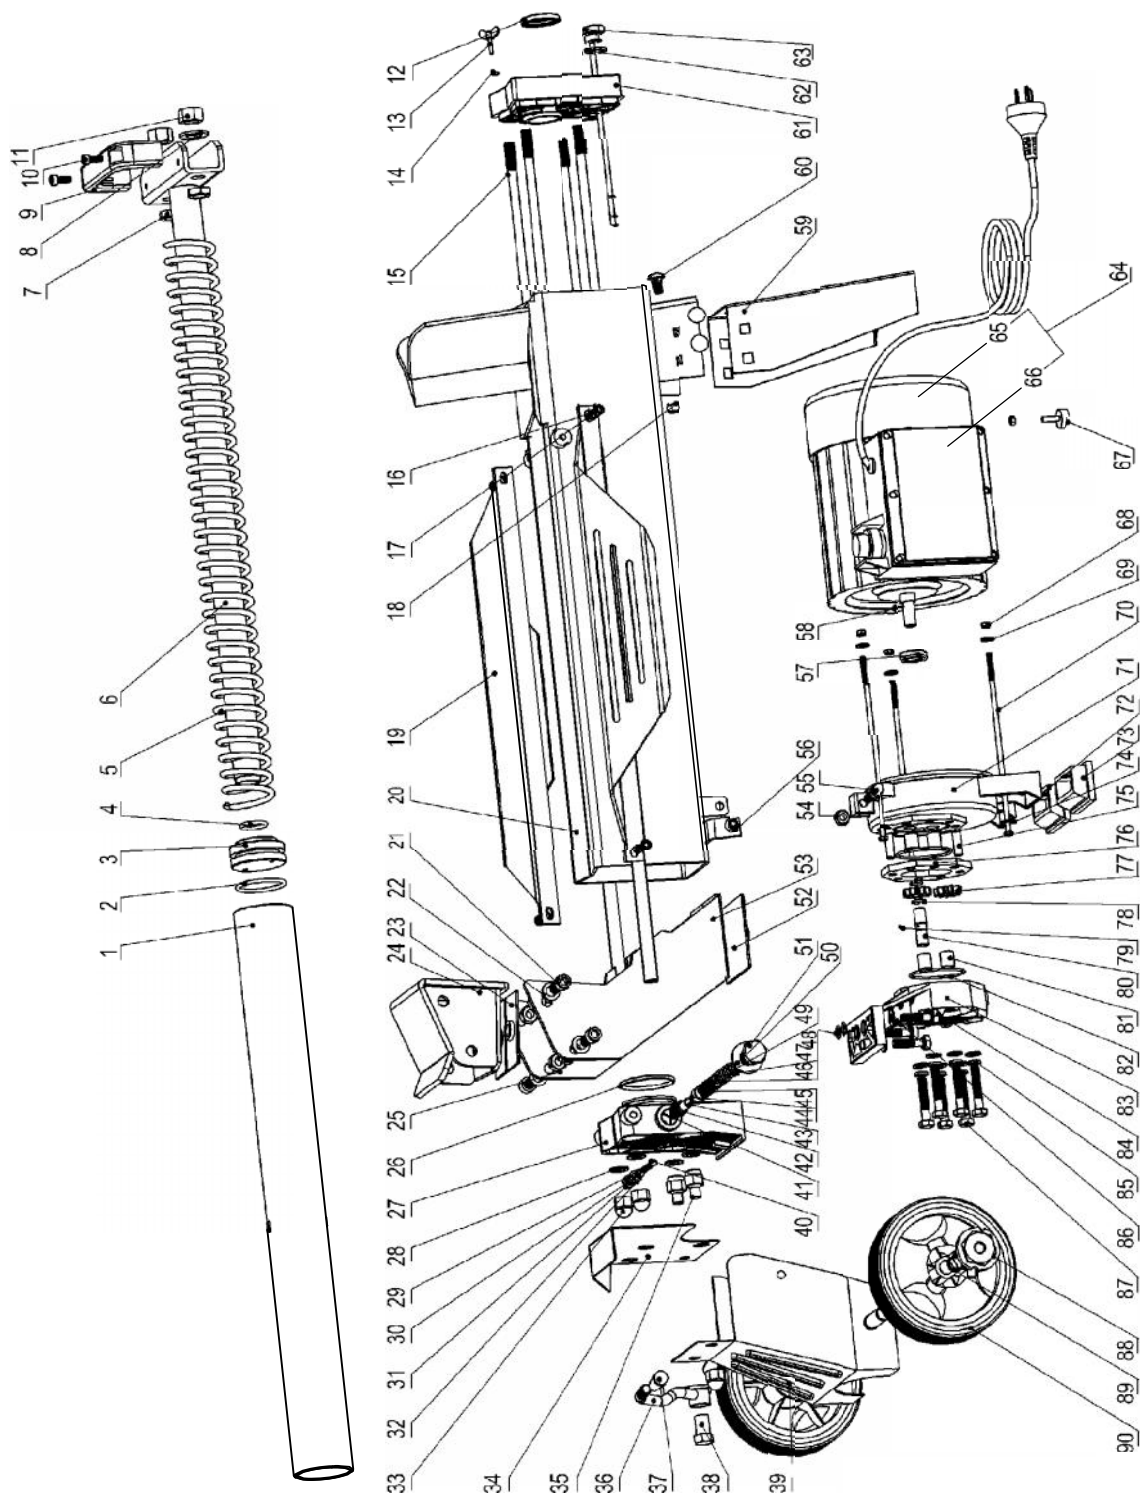

Spare Parts List For 4 Ton Log Splitter Model 65556

Part No..	Description	Quantity	
LS4T-52-1	Cylinder	1	
LS4T-52-2	Piston O-ring	1	
LS4T-52-3	Piston	1	
LS4T-52-4	O-ring	1	
LS4T-52-5	Spring	1	
LS4T-52-6	Position Rod Weldment	1	
LS4T-52-7	Nut	2	
LS4T-52-8	Washer	2	
LS4T-52-9	Moving Handle	1	
LS4T-52-10	Hex. Bolt	2	
LS4T-52-11	Nut, M14	2	
LS4T-52-12	Plastic Seal	1	
LS4T-52-13	Wing Screw / Bleed Screw	1	
LS4T-52-14	O-ring	1	
LS4T-52-15	Long Stub	4	
LS4T-52-16	Hex. Bolt	6	
LS4T-52-17	Spring washer	4	
LS4T-52-18	Nut	5	
LS4T-52-19	Support Plate	2	
LS4T-52-20	Tube Frame / Oil Tank	1	
LS4T-52-21	Hex. Bolt	4	
LS4T-52-22	Washer	4	
LS4T-52-23	Upper Plastic Insert	1	
LS4T-52-24	Log Pusher Weldment	1	
LS4T-52-25	Nut	4	
LS4T-52-26	O-ring	1	
LS4T-52-27	Cylinder Cover - Left	1	
LS4T-52-28	Copper Gasket	4	

LS4T-52-29	Safety Valve Spring	1	
LS4T-52-30	Screw	1	
LS4T-52-31	Safety Valve Bolt	1	
LS4T-52-32	O-ring	1	
LS4T-52-33	Round Head Nut	3	
LS4T-52-34	Lever Guard	1	
LS4T-52-35	Nut	2	
LS4T-52-36	Lever Weldment	1	
LS4T-52-37	Lever Head	1	
LS4T-52-38	Lever Nut	1	
LS4T-52-39	Wheel Frame Plate Weldment	1	
LS4T-52-40	Steel Ball, 6	1	
LS4T-52-41	Circlip	1	
LS4T-52-42	Restore Valve Spring	1	
LS4T-52-43	Valve Rod	1	
LS4T-52-44	O-ring	1	
LS4T-52-45	Valve Sleeve	1	
LS4T-52-46	O-ring	5	
LS4T-52-47	O-ring	2	
LS4T-52-48	Sliding Sleeve Spring	1	
LS4T-52-49	Sliding Sleeve	1	
LS4T-52-50	Washer	1	
LS4T-52-51	Valve Plug	1	
LS4T-52-52	Lower Plastic Insert	1	
LS4T-52-53	Drawing Weldment	1	
LS4T-52-54	Loose Nut	1	
LS4T-52-55	Hex. Bolt	1	
LS4T-52-56	Washer	2	
LS4T-52-57	Motor Shaft Seal	1	
LS4T-52-58	Steel Ball, 2.5	1	
LS4T-52-59	Support Leg	1	
LS4T-52-60	Carriage	5	

LS4T-52-61	Cylinder Cover - Right	1	
LS4T-52-62	Dipstick Gasket	1	
LS4T-52-63	Dipstick	1	
LS4T-52-64	Motor with switch	1	
LS4T-52-65	Motor	1	
LS4T-52-66	Switch box	1	
LS4T-52-67	Bolt	1	
LS4T-52-68	Nut	1	
LS4T-52-69	Spring Washer	3	
LS4T-52-70	Bolt	3	
LS4T-52-71	Motor Cover	1	
LS4T-52-72	Motor Support Shoe - Left	1	
LS4T-52-73	Motor Support Shoe - Right	1	
LS4T-52-74	Washer	9	
LS4T-52-75	Pin	2	
LS4T-52-76	Gear Housing Plate	1	
LS4T-52-77	Gear	2	
LS4T-52-78	Gear Shaft Snap Washer	2	
LS4T-52-79	Pin	1	
LS4T-52-80	Gear Shaft	1	
LS4T-52-81	Sliding Bearing	4	
LS4T-52-82	O-ring	2	
LS4T-52-83	Pump Cover	1	
LS4T-52-84	Bolt	3	
LS4T-52-85	Spring washer	9	
LS4T-52-86	Washer	9	
LS4T-52-87	Bolt	6	
LS4T-52-88	Wheel Cover	2	
LS4T-52-89	Wheel Shaft Snap Ring	2	
LS4T-52-90	Wheel	2	

Betst Products, LLC. / Pow'R'kraft Log Splitter

WARRANTY & REGISTRATION

TIYA Lawn & Garden Products warrants to original Purchaser that its product is free from major defects in material under normal use and service for a period of 2 Years from the date the product is purchased. Warranty Void if product has been disassembled by unauthorized personnel.

TIYA Lawn & Garden Products obligation under this warranty is to repair or replace defective product upon approval of our USA Agent; Betst Products 83371 Melton Rd. N., Creswell OR 97426 that Warranty Claim is Valid. Product shall be returned upon request of Betst Products. Transportation charges to be prepaid by seller.

TIYA Lawn & Garden Products assumes no responsibility for outside labor.

THE GOODS SOLD PURSUANT TO THIS AGREEMENT ARE SOLD AS IS BY AGENT BETST PRODUCTS. BETST PRODUCTS MAKES NO WARRANTY. THE ONLY WARRANTY IS THAT OF THE MANUFACTURER AND THE PURCHASER MUST LOOK SOLELY TO THE MANUFACTURER FOR WARRANTY. THERE SHALL BE NO LIABILITY FOR PRODUCT LIABILITY OR LIABILITY ON THE PART OF BETST PRODUCTS FOR OR TIYA LAWN & GARDEN PRODUCTS ANY GENERAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE SALE OR USE OF ANY PRODUCTS SOLD HEREUNDER. BETST PRODUCTS & TIYA LAWN & GARDEN PRODUCTS MAKES NO WARRANTIES, EXPRESS OR IMPLIED, (INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY OR FITNESS OF THE PRODUCTS FOR ANY PURPOSE) WITH RESPECT TO THE PRODUCTS COVERED BY THIS AGREEMENT EXCEPT AS IN THIS PARAGRAPH OTHERWISE EXPRESSLY PROVIDED.

THIS IS THE SOLE AND ONLY WARRANTY OF POW'R'KRAFT LOG SPLITTER AND NO OTHER WARRANTY IS APPLICABLE, EITHER EXPRESSED OR IMPLIED, IN FACT OR BY LAW, INCLUDING ANY WARRANTY AS TO MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE OR PURPOSE.

This warranty shall not be interpreted to render TIYA Lawn & Garden Products or our USA agent liable for injury or damages of any kind or nature, direct, consequential, or contingent, to person or property.

The sole and only remedy in regard to any defective products shall be the replacement thereof herein provided, and neither TIYA Lawn & Garden Products nor our agent Betst Products shall not be liable for any consequential, special, incidental or punitive damages resulting from or caused by any such defects.

TIYA Lawn & Garden Products reserves the right to make improvements in design or changes in specifications at any time, without incurring any obligations to owners of units previously sold.

No one is authorized to alter, modify, or enlarge this warranty nor the exclusions, limitations, and reservation.

**WARRANTY VOID IF REGISTRATION IS NOT
MAILED WITHIN 15 DAYS OF PURCHASE DATE**

REGISTRATION

Log Splitter Model # _____

Purchase Date ____/____/____

Purchased From: _____

Purchased by, Name: _____

Owner Address: _____

City: _____ County: _____ ST: _____ Zip Code: _____

Phone: _____ Email: _____

Attach a Copy of Proof of Purchase

Acceptance of responsibility:

I (Purchaser) have read operators manual and Limited Warranty or someone has read/and explained all instructions to me. I understand this warranty does not cover any labor and that all disputes will be settled by binding arbitration. Warranty void if any attempt to repair or replace defective parts has been made by unauthorized personnel. I have received my Operators Manual and fully understand my requirements. The mark next to each item below confirms my acceptance of responsibility for the use and maintenance of this Log Splitter. I understand that I alone am responsible for proper maintenance, care and safe operation of this Log Splitter.

☐ Received and read or will read Operators Manual Specifically Safe Operation section

☐ Specifications accepted ☐ Controls understood

☐ Maintenance Requirements understood ☐ Storage of Log Splitter

I (purchaser) also understand that persons not familiar with the operation of this equipment should not be allowed to use it. Children especially should not operate or be near equipment. ANYONE OPERATING EQUIPMENT SHOULD HAVE READ ALL EQUIPMENT OPERATIONS MANUALS AND SAFETY MANUALS.

Is Log Splitter used in a business ☐ NO ____ YES If yes business type

Owners Signature: x _____ Date: ____/____/____

It is recommended that a copy of the registration be given to the seller.

You must sign this warranty and mail copy to Betst Products, 83371 Melton Rd N.#3, Creswell OR 97426. This warranty is not effective unless the Purchaser mails this Registration and Warranty Form within 15 days of purchase. NOTE: The Manufacturer may refuse warranty of any kind unless Betst Products receives a completed, legible and signed warranty registration. It is the responsibility of the purchaser to assure that this registration document is received by Betst Products.