

9/11 kW

GUARDIAN[®] SERIES Residential Standby Generators

Air-Cooled Gas Engine

INCLUDES:

- True Power[™] Electrical Technology
- Two Line LCD Multilingual Digital Evolution [™] Controller (English/Spanish/ French/Portuguese)
- Two Transfer Switch Options Available: 100 Amp 16 Circuit Switch or 200 Amp Service Rated Switch. See Page 5 for Details.
- Standard Wi-FI[®] Remote Monitoring
- Electronic Governor
- System Status & Maintenance Interval LED Indicators
- Sound Attenuated Enclosure
- Flexible Fuel Line Connector
- Direct-To-Dirt Composite Mounting Pad
- Natural Gas or LP Gas Operation
- 5 Year Limited Warranty
- Listed and Labeled by the Southwest Research Institute allowing installation as close as 18" (457 mm) to a structure.*
 *Must be located away from doors, windows, and fresh air intakes and in accordance with local codes.
 https://assets.swri.org/library/DirectoryOfListedProducts/ConstructionIndustry/ 973_DoC_204_13204-01-01_Rev8.pdf



- INNOVATIVE ENGINE DESIGN & RIGOROUS TESTING are at the heart of Generac's success in providing the most reliable generators possible. Generac's G-Force engine lineup offers added peace of mind and reliability for when you need it the most. The G-Force series engines are purpose built and designed to handle the rigors of extended run times in high temperatures and extreme operating conditions.
- O TRUE POWER™ ELECTRICAL TECHNOLOGY: Superior harmonics and sine wave form produce less than 5% Total Harmonic Distortion for utility quality power. This allows confident operation of sensitive electronic equipment and micro-chip based appliances, such as variable speed HVAC systems.

NEMA MG1-22 EVALUATION

MOTOR STARTING ABILITY

- O TEST CRITERIA:
 - ✓ PROTOTYPE TESTED
 - ✓ SYSTEM TORSIONAL TESTED
- O MOBILE LINK™ REMOTE MONITORING: FREE with every Guardian Series Home standby generator. Allows you to monitor the status of your generator from anywhere in the world using a smartphone, tablet, or PC. Easily access information, such as the current operating status and maintenance alerts. Connect your account to your authorized service dealer for fast, friendly and proactive service. With Mobile Link, you are taken care of before the next power outage.

Standby Power Rating

Models G007029-1, G007030-1 (Aluminum - Bisque) - 9 kW 60 Hz Models G007032-1, G007033-1 (Aluminum - Bisque) - 11 kW 60 Hz Model G007031-1(Aluminum - Bisque) 11 kW 60 Hz



Note: CUL certification only applies to unbundled units and units packaged with limited circuit switches. Units packaged with the Smart Switch are UL certified in the USA only.

- O SOLID-STATE, FREQUENCY COMPENSATED VOLTAGE REGULATION:
 - This state-of-the-art power maximizing regulation system is standard on all Generac models. It provides optimized FAST RESPONSE to changing load conditions and MAXIMUM MOTOR STARTING CAPABILITY by electronically torque-matching the surge loads to the engine. Digital voltage regulation at \pm 1%.
- SINGLE SOURCE SERVICE RESPONSE from Generac's extensive dealer network provides parts and service know-how for the entire unit, from the engine to the smallest electronic component.
- GENERAC TRANSFER SWITCHES: Long life and reliability are synonymous with GENERAC POWER SYSTEMS. One reason for this confidence is that the GENERAC product line includes its own transfer systems and controls for total system compatibility.



2 of 6

9/11 kW

Engine

features and benefits

gine	
Generac G-Force design	Maximizes engine "breathing" for increased fuel efficiency. Plateau honed cylinder walls and plasma moly rings helps the engin run cooler, reducing oil consumption resulting in longer engine life.
"Spiny-lok" cast iron cylinder walls	Rigid construction and added durability provide long engine life.
Electronic ignition/spark advance	These features combine to assure smooth, quick starting every time.
Full pressure lubrication system	Pressurized lubrication to all vital bearings means better performance, less maintenance and longer engine life. Now featuring up to a 2 year/200 hour oil change interval.
Low oil pressure shutdown system	Shutdown protection prevents catastrophic engine damage due to low oil.
High temperature shutdown	Prevents damage due to overheating.
nerator	
Revolving field	Allows for a smaller, light weight unit that operates 25% more efficiently than a revolving armature generator.
Skewed stator	Produces a smooth output waveform for compatibility with electronic equipment.
Displaced phase excitation	Maximizes motor starting capability.
Automatic voltage regulation	Regulates the output voltage to $\pm 1\%$ prevents damaging voltage spikes.
UL 2200 listed	For your safety.
nsfer Switch (if applicable)	
Fully automatic	Transfers your vital electrical loads to the energized source of power.
NEMA 3R	Can be installed inside or outside for maximum flexibility.
Remote mounting	Mounts near your existing distribution panel for simple, low-cost installation.
olution™ Controls	
Auto/Manual/Off illuminated buttons	Selects the operating mode and provides easy, at-a-glance status indication in any condition.
Two-line LCD multilingual display	Provides homeowners easily visible logs of history, maintenance and events up to 50 occurrences.
Sealed, raised buttons	Smooth, weather-resistant user interface for programming and operations.
Utility voltage sensing	Constantly monitors utility voltage, setpoints 65% dropout, 80% pick-up, of standard voltage.
Generator voltage sensing	Constantly monitors generator voltage to ensure the cleanest power delivered to the home.
Utility interrupt delay	Prevents nuisance start-ups of the engine, adjustable 2-1500 seconds from the factory default setting of five (5) seconds b a qualified dealer.
Engine warm-up	Ensures engine is ready to assume the load, setpoint approximately 5 seconds.
Engine cool-down	Allows engine to cool prior to shutdown, setpoint approximately 1 minute.
Programmable exercise	Operates engine to prevent oil seal drying and damage between power outages by running the generator for five (5) minute every other week. Also offers a selectable setting for weekly or monthly operation providing flexibility and potentially lowe fuel costs to the owner.
Smart battery charger	Delivers charge to the battery only when needed at varying rates depending on outdoor air temperature. Compatible with lead acid and AGM-style batteries.
Main line circuit breaker	Protects generator from overload.

• SAE weather protective enclosure

Sound attenuated enclosures ensure quiet operation and protection against mother nature, withstanding winds up to 150 mph. Hinged key locking roof panel for security. Lift-out front for easy access to all routine maintenance items. Electrostatically applied textured epoxy paint for added durability.

- Enclosed critical grade muffler
- Small, compact, attractive

Quiet, critical grade muffler is mounted inside the unit to prevent injuries.

ive Makes for an easy, eye appealing installation, as close as 18" away from a building.

GENERAC

features and benefits

Installation System

9/11 kW

• 1 ft (305 mm) flexible fuel line connector

Absorbs any generator vibration when connected to rigid pipe.

- Direct-to-dirt composite mounting pad Complex lattice design prevents settling or sinking of the generator system. ۲
- Integral sediment trap Prevents particles and moisture from entering the fuel regulator and engine, prolonging engine life. •

Remote Monitoring

• Ability to view generator status Monitor your generator via your smartphone, tablet, or computer at any time via the Mobile Link application for complete peace of mind Ability to view generator Exercise/Run Review the generator's complete protection profile for exercise hours and total hours ۲ and Total Hours Ability to view generator maintenance Provides maintenance information for your specific model generator when scheduled maintenance is due information Monthly report with previous month's Detailed monthly reports provide historical generator information activity. Ability to view generator battery information Built in battery diagnostics displaying current state of the battery •

Provides detailed local ambient weather conditions for generator location

- Weather information

3 of 6

Generator

specifications

Model					
model		G007029-1, G007030-1 (9 kW)	G007031-1, G007032-1, G007033-1 (11 kW		
Rated Maximum Continuous	Power Capacity (LP)	9,000 Watts*	11,000 Watts*		
Rated Maximum Continuous	Power Capacity (NG)	8,000 Watts*	10,000 Watts*		
Rated Voltage		240	240		
Rated Maximum Continuous	Load Current – 240 Volts (LP/NG)	37.5/33.3	45.8/41.7		
Total Harmonic Distortion		Less than 5%	Less than 5%		
Main Line Circuit Breaker		40 Amp	50 Amp		
Phase		1	1		
Number of Rotor Poles		2	2		
Rated AC Frequency		60 Hz	60 Hz		
Power Factor		1.0	1.0		
Battery Requirement (not inc	ludad)				
Unit Weight (Ib/kg)	ilueu)	12 Volts, Group 26R 540 CCA Minimum or Group 35AGM 650 CCA Minimum 340/154 348/158			
0 (0)		48 x 25 x 29/1218 x 638 x 732			
Dimensions (L x W x H) in/m			1		
,	ft (7 m) with generator operating at normal load**	63	64		
Sound output in dB(A) at 23	ft (7 m) with generator in Quiet-Test [™] low-speed exercise mode **	54	58		
Engine					
Type of Engine		GENERAC G-Force 400 Series	GENERAC G-Force 500 Series		
Number of Cylinders		1	2		
Displacement		426 cc	530 cc		
Cylinder Block		Aluminum w/ Cast Iron Sleeve	Aluminum w/ Cast Iron Sleeve		
Valve Arrangement		Overhead Valve	Overhead Valve		
Ignition System		Solid-state w/ Magneto	Solid-state w/ Magneto		
Governor System		Electronic			
Compression Ratio			Electronic		
		9.0:1	9.5:1		
Starter		12 VDC	12 VDC		
Oil Capacity Including Filter		Approx. 1.1 qt/1.0 L	Approx. 1.7 qt/1.6 L		
Operating rpm		3,600	3,600		
Fuel Consumption	$(12.0) + (1-2.0) + \lambda$				
Natural Gas	ft ³ /hr (m ³ /hr)				
	1/2 Load	90 (2.55)	107 (3.03)		
Linuid Desease	Full Load	120 (3.40)	159 (4.50)		
Liquid Propane	ft ³ /hr (gal/hr) [l/hr]				
	1/2 Load	32 (0.87) [3.29]	44 (1.22) [4.62]		
	Full Load	50 (1.37) [5.20]	72 (1.97) [7.45]		
		. ,			
	zed for full load. Required fuel pressure to generator fuel inlet at all load rang multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m	ges - 3.5-7" water column (7-13 mm mercury) fo			
for LP gas. For BTU content,	zed for full load. Required fuel pressure to generator fuel inlet at all load range	ges - 3.5-7" water column (7-13 mm mercury) fo			
for LP gas. For BTU content, Controls	zed for full load. Required fuel pressure to generator fuel inlet at all load rang multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, mi	ges - 3.5-7" water column (7-13 mm mercury) f ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG)			
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling	zed for full load. Required fuel pressure to generator fuel inlet at all load rang multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, mi	ges - 3.5-7" water column (7-13 mm mercury) f ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in	terface for ease of operation.		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto	zed for full load. Required fuel pressure to generator fuel inlet at all load rang multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, mi	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o	terface for ease of operation. n Utility failure. 7 day exerciser.		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual	zed for full load. Required fuel pressure to generator fuel inlet at all load rang multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, mi	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG Simple user in Automatic Start o Start with starter control, unit star	terface for ease of operation. n Utility failure. 7 day exerciser. /s on. If utility fails, transfer to load takes place.		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off	zed for full load. Required fuel pressure to generator fuel inlet at all load rang multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, mi gual LCD Display	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG Simple user in Automatic Start o Start with starter control, unit star	terface for ease of operation. n Utility failure. 7 day exerciser. /s on. If utility fails, transfer to load takes place. oved. Control and charger still operate.		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance N	zed for full load. Required fuel pressure to generator fuel inlet at all load rang multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Messages	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG Simple user in Automatic Start o Start with starter control, unit star	terface for ease of operation. n Utility failure. 7 day exerciser. /s on. If utility fails, transfer to load takes place. oved. Control and charger still operate. Standard		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance N Engine Run Hours Indication	zed for full load. Required fuel pressure to generator fuel inlet at all load rang multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Messages	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit star Stops unit. Power is rem	terface for ease of operation. n Utility failure. 7 day exerciser. /s on. If utility fails, transfer to load takes place. oved. Control and charger still operate. Standard Standard		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance N Engine Run Hours Indication Programmable start delay be	zed for full load. Required fuel pressure to generator fuel inlet at all load rang multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Messages t etween 2-1500 seconds	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro	terface for ease of operation. n Utility failure. 7 day exerciser. /s on. If utility fails, transfer to load takes place. oved. Control and charger still operate. Standard Standard ogrammable by dealer only)		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance M Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to	zed for full load. Required fuel pressure to generator fuel inlet at all load rang multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Vlessages tetween 2-1500 seconds o Utility Adjustable (Brownout Setting)	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro	terface for ease of operation. n Utility failure. 7 day exerciser. rs on. If utility fails, transfer to load takes place. oved. Control and charger still operate. Standard Standard ogrammable by dealer only) 40-171 V/190-216 V		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance M Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to Future Set Capable Exerciser	zed for full load. Required fuel pressure to generator fuel inlet at all load rang multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Messages tetween 2-1500 seconds to Utility Adjustable (Brownout Setting) r/Exercise Set Error Warning	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro From 1	terface for ease of operation. n Utility failure. 7 day exerciser. rs on. If utility fails, transfer to load takes place. oved. Control and charger still operate. Standard Standard ogrammable by dealer only) 40-171 V/190-216 V Standard		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance N Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to Future Set Capable Exerciser Run/Alarm/Maintenance Log	zed for full load. Required fuel pressure to generator fuel inlet at all load rang multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Messages tetween 2-1500 seconds to Utility Adjustable (Brownout Setting) r/Exercise Set Error Warning	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit star Stops unit. Power is rem Standard (pro From 1	terface for ease of operation. n Utility failure. 7 day exerciser. rs on. If utility fails, transfer to load takes place. oved. Control and charger still operate. Standard Standard ogrammable by dealer only) 40-171 V/190-216 V Standard 50 Events Each		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance N Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to Future Set Capable Exerciser Run/Alarm/Maintenance Log Engine Start Sequence	zed for full load. Required fuel pressure to generator fuel inlet at all load rang multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Messages tetween 2-1500 seconds to Utility Adjustable (Brownout Setting) r/Exercise Set Error Warning	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro From 1 Cyclic cranking: Engine cranks a maxim	terface for ease of operation. n Utility failure. 7 day exerciser. rs on. If utility fails, transfer to load takes place. oved. Control and charger still operate. Standard Standard ogrammable by dealer only) 40-171 V/190-216 V Standard 50 Events Each um of five times at factory set intervals and duratio		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance M Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to Future Set Capable Exerciser Run/Alarm/Maintenance Log Engine Start Sequence Starter Lock-out	zed for full load. Required fuel pressure to generator fuel inlet at all load rang multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Messages tetween 2-1500 seconds to Utility Adjustable (Brownout Setting) r/Exercise Set Error Warning	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro From 1 Cyclic cranking: Engine cranks a maxim	terface for ease of operation. n Utility failure. 7 day exerciser. rs on. If utility fails, transfer to load takes place. oved. Control and charger still operate. Standard Standard ogrammable by dealer only) 40-171 V/190-216 V Standard 50 Events Each um of five times at factory set intervals and duratio e until 5 sec after engine has stopped.		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance M Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to Future Set Capable Exerciser Run/Alarm/Maintenance Log Engine Start Sequence Starter Lock-out Smart Battery Charger	zed for full load. Required fuel pressure to generator fuel inlet at all load range multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Messages 1 etween 2-1500 seconds o Utility Adjustable (Brownout Setting) r/Exercise Set Error Warning JS	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro From 1 Cyclic cranking: Engine cranks a maxim	terface for ease of operation. n Utility failure. 7 day exerciser. <i>Is</i> on. If utility fails, transfer to load takes place. <i>Is</i> oved. Control and charger still operate. Standard Standard ogrammable by dealer only) 40-171 V/190-216 V Standard 50 Events Each um of five times at factory set intervals and duration e until 5 sec after engine has stopped. Standard		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance M Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to Future Set Capable Exerciser Run/Alarm/Maintenance Log Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC W	zed for full load. Required fuel pressure to generator fuel inlet at all load range multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Messages 1 etween 2-1500 seconds 0 Utility Adjustable (Brownout Setting) r/Exercise Set Error Warning js	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro From 1 Cyclic cranking: Engine cranks a maxim	terface for ease of operation. n Utility failure. 7 day exerciser. <i>Is</i> on. If utility fails, transfer to load takes place. <i>Is</i> oved. Control and charger still operate. Standard Standard grammable by dealer only) 40-171 V/190-216 V Standard 50 Events Each um of five times at factory set intervals and duration e until 5 sec after engine has stopped. Standard Standard Standard		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance M Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to Future Set Capable Exerciser Run/Alarm/Maintenance Log Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC W Low Battery/Battery Problem	zed for full load. Required fuel pressure to generator fuel inlet at all load range multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Messages 1 etween 2-1500 seconds 0 Utility Adjustable (Brownout Setting) 0 Utility Adjustable (Brownout Setting) r/Exercise Set Error Warning 15 /arning 1 Protection and Battery Condition Indication	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro From 1 Cyclic cranking: Engine cranks a maxim	terface for ease of operation. n Utility failure. 7 day exerciser. <i>Is</i> on. If utility fails, transfer to load takes place. oved. Control and charger still operate. Standard Standard grammable by dealer only) 40-171 V/190-216 V Standard 50 Events Each um of five times at factory set intervals and duratio e until 5 sec after engine has stopped. Standard Standard Standard Standard Standard		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance M Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to Future Set Capable Exerciser Run/Alarm/Maintenance Log Engine Start Sequence Starter Lock-out Starter Lock-out Smart Battery Charger Charger Fault/Missing AC W Low Battery/Battery Problem Automatic Voltage Regulatio	zed for full load. Required fuel pressure to generator fuel inlet at all load range multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Messages the etween 2-1500 seconds to Utility Adjustable (Brownout Setting) r/Exercise Set Error Warning Is farming to Protection and Battery Condition Indication in with Over and Under Voltage Protection	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro From 1 Cyclic cranking: Engine cranks a maxim	terface for ease of operation. In Utility failure. 7 day exerciser. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity standard Ity standard Ity standard Ity son the son		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance M Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to Future Set Capable Exerciser Run/Alarm/Maintenance Log Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC W Low Battery/Battery Problem Automatic Voltage Regulatio Under-Frequency/Overload/S	zed for full load. Required fuel pressure to generator fuel inlet at all load range multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Messages the etween 2-1500 seconds to Utility Adjustable (Brownout Setting) r/Exercise Set Error Warning Is farming to Protection and Battery Condition Indication in with Over and Under Voltage Protection Stepper Overcurrent Protection	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro From 1 Cyclic cranking: Engine cranks a maxim	terface for ease of operation. In Utility failure. 7 day exerciser. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son.		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance M Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to Future Set Capable Exerciser Run/Alarm/Maintenance Log Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC W Low Battery/Battery Problem Automatic Voltage Regulatio Under-Frequency/Overload/S Safety Fused/Fuse Problem	zed for full load. Required fuel pressure to generator fuel inlet at all load range multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, million of the set of the s	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro From 1 Cyclic cranking: Engine cranks a maxim	terface for ease of operation. In Utility failure. 7 day exerciser. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. If utility fails, transfer to load takes place. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity son. Ity so		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance M Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to Future Set Capable Exerciser Run/Alarm/Maintenance Log Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC W Low Battery/Battery Problem Automatic Voltage Regulatio Under-Frequency/Overload/S Safety Fused/Fuse Problem Automatic Low Oil Pressure/	zed for full load. Required fuel pressure to generator fuel inlet at all load range multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Wessages tetween 2-1500 seconds o Utility Adjustable (Brownout Setting) r/Exercise Set Error Warning is /arning n Protection and Battery Condition Indication n with Over and Under Voltage Protection Stepper Overcurrent Protection Protection /High Oil Temperature Shutdown	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro From 1 Cyclic cranking: Engine cranks a maxim	terface for ease of operation. n Utility failure. 7 day exerciser. /s on. If utility fails, transfer to load takes place. oved. Control and charger still operate. Standard Standard ogrammable by dealer only) 40-171 V/190-216 V Standard 50 Events Each um of five times at factory set intervals and duratio e until 5 sec after engine has stopped. Standard		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance M Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to Future Set Capable Exerciser Run/Alarm/Maintenance Log Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC W Low Battery/Battery Problem Automatic Voltage Regulatio Under-Frequency/Overload/S Safety Fused/Fuse Problem I Automatic Low Oil Pressure/ Overcrank/Overspeed (@ 72	zed for full load. Required fuel pressure to generator fuel inlet at all load range multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Wessages tetween 2-1500 seconds o Utility Adjustable (Brownout Setting) r/Exercise Set Error Warning iss /arning n with Over and Under Voltage Protection Stepper Overcurrent Protection Protection Yelgh Oil Temperature Shutdown 2 Hz)/rpm Sense Loss Shutdown	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro From 1 Cyclic cranking: Engine cranks a maxim	terface for ease of operation. n Utility failure. 7 day exerciser. Is on. If utility fails, transfer to load takes place. oved. Control and charger still operate. Standard Standard Standard Jgrammable by dealer only) 40-171 V/190-216 V Standard 50 Events Each urn of five times at factory set intervals and duratio e until 5 sec after engine has stopped. Standard		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance M Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to Future Set Capable Exerciser Run/Alarm/Maintenance Log Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC W Low Battery/Battery Problem Automatic Voltage Regulatio Under-Frequency/Overload/S Safety Fused/Fuse Problem I Automatic Low Oil Pressure/ Overcrank/Overspeed (@ 72 High Engine Temperature Sh	zed for full load. Required fuel pressure to generator fuel inlet at all load range multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Wessages tetween 2-1500 seconds o Utility Adjustable (Brownout Setting) r/Exercise Set Error Warning ys /arning n with Over and Under Voltage Protection Stepper Overcurrent Protection Protection /High Oil Temperature Shutdown 2 Hz)/rpm Sense Loss Shutdown	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro From 1 Cyclic cranking: Engine cranks a maxim	terface for ease of operation. n Utility failure. 7 day exerciser. Is on. If utility fails, transfer to load takes place. oved. Control and charger still operate. Standard Standard Standard Standard 50 Events Each urn of five times at factory set intervals and duratio e until 5 sec after engine has stopped. Standard Standa		
for LP gas. For BTU content, Controls Two-Line Plain Text Multiling Mode Buttons:Auto Manual Off Ready to Run/Maintenance M Engine Run Hours Indication Programmable start delay be Utility Voltage Loss/Return to Future Set Capable Exerciser Run/Alarm/Maintenance Log Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC W Low Battery/Battery Problem Automatic Voltage Regulatio Under-Frequency/Overload/S Safety Fused/Fuse Problem Automatic Low Oil Pressure/	zed for full load. Required fuel pressure to generator fuel inlet at all load range multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, m gual LCD Display Messages etween 2-1500 seconds o Utility Adjustable (Brownout Setting) r/Exercise Set Error Warning is farming is farming is farming in with Over and Under Voltage Protection Stepper Overcurrent Protection Protection High Oil Temperature Shutdown 2 Hz)/rpm Sense Loss Shutdown in utdown ing Protection	ges - 3.5-7" water column (7-13 mm mercury) fr ultiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user in Automatic Start o Start with starter control, unit stay Stops unit. Power is rem Standard (pro From 1 Cyclic cranking: Engine cranks a maxim	terface for ease of operation. n Utility failure. 7 day exerciser. Is on. If utility fails, transfer to load takes place. oved. Control and charger still operate. Standard Standard Standard Jgrammable by dealer only) 40-171 V/190-216 V Standard 50 Events Each urn of five times at factory set intervals and duration e until 5 sec after engine has stopped. Standard Standar		

**Sound levels are taken from the front of the generator. Sound levels taken from other sides of the generator may be higher depending on installation parameters. Rating definitions - Standby: Applicable for supplying emergency power for the duration of the utility power outage. No overload capability is available for this rating. (All ratings in accordance with BS5514, ISO3046 and DIN6271). * Maximum kilovolt amps and current are subject to and limited by such factors as fuel Btu/megajoule content, ambient temperature, altitude, engine power and condition, etc. Maximum power decreases about 3.5 percent for each 1,000 feet (304.8 meters) above sea level; and also will decrease about 1 percent for each 6 °C (10 °F) above 16 °C (60 °F).

GENERAC

switch options

9/11 kW

Limited Circuits Switch Features

- 16 circuits, breakers not included.
- Rated for all classes of load, 100% equipment rated, both inductive and resistive.
- 2-pole, 250 VAC contactors.
- 30 millisecond transfer time.
- Dual Coil Design.
- Main contacts are silver plated or silver alloy to resist welding and sticking.
- NEMA/UL 3R aluminum outdoor enclosure.
 Multi listed for use with 1" standard, tandem, GFCI and AFCI breakers from
- Siemens, Murray, Eaton and Square D for the most flexible and cost effective install.

Dimensions


	Height		Width		Depth
	H1	H2	W1	W2	
in	26.75	30.1	10.5	13.5	6.91
mm	679.4	764.3	266.7	343.0	175.4

Wire Ranges				
Conductor Lug	Neutral Lug	Ground Lug		
1/0 - #14	2/0 - #14	2/0 - #14		

G007030-1 (9kW) G007032-1 (11kW) Model No. of Poles 2 2 Current Rating (Amps) 100 100 Voltage Rating (VAC) 120/240.1Ø 120/240.1Ø Utility Voltage Monitor (Fixed)* -Pick-up 80% 80% -Dropout 65% 65% Return to Utility* approx. 15 sec approx. 15 sec Exercises bi-weekly for 5 minutes*† Standard Standard UL Listed Standard Standard Total Circuits Available 16 16 Tandem Breaker Capabilities 8 Tandems 8 Tandems Circuit Breaker Protected Available RMS Symmetrical 10.000 10.000 Fault Current @ 250 Volts

*Function of Evolution Controller

+ Can be set to weekly or monthly

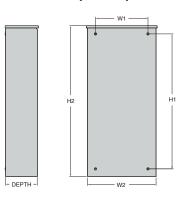

Service Rated Smart Switch Features available on 11 kW model only

- Includes Digital Power Management Technology standard (DPM).
- Intelligently manages up to four air conditioner loads with no additional hardware.
- Up to eight more large (240 VAC) loads can be managed when used in conjunction with Smart Management Modules (SMMs).
- Electrically operated, mechanically-held contacts for fast, clean connections.
- Rated for all classes of load, 100% equipment rated, both inductive and resistive.
- Service equipment rated, dual coil design.
- Rated for both aluminum and copper conductors.
- Main contacts are silver plated or silver alloy to resist welding and sticking.
- NEMA/UL 3R aluminum outdoor enclosure.


Dimensions

	200 Amps 120/240, 1ø Open Transition Service Rated				
	Hei	ght	Width		Depth
	H1	H2	W1	W2	
in	26.75	30.1	10.5	13.5	6.91
mm	679.4	764.3	266.7	343.0	175.4

Model	G007033-1 (11kW)
No. of Poles	2
Current Rating (Amps)	200
Voltage Rating (VAC)	120/240, 1Ø
Utility Voltage Monitor (Fixed)* -Pick-up -Dropout	80% 65%
Return to Utility*	approx. 13 sec
Exercises bi-weekly for 5 minutes*†	Standard
UL Listed	Standard
Enclosure Type	NEMA/UL 3R
Circuit Breaker Protected	22,000
Lug Range	250 MCM - #6

*Function of Evolution Controller

+ Can be set to weekly or monthly

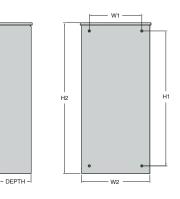

5 of 6

9/11 kW

GENERAC

available accessories

9/1		
6/		
6		
	6	


6 of 6


kW

Model #	Product	Description
G007005-0	Wi-Fi LP Fuel Level Monitor	The Wi-Fi enabled LP fuel level monitor provides constant monitoring of the connected LP fuel tank. Monitoring the LP tank's fuel level is an important step in making sure your generator is ready to run during an unexpected power failure. Status alerts are available through a free application to notify when your LP tank is in need of a refill.
G005819-0	26R Wet Cell Battery	Every standby generator requires a battery to start the system. Generac offers the recommended 26R wet cell battery for use with all air-cooled standby product (excluding PowerPact (\mathbb{R})).
G007101-0	Battery Pad Warmer	The pad warmer rests under the battery. Recommended for use if the temperature regularly falls below 0°F. (Not necessary for use with AGM-style batteries).
G007102-0	Oil Warmer	Oil warmer slips directly over the oil filter. Recommended for use if the temperature regularly falls below 0°F.
G007103-1	Breather Warmer	The breather warmer is for use in extreme cold weather applications. For use with Evolution controllers only in climates where heavy icing occurs.
G005621-0	Auxiliary Transfer Switch Contact Kit	The auxiliary transfer switch contact kit allows the transfer switch to lock out a single large electrical load you may not need. Not compatible with 50 amp pre-wired switches.
G007027-0	Fascia Base Wrap Kit	The fascia base wrap snaps together around the bottom of the new air cooled generators. This offers a sleek, contoured appearance as well as offering protection from rodents and insects by covering the lifting holes located in the base.
G005703-0	Paint Kit	If the generator enclosure is scratched or damaged, it is important to touch-up the paint to protect from future corrosion. The paint kit includes the necessary paint to properly maintain or touch-up a generator enclosure.
G006482-0 - 9 kW G006483-0 - 11 kW	Scheduled Maintenance Kit	Generac's scheduled maintenance kits provide all the hardware necessary to perform complete routine maintenance on a Generac automatic standby generator.
G006873-0	Smart Management Module (50 Amps)	Smart Management Modules are used in conjunction with the Automatic Transfer Switch to increase its power management capabilities. It provides additional power management flexibility not found in any other power management system.

dimensions & UPCs

Dimensions shown are approximate. Refer to installation manual for exact dimensions. DO NOT USE THESE DIMENSIONS FOR INSTALLATION PURPOSES.

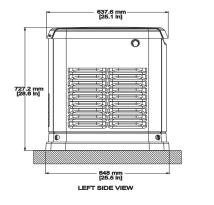

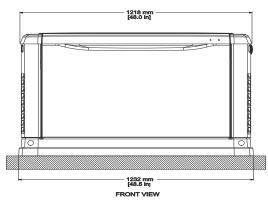

Model	UPC
G007029-1	696471074109
G007030-1	696471074116
G007031-1	696471074123
G007032-1	696471074130
G007033-1	696471074147



Generac Power Systems, Inc. • S45 W29290 HWY. 59, Waukesha, WI 53189 • generac.com

©2018 Generac Power Systems, Inc. All rights reserved. All specifications are subject to change without notice. Part No. 10000000191-G 03/30/18